U-BOAT

DUAL TIME

DOPPIOTEMPO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

 
Mechanical Automatic Dual time

WATCH FUNCTIONS

A CROWN COVER B CROWN EXTRACTION PUSHER CROWN HOUR HAND DI DUAL TIME HAND MINUTE HAND SECONDS HAND G 24 HOURS INDICATOR DATE BEZEL LOCK LEVER DUAL TIME BEZEL

Representative image. Some components may be in different positions or not fitted.





- POSITION 1 **NEUTRAL POSITION**
- POSITION 2 FIRST CLICK
- POSITION 3
 - SECOND CLICK

Lunscrew the crown cover ♠ to access the crown ♠.	
POSITION 1 IEUTRAL POSITION	to wind up and start the watch, turn the crown 😉 clockwise.
POSITION 2 IRST CLICK	press the pusher 3 to bring the crown 6 to position 2. Turn the crown 6 clockwise to set the desired date 6.
POSITION 3 ECOND CLICK	press the pusher ③ again to bring the crown ④ to position 3. Turn the crown ⑥ clockwise to set the desired time. Consider the indicator ⑥ (24 hours) for the correct click of the date ⑤.

2. Press the crown © all the way down to return it to position 1. Carefully screw down the crown cover \(\old \) until it locks completely.

DUAL TIME FUNCTIONS





Unlock the lever 1.

Set the desired time by turning the bezel • in correspondence with the hand •).

Lock the lever 1.



- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- $\,^{\circ}$ We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Always rinse the watch with fresh water after contact with salt water.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.

