

Passend für die folgenden Modelle:

Marke	Typennummer	Modell
BOSCH	MFQ4030/01	
BOSCH	MFQ4070S/01	
BOSCH	MFQ4020S/01	
BOSCH	MFQ40304/01	Styline colour
BOSCH	MFQ4070/01	
BOSCH	MFQ4020/01	
BOSCH	MFQ4030S/01	
BOSCH	MFQ4080/01	
BOSCH	MFZ4020(00)	Fine Creamer Besen
BOSCH	MFQ4075DE/02	
BOSCH	MFQ40304/02	Styline colour
BOSCH	MFQ40303/02	
BOSCH	MFQ4020S/02	
BOSCH	MFQ4030/02	
BOSCH	MFQ4020GB/02	
BOSCH	MFQ4030S/02	
BOSCH	MFQ4070S/02	
BOSCH	MFQ40301/02	
BOSCH	MFQ4080/02	
BOSCH	MFQ40303GB/02	
BOSCH	MFQ40302/02	
BOSCH	MFQ4040/02	
BOSCH	MFQ4020/02	
BOSCH	MFQ4070/02	
BOSCH	MFQ3020S/01	CleverMixx
BOSCH	MFQ4835DE/02	
BOSCH	MFQ3570S/01	
BOSCH	MFQ4885DE/02	Home Professional
BOSCH	MFQM570BCN/02	HomeProfessional
BOSCH	MFQ40301/03	
BOSCH	MFQ40303/03	
BOSCH	MFQ40304/03	
BOSCH	MFQ3530S/01	
BOSCH	MFQ3030S/02	CleverMixx
BOSCH	MFQ3550S/02	
BOSCH	MFQ3540S/02	
BOSCH	MFQ3520S/01	
BOSCH	MFQ3580S/02	
BOSCH	MFQ4780/02	
BOSCH	MFQM440VCN/02	
BOSCH	MFQ3550S/01	
BOSCH	MFQ47304/02	
BOSCH	MFQ36GOLD/01	Sportline
BOSCH	MFQM5504CN/02	
BOSCH	MFQ3540S/01	

BOSCH	MFQ3010S/01	CleverMixx
BOSCH	MFQ4030L/02	
BOSCH	MFQ3010S/02	CleverMixx
BOSCH	MFQ3580S/01	
BOSCH	MFQ40302GB/02	
BOSCH	MFQ3520S/02	
BOSCH	MFQ4030K/02	
BOSCH	MFQ3030S/01	CleverMixx
BOSCH	MFQ3020S/02	CleverMixx
BOSCH	MFQ3530S/02	
BOSCH	MFQ4850/02	
BOSCH	MFQ4840/02	
BOSCH	MFQ49700/02	
BOSCH	MFQ4730/02	
BOSCH	MFQ4070/03	
BOSCH	MFQ4020/03	
BOSCH	MFQ4030/03	
SIEMENS	MQ96500/02	
SIEMENS	MQ95540S/01	
SIEMENS	MQ96580GB/01	FQ.1
SIEMENS	MQ95530S/01	
SIEMENS	MQ96500/01	FQ.1
SIEMENS	MQ95020S/01	myMix
SIEMENS	MQ95550S/01	
SIEMENS	MQ95010S/01	myMix
SIEMENS	MQ95030S/01	myMix
SIEMENS	MQ96580/01	FQ.1
SIEMENS	MQ96580/02	
SIEMENS	MQ95520S/01	