 
 
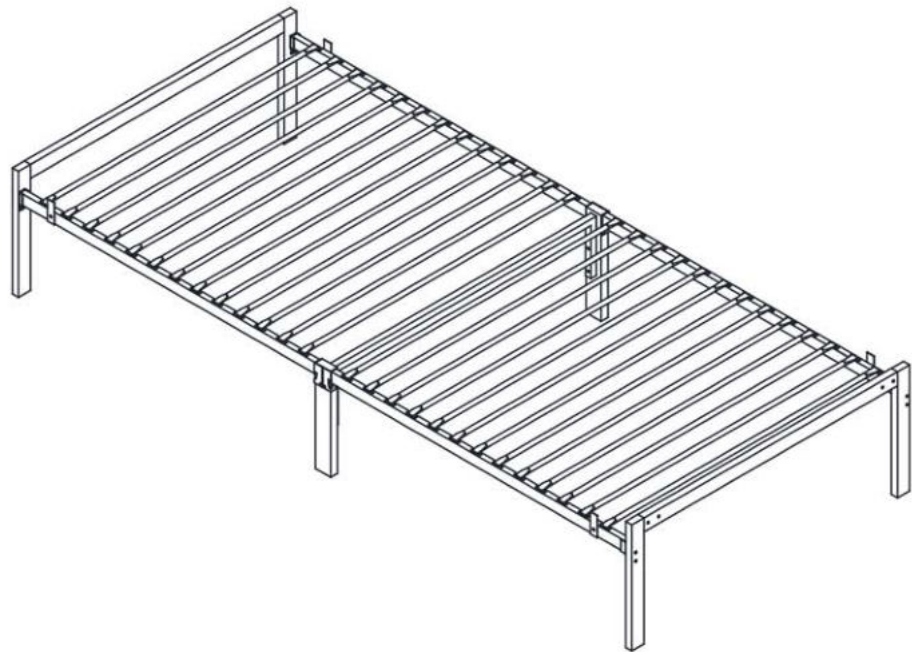 
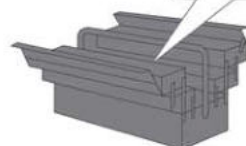 


Art. Nr.2485 1534

 
 
LKZ 48694

 
 
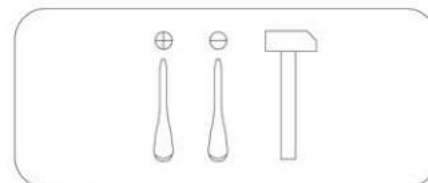 


- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrukțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

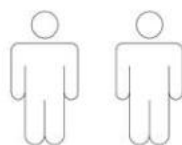

 
0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

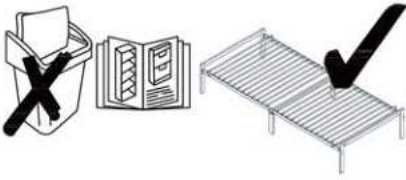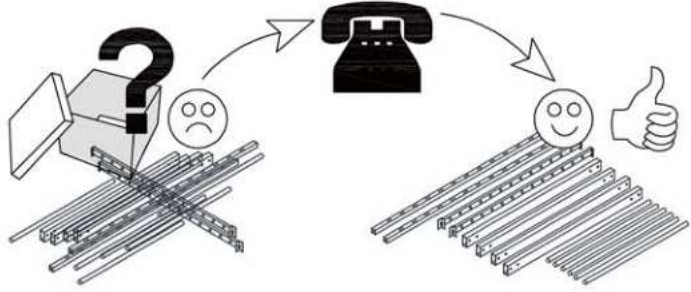Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Isim • Название	
Nr. • No. • N° • Номер • Číslo • Szám	2485 1534
Typ • Type • Тип • Тип	
	
	

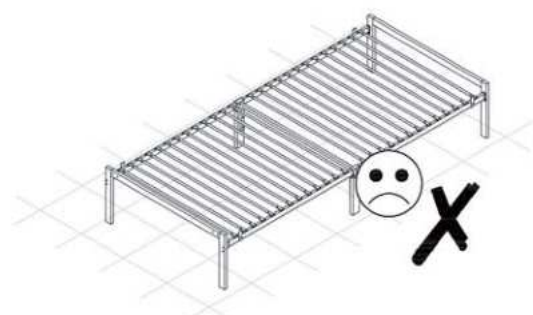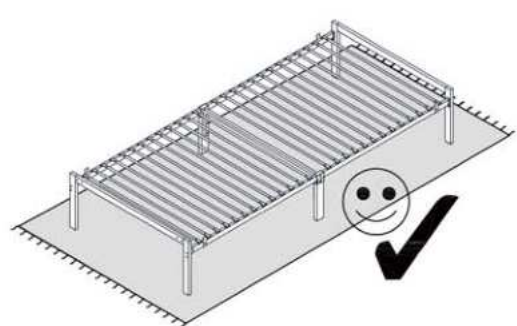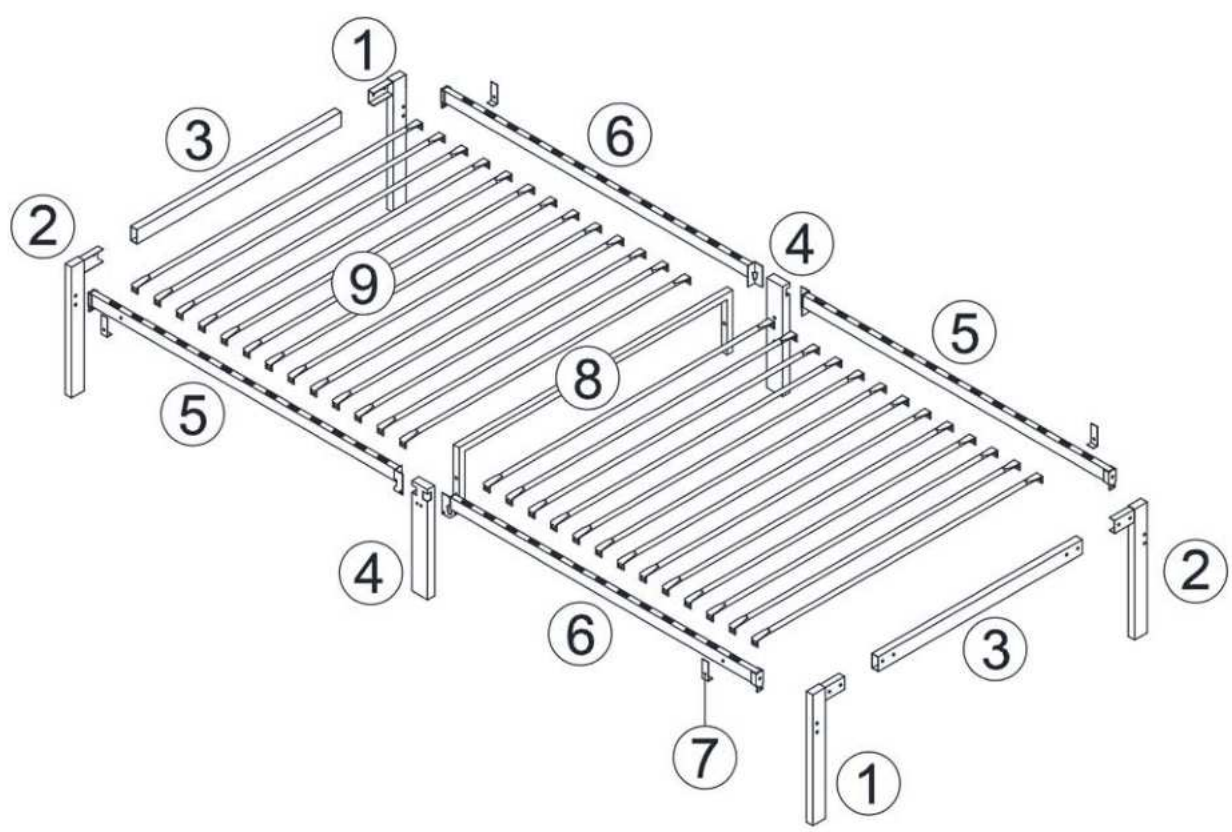

 
 
 


A M8x35mm x8	B M6x30mm x4	C M6x15mm x12	D x8	E M8 x4
F x1	G x1	H x4		

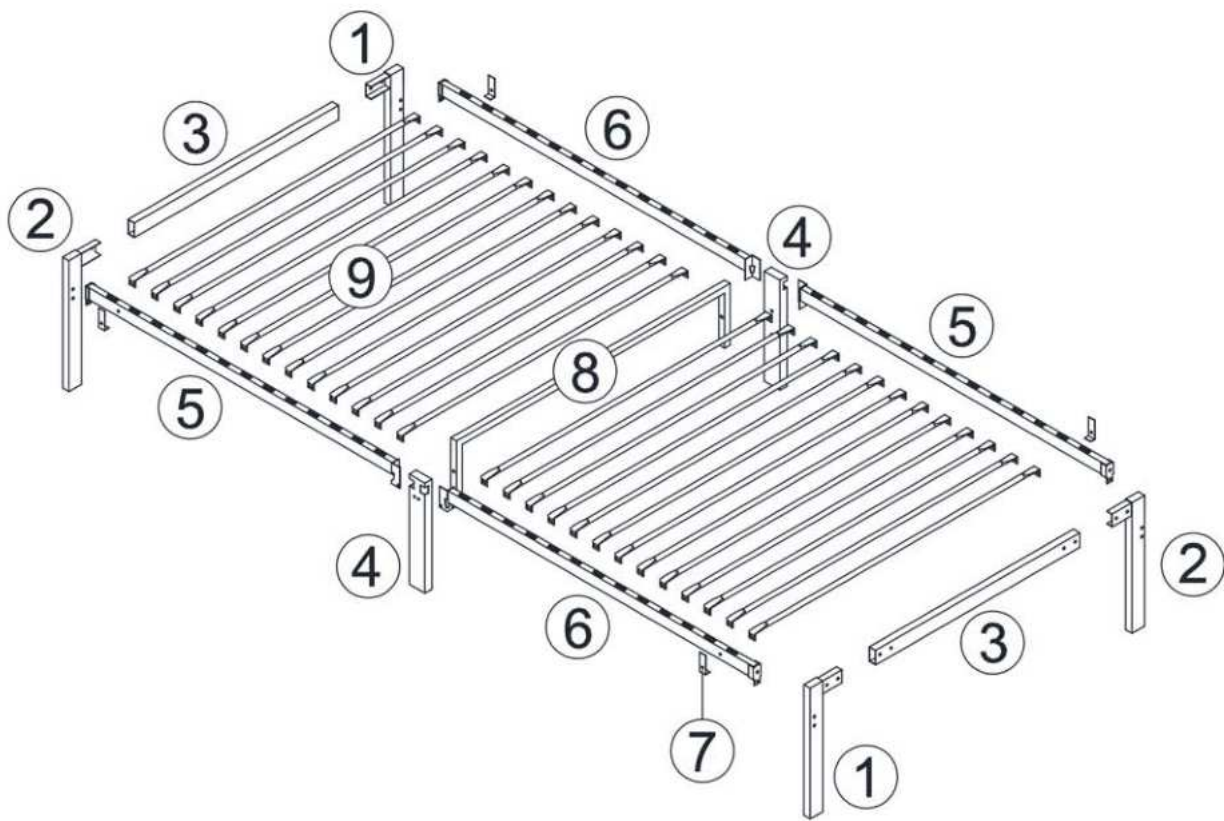

 
 
1 x2	2 x2	3 x2	4 x2	5 x2
6 x2	7 x4	8 x1	9 x26	

step 1

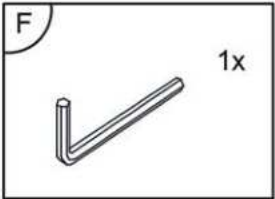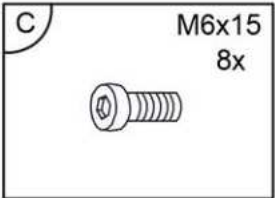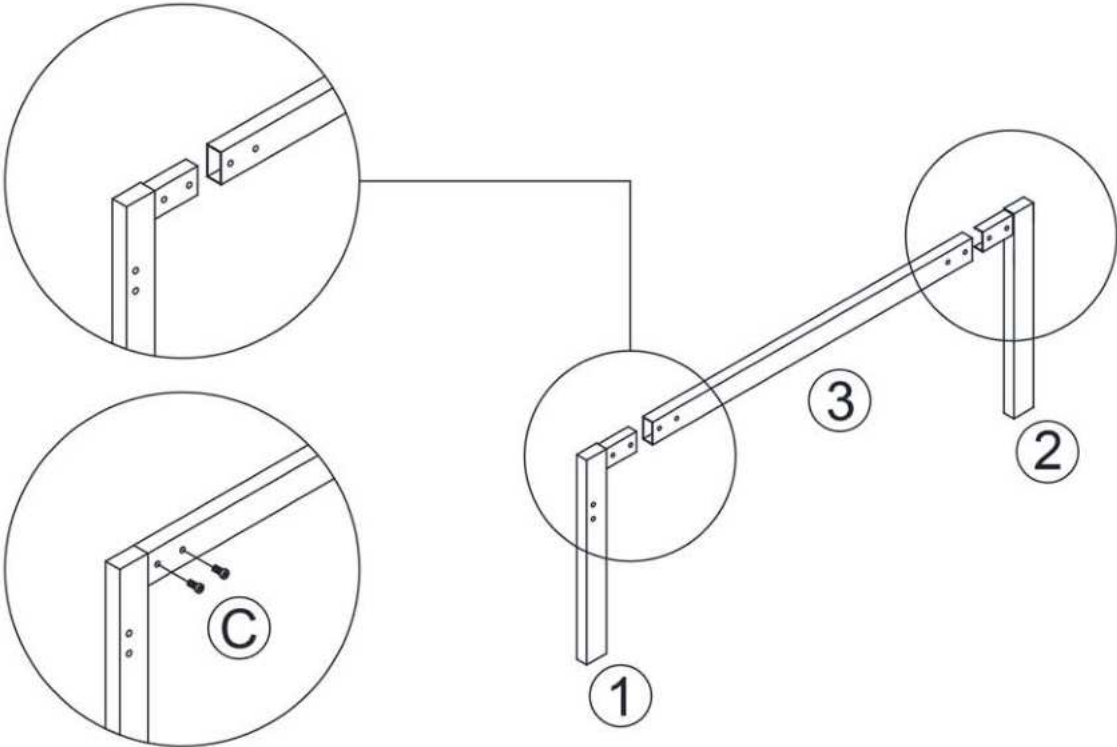 


 
×2

step 2

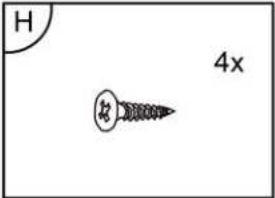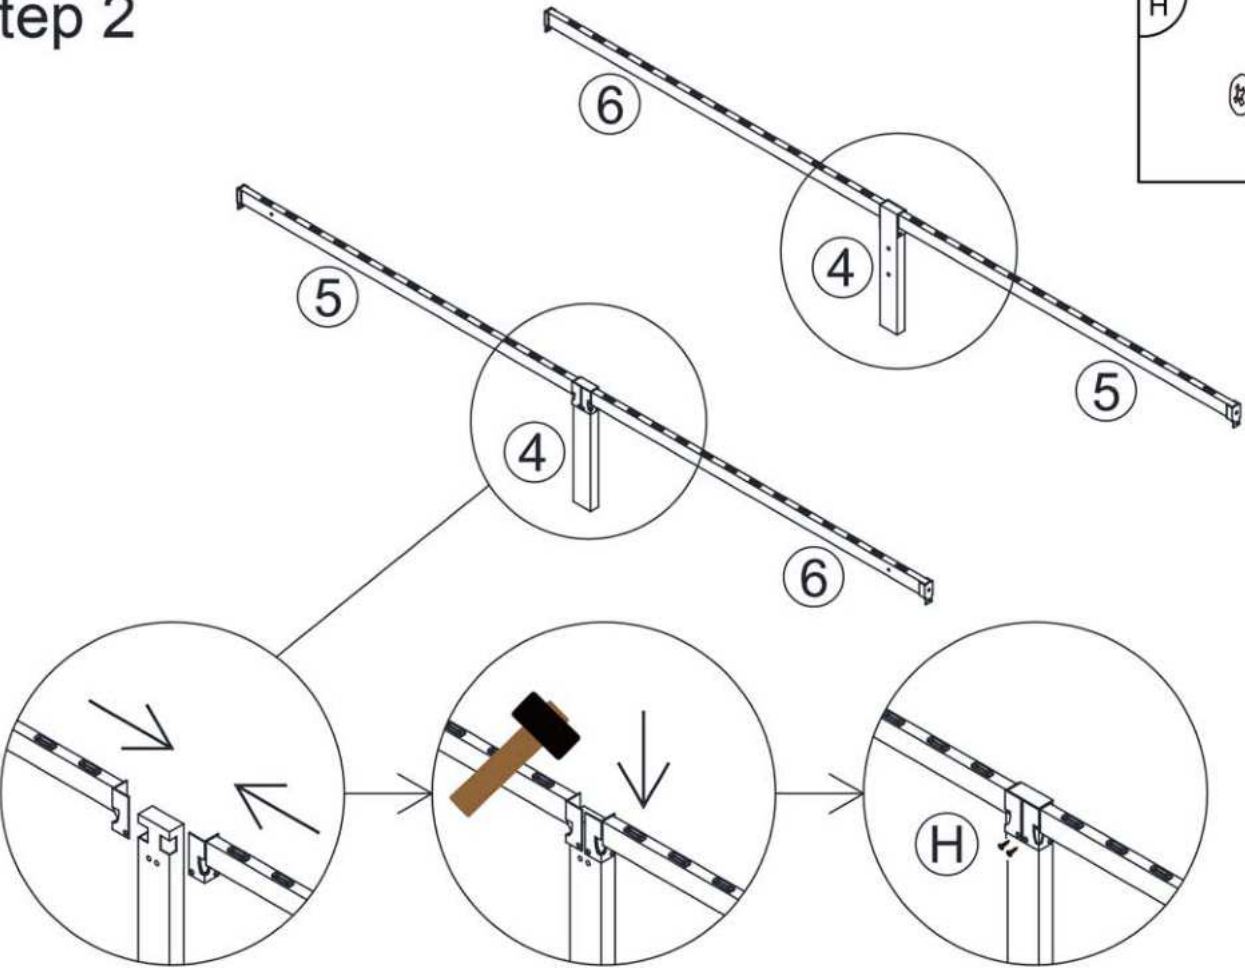

step 3

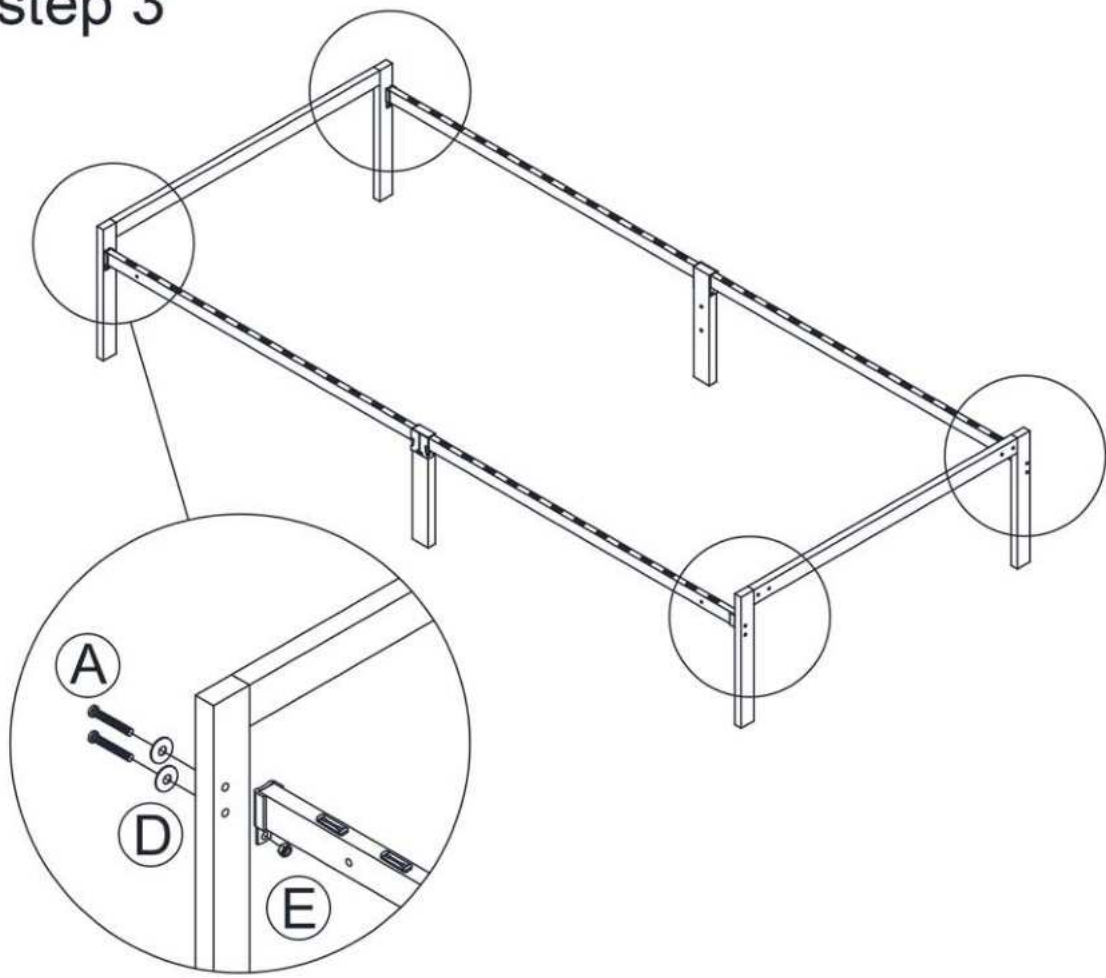

 
- A** M8x35 8x

- D** 8x

 
- E** M8 4x

- F** 1x

- G** 1x

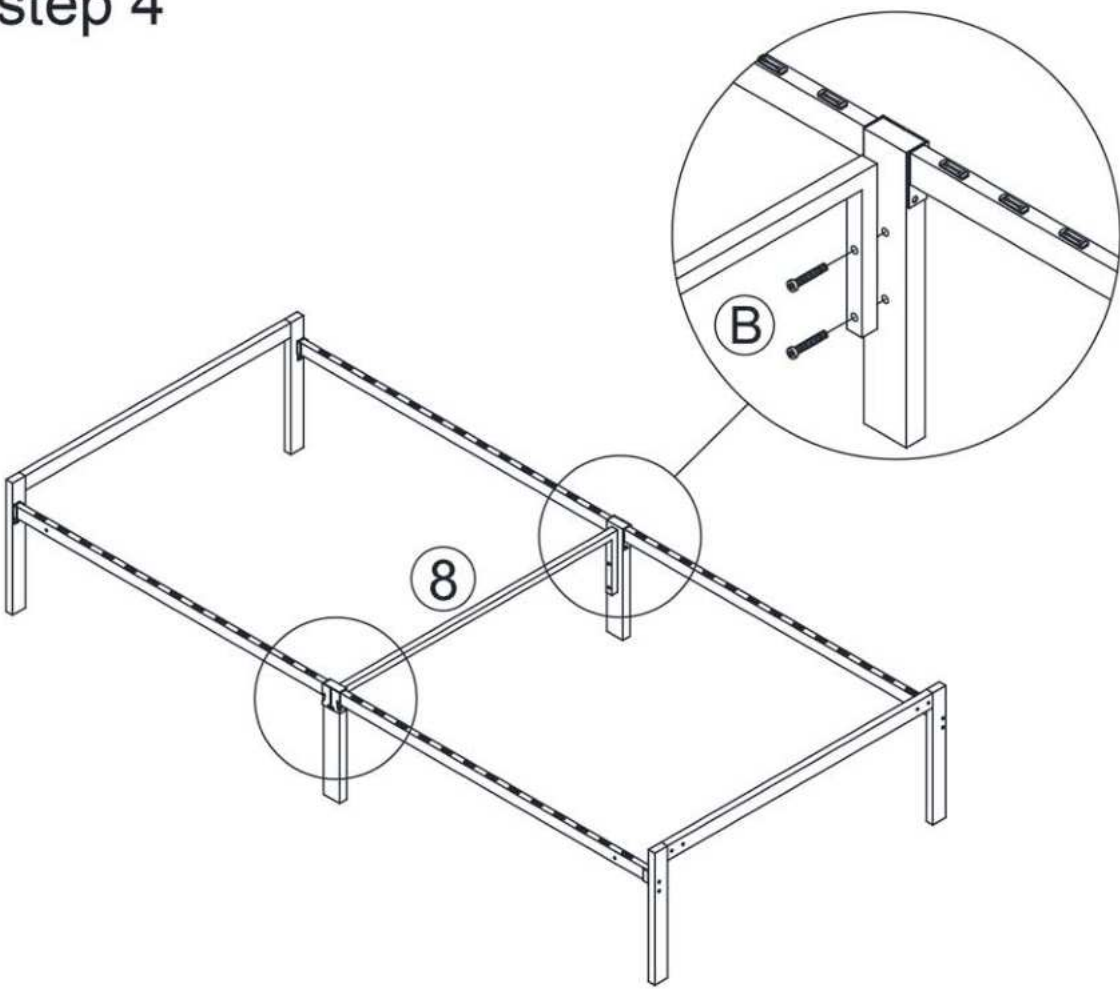
step 4



- B** M6x30 4x

- F** 1x


step 5

