 


ROBOT

CLEANER

A GOOD HELPER TO CLEAN

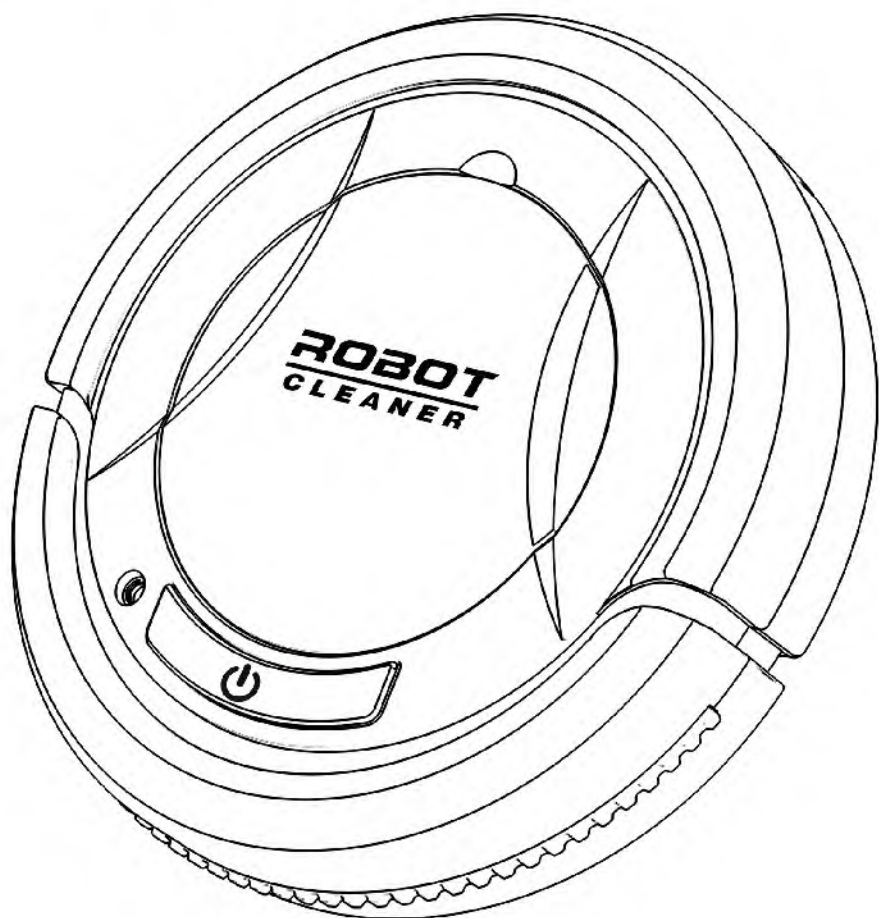

NO.2832

Important safety instructions

Before using this product, please read the following safety instructions in detail and save them for future reference. Use any electrical appliance according to the basic safety regulations to avoid fire, electric shock, personal injury and other conditions, and please do observe the following points:

Safe use rules


1. Please read the instructions carefully before use.
2. It is strictly prohibited to use it outdoors.
3. Before starting the machine for cleaning, please make sure that the filter screen of the product has been properly and correctly installed in the dust collection box of the main machine.
4. Do not rain be exposed to the or touch water, and do not use in wet space, such as bathroom or laundry.
5. Before using this product, please tidy and store the floor items first. Make sure to tidy and store the clothes, paper, power cord extension line scattered on the ground, and the items that may block the operation of the machine or move away from the ground. If there are any louvers or curtains that fall on the ground indoors, they must also be rolled up to avoid danger. Once the product is in use and involved in foreign matters, such as wires, it will be involved. In this product, with the machine running, it is likely to drag and dump the tables, chairs, cabinets or bookshelves, causing danger!
6. It is strictly forbidden to stand or squat on the product. When there are children or pets, special attention shall be paid to safety to avoid danger.
7. It is strictly prohibited to use this product to remove cigarette butts, matches or embers that are burning and smoking.
8. It is strictly prohibited to use this product to remove natural or highly volatile liquids, such as gasoline, degreasing oil, etc.
9. If the room to be cleaned has a balcony, please close the door leading to the balcony to prevent the product from running out of the balcony and causing danger.
10. Please contact customer service if you fall, impact or break down the product.
11. When it is not used for a long time, be sure to turn off the power switch.

Charging precautions

1. When using charging, please observe the voltage and current specifications marked on the product package. If you are not sure about the power specifications on your house, please ask the salesperson or the local power company.
2. Be sure to use the adaptor cord for charging.
3. The adaptor is only for indoor use.
4. When the adaptor is damaged, do not plug it in.
5. Do not touch the adaptor when your hands are wet.
6. If you need to clean this product, please remember to stop charging first.

Feature introduction


First of all, congratulations for using 2832 intelligent vacuum cleaner! This product is an epoch-making revolutionary vacuum cleaner. The circular rotary brush on both sides of the bottom of the machine is suitable for general living or small office use, whether it is wood floor, artificial plastic floor, ceramic tile, etc. 2832 intelligent automatic vacuum cleaner is a good helper for your home cleaning.

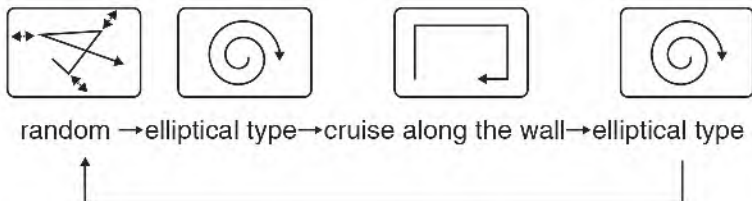


Main engine and accessories




hostx1

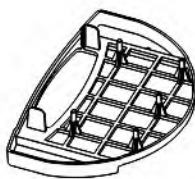

filter x1
(already installed in the integrated box)

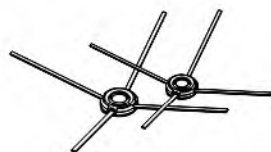


circular brush x2

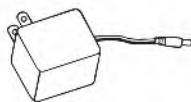

adaptor x1





instruction manual x1

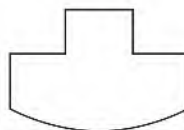


mop x1

Main body and accessories

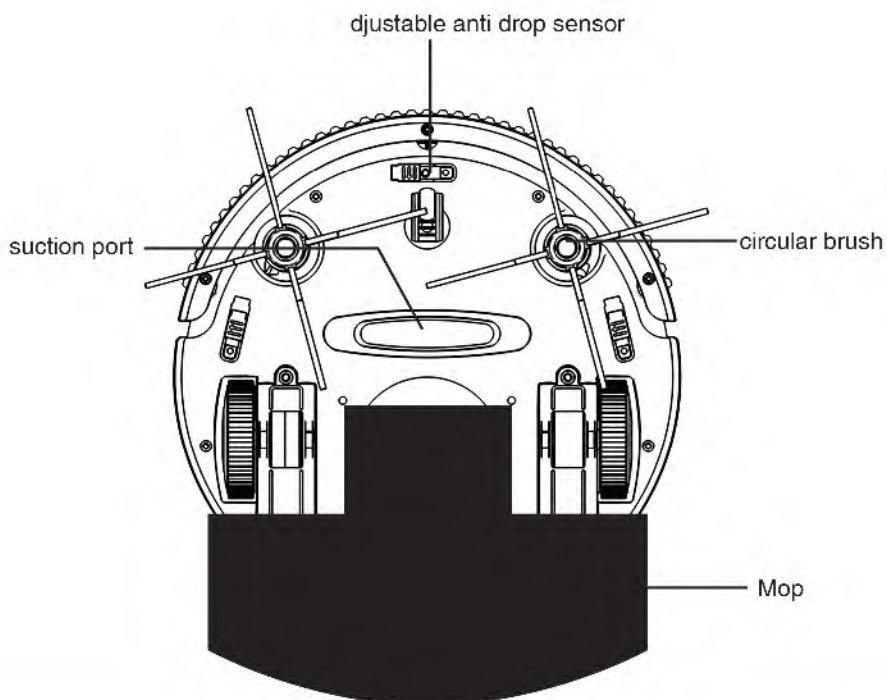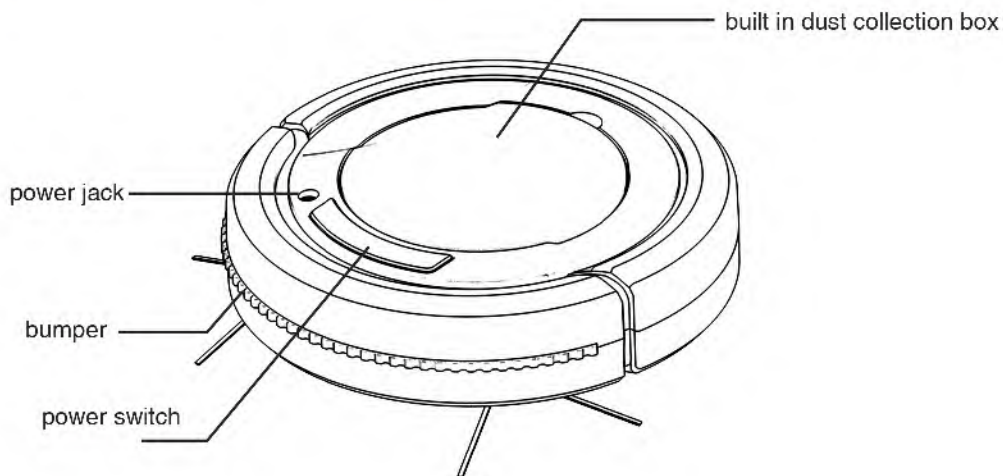

Charging battery charging


1. In order to ensure the maximum efficiency and extend the service life of the battery, it is recommended that the battery should be fully charged for 2-3 hours, and the power display light will be green after charging for 2-3 hours. Since the power indicator of the unit is in the timing mode from flashing to direct lighting, if there is power failure in the middle of the process, if the host is plugged in again, the timing will be re timed. Therefore, if it is determined that the total hours of the current charging are 2-3 hours, the unit can start to work.
2. When charging, please insert one end of the adaptor into the power socket next to the switch of the machine body, and then plant the other end on the household power socket. At this time, the charging display light will flash green.
3. After the battery is fully charged, the charging indicator stops flashing and the green indicator is on.

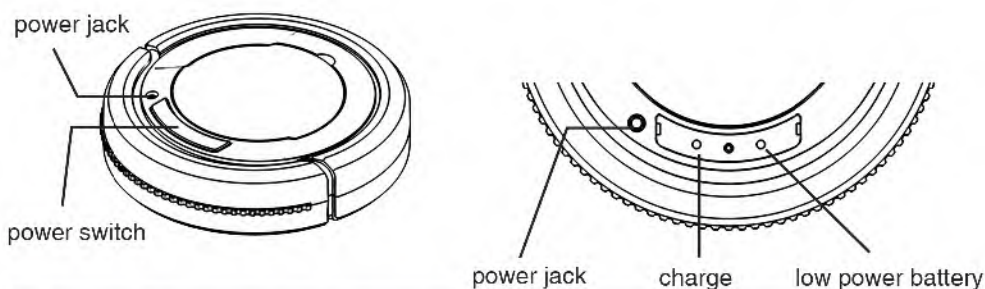

Adjustable anti drop sensor

This function is specially designed in order to adapt to the different height of the step where the vacuum cleaner moves on the edge of the environment. If the step is low, please adjust the short distance direction (scale indication ⊙ -> ⊙ -> ⊙ -> ⊙) of the push button item to make the vacuum cleaner back to the step. *After adjustment, please test the main engine on the step first, and make sure that the step is correct before using. *Please adjust the three windows to the same scale.

Note: if the floor color is darker (such as black), please adjust to the "⊙" long-distance direction; otherwise, if it is lighter / lighter (such as white), please adjust to the "⊙" short-distance direction.

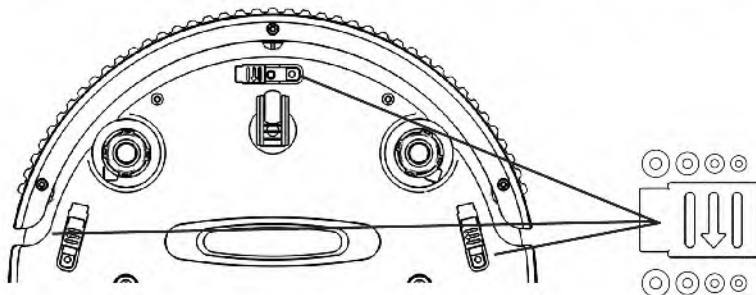

General operation

Start homework

※Be careful!! When using the machine on the short wool carpet, please remove the dedusting paper holder and the round brush before use to avoid abrasion.



※Do not use on fluffy and woolen carpets.

1. Please empty the dust collection box before use, and put the filter screen in the dust collection box correctly!
2. Please put the main unit in an open place in the room and turn on the power switch of the main unit.
3. When the power is exhausted, the red light of battery low will be on directly, and the machine will stop automatically if there is a sound prompt.
4. When not in use or charging, please turn off the switch.

Installation and removal of circular brush

※The circular brush used in this product can be installed / disassembled by hand without using tools!

1. Installation: press the circular brush directly into the convex shaft in the center of the brush holder to complete the installation.
2. Removal: hold the circular brush and pull it up from the convex shaft in the center of the brush holder, that is, the removal is completed.

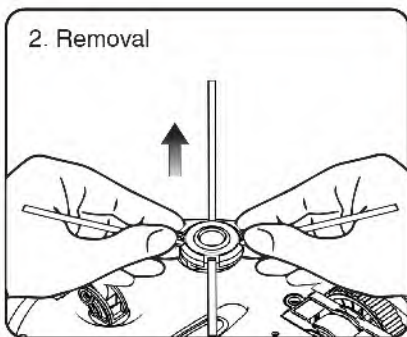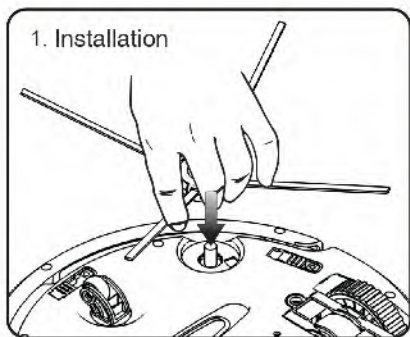

Use floor cloth

※Note!! do not use the floor wiping function on the carpet or in the environment with carpet. Also remove the brush from the bottom of the machine.

- 1: first find the fixed position of the rag ① ② (as shown in Figure 3)
- 2: stick the rag to the corresponding position ① ② (as shown in Figure 4)
- 3: remove the rag and directly tear the three magic bonding positions

Wet cleaning: first fill the grids on both sides of the dust collection box with water (as shown in Figure 5), install the filter screen and the cover of the dust collection box in sequence, put the dust collection box back, cover the cover back, and then install the rags.

Reminder: please clean the dishcloth in time after dragging the floor

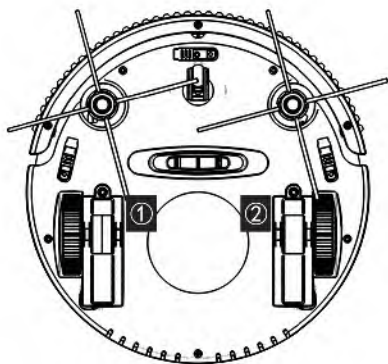


Figure 3

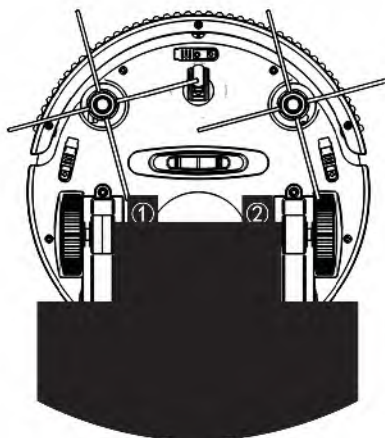


Figure 4





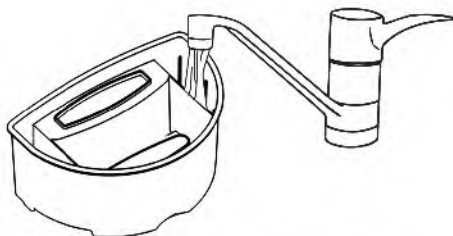


Figure 5

Cleaning and maintenance


Clean the dust collection box

1. Open the upper cover as shown in the figure.
2. Put your hand into the groove of the dust collection box, hold the dust collection box tightly and take it out upward.

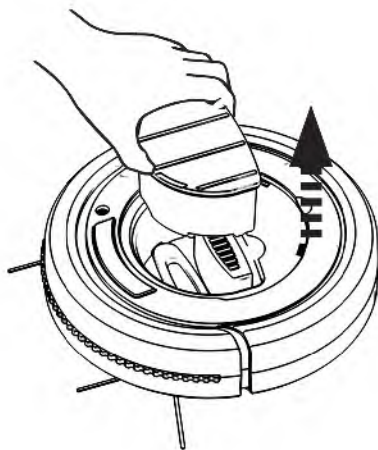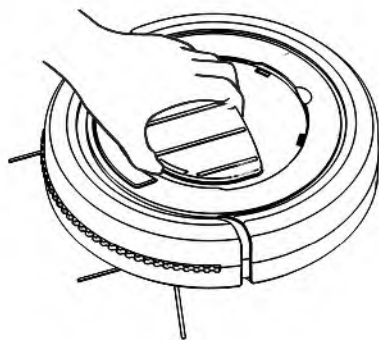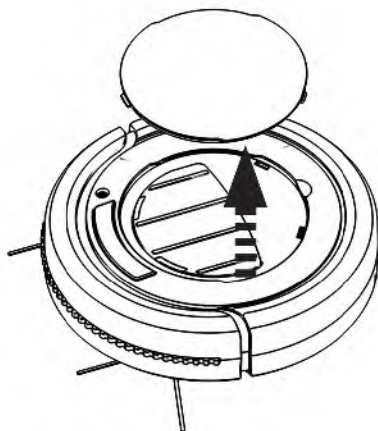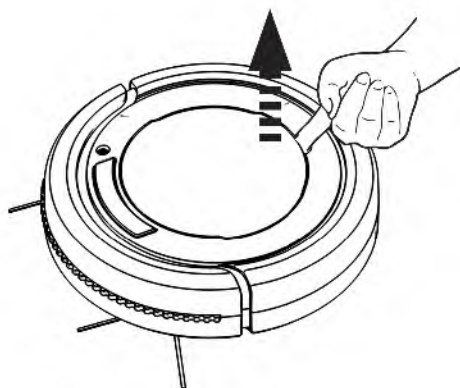

Cleaning and maintenance


3. Open the dust collection box cover.
4. Take out the internal filter screen.
5. Clean the debris in the dust collection box.

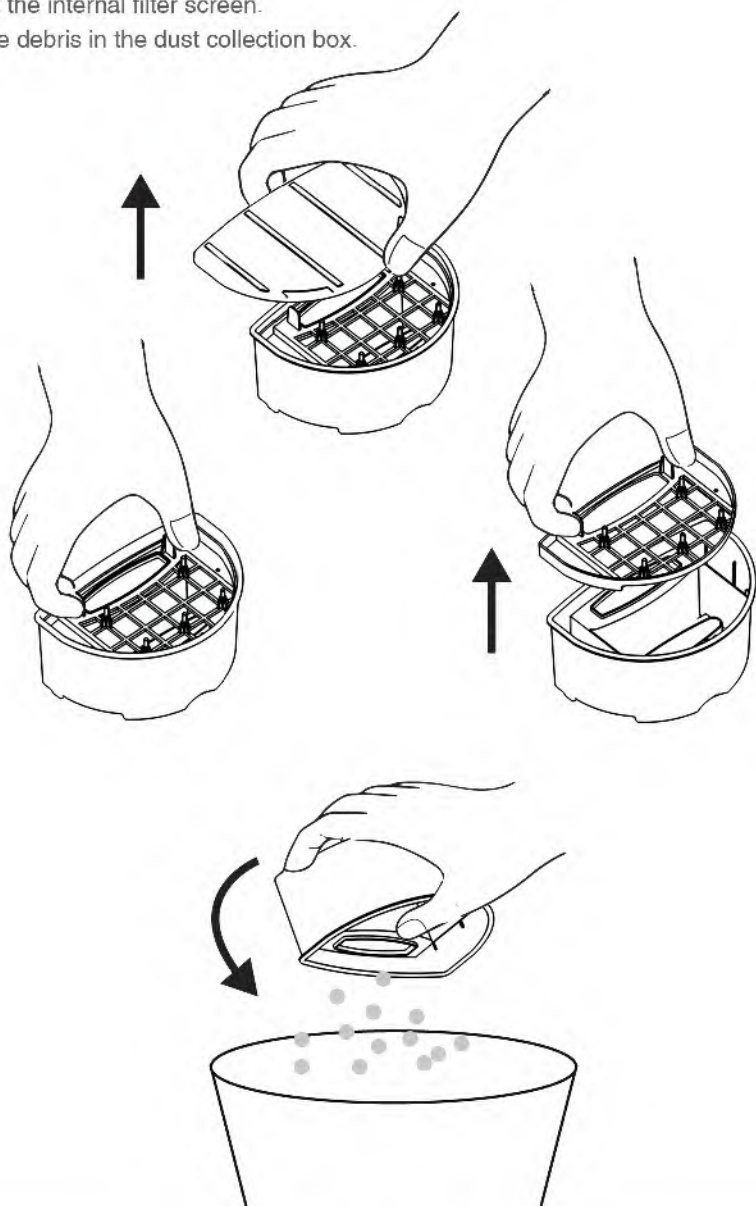

Cleaning and maintenance

6. Wash the dust collection box under the tap. Do not put it in the washing machine, dishwasher or other machines.
7. Clean the filter screen surface gently with a brush regularly.
8. After drying, please replace the filter screen and dust collection box cover in sequence.
9. Put the dust collection box back and cover the upper cover.

※Attention! Before starting the vacuum cleaner, please reconfirm whether the filter screen in the dust collection box of the host machine is installed correctly, If the machine is not loaded, it will start cleaning, which may cause machine failure. Please pay attention, thank you!

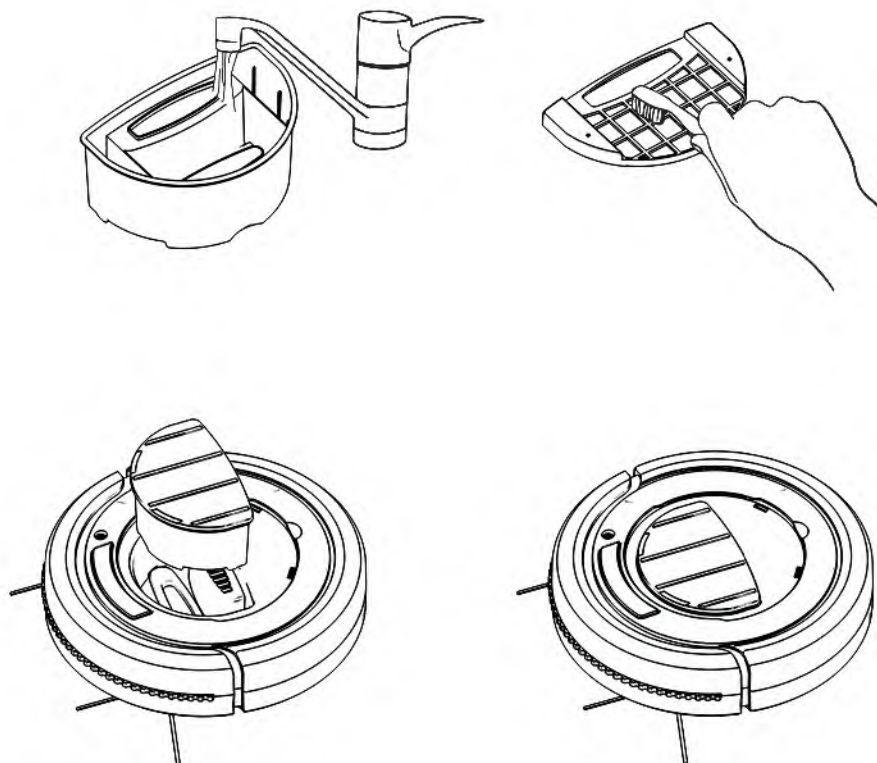


Cleaning and maintenance

Clean

After a period of use, dust and dirt will accumulate in the suction port at the bottom of the machine, so it is necessary to clean regularly to make the air flow smooth, so as not to affect the dust collection effect.

1. Turn off the machine power first.
2. Remove the dust and dirt accumulated in the suction port

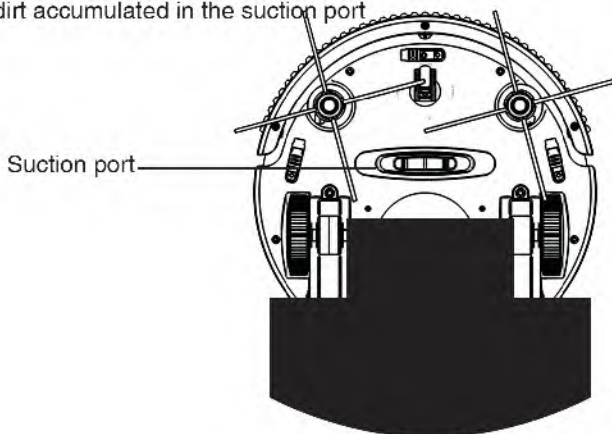

Clean the round brush

1. Turn off the vacuum cleaner, place the bottom of the vacuum cleaner upward on a flat ground or desktop, hold the circular brush and pull it up to remove the circular brush for cleaning
2. After cleaning, press the circular brush directly into the convex shaft in the center of the brush holder to replace the circular brush..
3. If the circular brush is worn out and cannot be used, please replace it with a new circular brush to achieve the maximum cleaning efficiency. When the circular brush curls, try to use hot water to iron the circular brush straight.

Simple troubleshooting table

	Problem	Possible causes	Solution
1	The red light is on after the machine is started.	<ol style="list-style-type: none"> 1. The battery storage capacity is insufficient. 2. The host is lifted and automatically powered off. 	<ol style="list-style-type: none"> 1. Please fully charge the battery. 2. Put the main engine back to the ground.
2	Unable to absorb dust and hair	<ol style="list-style-type: none"> 1. The dust collection box is full. 2. It is not installed correctly. 	<ol style="list-style-type: none"> 1. Please clean the dust collection box 2. Please install the filter screen into the dust collection box correctly.
3	Walk backward after starting up.	The floor is darker (poor ground reflection).	<p>Please prevent the bottom of the main engine from falling</p> <p>The sensor is adjusted into the long-distance direction synchronously.</p>
4	When charging for more than 3 hours, the charging light still continue to flash green.	The machine will automatically cut off the power supply after 3 hours of continuous charging. If it has been charged for more than 3 hours, but the green light is still flashing, it should be the case that the power is cut off and then connected in the middle of charging.	If it is confirmed that the battery has been charged for 3 hours, it can be turned on for use.
5	The circular brush is too curl to use.	Use for a period of time.	Please scald it with hot water to make it back to its original state.
6	Host failed to start.	Low power.	Please charge now.
7	The main engine keeps circling.	The connecting line of left wheel or right wheel falls off.	The large wheel cover can be opened, and the connecting wire socket can be plugged firmly or sent for repair.