




Elektrische Lunchbox

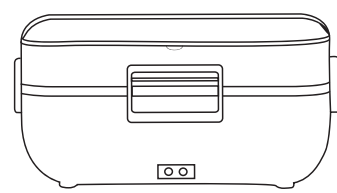

DFH-C21


(Bilder dienen nur als Referenz, vorbehaltlich unserer tatsächlichen Produkte.)

Produktspezifikation		
Modell Nr.	Stromspannung	Leistung
DFH-C21	220V-110V	40W
DFH-C21	12V-24V	40W

Vielen Dank, dass Sie sich für die elektrische Lunchbox entschieden haben. Bitte lesen Sie dieses Handbuch, bevor Sie die Lunchbox verwenden. Bewahren Sie die Lektüre zum späteren Nachschlagen auf!

Produkteinführung

Vielen Dank, dass Sie unsere elektrische Lunchbox verwenden. Wir erforschen und produzieren dieses Produkt, das neuartig und modisch ist, unabhängig. Unser Produkt ist von hohem Nutzen. Es dient Ihrer Bequemlichkeit.

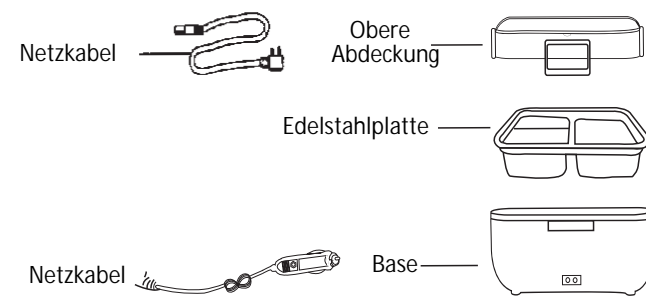


Thanks for purchasing Electric Lunch Box. Please read this manual before using the lunch box. After reading should be kept for future reference!


Product Introduction

Thank you for using our Electric Lunch Box. We independently research and produce this product which is novel and fashionable. Our product is of high utility. It's to your convenience.

Product Structure

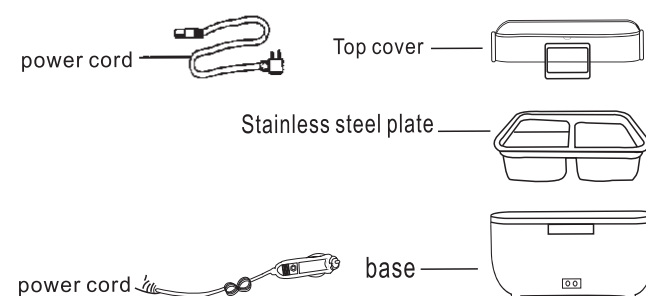

Electric Lunch Box

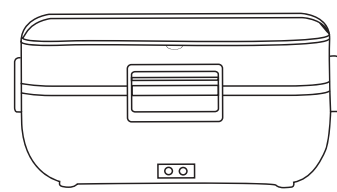

DFH-C21

(Pictures for reference only, Subject to our actual products.)


Product Specification		
Model No.	Voltage	Power
DFH-C21	220V-110V	40W
DFH-C21	12V-24V	40W

Thanks for purchasing Electric Lunch Box. Please read this manual before using the lunch box. After reading should be kept for future reference!


Product Introduction

Thank you for using our Electric Lunch Box. We independently research and produce this product which is novel and fashionable. Our product is of high utility. It's to your convenience.

Product Structure

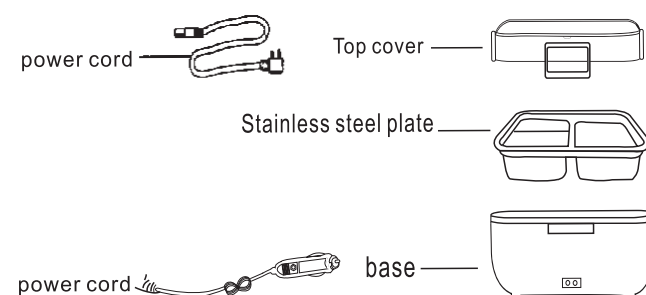

Electric Lunch Box

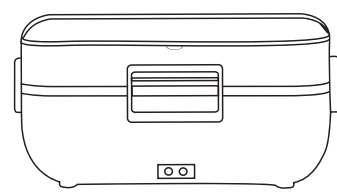

DFH-C21

(Pictures for reference only, Subject to our actual products.)

Product Specification		
Model No.	Voltage	Power
DFH-C21	220V-110V	40W
DFH-C21	12V-24V	40W

Verwendungsmethode

(A) Essen erhitzen

- Bitte geben Sie das gekochte Essen in den Reisbehälter und den Geschirrbehälter.
- Bitte befestigen Sie die Lippe.
- Öffnen Sie den Steckdosen-Shop, stecken Sie das Netzkabel ein.
- Schalten Sie den Strom ein, die Betriebsanzeige leuchtet und die Suppe beginnt.

Hinweis: Die Aufheizzeit hängt von der Menge an Reis, Gemüse und der Innentemperatur ab.

- Das Erhitzen von Speisen dauert bei einer Temperatur von 25 Grad Celsius nur 25 Minuten.
- Wenn die Lebensmittel aus dem Kühlschrank kommen, sollte die Erhitzungszeit angemessen verlängert werden.
- Bitte ziehen Sie vor dem Essen das Netzkabel heraus.

(B) Suppe erhitzen

- Bitte geben Sie die gekochte Suppe in die Brotdose.
 - Bitte befestigen Sie die Lippe.
 - Öffnen Sie den Steckdosenverschluss und stecken Sie das Netzkabel ein.
 - Schalten Sie den Strom ein, die Betriebsanzeige leuchtet und die Suppe beginnt. Hinweis: Die Aufheizzeit hängt von der Menge an Reis, Gemüse und der Innentemperatur ab.
- Das Erhitzen von Speisen dauert bei 25 Grad Celsius nur 25 Minuten.
 - Wenn die Lebensmittel aus dem Kühlschrank kommen, sollte die Heizzeit entsprechend verlängert werden.
 - Bitte ziehen Sie vor dem Essen das Netzkabel heraus.

Method of use

(A) Heating food

- Please put the cooked food into the rice container and the dishes container.
 - Please fasten the lip.
 - Open the socket stopper, insert the power cord.
 - Switch on the power, the power indicator light, plus soup began.
- Note: Heating time depends on the amount of rice, vegetables, and the indoor temperature.
- Heating food just need 25 minutes on the condition of 25 degrees centigrade.
 - When the food get from the fridge, the heating time should be extension appropriate.
 - Please pull out the power cord before eating.

(B) Heating soup

- Please put the cooked soup into the lunch box.
 - Please fasten the lip.
 - Open the socket stopper, insert the power cord.
 - Switch on the power, the power indicator light, plus soup began.
- Note: Heating time depends on the amount of rice, vegetables, and the indoor temperature.
- Heating food just need 25 minutes on the condition of 25 degrees centigrade.
 - When the food get from the fridge, the heating time should be extension appropriate.
 - Please pull out the power cord before eating.

Method of use

(A) Heating food

- Please put the cooked food into the rice container and the dishes container.
 - Please fasten the lip.
 - Open the socket stopper, insert the power cord.
 - Switch on the power, the power indicator light, plus soup began.
- Note: Heating time depends on the amount of rice, vegetables, and the indoor temperature.
- Heating food just need 25 minutes on the condition of 25 degrees centigrade.
 - When the food get from the fridge, the heating time should be extension appropriate.
 - Please pull out the power cord before eating.

(B) Heating soup

- Please put the cooked soup into the lunch box.
 - Please fasten the lip.
 - Open the socket stopper, insert the power cord.
 - Switch on the power, the power indicator light, plus soup began.
- Note: Heating time depends on the amount of rice, vegetables, and the indoor temperature.
- Heating food just need 25 minutes on the condition of 25 degrees centigrade.
 - When the food get from the fridge, the heating time should be extension appropriate.
 - Please pull out the power cord before eating.

Warme Tipps

Wenn das Essen längere Zeit beiseite gelegt wurde, empfiehlt es sich, etwas Wasser in den Reis zu geben und ihn dann zu erhitzen, damit der Reis weicher wird.




Produktmerkmale

- Mit dezenter Designoptik.
- Verwenden Sie einen speziellen Heizstil, der die Temperatur ausgleichen und die Lebensmittel weicher machen kann.
- Nehmen Sie das Design eines Konservierungsbehälters an, der bequem und einfach zu transportieren ist.
- Der innere Lebensmittelbehälter besteht aus hitzebeständigem Hartmaterial, das den Sicherheitsstandards der ROHS- und FDA-Zertifizierungen entspricht.

Warme Tips

If the food has been set aside for a long time, it is suggested to add some water into the rice and then plug in to heat so that the rice would become softer.

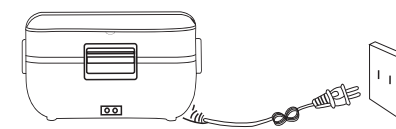


Product Features

- with subtle design appearance.
- Adopt special heating style, which can uniform the temperature and softer the food.
- Adopt preservation container design, convenient and easy to take.
- The inside food container is made of impeded heat resisting, indurative material which corresponds with the safety standard of ROHS and FDA certifications

Warme Tipps

If the food has been set aside for a long time, it is suggested to add some water into the rice and then plug in to heat so that the rice would become softer.

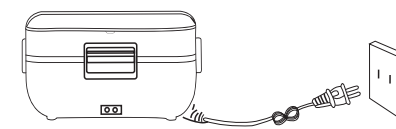

Product Features

- with subtle design appearance.
- Adopt special heating style, which can uniform the temperature and softer the food.
- Adopt preservation container design, convenient and easy to take.
- The inside food container is made of impeded heat resisting, indurative material which corresponds with the safety standard of ROHS and FDA certifications

Reinigung & Wartung

- Vergessen Sie nicht, den Stecker zu ziehen, wenn Sie mit dem Erhitzen fertig sind.
- Bitte reinigen Sie es rechtzeitig, um die Entstehung von eigenartigen Gerüchen zu verhindern.
- Verwenden Sie zum Reinigen keinen Verdünnler, kein Lösungsmittel, kein Reinigungsmittel, keine harte Bürste oder keinen Reinigungsball aus Edelstahl.
- Zur Reinigung können Sie etwas warmes Wasser oder ein weiches, feuchtes Tuch verwenden.
- Wenn Sie es längere Zeit nicht verwenden, reinigen Sie es bitte, legen Sie es in die Verpackung und legen Sie es dann in einen trockenen, belüfteten Zustand.
- Wenn es Probleme mit der Lunchbox gibt, senden Sie sie bitte zur Reparatur an unsere zuständige Wartungsabteilung. Reparieren Sie es nicht selbst.

Sicherheitsvorkehrungen

- Bitte stellen Sie sicher, dass die Nennspannung mit Ihrer übereinstimmt.
- Wenn das Netzkabel beschädigt ist, sollten Sie es durch ein neues ersetzen oder es in unserer Reparaturabteilung kaufen.
- Benutzen Sie bei brennbaren Dingen nicht den Lunchbox-Ansatz.
- Stecken Sie den Stecker nicht ein und aus, wenn Ihre Hände nass sind.
- Tauchen Sie das Produkt zum Waschen nicht in Wasser ein, da dies dem Gerät schaden könnte.
- Modifizieren, entfernen oder reparieren Sie dieses Produkt nicht selbst.
- Benutzen Sie die Lunchbox nicht an unebenen oder nassen Orten.
- Es ist verboten, es im Hochtemperatur-Sterilisationschrank zu desinfizieren.
- Erhitzen Sie die Lunchbox nicht in der Mikrowelle.
- Frieren Sie die Lunchbox nicht im Kühlschrank ein.
- Schalten Sie das Gerät nicht ein, wenn sich keine Lebensmittel darin befinden.

Clean & maintenance

- Don't forget to pull the plug out when you finish heating.
- Please clean in time to prevent generation of peculiar smell
- Do not use thinner, dasonline, cleanser, hard brush, or stainless steel wire clean ball to clean.
- You can use a few of warm water or soft and wet cloth to clean it.
- Long time when not in use, please clean it and put it into the packing box, then place it in the dry ventilated condition.
- If there exists any problems with the lunch box, please sent it to our designated maintenance service department to repair. Do not repair it by yourself.

Safety Precautions

- Please make sure the rated voltage matches yours.
- If the power cord is damaged, you should use a new one to replace it or buy it from our repair department.
- Do not use the lunch box approach to inflammable things.
- Do not plug in and unplug the plug when your hands are wet.
- Do not soak the product into water to wash, which does harm to the appliance.
- Do not modify, remove or repair this product by yourself.
- Do use the lunch box in uneven or wet place.
- Banned disinfect it in the high temperature sterilizing cabinet
- Do not heat the lunch box in the microwave oven.
- Do not freeze the lunch box in the refrigerator.
- Do not switch on when there is no food inside.

Clean & maintenance

- Don't forget to pull the plug out when you finish heating.
- Please clean in time to prevent generation of peculiar smell
- Do not use thinner, dasonline, cleanser, hard brush, or stainless steel wire clean ball to clean.
- You can use a few of warm water or soft and wet cloth to clean it.
- Long time when not in use, please clean it and put it into the packing box, then place it in the dry ventilated condition.
- If there exists any problems with the lunch box, please sent it to our designated maintenance service department to repair. Do not repair it by yourself.

Safety Precautions

- Please make sure the rated voltage matches yours.
- If the power cord is damaged, you should use a new one to replace it or buy it from our repair department.
- Do not use the lunch box approach to inflammable things.
- Do not plug in and unplug the plug when your hands are wet.
- Do not soak the product into water to wash, which does harm to the appliance.
- Do not modify, remove or repair this product by yourself.
- Do use the lunch box in uneven or wet place.
- Banned disinfect it in the high temperature sterilizing cabinet
- Do not heat the lunch box in the microwave oven.
- Do not freeze the lunch box in the refrigerator.
- Do not switch on when there is no food inside.

Fehlerbehebung

Fehler	Ursache	Lösung
Die Anzeige leuchtet im eingeschalteten Zustand nicht	a. Nicht angeschlossen b. Netzkabel beschädigt	Überprüfen Sie das Steckdose, das Netzkabel und den Stecker noch einmal
Im ausgeschalteten Zustand leuchtet die Anzeige nicht	Das Heizelement ist beschädigt	Zur Wartung an die zuständige Abteilung senden
Die Temperatur ist nach dem Erhitzen sehr niedrig	A. Die Aufheizzeit ist zu kurz B. Sowohl die Umgebungstemperatur als auch die Lebensmitteltemperatur sind zu niedrig	Verlängern Sie die Aufheizzeit

Trouble Shooting

Fault	Cause	Solution
The indicator is not lit when switched on	a. Haven't plug in b. Power cord damaged	Check the socket, power cord and plug-in again
The indicator is not lit when switched off	a. The heating element is damaged	Send to the designated department for maintenance
The temperature is very low after heating	a. Heating time is too short b. Both the temperature of the environment and the food is too low	Extend the heating time

Trouble Shooting

Fault	Cause	Solution
The indicator is not lit when switched on	a. Haven't plug in b. Power cord damaged	Check the socket, power cord and plug-in again
The indicator is not lit when switched off	a. The heating element is damaged	Send to the designated department for maintenance
The temperature is very low after heating	a. Heating time is too short b. Both the temperature of the environment and the food is too low	Extend the heating time