



user Manual

contents

English	-----	01~06
Deutsche	-----	07~11



SAFETY CAUTIONS

EN

WARNING : THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM, IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.



This product is not suitable for use in bath or shower.

THE STYLER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- Do not leave the styler unattended when switched on.
- Allow the styler to cool down before storing it.
- Do not immerse in water or other liquids.
- Do not place styler on soft material e.g. carpet, bedding, towels, rugs etc.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- Avoid allowing any part of the hot plates to contact the face, neck or scalp.
- Do not wrap the cord around the unit. Check cord regularly for any sign of damage.
- Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately contact Us for repair or replacement in order to avoid a hazard.
- special tools are required or any examination, adjustment or repair. unqualified repair work could lead to hazardous conditions for the user.
- we do not accept responsibility for damage to the product, persons or other items, caused by misuse, abuse or non-compliance with these instructions.
- Do not use any other liquid other than water in your styler to avoid damage to unit.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental Capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Tips:

please do not fill oily or unknown hair treatment liauid which without the styler manufacturer approval into the tank, it may do harm to the tank and cause quality problem.

STEAM RELEASE SETTING

There are 3 settings on the steam Release Dial. please see the underside of the styler. see dicagram below

The settings are:

- 1 . FIG. 1 OFF - No steam _____
- 2 . FIG.2 Medium steam _____
- 3 . FIG.3 High steam _____



To release the steam turn the button clockwise to the desired steam position.


caution: The steam activates over 100°C/212°F



As you start to use the styler you wil notice steam start to come through the steam vents.



FEATURES & BENEFITS

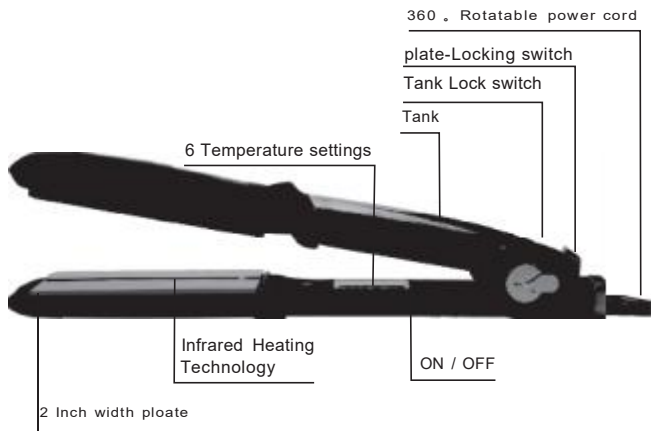

Infrared
Heating Technology



5 conditioning
steam vents



Flashing LED
Light Indicator



OFF / MED / HIGH
steam setting

INSTRUCTIONS FOR USE

- Before use , make sure hair is clean and tangle -free.
- Fill the tank to your desired level with water. (our product will have ± 10 °C temperature difference)
- plug in the unit, press the on-off switch until LED light turns on .
- Temperature bars flash until desired temperature is reached and then the unit will beep when ready to use .
- Run the straightener through the entire length of the hair, without stopping.
- Repeat only twice per section to prevent hair damage .

straightening

STEP1 : prep your hair. Make sure your hair is clean & tangle -free.

STEP2 : Depending on your hair type and hair length - this information below is aimed at Medium hair type and shoulder length hair. Take a "2 wide x 1/4" thick section of hair.

Move the styler over the sectioned hair starting at the roots about " 1/4 " away from the scalp, run the styler slowly through to the ends of the Hair with light pressure .

STEP3 : Repeat this process , section by section until your hair is completely straightened , soft and smooth.

curling

The steam hair straightener with its rounded edge plates enables you to also create curls,

waves , and lots of other hairstyles. You are also able to vary the texture to give a purposefully imperfect look to your hair, one that is messy-cute and untidy.

STEP1 : prep your hair . make sure your hair is clean & tangle -free.

STEP2 : Take a small section of hair, and insert it into your styler. your sections can vary in size for a more natural , beautifully imperfect look - this Up to you . You may also decide where you would like your curl to start and can place your styler accordingly.

STEP 3: Twist your wrist, (the one holding the styler) , about a half-turn , then pull , then twist again , then pull. keep repeating this until you reach the end of your hair. For a more beach feel , keep the very ends of your hair out of the styler .

STEP4 (ALTERNATIVE): Twist and pull just as step 3 indicated , but for a tighter, more curl , twist the mid-shaft to ends around the entire iron mimicking what you would do with a curling iron .

STEP 5: continue with step 3 (either version) throughout your entire head of hair. For more variation and imperfection with your style , you may option to switch the direction of you curls , vary the section size , and begin the curls at different parts of your sections.

You may want to change the direction of your curls near you face , (depending on the side) , if you wish to have them sweep away from your face. Again , this is a personal preference that is entirely up to you .

STEP6: comb your fingers through to break up the curls . Take your hands and shake you hair out.

keep in mind that using the styler to curl is a technique that takes some practice , So be patient with yourself. This technique is meant to be sexy, creative , and flirty, So just have fun with it! Now, it's your turn to try it out.

SUGGESTED STYLER TEMPERATURE SETTING	HAIR TYPE
Low 150°C=300°F	Fragile , very fine textured hair
Medium 190°C=375°F	Normal , medium textured hair
High 235°C=450°F	Thick resistance , coarse textured hair

CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. To maintain the effectiveness of your product wipe clean after use with a damp cloth. Do not use an abrasive cleaning fluid to clean , as damage will occur.

SERVICE AND WARRANTY

This product has been checked and is free of defects. we warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period , we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

If you found the Tank have a little water that is normal , because our product is 100% tested with water as part of our quality control procedure.

The white color styler edge will become a little yellow after used for a long time at high temperature , this phenomenon is normal.

STEP. 1



Pull the unlock button
release the water tank.

STEP.2



Release the water tank.

STEP. 3



Pull out the black seal and
fill water in.

STEP.4



Insert the water tank inside
(follow direction of the triangle)

STEP.5



Steam setting
(OFF/MED/HIGH)

STEP. 6



ON/OFF, Heat up / Down button

Tip: Please switch the steam setting after the temperature reaches the set temperature.



SICHERHEITSVORKEHRUNGEN

WARNUNG: DIESES GERÄT DARF NICHT IN EIN BAD GEWONNEN WERDEN. Es darf nicht in der Nähe von Badewannen, Duschen, Becken oder anderen Schiffen verwendet werden, die Wasser oder andere Flüssigkeiten enthalten.



Dieses Produkt ist nicht für die Verwendung in Bad oder Dusche geeignet.

DER STYLER SOLLTE VON DER NETZTEILUNG ABGESCHLOSSEN WERDEN, WENN NICHT VERWENDET.

- Lassen Sie den Styler beim Einschalten nicht unbeaufsichtigt.
- Lassen Sie den Styler abkühlen, bevor Sie ihn lagern.
- Tauchen Sie nicht in Wasser oder andere Flüssigkeiten.
- Stellen Sie den Styler nicht auf weiches Material, z. Teppich, Bettwäsche, Handtücher, Rigs usw.
- Stellen Sie immer sicher, dass die zu verwendende Spannung der am Gerät angegebenen Spannung entspricht.
- Lassen Sie keinen Teil der Heizplatte das Gesicht, den Hals oder die Kopfhaut berühren.
- Wickeln Sie das Kabel nicht um das Gerät. Überprüfen Sie das Kabel regelmäßig auf Beschädigungen.
- Beschädigte Kabel können gefährlich sein. Wenn das Netzkabel dieses Geräts beschädigt wird, stellen Sie die Verwendung sofort ein und kontaktieren Sie uns zur Reparatur oder zum Austausch, um eine Gefahr zu vermeiden.
- Spezialwerkzeuge sind erforderlich oder jede Prüfung, Einstellung oder Reparatur. Unqualifizierte Reparaturarbeiten können zu gefährlichen Bedingungen für den Benutzer führen.
- Wir übernehmen keine Verantwortung für Schäden am Produkt, an Personen oder anderen Gegenständen, die durch Missbrauch, Missbrauch oder Nichteinhaltung dieser Anweisungen verursacht wurden.
- Verwenden Sie in Ihrem Styler keine andere Flüssigkeit als Wasser, um Schäden am Gerät zu vermeiden.

Dieses Gerät kann von Kindern ab 8 Jahren und Personen mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder Mangel an Erfahrung und Wissen verwendet werden, wenn sie beaufsichtigt oder in die sichere Verwendung des Geräts eingewiesen wurden und die Gefahren verstehen beteiligt. Kinder dürfen nicht mit dem Gerät spielen. Reinigung und Benutzerwartung dürfen nicht von Kindern ohne Aufsicht durchgeführt werden.

EINSTELLUNG DER DAMPFFREIGABE

Es gibt 3 Einstellungen auf dem Steam Release Dial. Bitte beachten Sie die Unterseite des Stylers. Siehe Abbildung unten. Die Einstellungen sind:

1. FIG. 1 AUS - Kein Dampf
2. FIG. 2 mittlerer Dampf
3. FIG. 3 Hochdampf



Um den Dampf abzulassen, drehen Sie den Knopf im Uhrzeigersinn auf die gewünschte Dampfposition.

Achtung: Der Dampf wird über 100 ° C aktiviert



Wenn Sie den Styler verwenden, werden Sie feststellen, dass Dampf durch die Dampfentlüftungsöffnungen austritt.



GEBRAUCHSANWEISUNG

- Stellen Sie vor dem Gebrauch sicher, dass das Haar sauber und verwirrungsfrei ist.
- Füllen Sie den Tank bis zum gewünschten Stand mit Wasser. (Unser Produkt hat... ± 10 °C Temperaturunterschied)
- Schließen Sie das Gerät an, halten Sie den Ein- / Ausschalter gedrückt, bis die LED leuchtet.
- Temperaturbalken blinken, bis die gewünschte Temperatur erreicht ist, und das Gerät piept, wenn es betriebsbereit ist.
- Führen Sie den Haarglätter über die gesamte Länge des Haares, ohne anzuhalten.
- Wiederholen Sie diesen Vorgang nur zweimal pro Abschnitt, um Haarschäden zu vermeiden.

STRAIGHTENING

STEP1: Prep your hair. Make sure your hair is clean & tangle -free.

STEP2: Depending on your hair type and hair length - this information below is aimed at Medium hair type and shoulder length hair. Take a "2 wide x 1/4" thick section of hair. Move the Styler over the sectioned hair starting at the roots about "1/4" away from the scalp, run the Styler slowly through to the ends of the Hair with light pressure.

STEP3: Repeat this process, section by section until your hair is completely straightened, soft and smooth.

CURLING

This steam styler's rounded edge plates enable you to also create curls and light waves.

STEP1: Prep your hair. make sure your hair is clean & tangle -free.

STEP2: Take a small section of hair, and insert it into your Styler. Your sections can vary in size for a more natural, beautifully imperfect look - this up to you. You may also decide where you would like your curl to start and can place your Styler accordingly

STEP 3: Twist your wrist, (the one holding the Styler), about a half-turn, then pull, then twist again, then pull. Keep repeating this until you reach the end of your hair. For a more beach feel, keep the very ends of your hair out of the styler .

STEP4(ALTERNATIVE): Twist and pull just as Step 3 indicated, but for a tighter, more curly curl,twist the mid-shaft to ends around the entire iron mimicking what you would do with a curling iron.

Tips: You may want to change the direction of your curler near you face based on personal preference.

STEP5: Comb your fingers through to break up the curls. Take your hands and shake you hair out.

EINSTELLUNG STYLER TEMPERATUR EINSTELLEN	HAARTYP
1 50°C =304 P	Zerbrechliches, sehr fein strukturiertes Haar
1 90°C =374 F	Normales, mittel strukturiertes Haar
235°C =450 F	Dicker Widerstand, grobstrukturiertes Haar

REINIGUNG UND INSTANDHALTUNG







Stellen Sie sicher, dass das Gerät ausgesteckt und kühl ist. Um die Wirksamkeit Ihres Produkts aufrechtzuerhalten, wischen Sie es nach Gebrauch mit einem feuchten Tuch sauber. Verwenden Sie zum Reinigen keine Scheuermittel, da dies zu Beschädigungen führen kann.

SERVICE UND GARANTIE

Dieses Produkt wurde geprüft und ist fehlerfrei. Wir garantieren dieses Produkt für den Garantiezeitraum ab dem ursprünglichen Kaufdatum des Verbrauchers gegen alle Mängel, die auf fehlerhaftes Material oder fehlerhafte Verarbeitung zurückzuführen sind. Sollte das Produkt innerhalb der Garantiezeit defekt sein, reparieren wir einen solchen Defekt oder ersetzen das Produkt oder einen Teil davon unverändert, sofern ein Kaufnachweis vorliegt. Dies bedeutet keine Verlängerung der Garantiezeit.

Wenn Sie festgestellt haben, dass der Tank ein wenig Wasser enthält, ist dies normal, da unser Produkt im Rahmen unserer Qualitätskontrolle zu 100% mit Wasser getestet wurde.

Die weiße Farbe des Styler-Randes wird nach längerem Gebrauch bei hoher Temperatur ein wenig gelb. Dieses Phänomen ist normal.

<p>STEP 1</p>  <p>Drücken Sie die Entriegelungstaste, um den Wassertank freizugeben.</p>	<p>STEP 2</p>  <p>Lassen Sie den Wassertank frei</p>
<p>STEP.3</p>  <p>Ziehen Sie die schwarze Gummidichtung ab und füllen Sie sie ein</p>	<p>STEP.4</p>  <p>Fügensieden wassertank innenein (folgensieder richtung des dreiecks)</p>
<p>STEP 5</p>  <p>Dampfeinstellung (OFF / MED / HIGH)</p>	<p>STEP 6</p>  <p>EIN / AUS /, TASTE HEIZENAUF / AB</p>

Tipp: Bitte wechseln Sie die Dampfeinstellung, nachdem die Temperatur die eingestellte Temperatur erreicht hat.