

Informationen zur Gebrauchsanleitung

Lesen Sie vor dem ersten Gebrauch des Produktes diese Gebrauchsanleitung sorgfältig durch und bewahren Sie diese für spätere Fragen und weitere Nutzer auf. Sie ist ein Bestandteil des Produktes. Hersteller und Importeur übernehmen keine Haftung, wenn die Angaben in dieser Gebrauchsanleitung nicht beachtet werden. Sollten Sie Fragen zum Produkt sowie zu Ersatz- / Zubehöerteilen haben, wenden Sie sich an den Kundenservice über unsere Website:

www.ds-group.de/kundenservice

SYMBOLE



Gefahrenzeichen: Dieses Symbol zeigt mögliche Gefahren an. Die dazugehörigen Sicherheitshinweise aufmerksam lesen und befolgen.



Ergänzende Informationen



ACHTUNG: Nicht für Kinder unter 3 Jahren geeignet.

BESTIMMUNGSGEMÄßER GEBRAUCH

- Das Produkt ist eine Dartscheibe, die sich für Spiele von 1 – 2 Spielern eignet.
- Das Produkt ausschließlich im Innenbereich benutzen.
- Das Produkt ist für den privaten Gebrauch, nicht für eine gewerbliche Nutzung bestimmt.
- Das Produkt nur für den angegebenen Zweck und nur wie in der Gebrauchsanleitung beschrieben nutzen. Jede weitere Verwendung gilt als bestimmungswidrig.
- Von der Gewährleistung ausgeschlossen sind alle Mängel, die durch unsachgemäße Behandlung, Beschädigung oder Reparaturversuche entstehen. Dies gilt auch für den normalen Verschleiß.

SICHERHEITSHINWEISE



ACHTUNG: Nicht für Kinder unter 3 Jahren geeignet. Es besteht Erstickungsgefahr durch verschluckbare Kleinteile.

- Kinder jünger als 3 Jahre und Tiere sind vom Produkt fernzuhalten.
- Das Produkt schützen vor: Hitze, Feuer, lang anhaltender, direkter Sonneneinstrahlung, extremen Temperaturen, lang anhaltender Feuchtigkeit und Stößen.
- Keine schweren Gegenstände auf das Produkt legen oder stellen.
- Kein zusätzliches Zubehör verwenden, das nicht vom Hersteller empfohlen wird, um die Funktionsweise des Produktes nicht zu beeinträchtigen und eventuelle Schäden zu verhindern.
- Zum Reinigen keine scharfen oder scheuernden Reinigungsmittel oder Reinigungspads verwenden. Diese können die Oberflächen beschädigen. Bei Bedarf mit einem feuchten Tuch abwischen.
- Das Produkt an einem sauberen, trockenen, für Kleinkinder und Tiere unzugänglichen Ort aufbewahren.

LIEFERUMFANG

1 x Dartscheibe	6 x Barrel
1 x Tischständer	12 x Spitze
3 x Schaft inkl. Flight (rot)	1 x Gebrauchsanleitung
3 x Schaft inkl. Flight (grün)	

Den Lieferumfang auf Vollständigkeit und die Bestandteile auf Transportschäden überprüfen. Bei Schäden nicht verwenden, sondern den Kundenservice kontaktieren. Eventuelle Folien, Aufkleber oder Transportschutz vom Produkt abnehmen.

Niemals eventuelle Warnhinweise entfernen!

DARTSCHEIBE PLATZIEREN

Beachten!

- Das Produkt an einer sicheren Stelle auf einem trockenen Untergrund platzieren.
- Zum Aufhängen geeignetes Befestigungsmaterial verwenden. Vor dem Bohren sicherstellen, dass hinter der beabsichtigten Bohrstelle keine Rohre oder Stromleitungen verlaufen.



Die Dartscheibe sollte idealerweise in einer Höhe von ca. 1,73 m (vom Boden bis zum Bulls Eye) platziert werden.

- Aufhängen:** Die Dartscheibe mit der Aufhängöse an einer Schraube aufhängen.
- Aufstellen:** Die Enden des Tischständers auf der Rückseite der Dartscheibe in die beiden unteren Aussparungen stecken. Dann die Dartscheibe auf eine ebene Fläche stellen.

DARTPFEILE MONTIEREN




Jeweils eine Spitze (A) sowie einen Schaft (C) inkl. Flight in einen Barrel (B) schrauben.

BENUTZUNG

- In einem Abstand von ca. 2,37 Metern zwischen Wand und Füßen aufstellen.
- Jeder Spieler hat drei Würfe pro Runde.
- Anschließend die Dartpfeile aus der Dartscheibe herausnehmen. Der nächste Spieler ist an der Reihe.

PUNKTZAHL DER SEGMENTE

Die Punktzahl **von innen nach außen** je Segment:

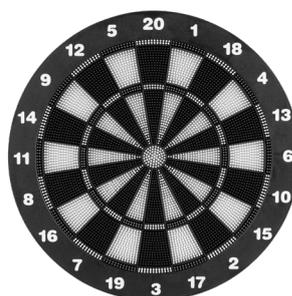

Bulls Eye (rot)	50
Single (schwarz-weiß)	einfache Punktzahl (je nach Segment)
Triple (rot-grün)	dreifache Punktzahl (je nach Segment)
Single (schwarz-weiß)	einfache Punktzahl (je nach Segment)
Double (rot-grün)	doppelte Punktzahl (je nach Segment)

ENTSORGUNG



Das Verpackungsmaterial umweltgerecht entsorgen und der Wertstoffsammlung zuführen. Soll das Produkt nicht mehr verwendet werden, auch dieses umweltgerecht entsorgen.

Die Abfallvermeidung leistet einen noch wertvolleren Beitrag zum Umweltschutz. Sofern möglich, ist daher neben einer weiteren eigenen Nutzung oder Reparatur auch die Abgabe an Zweitnutzer eine ökologisch wertvolle Alternative zur Entsorgung.

DS Produkte GmbH, Stormarnring 14, 22145 Stapelfeld, Deutschland

KUNDENSERVICE

Am Heisterbusch 1, 19258 Gallin, Deutschland

☎ +49 38851 314650 *) • kundenservice@dspro.de

*) Anruf in das deutsche Festnetz zum Tarif Ihres Anbieters.

Alle Rechte vorbehalten.

ID: Z 15300 M DS V1.1 0225 as

Information About the Operating Instructions

Before using the product for the first time, please read through these operating instructions carefully and keep them for future reference and other users. They form an integral part of the product. The manufacturer and importer do not accept any liability if the information in these operating instructions is not complied with. If you have any questions about the product and about spare parts / accessories, contact the customer service department via our website:

www.ds-group.de/kundenservice

SYMBOLS



Danger symbol: This symbol indicates possible dangers. Read the associated safety notices carefully and follow them.



Supplementary information



PLEASE NOTE: Not suitable for children under the age of 3.

INTENDED USE

- The product is a dartboard that is suitable for games involving 1 – 2 players.
- Only ever use the product indoors.
- The product is for personal use only and is not intended for commercial applications.
- Use the product only for the specified purpose and as described in the operating instructions. Any other use is deemed to be improper.
- The warranty does not cover faults caused by incorrect handling, damage or attempted repairs. The same applies to normal wear and tear.

SAFETY NOTICES



PLEASE NOTE: Not suitable for children under the age of 3. There is a danger of suffocation from small parts that may be swallowed.

- Children younger than 3 years of age and animals must be kept away from the product.
- Protect the product from: heat, fire, long-term direct sunlight, extreme temperatures, long-term humidity and impacts.
- Do not lay or place any heavy objects on the product.
- Do not use any additional accessories which are not recommended by the manufacturer in order to guarantee that there is no interference that may prevent the product from working and to avoid possible damage.
- Do not use any sharp or abrasive cleaning agents to clean the product. These may damage the surfaces. Wipe down the product with a damp cloth if necessary.
- Store the product in a clean, dry place that is out of the reach of young children and animals.

ITEMS SUPPLIED

1 x dartboard	6 x barrel
1 x table stand	12 x tip
3 x shaft incl. flight (red)	1 x operating instructions
3 x shaft incl. flight (green)	

Check the items supplied for completeness and the components for transport damage. If you find any damage, do not use the product but contact our customer service department. Remove any films, stickers or transport protection from the product. **Never remove any possible warnings!**

PLACING THE DARTBOARD

Please Note!

- Attach the product in a secure place on a dry surface.
- Use suitable fixings to hang up the product. Before drilling, ensure that there are no pipes or power cables behind the intended drilling point.



The dartboard should ideally be placed at a height of approx. 1.73 m (from the floor up to the bullseye).

- **Hanging up:** Hang up the dartboard on a screw using the hanging lug.
- **Setting up:** Insert the ends of the table stand into the two lower recesses on the back of the dartboard. Then place the dartboard on a flat surface.

ASSEMBLING THE DARTS




Screw a tip (A) and a shaft with flight (C) into each barrel (B).

USE

- Stand at a distance of approx. 2.37 metres between the wall and your feet.
- Each player has three throws per round.
- Then retrieve the darts from the dartboard. It is now the next player's turn.

SCORE OF THE SEGMENTS

The points score **from the inside to the outside** for each segment of the board:

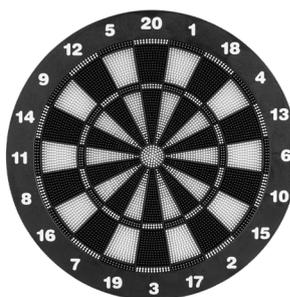

Bullseye (red)	50
Single (black-white)	Single points score (depending on segment)
Triple (red-green)	Triple points score (depending on segment)
Single (black-white)	Single points score (depending on segment)
Double (red-green)	Double points score (depending on segment)

DISPOSAL



Dispose of the packaging material in an environmentally friendly manner so that it can be recycled. If the product is no longer going to be used, dispose of it in an environmentally friendly manner as well.

Waste prevention makes an even more valuable contribution to protecting the environment. This means if possible, as well as continuing to use or repair, passing it on to another user also represents an ecologically beneficial alternative to disposal.

DS Produkte GmbH, Stormarnring 14, 22145 Stapelfeld, Germany

CUSTOMER SERVICE

Am Heisterbusch 1, 19258 Gallin, Germany

☎ +49 38851 314650*) • kundenservice@dspro.de

*) Calls to German landlines are subject to your provider's charges.

All rights reserved.

ID: Z 15300 M DS V1.1 0225 as