


# Bedienungsanleitung Kaliber: PC21-Licht

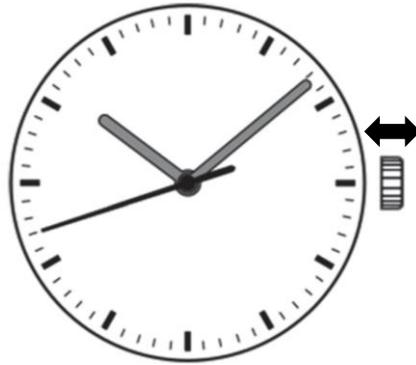

## Eigenschaften:

- Werk: PC21, Analog Quartz
- Ganggenauigkeit: unter +/- 30 Sekunden pro Monat
- Batterielaufzeit: Durchschnittlich 2 Jahre
- Anzeige: Stunden, Minuten und Sekunden Zeiger
- Licht: Hintergrund Beleuchtung
- Batterie: SR626SW

## 1. Einstellung der Uhrzeit

Ziehen Sie die Krone vorsichtig heraus und stellen durch drehen die gewünschte Uhrzeit ein, danach drücken Sie die Krone wieder auf die Ausgangsposition zurück.

## 2. Hintergrund Beleuchtung

Drücken Sie den Drücker auf der 10 Uhr Position. Die Hintergrundbeleuchtung leuchtet, häufiges betätigen verringert die Batterielaufzeit.

## 3. Konformitätserklärung

Hiermit erklären wir, dass sich diese Armbanduhr in Übereinstimmung mit den grundlegenden Anforderungen befindet und mit den anderen relevanten Vorschriften der Richtlinie 1999/5/EG übereinstimmt.

## 4. Dieses Produkt entspricht den EMV Richtlinien der EU

## 5. Wasserdichtigkeit gemäß DIN 8310

Die Wasserdichtigkeit Ihrer Uhr ist auf dem Gehäuseboden vermerkt und ist im Neuzustand wie folgt:

**WR:** Waschen, Regen, Spritzer = NEIN, Duschen = NEIN, Baden = NEIN, Schwimmen = NEIN, Tauchen ohne Ausrüstung = NEIN

**3 Bar:** Waschen, Regen, Spritzer = JA, Duschen = NEIN, Baden = NEIN, Schwimmen = NEIN, Tauchen ohne Ausrüstung = NEIN

**5 Bar:** Waschen, Regen, Spritzer = JA, Duschen = NEIN, Baden = JA, Schwimmen = NEIN, Tauchen ohne Ausrüstung = NEIN


**10 Bar:** Waschen, Regen, Spritzer = JA, Duschen = NEIN, Baden = JA, Schwimmen = JA, Tauchen ohne Ausrüstung = NEIN

## Hinweise zum Umweltschutz

Entsorgung von Altgeräten. Dieses Produkt darf nach Ende seiner Lebensdauer nicht dem normalen Haushaltsabfall zugeführt werden, sondern muss an einem Sammelpunkt für Recycling von elektrischen Geräten abgegeben werden. Das Symbol auf dem Produkt oder der Bedienungsanleitung weist darauf hin. Die Werkstoffe sind gemäß Ihrer Kennzeichnung wieder verwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutze unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständigen Entsorgungsstellen. Entsorgung der Verpackungsmaterialien. Verpackungsmaterialien sind Rohstoffe und somit wieder verwertbar. Bitte führen Sie diese im Interesse des Umweltschutzes einer ordnungsgemäßen Entsorgung zu! Ihre Gemeindeverwaltung informiert Sie gerne.



# Instruction manual caliber: PC21-Light

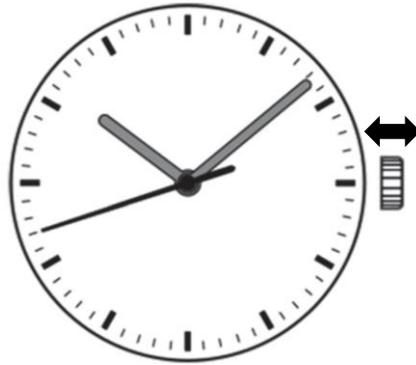

## Features:

- Movement: PC21 Analogue Quartz
- Accuracy: less than +/- 30 seconds per month
- Battery life: Average 2 years
- Display: Hours, minutes and seconds hands
- Light: Electronic backlight
- Battery: SR626SW

## 1. Setting the time

Pull out the crown carefully and set the desired time by turning it, then push the crown back into the starting position.

## 2. Use backlight function

Press the EL m button at 10 o'clock position. The backlight will be on. Frequent use of the backlight will shorten the battery life.

## 3. Declaration of Conformity

We hereby declare that this wristwatch complies with the basic requirements and the other relevant regulations of the 1999/5/EG directive.

4. This product conforms to the EU EMC directives

## 5. Waterproof according to DIN 8310

The water resistance of your watch is noted on the case back and is as follows when new:

**WR:** washing, rain, splashes = NO, showering = NO, bathing = NO, swimming = NO, diving without equipment = NO

**3 bar:** wash, rain, splashes = YES, shower = NO, bathe = NO, swim = NO, dive without equipment = NO

**5 bar:** wash, rain, splashes = YES, shower = NO, bathe = YES, swim = NO, dive without equipment = NO

**10 bar:** wash, rain, splashes = YES, shower = NO, bathe = YES, swim = YES, dive without equipment = NO

## Notes on environmental protection

Disposal of old devices. At the end of its useful life, this product must not be disposed of with normal household waste, but must be taken to a collection point for the recycling of electrical equipment. The symbol on the product or the user manual indicates this. The materials are recyclable according to their labelling. By reusing, material recycling or other forms of recycling old devices, you are making an important contribution to protecting our environment. Please ask the municipal administration about the responsible disposal points. Disposal of packaging materials. Packaging materials are raw materials and can therefore be recycled. In the interests of environmental protection, please dispose of them properly! Your municipal administration will be happy to inform you.

