


[illegible]

Instructions for reference only

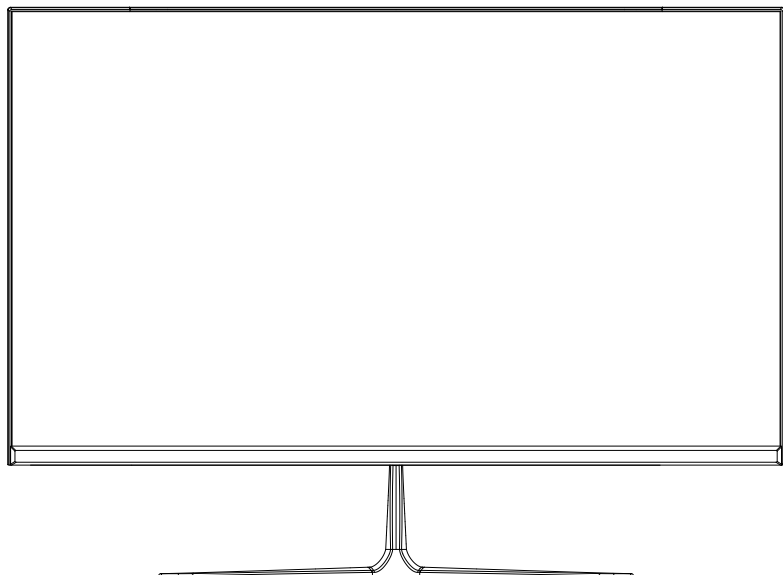

BENUTZER NAME _____

MODELL _____

SERIEN-NR. _____

*Lesen Sie die Bedienungsanleitung (C/D) sorgfältig durch und bewahren Sie sie griffbereit auf. Beachten Sie bitte, dass das am Produkt angebrachte Etikett Informationen für den technischen Support enthält.

Precautions in Cleaning the Product	TROUBLESHOOTING										
1. Power off the product and PC. 2. Disconnect the power cord from the product. Additive power cable to the plug and do not touch the cable with wet hands. Otherwise, an electric shock may result. 3. Wipe the product with a clean, soft and dry cloth. Do not use a cleaning agent that contains delicate solvent or surfactant to the product. Do not use icy water or detergent directly on the product. 4. Wet a soft cloth in water, wring it out well, and then use the cloth to wipe the exterior of the production. 5. Connect the power cord when cleaning is finished. 6. Power on the product and PC.	<table border="1"> <thead> <tr> <th data-bbox="1133 678 1231 688">Nothing is displayed on the screen.</th><th data-bbox="1231 678 1365 688"></th></tr> </thead> <tbody> <tr> <td data-bbox="1133 688 1231 701">Is the monitor's power cord plugged in?</td><td data-bbox="1231 688 1365 701"> • Check if the power cord is correctly plugged into the power outlet. </td></tr> <tr> <td data-bbox="1133 701 1231 716">Is the power LED on?</td><td data-bbox="1231 701 1365 716"> • Check the power cord connection and power the power button. </td></tr> <tr> <td data-bbox="1133 716 1231 728">Is the power on and the power LED glowing?</td><td data-bbox="1231 716 1365 728"> • Check that the connected input is selected (Audio / Quiet Settings / Input). </td></tr> <tr> <td data-bbox="1133 728 1231 741">Is the power LED blinking?</td><td data-bbox="1231 728 1365 741"> • If the monitor is in sleep mode, move the mouse, or press any key on the keyboard, to switch the display on. • Check if the computer is turned on. </td></tr> </tbody> </table>	Nothing is displayed on the screen.		Is the monitor's power cord plugged in?	• Check if the power cord is correctly plugged into the power outlet.	Is the power LED on?	• Check the power cord connection and power the power button.	Is the power on and the power LED glowing?	• Check that the connected input is selected (Audio / Quiet Settings / Input).	Is the power LED blinking?	• If the monitor is in sleep mode, move the mouse, or press any key on the keyboard, to switch the display on. • Check if the computer is turned on.
Nothing is displayed on the screen.											
Is the monitor's power cord plugged in?	• Check if the power cord is correctly plugged into the power outlet.										
Is the power LED on?	• Check the power cord connection and power the power button.										
Is the power on and the power LED glowing?	• Check that the connected input is selected (Audio / Quiet Settings / Input).										
Is the power LED blinking?	• If the monitor is in sleep mode, move the mouse, or press any key on the keyboard, to switch the display on. • Check if the computer is turned on.										
Precautions in installing the Product											
• DO NOT PLACE CABLES, INSERT VENTILATORS OR CARTRIDGES ON TOP OF THE PRODUCT. DO NOT INSTALL THE PRODUCT NEAR HEAT SOURCES. • Do not install the product in poorly ventilated spaces such as a bookcase or cabinet. • Do not install the product at least 10cm away from the wall to allow ventilation. • Keep the plastic packaging out of the reach of children. • Children may suffocate.											
• Do not install the product on an unstable or vibrating surface (Insecure shelf, sloped surface, etc.) → The product may fall and become damaged and/or cause an injury. → Using the product in an area with excessive vibration may damage the product or cause the PC to malfunction. • Do not install the product in the vicinity of a place exposed to dust, moisture (water drops), etc., oil, or smoke.	<table border="1"> <thead> <tr> <th data-bbox="1133 871 1231 884">Is the "Signal" message being displayed?</th><th data-bbox="1231 871 1365 884"></th></tr> </thead> <tbody> <tr> <td data-bbox="1133 884 1231 896">The screen may not be displayed properly when connecting (displayport 1 or 2 in Mac product).</td><td data-bbox="1231 884 1365 896"> • Check whether the monitor is connected to the correct port (note that in the graphics card manufacturer's and the motherboard's instruction) check whether the device connection cable is inserted correctly and use the button to adjust to the device's signal receiving port. </td></tr> </tbody> </table>	Is the "Signal" message being displayed?		The screen may not be displayed properly when connecting (displayport 1 or 2 in Mac product).	• Check whether the monitor is connected to the correct port (note that in the graphics card manufacturer's and the motherboard's instruction) check whether the device connection cable is inserted correctly and use the button to adjust to the device's signal receiving port.						
Is the "Signal" message being displayed?											
The screen may not be displayed properly when connecting (displayport 1 or 2 in Mac product).	• Check whether the monitor is connected to the correct port (note that in the graphics card manufacturer's and the motherboard's instruction) check whether the device connection cable is inserted correctly and use the button to adjust to the device's signal receiving port.										
• Do not expose the product to direct sunlight, heat, or a hot object such as an stove. → The product may be damaged or catch fire. • Please install the product within the reach of young children. → The product may fall and injure children. • Labels (all such as warning) can't damage or deform the product. Do not install the product in a kitchen or near a kitchen counter.	<table border="1"> <thead> <tr> <th data-bbox="1133 938 1231 949">Screen display is unstable and shaky / Images displayed on the monitor become shadow shifts.</th><th data-bbox="1231 938 1365 949"></th></tr> </thead> <tbody> <tr> <td data-bbox="1133 949 1231 961">Do you select the appropriate resolution?</td><td data-bbox="1231 949 1365 961"> • If the selected resolution is 1920x1080p (FullHD), the screen may be flickering. Change the resolution to 1600x1200 or the recommended resolution. </td></tr> </tbody> </table>	Screen display is unstable and shaky / Images displayed on the monitor become shadow shifts.		Do you select the appropriate resolution?	• If the selected resolution is 1920x1080p (FullHD), the screen may be flickering. Change the resolution to 1600x1200 or the recommended resolution.						
Screen display is unstable and shaky / Images displayed on the monitor become shadow shifts.											
Do you select the appropriate resolution?	• If the selected resolution is 1920x1080p (FullHD), the screen may be flickering. Change the resolution to 1600x1200 or the recommended resolution.										

02

11

KEY FUNCTION

- **AUTO** – Adjust the picture automatically, **Picters**.
- **MENU** – Enter the main menu. **Enter**.
- **↑** Up / **Down**, **Right** / **Left**.
- **ENTER** – Turn on or off the machine

1. Picture

Press **ENTER** to enter the menu in the monitor, and then press **ENTER** to select **Picture**.

• Brightness

Press **ENTER** button to select **Brightness**, then press **ENTER** button to confirm the choice and press **ENTER** button to adjust. This item can adjust the suitable brightness for you.

• Contrast

Press **ENTER** button to select **Contrast**, and then press **ENTER** button to confirm the choice and press **ENTER** button to adjust. This item can adjust the highlight intensity of the picture, but the darker of the picture is workable.

• Back light

Press **ENTER** button to select **Back Light**, and then press **ENTER** button to confirm the choice and press **ENTER** button to adjust. This item can adjust the highlight intensity of the picture, but the darker of the picture is workable.

• Blue light

Press **ENTER** button to select **Blue light**, and then press **ENTER** button to confirm the choice and press **ENTER** button to choose OFF. (20% 40% 60% 80%)

• HDR

Press **ENTER** button to select **HDR** to turn off or turn on the function of the monitor, then press the **ENTER** button to confirm, then press the **ENTER** button to select **ON/OFF**.

• OSD

Press **ENTER** button to select **OSD**, and then press **ENTER** button to confirm the choice and press **ENTER** button to choose **OSD**.

INSTALLING THE MONITOR

Tip:

The installation of the monitor and other operations need to be placed on a flat table. In addition, you just place the monitor in foam box and attach the monitor base to prevent the monitor from being accidentally dropped.

! NOTE

- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not use power testing device on the equipment. (Control) If operation is undesirable, use a small string.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused by this will be covered by the product warranty.
- Do not only the monitor globe drop by just holding the base this may cause the monitor to tilt off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.

04

09

5.OSD

Press **↑** to select the OSD menu, and then press **→** to select the OSD item.

- **Language**
Press **→** button to select **Language**, and then press **→** button to confirm the choice.
Press **→** button to select your desired language.

- **OSD Function**
Press **→** button to select **OSD Function**, and then press **→** button to confirm the choice.
Press **→** button to adjust.

- **Transparency**
Press **→** button to select **Transparency**, and then press **→** button to confirm the choice.
Press **→** button to adjust.

6.System

Press **→** button to select **System** in OSD menu, and then press **→** button to select the OSD item.

- **Input Source**
Press **→** button to select **Input**, and then press **→** button to confirm the choice.
Press **→** button to select your desired input source.

- **Auto Source**
Press **→** button to select **Auto Source**, and then press **→** button to confirm the choice.
Press **→** button to select **Auto Source**.

- **Wide Mode**
Press **→** button to select **Wide Mode**, and then press **→** button to confirm the choice.
Press **→** button to select **Full** / **ASPECT**.

- **Volume**
Press **→** button to select **Volume**, and then press **→** button to confirm the choice.
Press **→** button to adjust.

7.Information

Press **→** button to select **Information** in OSD menu, and then press **→** button to select the OSD item.

- **Reset All Setting**
Press **→** button to select **Reset All Setting**, and then press **→** button to confirm the choice and press **→** button to select.

Note: The **OSD** action is for reference only, please refer to the actual situation!

MAKING CONNECTIONS

Make sure to use the supplied cable. Otherwise, this may cause the device to malfunction.

! NOTE

To achieve the perfect effect refresh rate, but need the graphics and interface (2.0 and above HD cable) support.

! WARNING

- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display old image on the screen for a prolonged time. This may cause image retention. Use a screenshot if possible.
- The plating of the cable may become bad during operation. Do not touch the plating wiring.
- When connecting the power cord to the output, use a grounded power strip or a grounded power cable.
- The monitor may flicker when turned on at a place where the temperature is low. This is normal. Sometimes low temperatures or dry spots may appear on the screen. This is normal.
- If the screen display is abnormal, it may be a setting problem, please contact LAZ customer service in time.

Connecting and Using a PC

Select a connection method suitable for your PC.

- Connecting ports may differ in different products.
- Connected ports may vary depending on the product.

If it is a desktop computer, the cable needs to be connected to the interface as the graphics card on the motherboard.

Connection Using the HDMI Cable

06

07

INHALTSVERZEICHNIS	
Wichtige Vorsichtsmaßnahmen 01 - Vorkautionen für den Adapter und die elektrische Versorgung - Vorsichtsmaßnahmen bei der Reinigung des Produkts - Vorsichtsmaßnahmen bei der Installation des Produkts Packliste 02 Bedienung des Steueruns 03 Bildschirmanzeige (OSD) 04 Verbindungen knüpfen 06 - Anschließen und Verwenden eines PCs - Richtige Körperhaltung zur Verwendung des Produkts Installieren des Monitors 09 Bewegen und Anheben des Monitors 10 Fehlersuche 11 FRAGEN UND ANTWORTEN 13	FRAGEN UND ANTWORTEN Weitere Anweisungen zur Einstellung finden Sie im Benutzerhandbuch für Ihren PC oder Ihre Grafikkarte, zur Einstellung: • Wie kann ich die Frequenz ändern? - Stellen Sie die Frequenz an Ihren Grafiktreiber ein. - Windows 7: Gehen Sie zu Systemsteuerung -> Darstellung und Anpassung -> Anzeige - Bildschirmanzeige -> Erweiterte Einstellungen -> Monitor, und passen Sie die Anzeigefrequenz unter Monitoranpassungen an. - Windows 8 (Windows 8.1): Gehen Sie zu Einstellungen -> Systemsteuerung -> Darstellung und Personalisierung -> Anzeige -> Bildschirmhelligkeit -> Erweiterte Einstellungen -> Monitor, und passen Sie die Bildwiederholungsrate unter Monitoranpassungen an. • Wie kann ich die Auflösung ändern? - Windows 7: Gehen Sie zu Systemsteuerung -> Darstellung und Anpassung -> Anzeige -> Auflösung anpassen, und passen Sie die Auflösung an. - Windows 8 (Windows 8.1): Gehen Sie zu Einstellungen -> Systemsteuerung -> Darstellung und Personalisierung -> Anzeige -> Auflösung anpassen, und passen Sie die Auflösung an. - Windows 10: Gehen Sie zu Einstellungen -> System -> Anzeige -> Erweiterte Anzeigeeinstellungen, und passen Sie die Auflösung an. • Wie kann ich den Energiesparmodus einstellen? - Windows 7: Stellen Sie den Energiesparmodus in Systemsteuerung -> Darstellung und Personalisierung -> Anpassungen -> Bildschirmssperre -> Einstellungen -> Energie oder im BIOS SETUP des PCs. - Windows 8 (Windows 8.1): Stellen Sie den Energiesparmodus unter Einstellungen -> Systemsteuerung -> Darstellung und Anpassung -> Anpassungen -> Systemsteuerung -> Darstellung und Anpassung -> Anpassungen -> Bildschirmssperre -> Bildschirmssperre -> Einstellungen -> Energieoptionen oder in der BIOS des PCs. - Windows 10: Stellen Sie den Energiesparmodus unter Einstellungen -> Personalisierung -> Bildschirm sperren Bildschirm sperren -> Einstellungen für Bildschirmhelligkeit -> Energie & Ruhezustand oder BIOS SETUP auf dem PC.
Anweisungen nur zur Information	

Vorichtsmaßnahmen bei der Reinigung des Produkts	FEHLERSUCHE
1. Schalten Sie das Gerät aus und den PC aus. 2. Warten Sie das Netzteil und aus dem Gerät. 3. Wischen Sie das Netzteil ab mit einem sauberen Tuch oder sauberen Sie es nicht mit nassem Lösungsmittel, sondern nur mit Wasser. 4. Wischen Sie das Produkt mit einem sauberen, weichen und trockenen Tuch ab. 5. Verwenden Sie keine Reinigungsmittel, die Alkohol (Lösungsmittel) oder Verdampfend enthalten für das Produkt. Sprühen Sie keine Flüssigkeit oder Wasser auf das Produkt. 6. Reinigen Sie ein weiches Tuch mit Wasser, tupfen Sie es gut aus und wischen Sie es dann mit dem Tuch die Außenseite des Geräts sauber. 7. Schließen Sie das Netzteil ab und das Gerät, wenn die Reinigung abgeschlossen ist. 8. Schalten Sie das Gerät und den PC ein.	Auf dem Bildschirm wird nichts angezeigt: • Ist das Kabel des Monitors angeschlossen? • Prüfen Sie, ob das Netzteil richtig in die Steckdose eingesteckt ist. • Überprüfen Sie den Anschluss des Monitors und des Kabels des Netztes. • Prüfen Sie die Power-LED. • Prüfen Sie, ob die Stromversorgung (Eingang aktiviert ist) (Netz-) / Schalterfunktion (Eingang). • Wenn ein Fehler im Monitor selbst vorliegt, bewegen Sie die Maus oder drücken Sie auf eine beliebige Taste auf der Tastatur. • Wenn das Problem weiterhin besteht, wenden Sie sich an den Hersteller des Bildschirms angeschlossen. • Prüfen Sie die Stromversorgung angeschlossen ist.
Vorichtsmaßnahmen bei der Installation des Produkts	• Wenn die Meldung "Out Of Range" angezeigt wird:
STELLEN SIE KEIN KERNER, INSENSCHTICHTSMITTEL ODER ZERKÄTTETES AUF DAS GERÄT. STEHEN SIE DAS GERÄT NICHT IN DEN NÄHE VON WÄRMQUELLEN AUF.	• Wenn die Meldung kein Signal angezeigt wird:
• Stellen Sie das Gerät mindestens 10 cm von der Wand entfernt auf, um eine ausreichende Lüftung zu gewährleisten.	• Prüfen Sie, ob die Monitor den richtigen Anschluss angeschlossen ist.
• Bewahren Sie die Grundkonditionen außerhalb der Reichweite von Kindern auf.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Achten Sie darauf, das Produkt nicht auf einer instabilen oder vibrierenden Oberfläche (unserer Regel, glatte Oberfläche, etc.)	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Das Produkt kann herunterfallen und beschädigt werden und / oder Verletzungen verursachen. Die Verwendung des Produkts in einem Bereich für ständige Vibrationen kann das Gerät beschädigen.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Installieren Sie das Produkt nicht in einem Fahrzeug oder an einem Ort, der Staub, Feuchtigkeit, Vibrationen, extreme Hitze oder extreme Kälte ausgesetzt ist.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Die Lebensdauer des Produkts kann sich verkürzen oder sich zu einem Brand führen, wenn das Produkt in einem Bereich mit hoher Luftfeuchtigkeit, hoher Hitze oder einem heißen Gegenstand wie einem Ofen auf.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Das Produkt darf nicht in einem Bereich mit hoher Luftfeuchtigkeit, hoher Hitze oder einem heißen Gegenstand wie einem Ofen auf.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Das Produkt kann herunterfallen und Kinder verletzen.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.
• Spielzeug wie z. B. Spielzeugbälle, das Produkt beschädigen oder verformen. Stellen Sie das Gerät nicht Produkt nicht in einer Ecke oder in der Nähe einer Kuchentheke auf.	• Prüfen Sie, ob das Kabel des Monitors richtig angeschlossen ist.

02

11

BILDSCHEIRMANNEIGE (OSD)

SCHLÜSSELFUNKTION

- **1** Automatische Einstellung des Bildes: Zurück.
- **2** HÖRZ: Auflösen des Hauptmenüs: Eingabe.
- **3** -> Nach oben / unten rechts / links.
- **POWER**: Ein- und Ausschalten des Geräts.

Aufschlüsselung der einzelnen Optionen:


1. Bild

Drücken Sie die Taste **1** und wählen Sie die Option **Bild** aus dem Hauptmenü. Drücken Sie die Taste **2** und wählen Sie die Option **OSD** aus dem Untermenü.



- **Hintergrundbeleuchtung**
Drücken Sie die Taste **1** und **2**, um die Hintergrundbeleuchtung auszuwählen, und drücken Sie die Taste **Power**, um die Auswahl zu bestätigen. Drücken Sie dann die Taste **1**, um die Einstellung auszuwählen, mit der Sie die gewünschte Hintergrundbeleuchtung auswählen können.
- **Kontrast**
Drücken Sie die Taste **1** und **2**, um Kontrast auszuwählen, und drücken Sie die Taste **Power**, um die Auswahl zu bestätigen. Drücken Sie die Taste **1**, um die Kontrasteinstellung auszuwählen, und drücken Sie die Taste **1**, um die Einstellung auszuwählen. Mit dieser Taste kann der Kontrast der Grundfarbe angepasst werden, aber die Schärfe des Bildes wird unwirksam.
- **Schwarze Boost**
Drücken Sie die Taste **1** und **2**, um Schwarze Boost auszuwählen, und drücken Sie dann die Taste **Power**, um die Auswahl zu bestätigen. Mit dieser Option können Sie die Helligkeit des Bildes einstellen. Die Schärfe des Bildes ist jedoch unwirksam.
- **Reinweis**
Drücken Sie die Taste **1** und **2**, um Blau- und Rotantrieb auszuwählen, und drücken Sie dann die Taste **Power**, um die Auswahl zu bestätigen, und drücken Sie die Taste **1**, um die Einstellung auszuwählen. Mit dieser Funktion können Sie die Helligkeit des Bildes einstellen.
- **HDR**
Drücken Sie die Taste **1** und **2**, um HDR zu aktivieren, und drücken Sie dann die Taste **Power**, um die Auswahl zu bestätigen, und drücken Sie die Taste **1**, um die Einstellung auszuwählen. Mit dieser Funktion können Sie die Helligkeit des Bildes einstellen.
- **DCR**
Drücken Sie die Taste **1** und **2**, um DCR auszuwählen, und drücken Sie dann die Taste **Power**, um die Auswahl zu bestätigen. Drücken Sie die Taste **1**, um DCR auszuwählen.

INSTALLING THE MONITOR

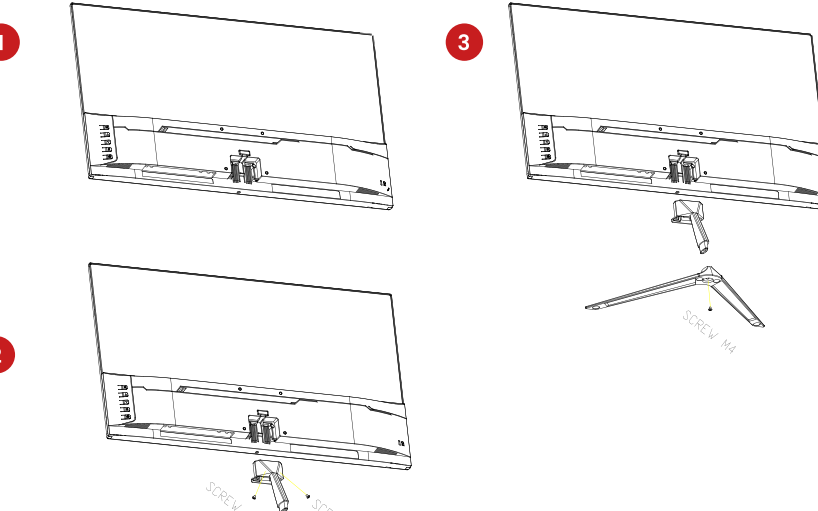

Tipps:

Die Installation des Monitors und andere Vorgänge müssen auf einem flachen Tisch platziert werden. Außerdem können Sie den Monitor einfach in einen Schwenkhalter legen und den Monitorlack

1. ANMERKUNG

- Die Anleitungen in diesem Dokument zeigen typische Verfahren und können daher von tatsächlichen Verfahren abweichen.
- Wenn Sie das Gerät mit der peripheren Einheit verbinden, lesen Sie die Benutzeranweisung, die dem Benutzer beiliegt.
- Wenn Sie die Schrauben und Halterungen nicht verwenden, können Sie Schäden am Monitor verursachen. Daher verwenden Sie Schrauben aus der Packungsgarnitur nicht abgeben.
- Tragen Sie das Gewicht nicht auf, indem Sie es mit einer Hand anheben, da es sonst zum Bruch führen kann, und achten Sie auf die richtige Handhabung.
- Benutzen Sie kein scharfes oder anderes Objekt, um das Gehäuse des Monitors oder die Bildschirmfläche zu berühren, da dies zu Beschädigungen führen kann.

04

09

[illegible]