ASSEMBLY INSTRUCTION

Ax1

Bx1

Cx1

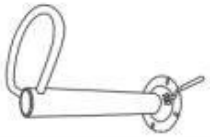

Dx1

Ex4

Fx1

1

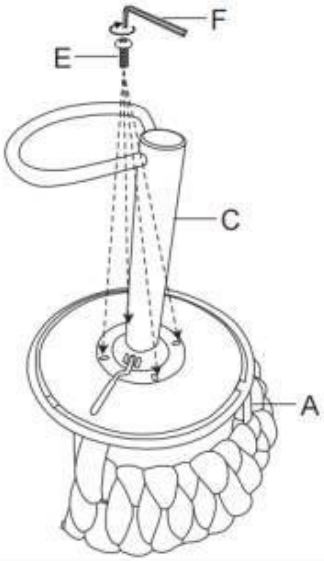

2

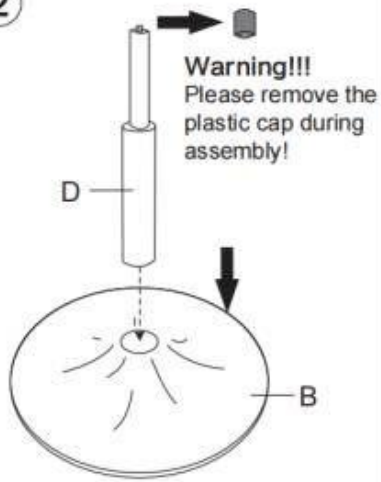

3

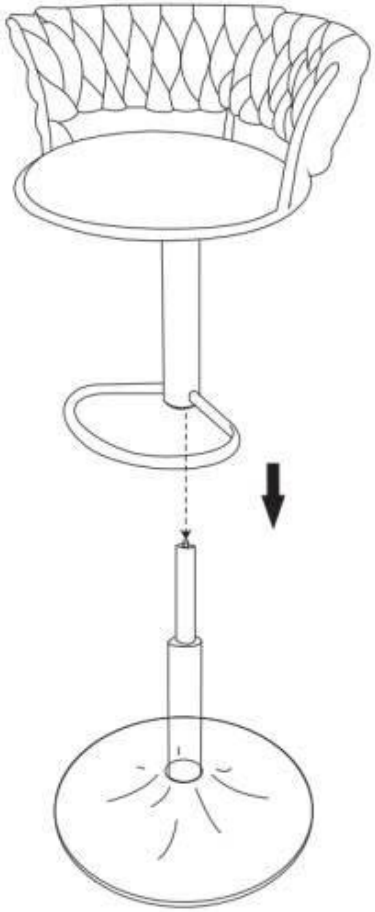

4