



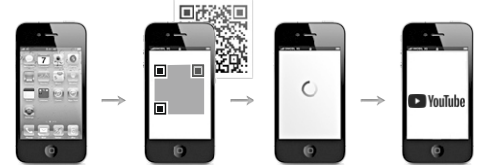

- (D) Videounterstützte Montageanleitung
- (TR) Video destekli kurulum talimatları
- (RU) инструкция по монтажу с помощью видеосигнала
- (RO) Instrucțiuni de instalare acceptate video
- (GB) Video-assisted assembly instructions
- (IT) Istruzioni di montaggio video-assistite
- (CZ) Instalační pokyny podporované videem
- (PL) Instrukcje montażu wspomagane sygnałem wizyjnym
- (FR) Instructions de montage assistées par vidéo
- (NL) Video-ondersteunde montage-instructies
- (HU) Video-támogatott telepítési utasítások
- (SK) Inštalčné pokyny podporované videom

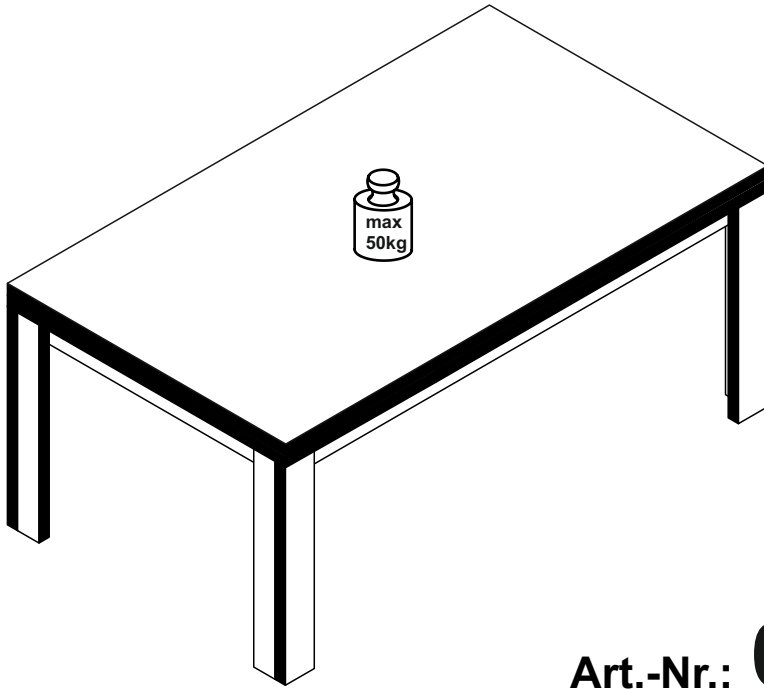

Art.-Nr.: **0560_160-260**
Esstisch

REPC-Nr.:











**Service • Assistenza • Dienstverlening • Serwis
 Servis • Szerviz • Сервисная служба**



SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
 The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>




BT1-00269 Colli 2/2

B01-10 4x	 6.3x50	B01-90 8x	 3.5x20	B01-172 34x	 4.5x40	B01-174 4x	 4.5x50
B02-10 8x	 h=12mm	B02-20 8x		B02-90 4x	 6x30	B05-130 1x	
B05-190 8x		B01-355 4x	 M6				





▶ SCAN ME



BT1-00267 Colli 2/2


B01-300-12 4x	 M6x65	B02-107 8x	 8x70	B05-20 8x	
------------------	--	---------------	---	--------------	---

BT1-00268 Colli 2/2





B01-122 8x	 4x13	B02-174 4x	
---------------	---	---------------	---

BT1-00010 Colli 2/2





B01-30 4x	 3x16	B02-179 4x	
--------------	---	---------------	---
















Colli 1/2

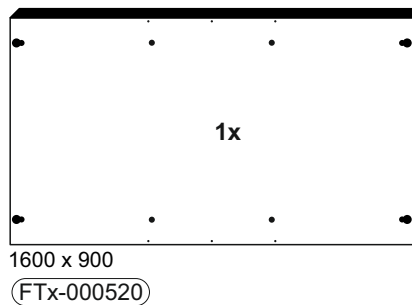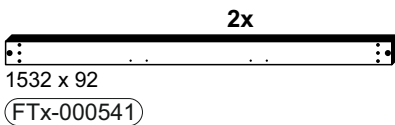





Colli 2/2

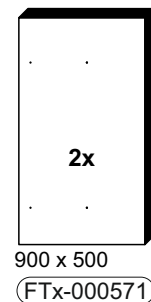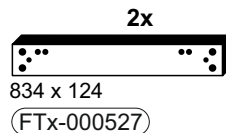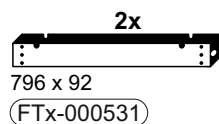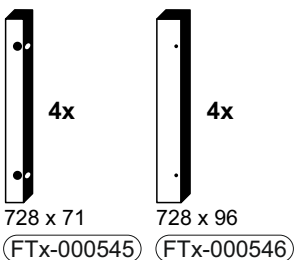


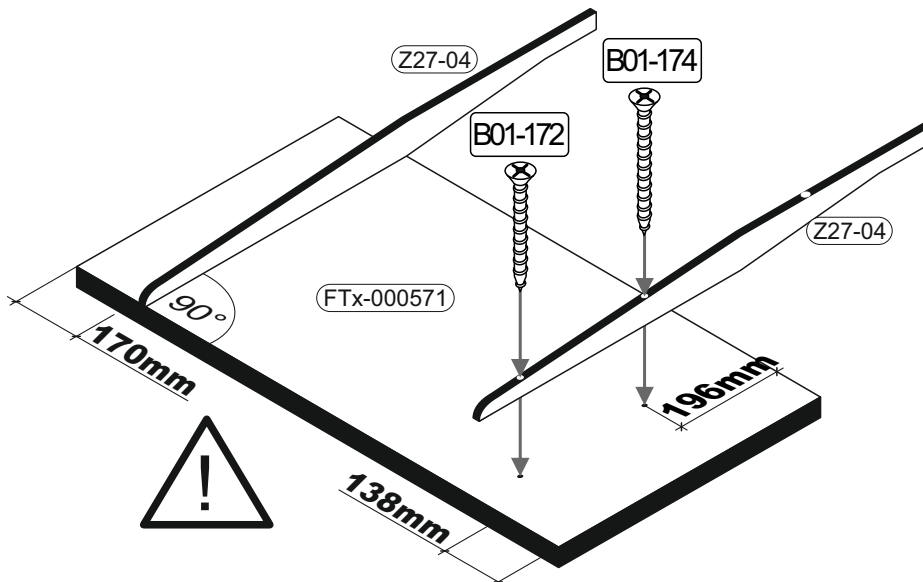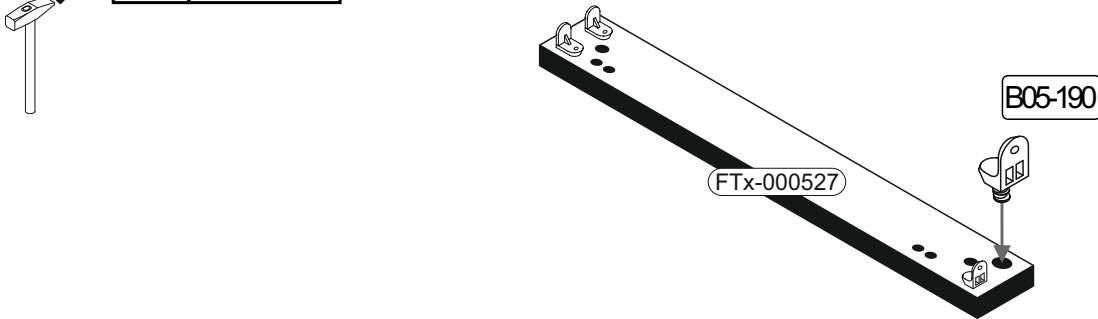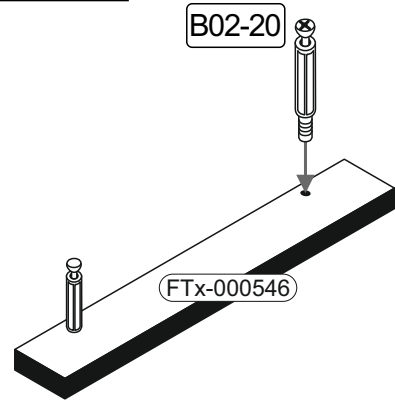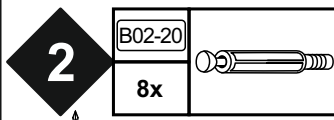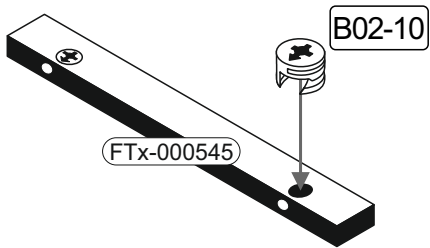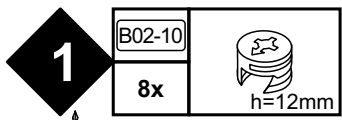


5	B01-30		B02-179		B01-355	
	4x	3x16	4x		4x	M6
	B05-130		B01-172			
	1x		6x	4,5x40		

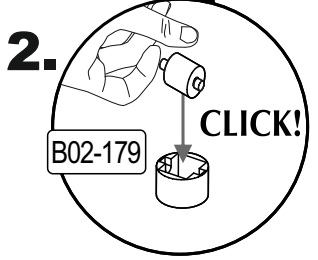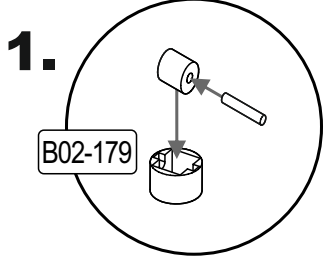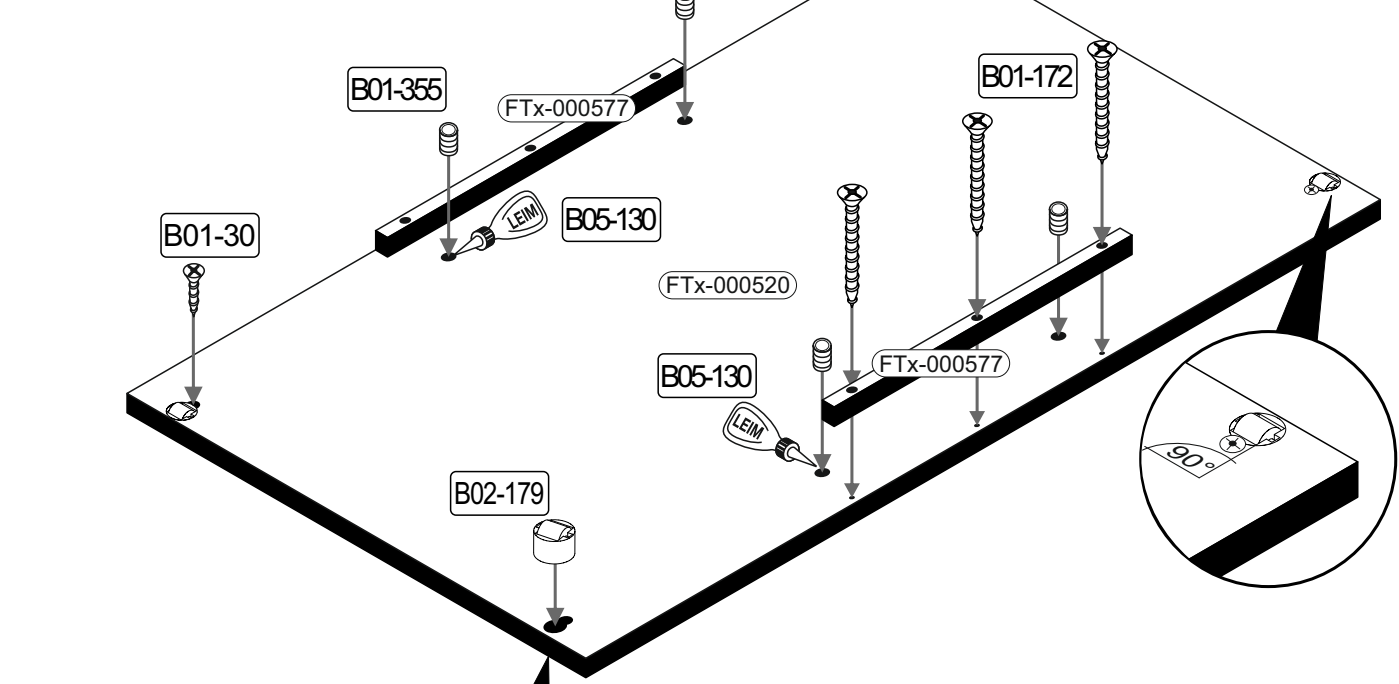
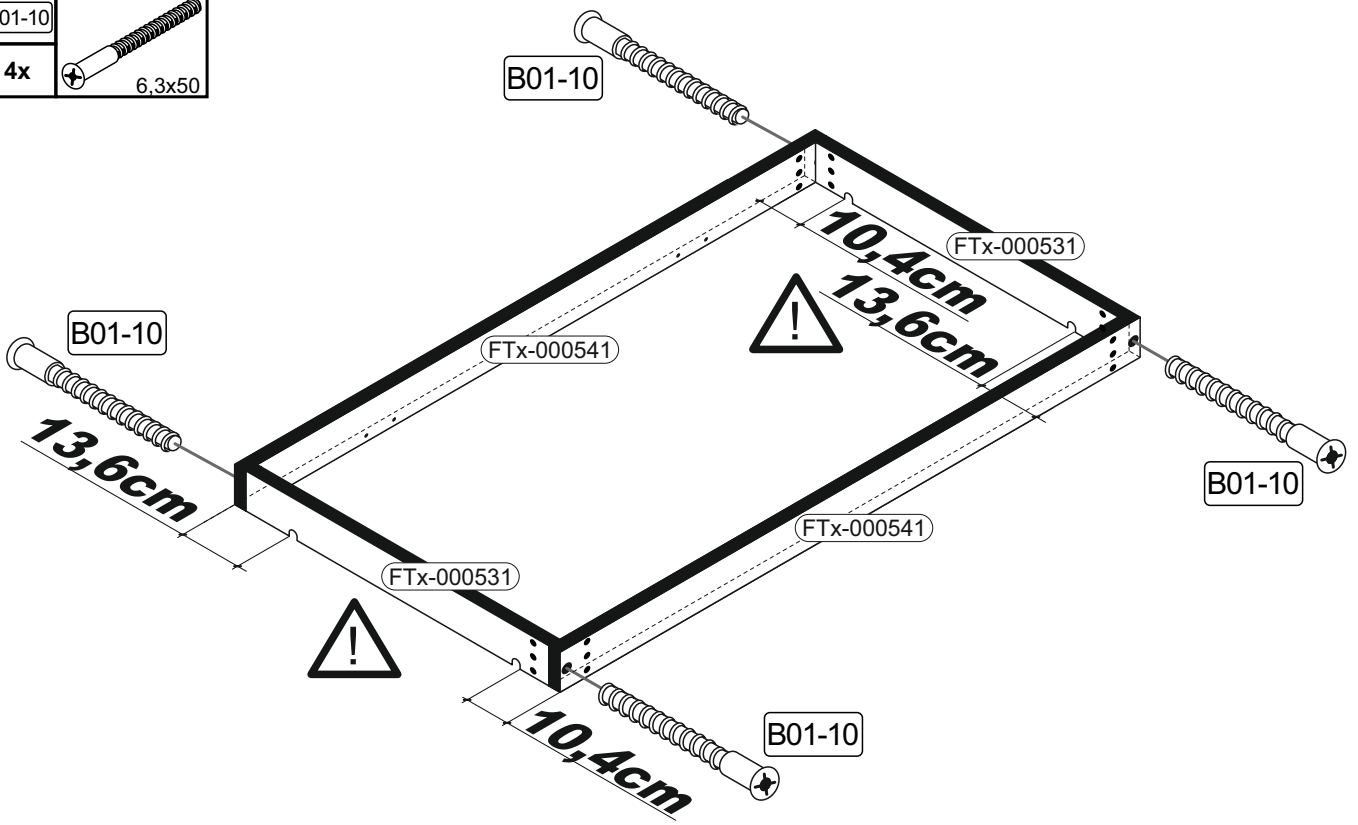


6	B05-20	
	8x	

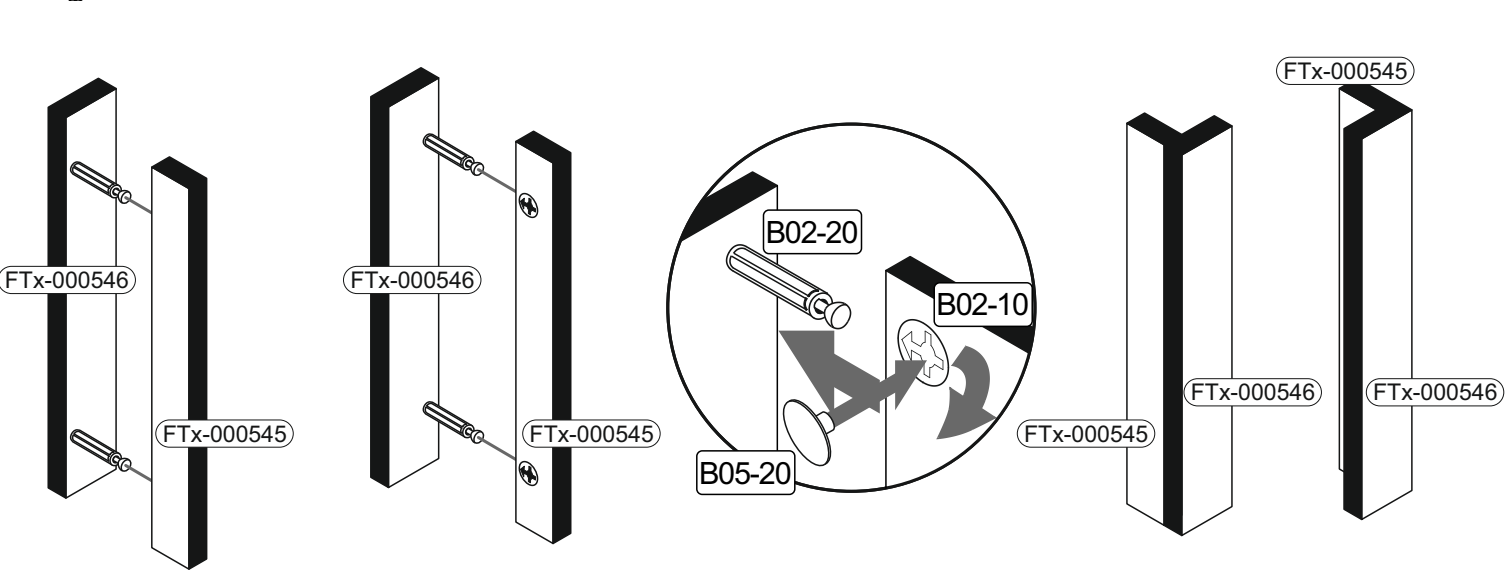



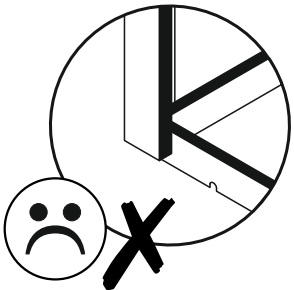
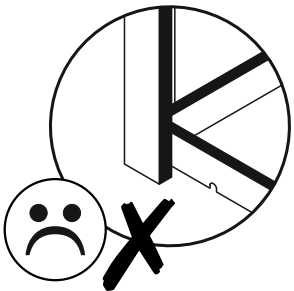
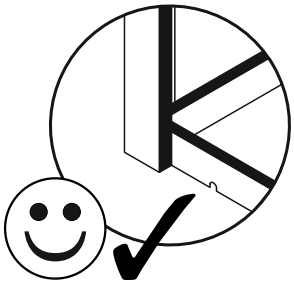
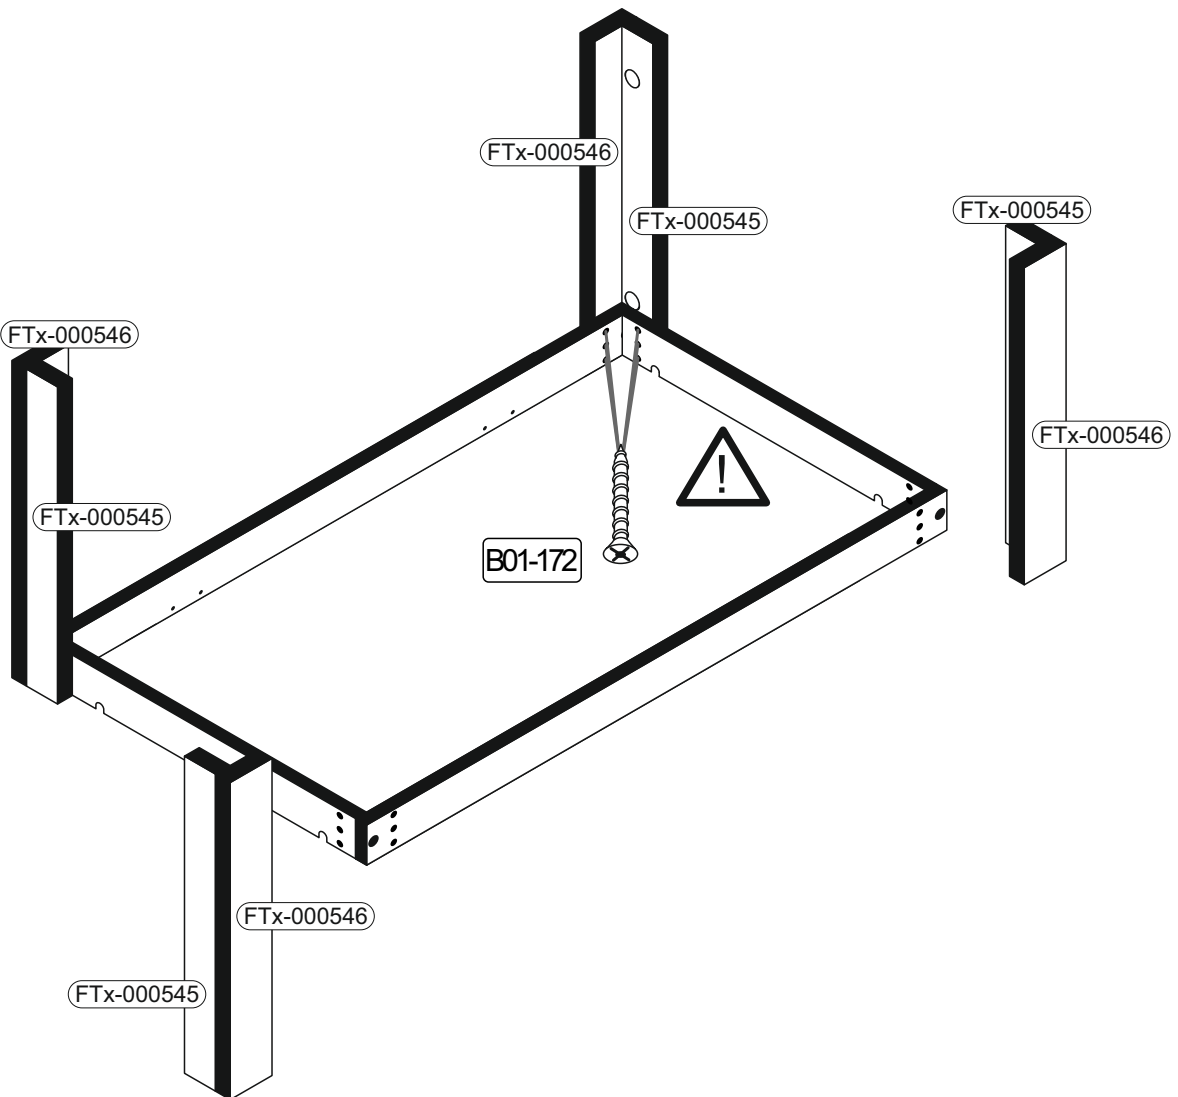
7

B01-10	
4x	6,3x50







8


B01-172	
24x	4,5x40


9


B01-90	
8x	3,5x20
B02-107	
8x	8x70





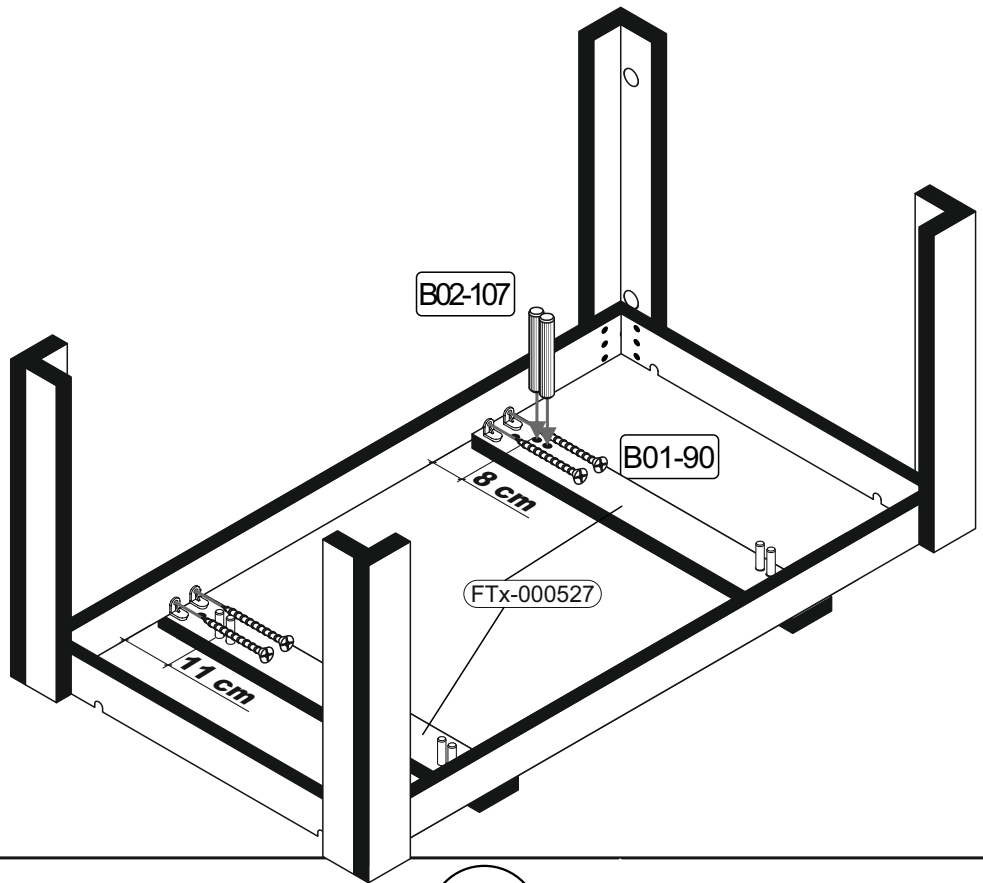


10



B01-300-12	
4x	M6x65



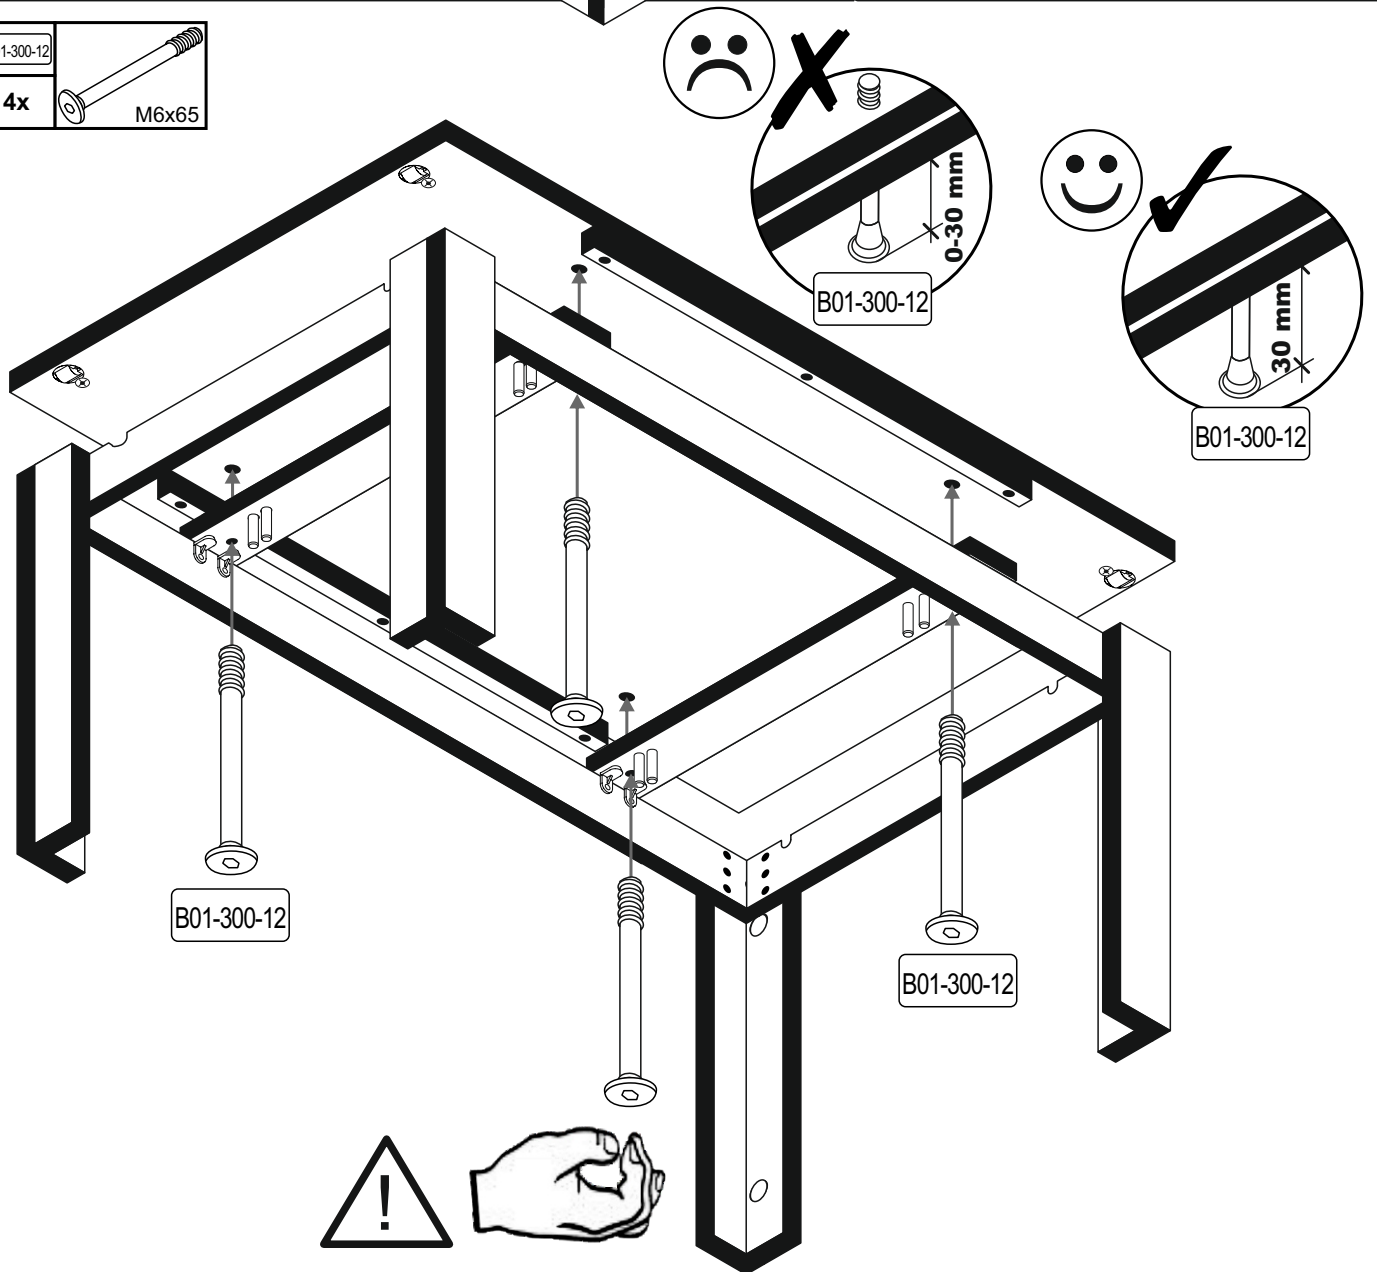

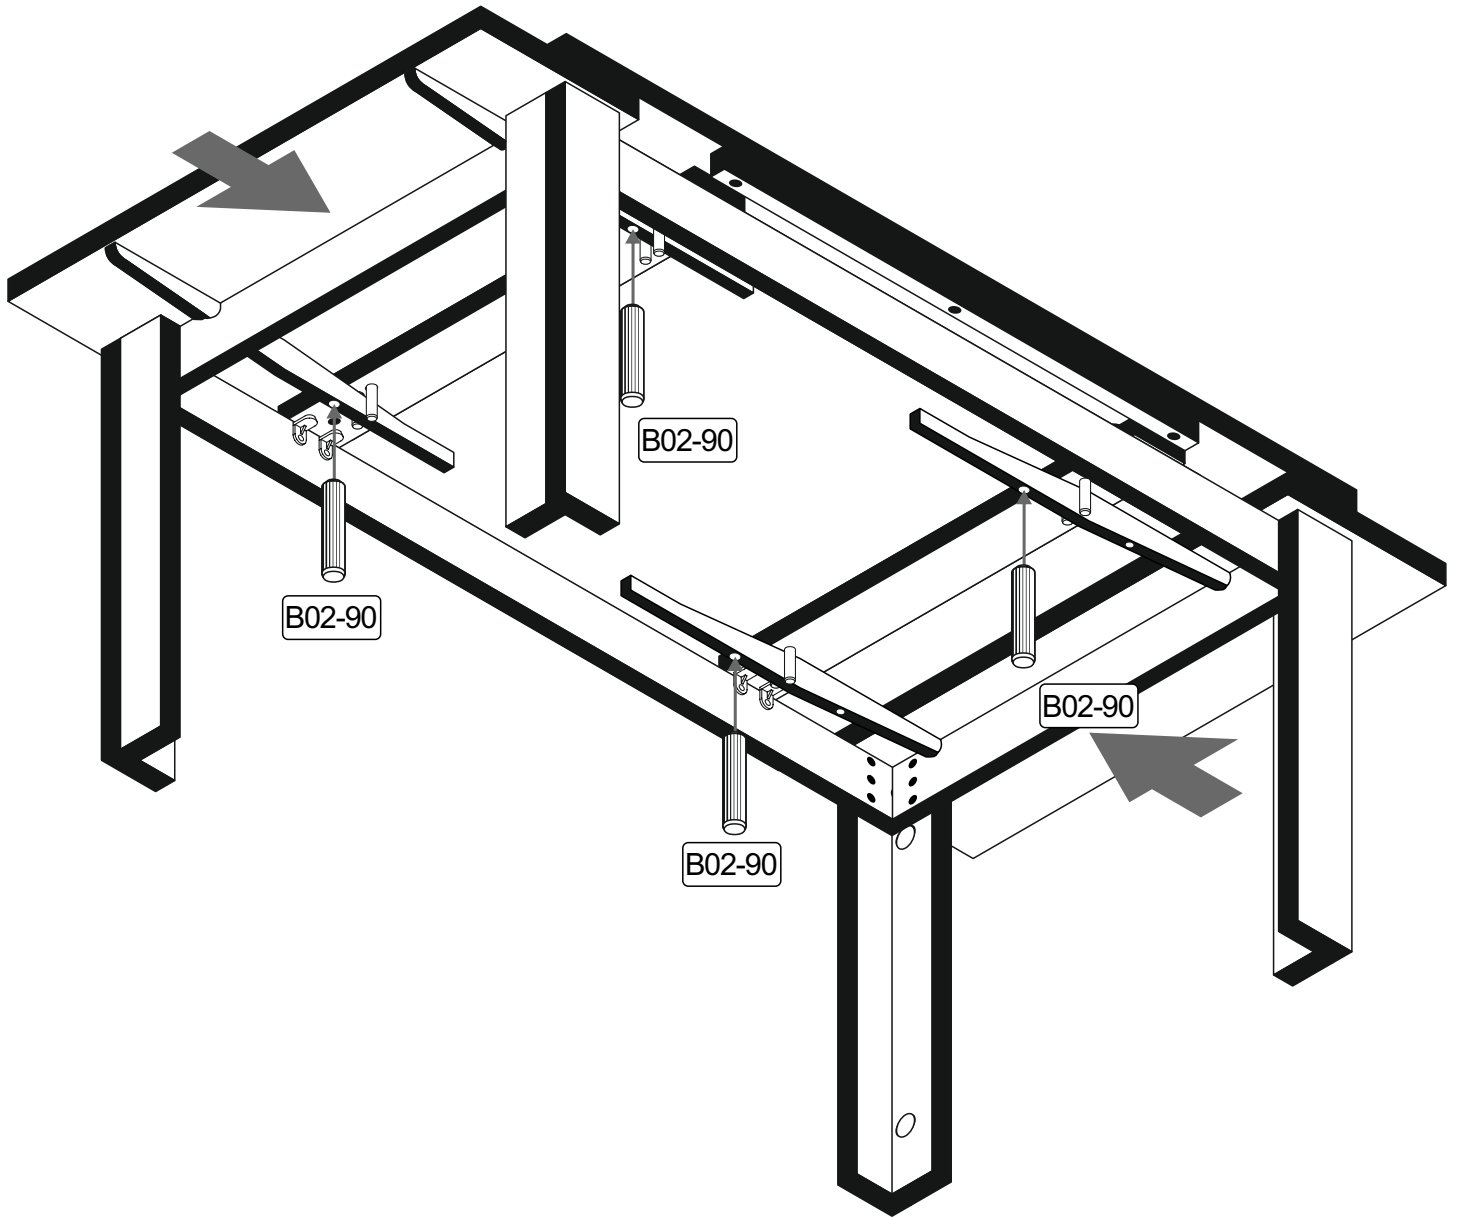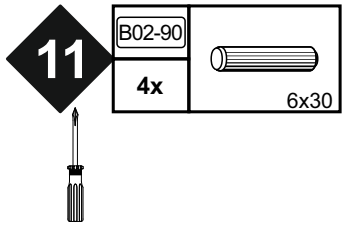

12

B01-122		B02-174	
8x	4x13	4x	

