

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromážďovací instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу

H Gennyesevés utasítások


Rowigo

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapitate pat-Upholstered bed-Мягкая кровать-ятак kapitone-Letto imbottito-Lit rembourré
Čalouněná postele čalouněné postele kárpitovaný ágy

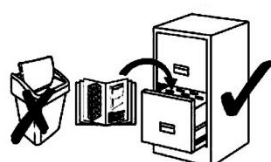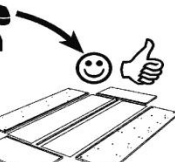


90/120 cm


1x




1x

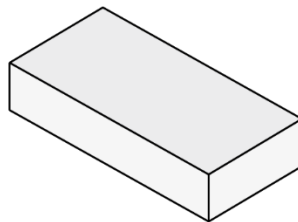


1x

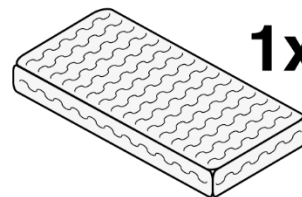

4x




4x




140 cm


1x

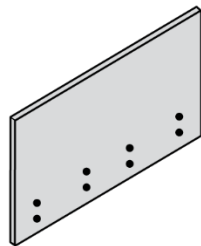


2x

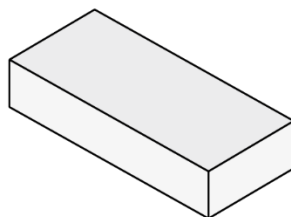


1x

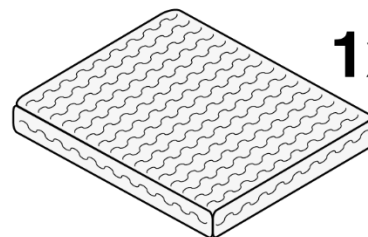

8x




8x




160/180 cm


1x

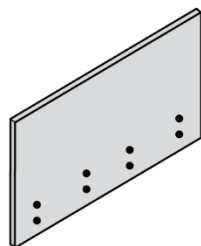


2x

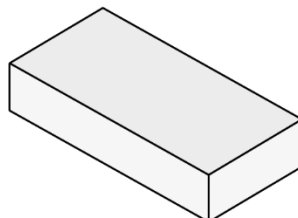


2x




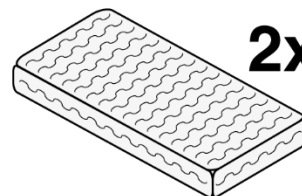


8x



8x



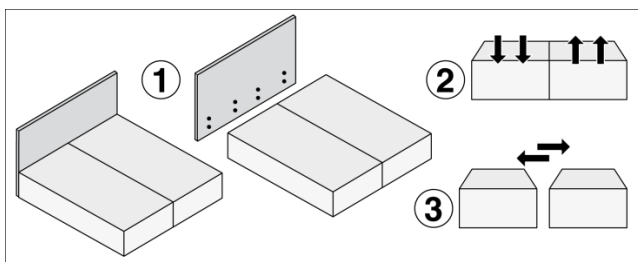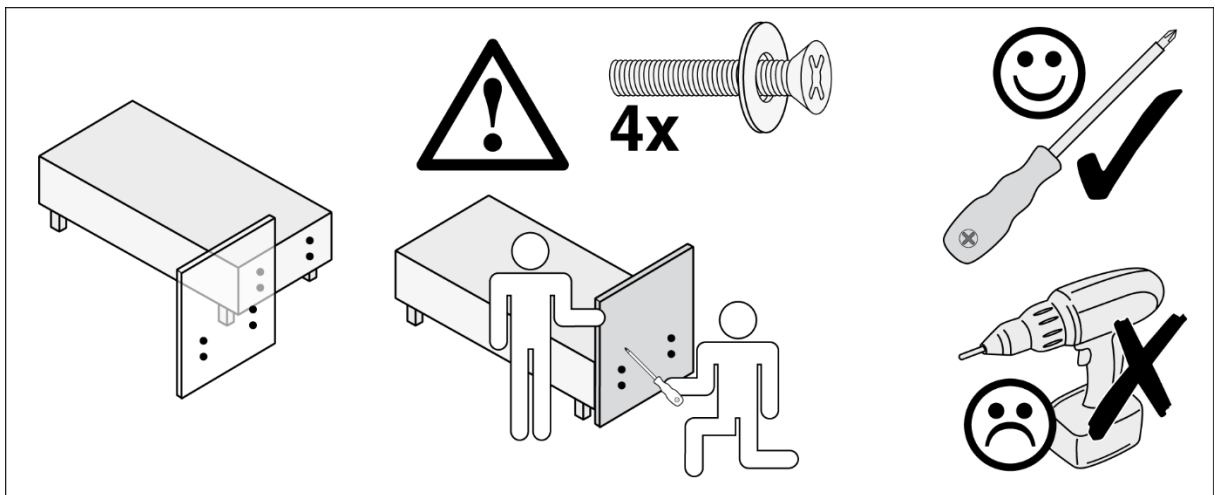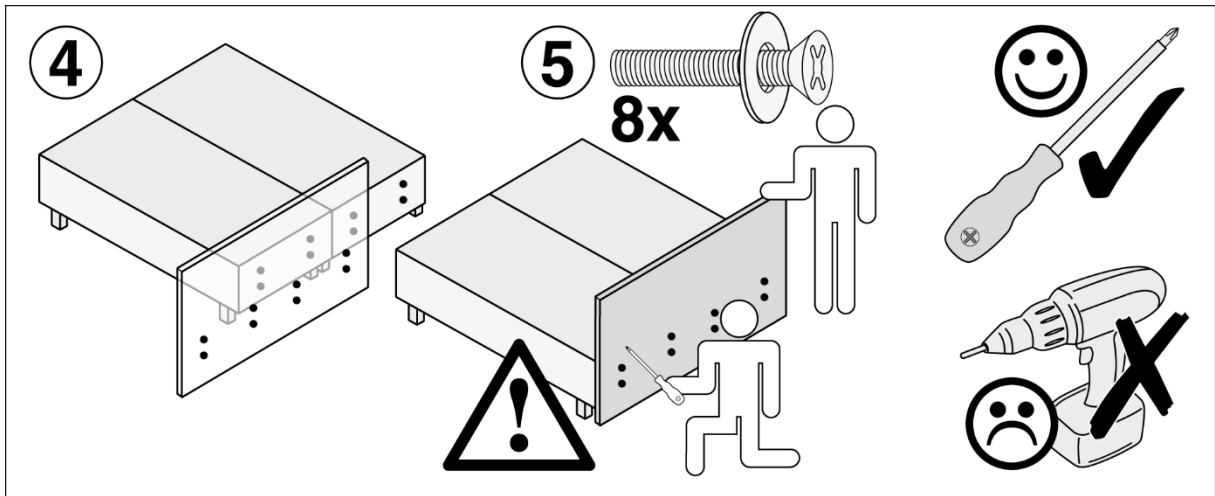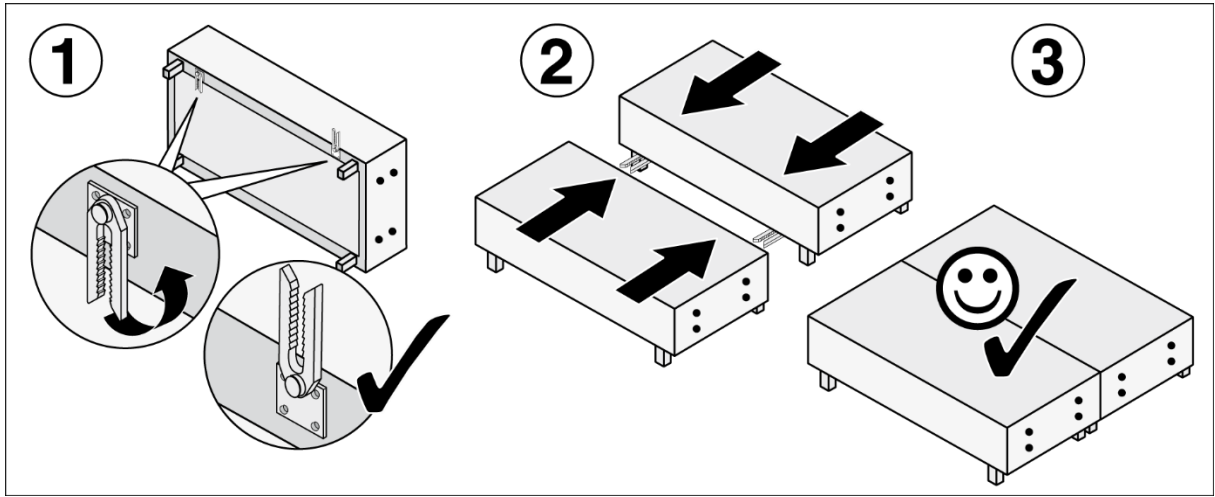

WESTFALIA[®]
Schlafkomfort

Made in Germany

Elastoflex GmbH
Löhner Str. 123
32584 Löhne / Germany