

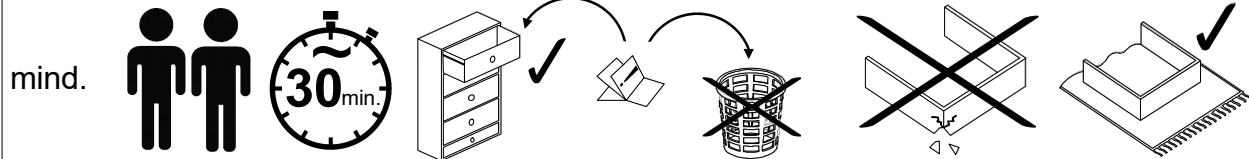


Montageanleitung / Assembly instruction / Notice de montage

Symbolfoto / Symbolic photo / Photo symbolique


MP2066, MP2067, MP2089
MP2090, MP2091, MP2092
EK006628

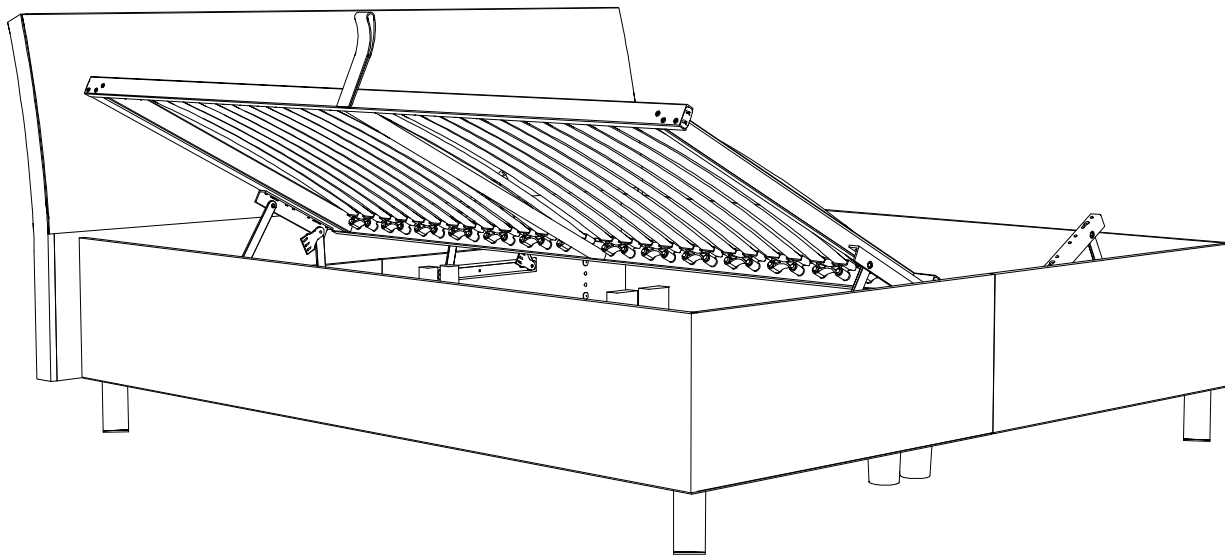

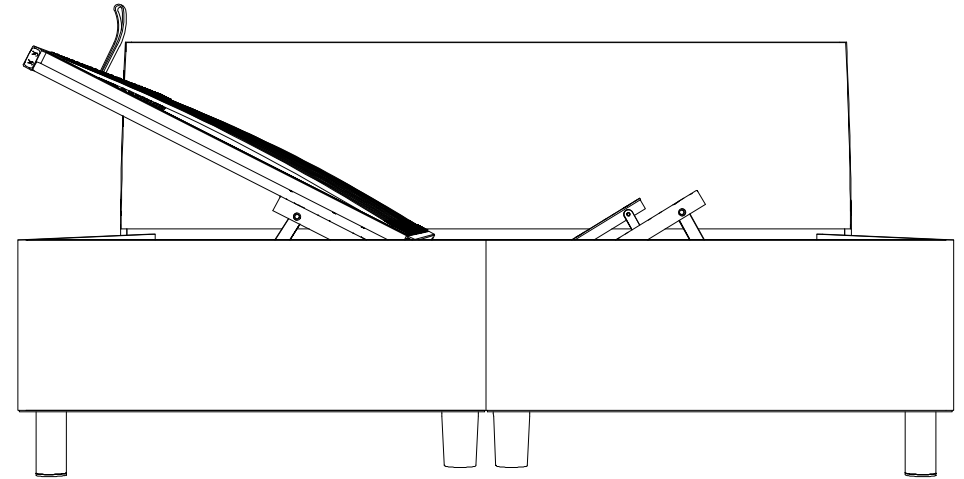




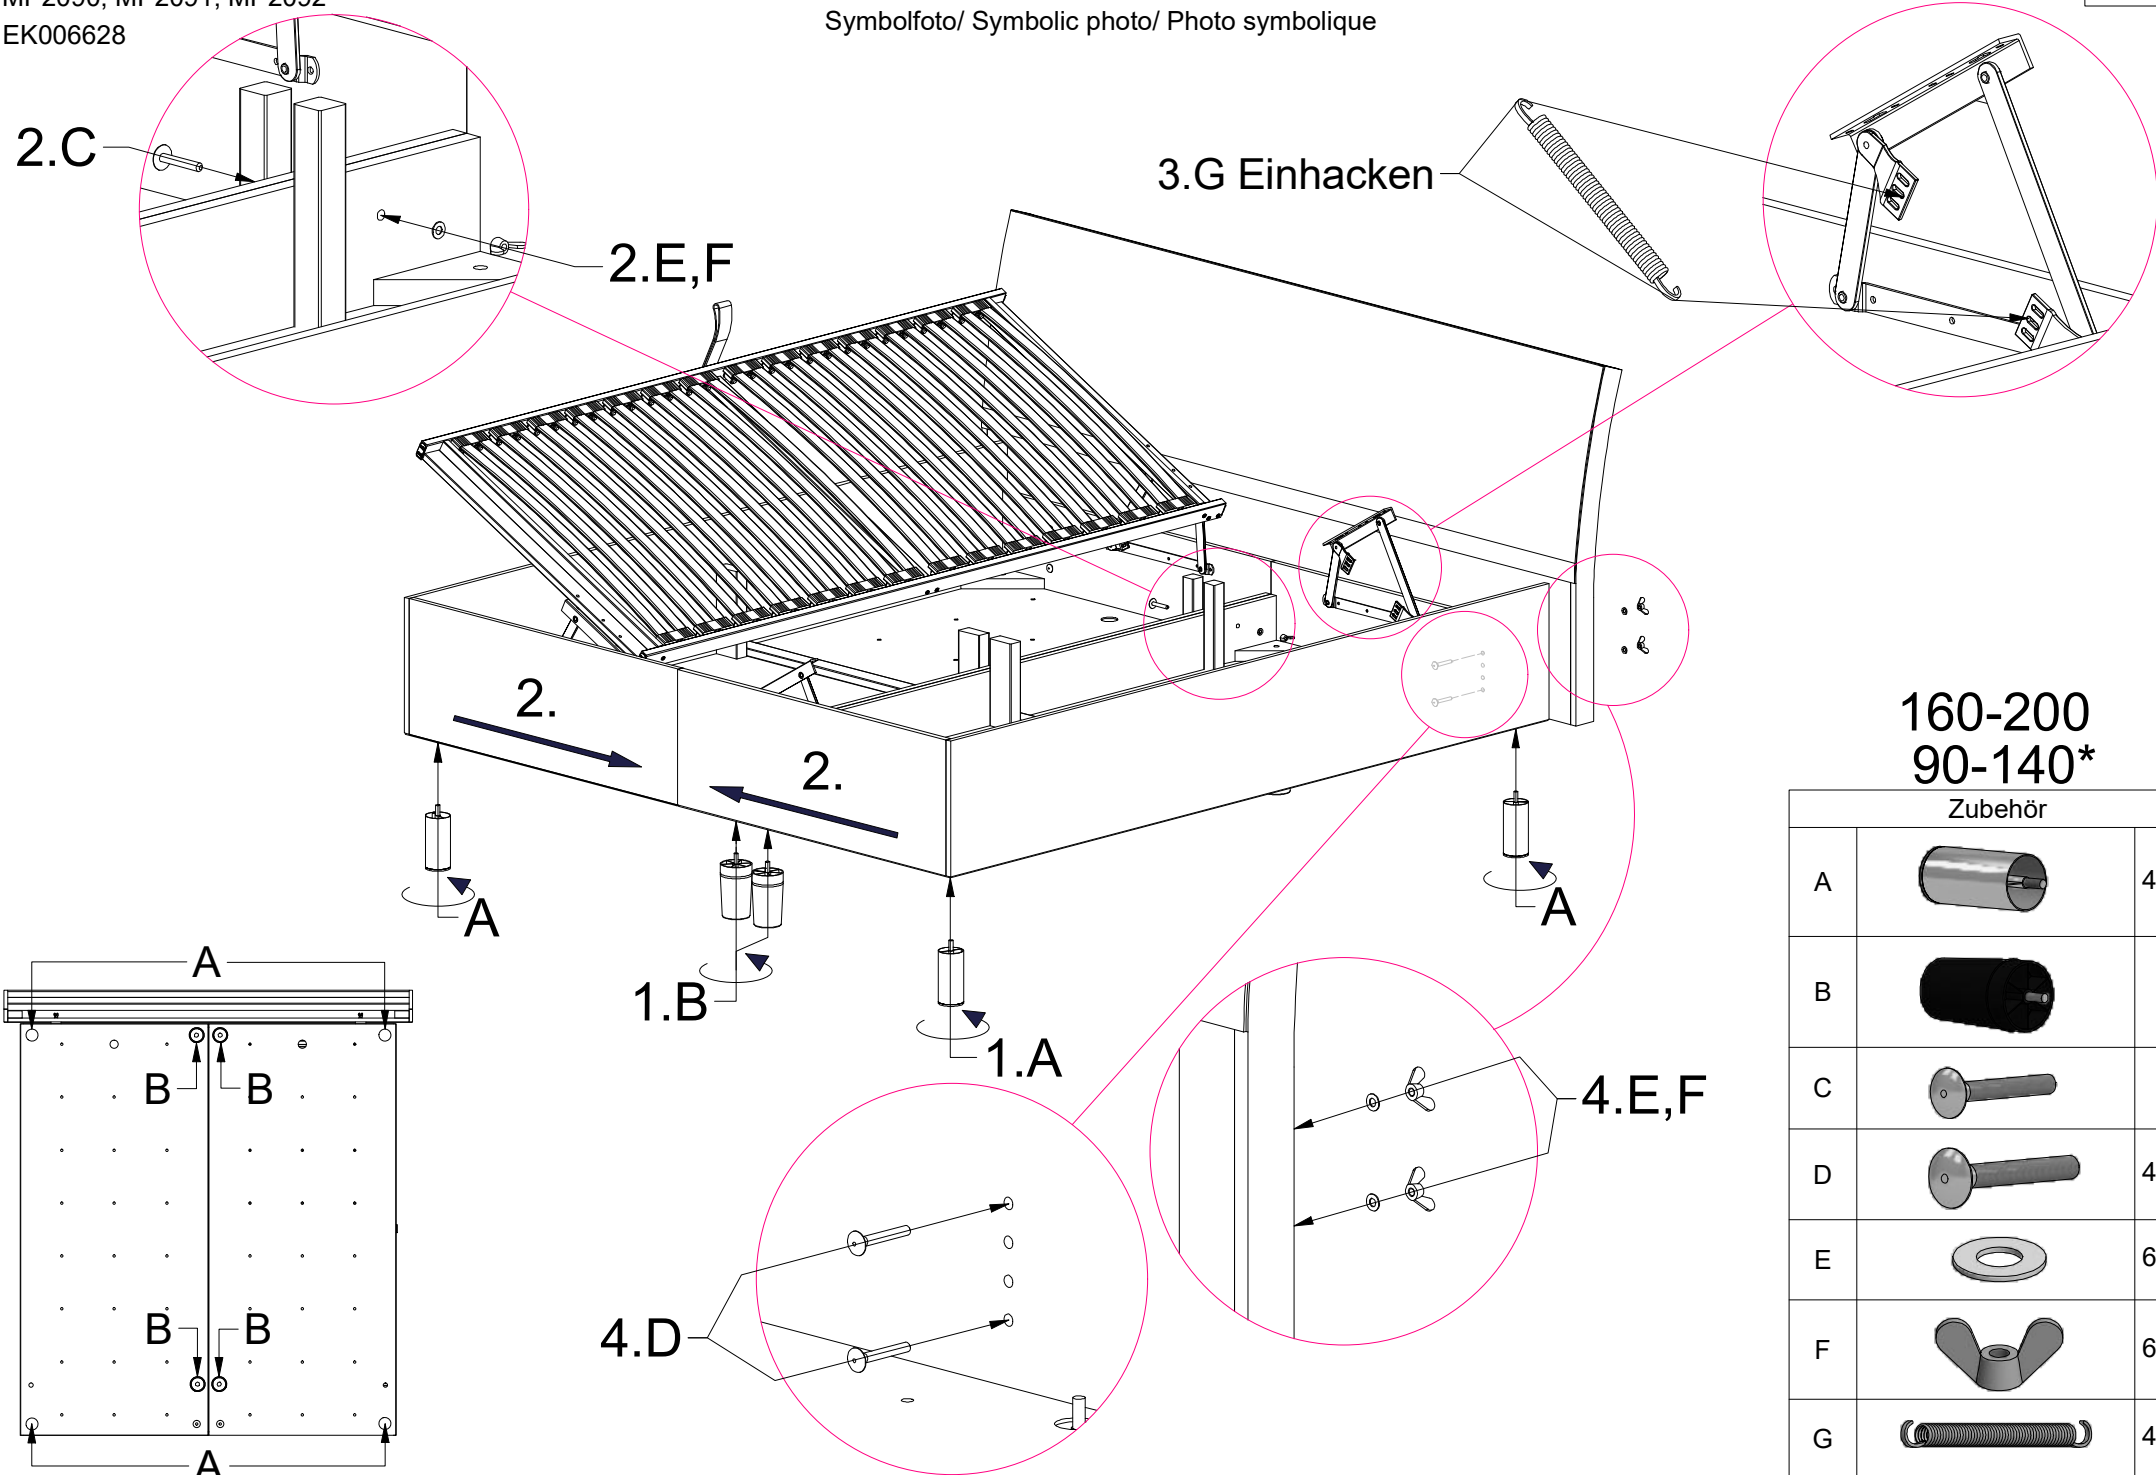

Montageanleitung / Assembly instruction / Notice de montage

Symbolfoto / Symbolic photo / Photo symbolique

MP2066, MP2067, MP2089
MP2090, MP2091, MP2092
EK006628



160-200
90-140*

Zubehör		
A		4(4*)
B		4
C		2
D		4(4*)
E		6(4*)
F		6(4*)
G		4(4*)

Transportschutz für BZR Betten

