

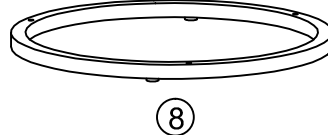
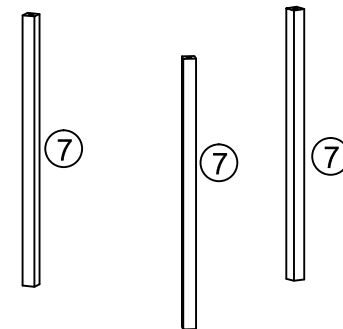


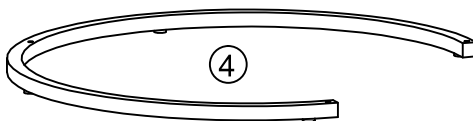
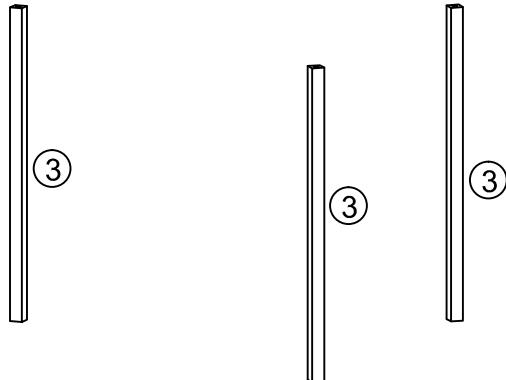
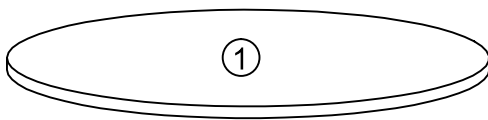
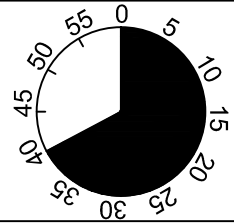
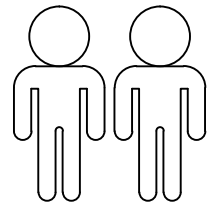






Lindau

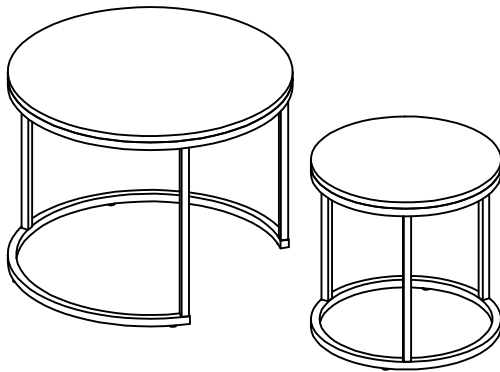

1	1X
2	1X
3	3X
4	1X
5	1X
6	1X
7	3X
8	1X




1/1




I.

1

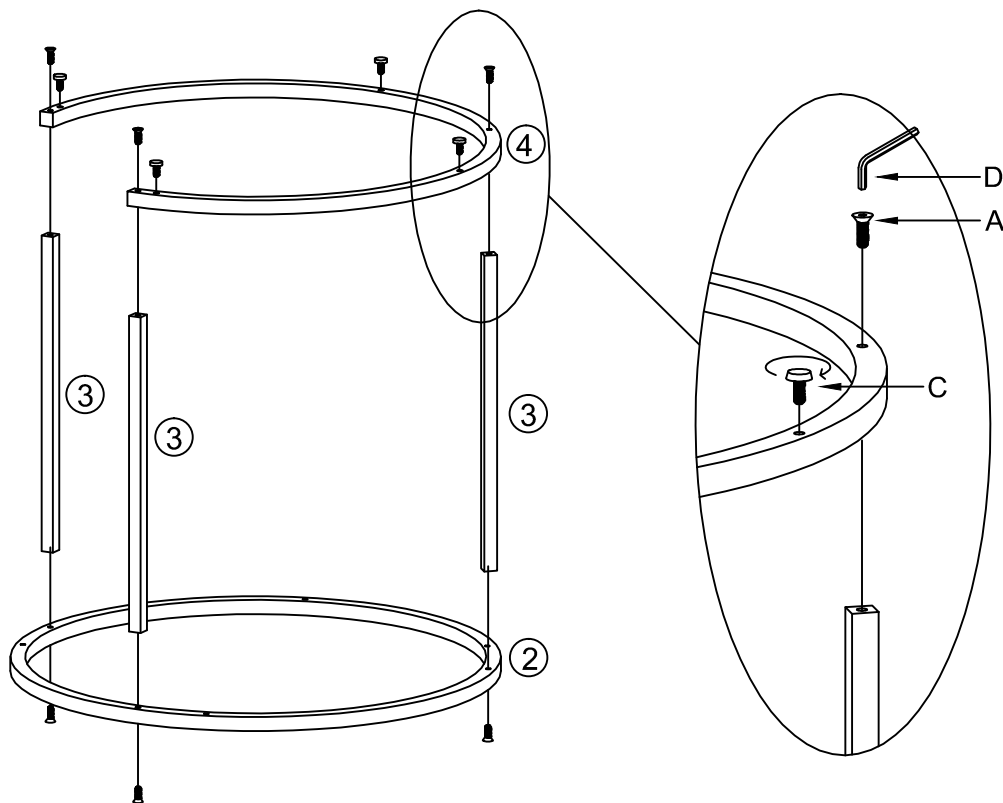

A	M6x35
	6x
C	Ø16XM6
	4x
D	4MM
	1x
	75%


2

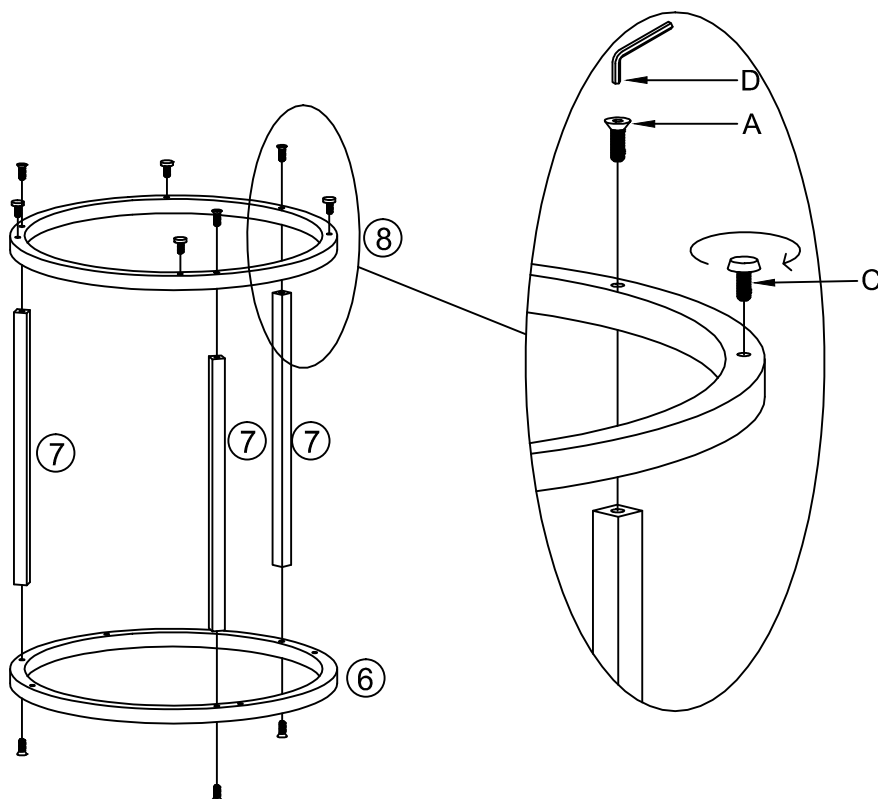


A	M6x35
	6x
C	Ø16XM6
	4x
D	4MM
	1x
	75%


II.


3

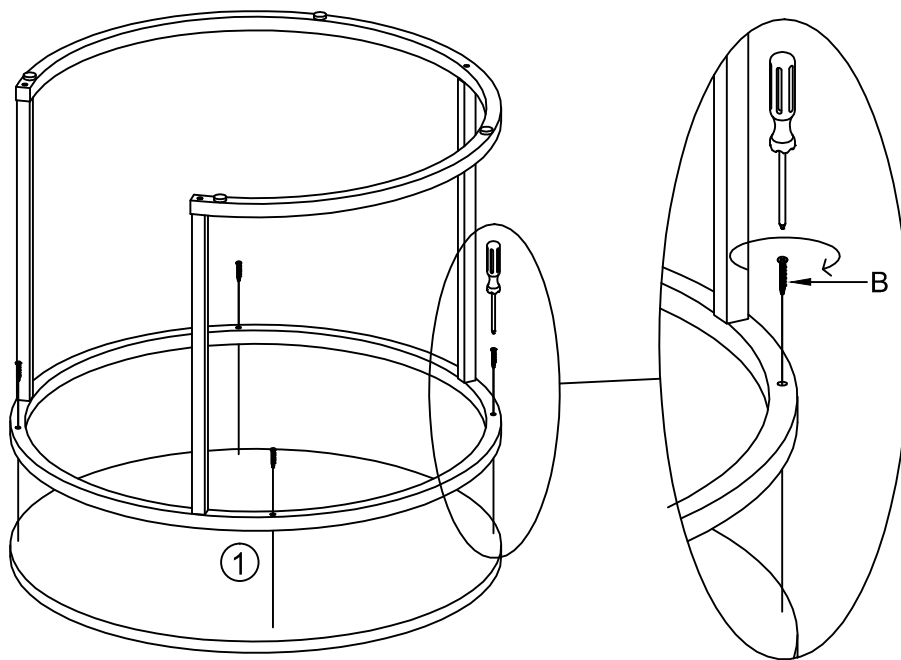

A	M4x30
	
4x	
D	4MM
	
1x	
	



4

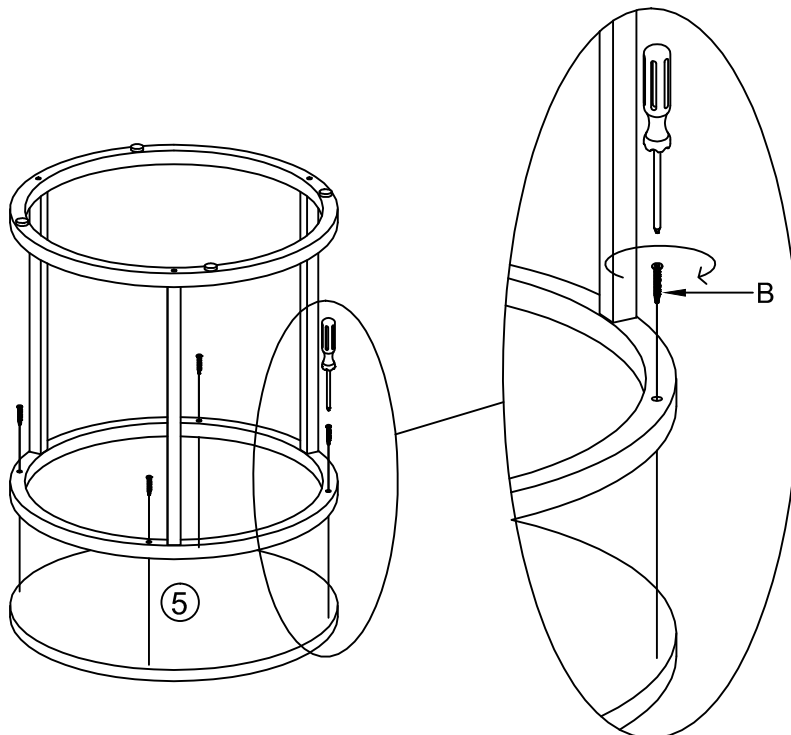






A	M4x30
	
4x	
D	4MM
	
1x	
	



5

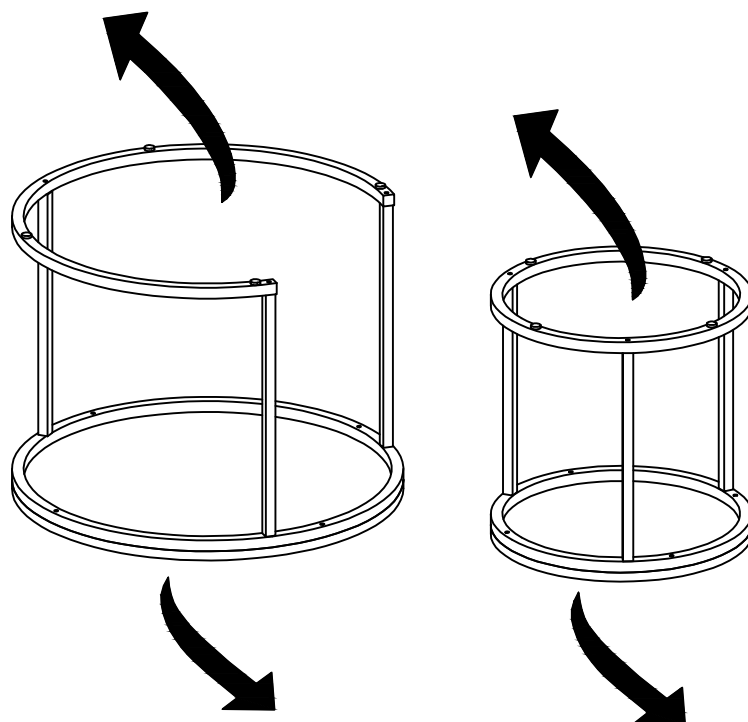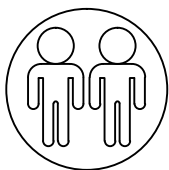

6

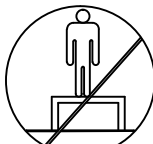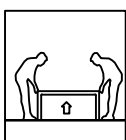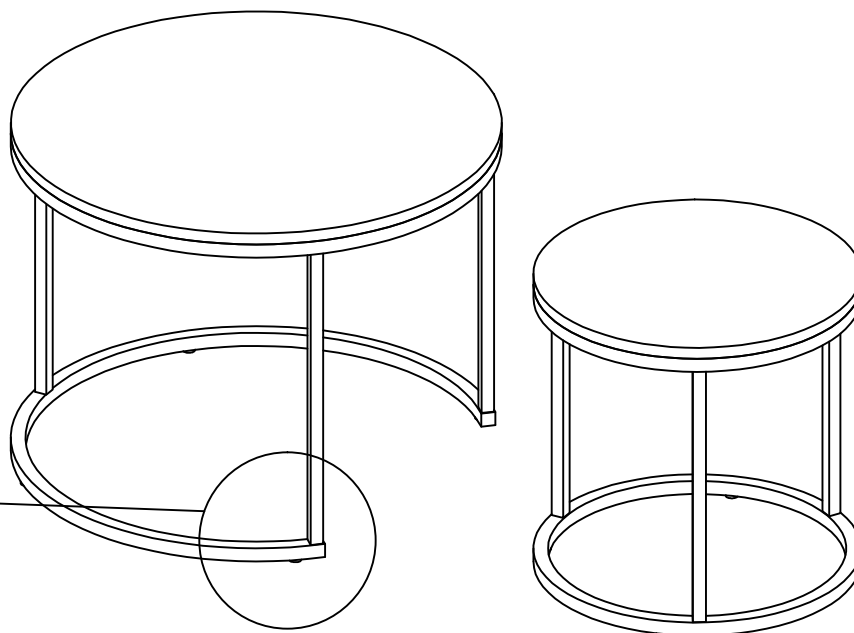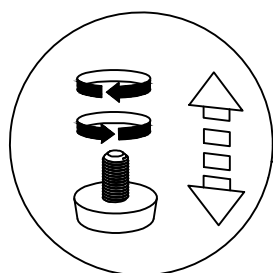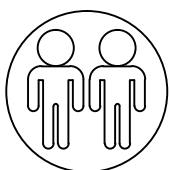

Séparez les éléments avant de trier