


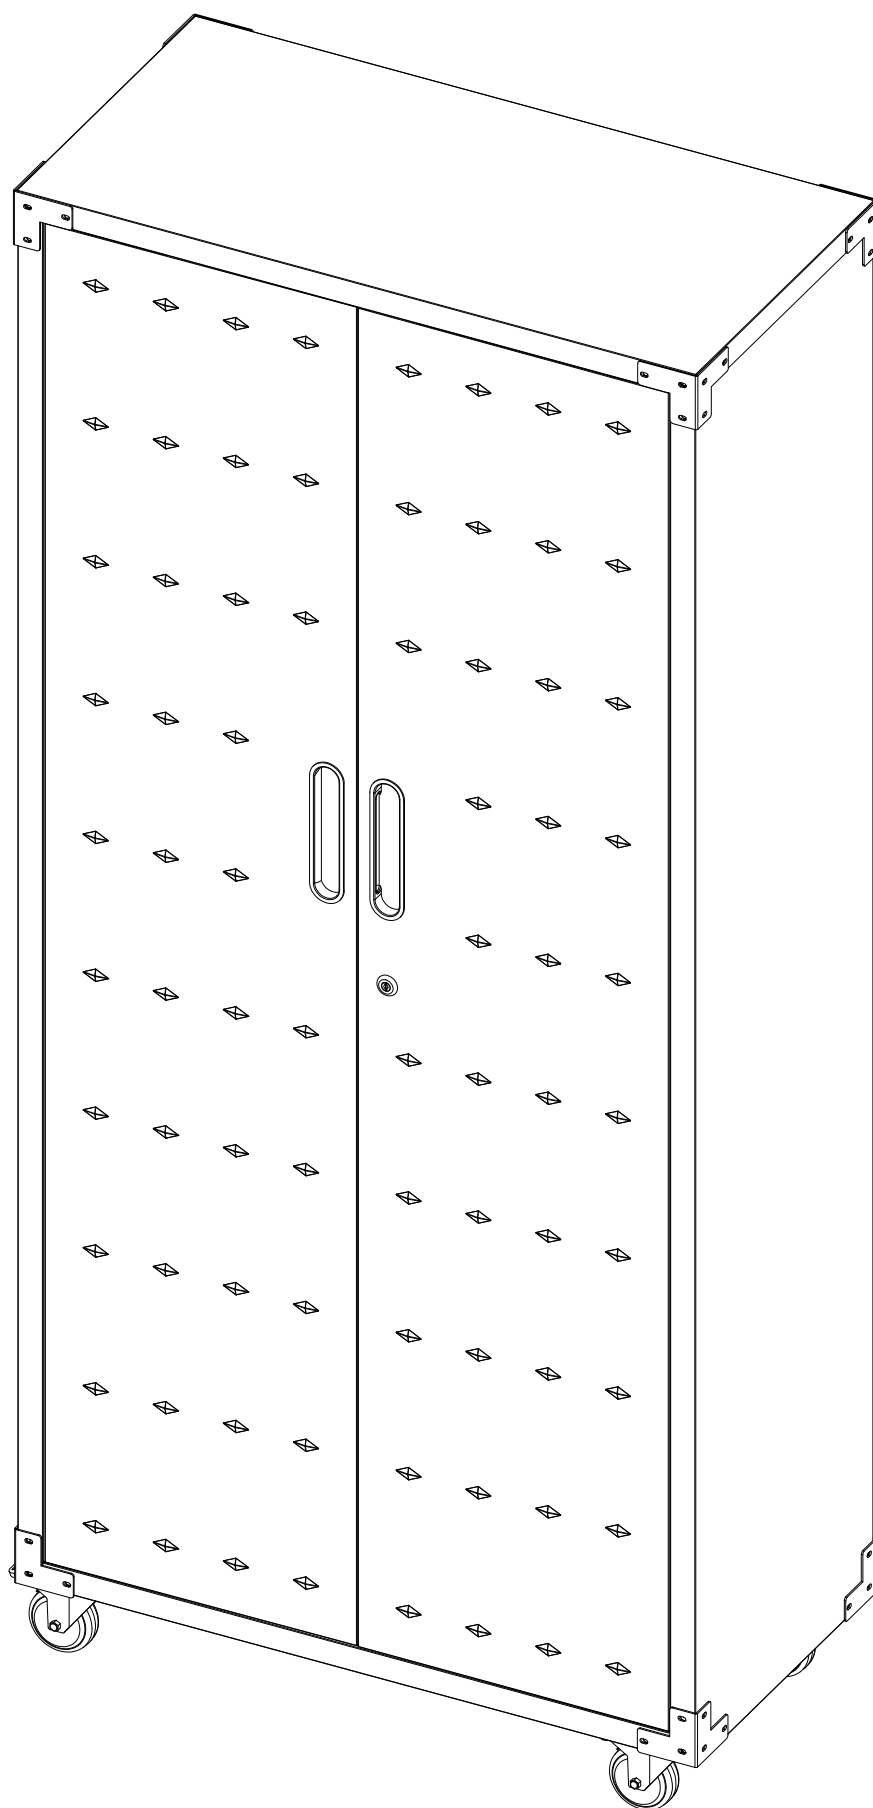
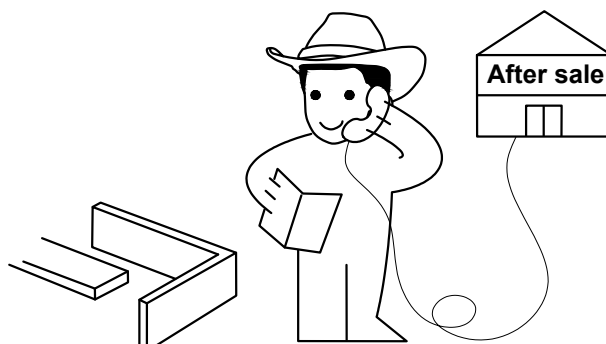
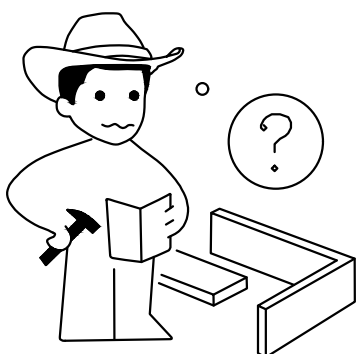
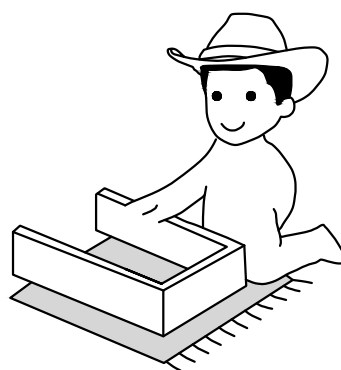
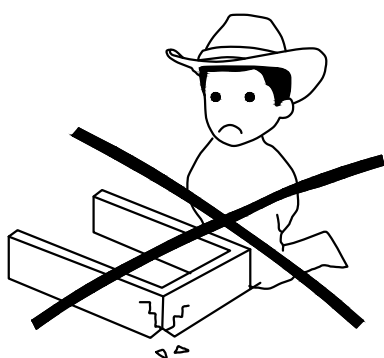
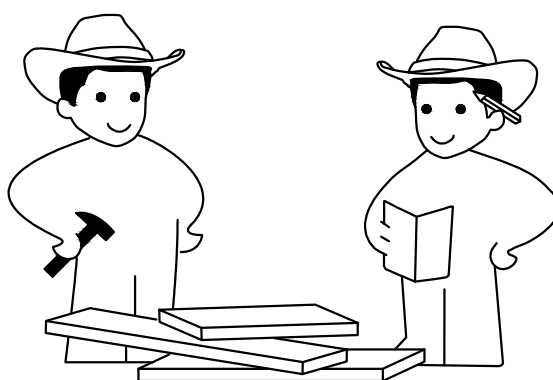
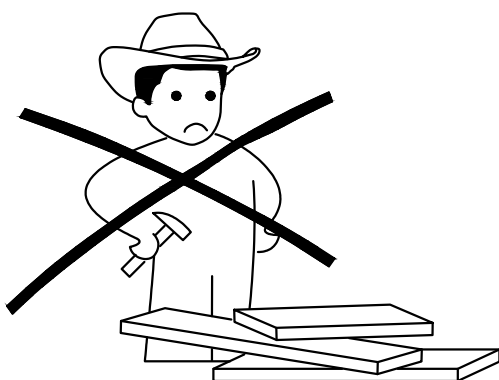



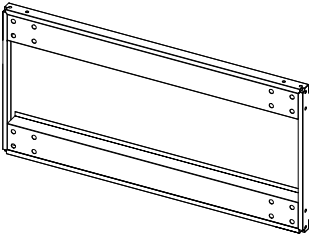
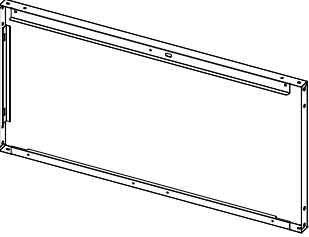
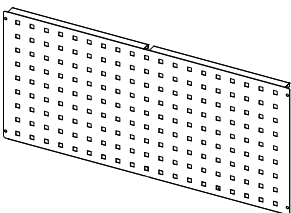
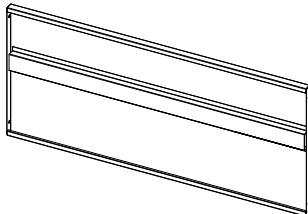
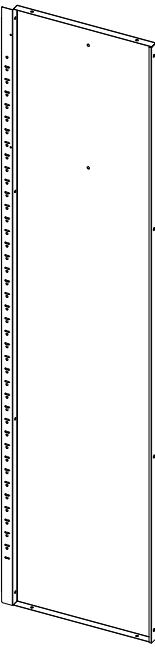
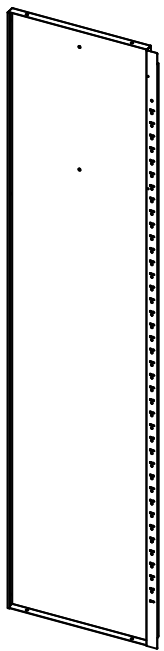
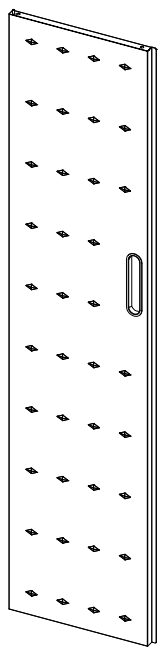
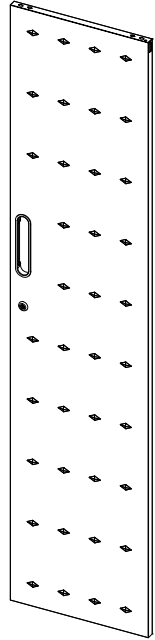






Installation video




1×1pc 		2×1pc 		3×1pc 		4×1pc 	
				5×1pc 		6×3pcs 	
7×1pc 		8×1pc 		9×1pc 		10×1pc 	
A×24pcs  M4×8mm	B×16pcs  M8×20mm	E×52pcs  M5×10mm	F×12pcs 	G×36pcs  M5	Q×12pcs 	R×2pcs 	U×4pcs 
4pcs 	W×8pcs 						

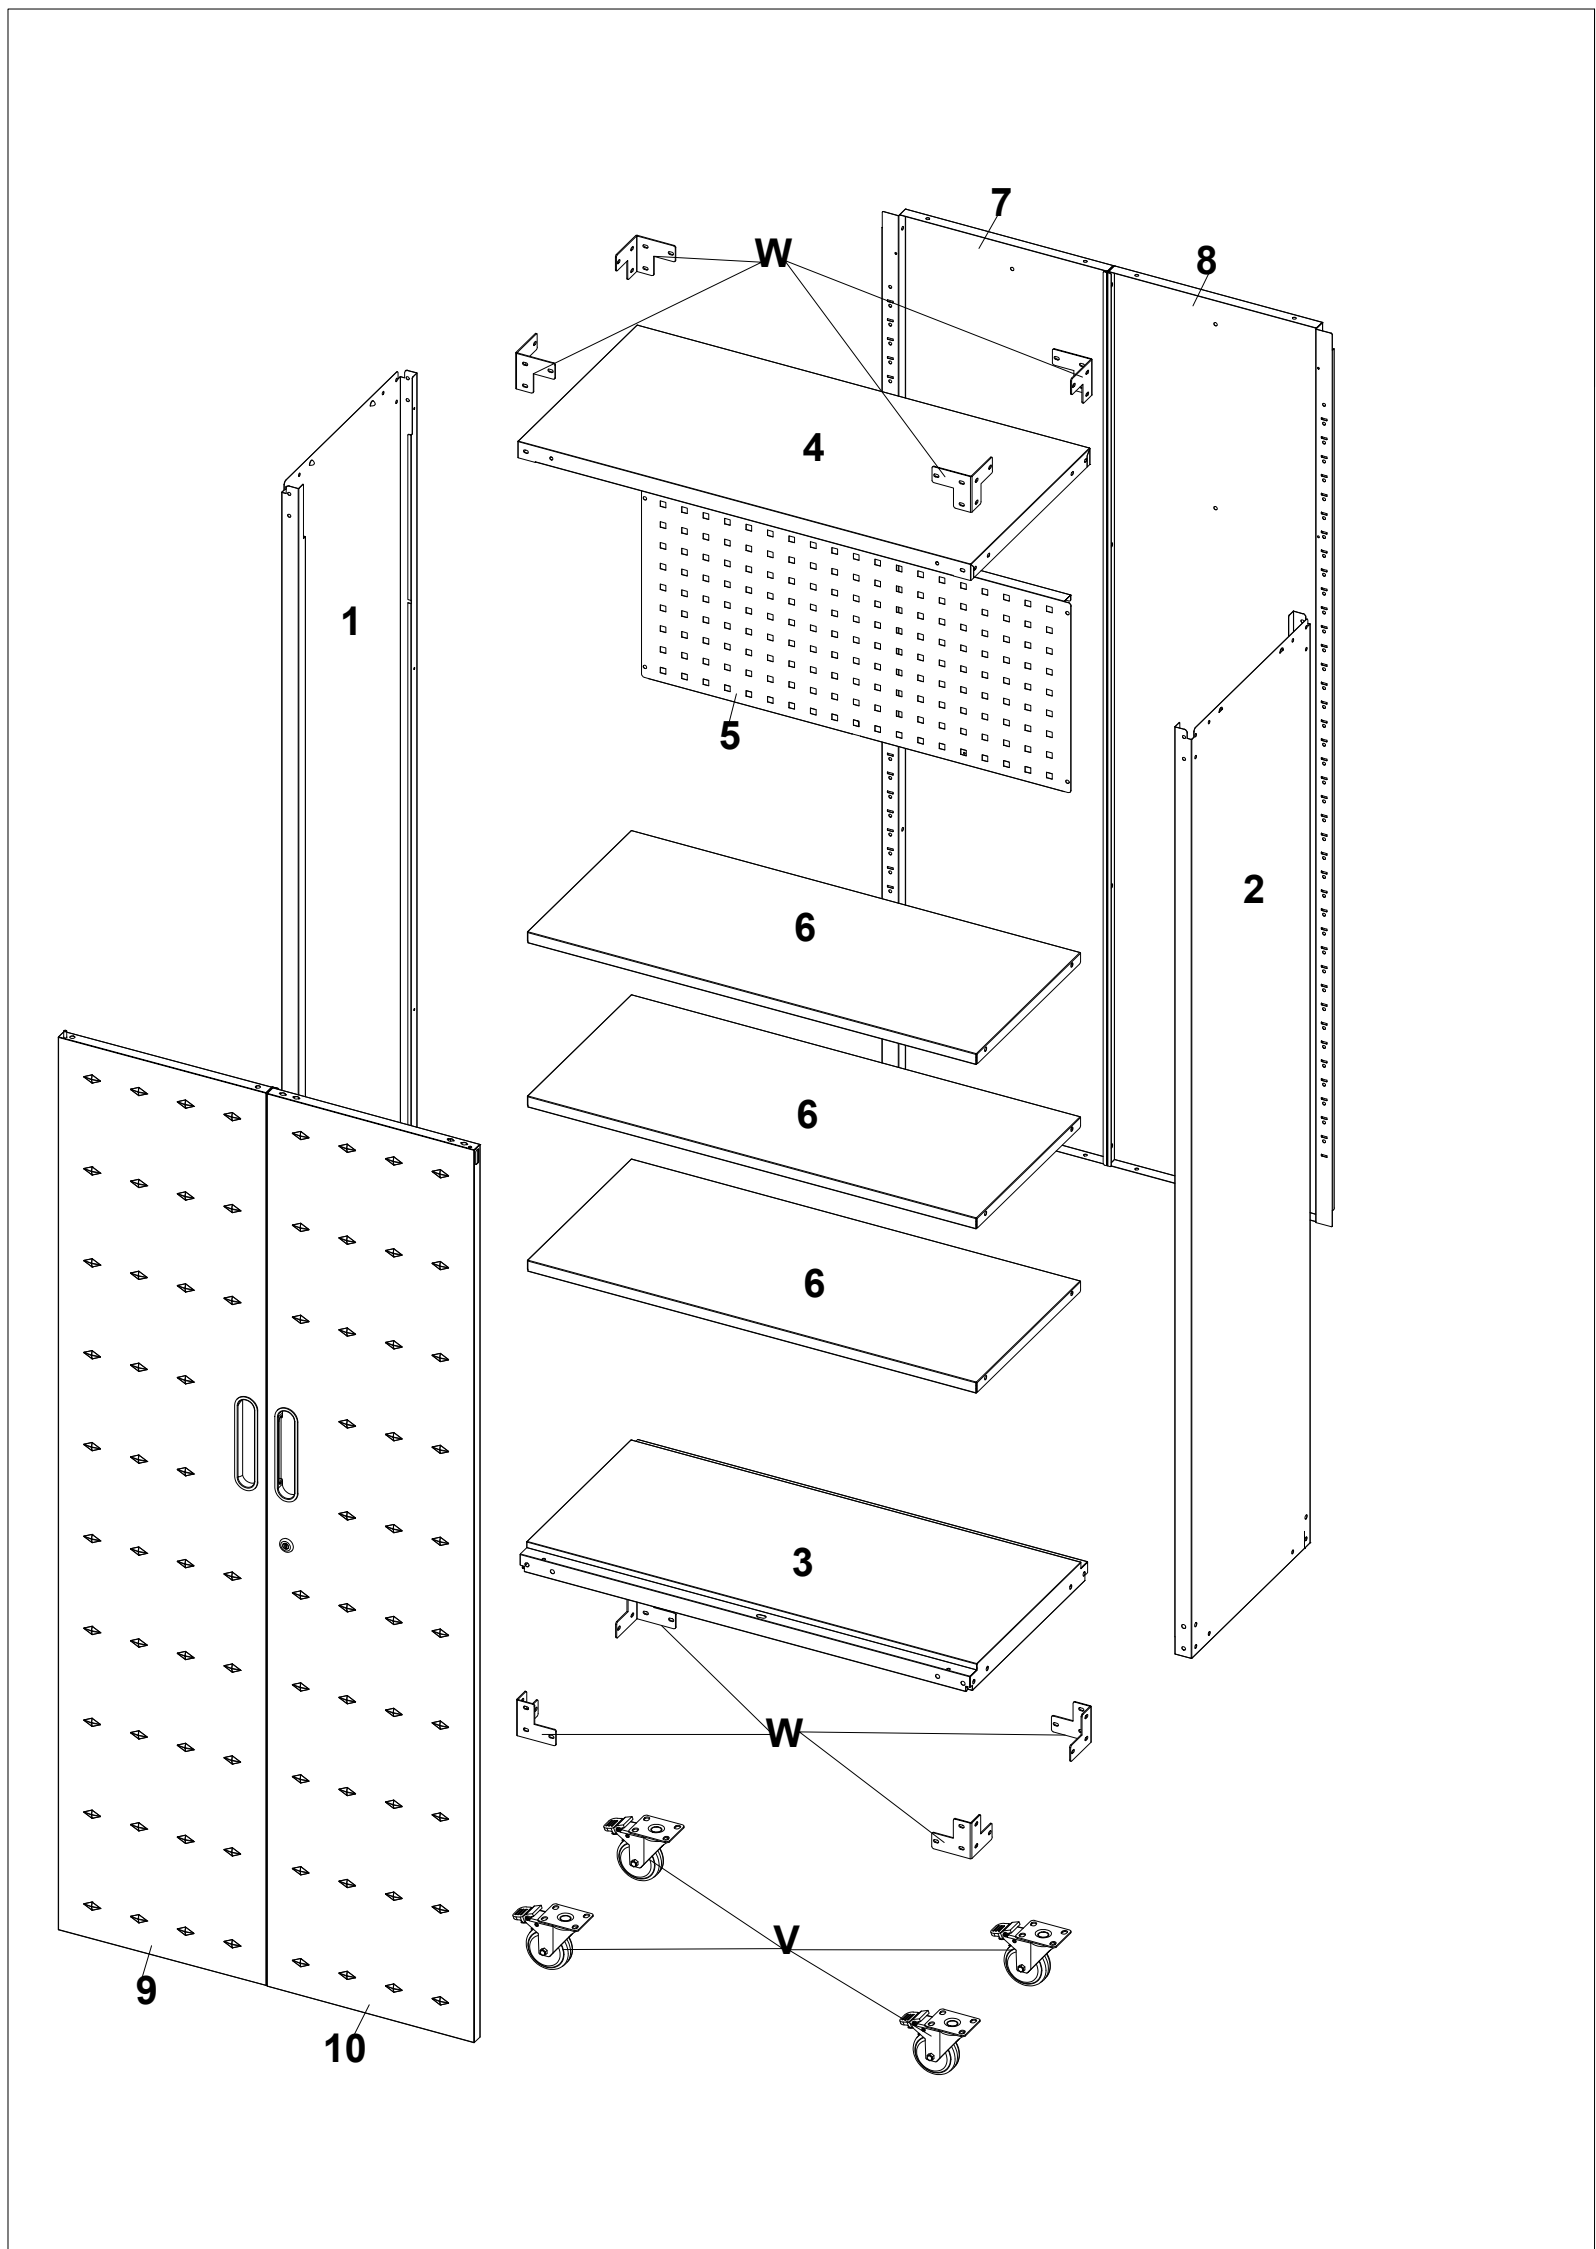


1

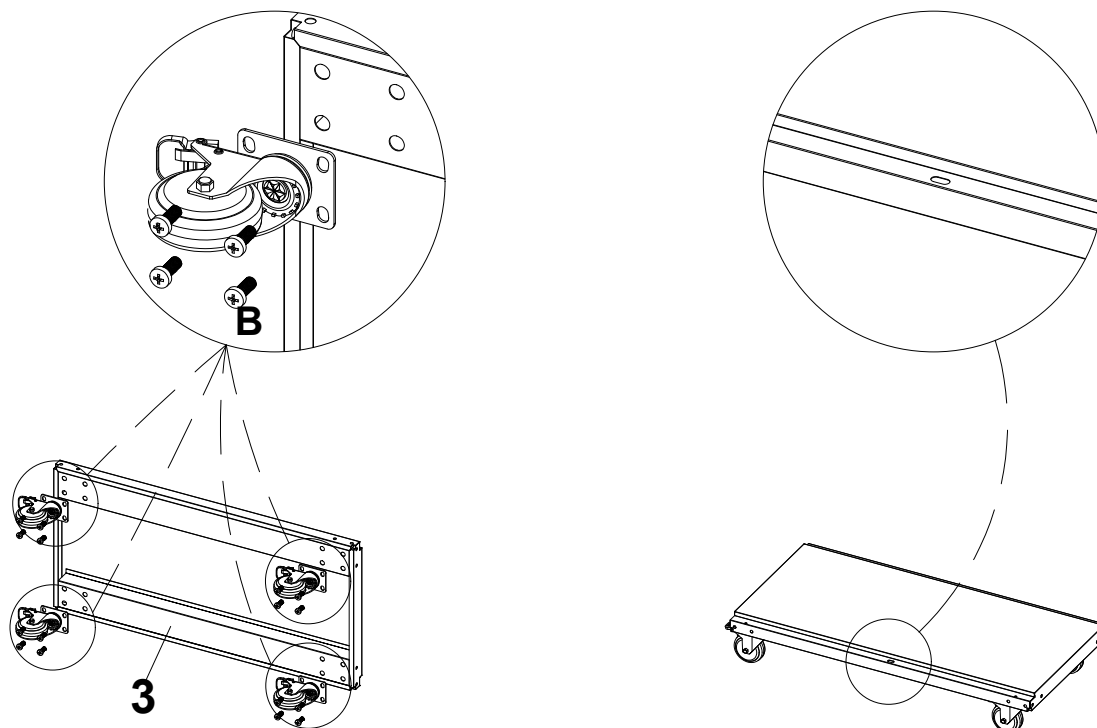


2

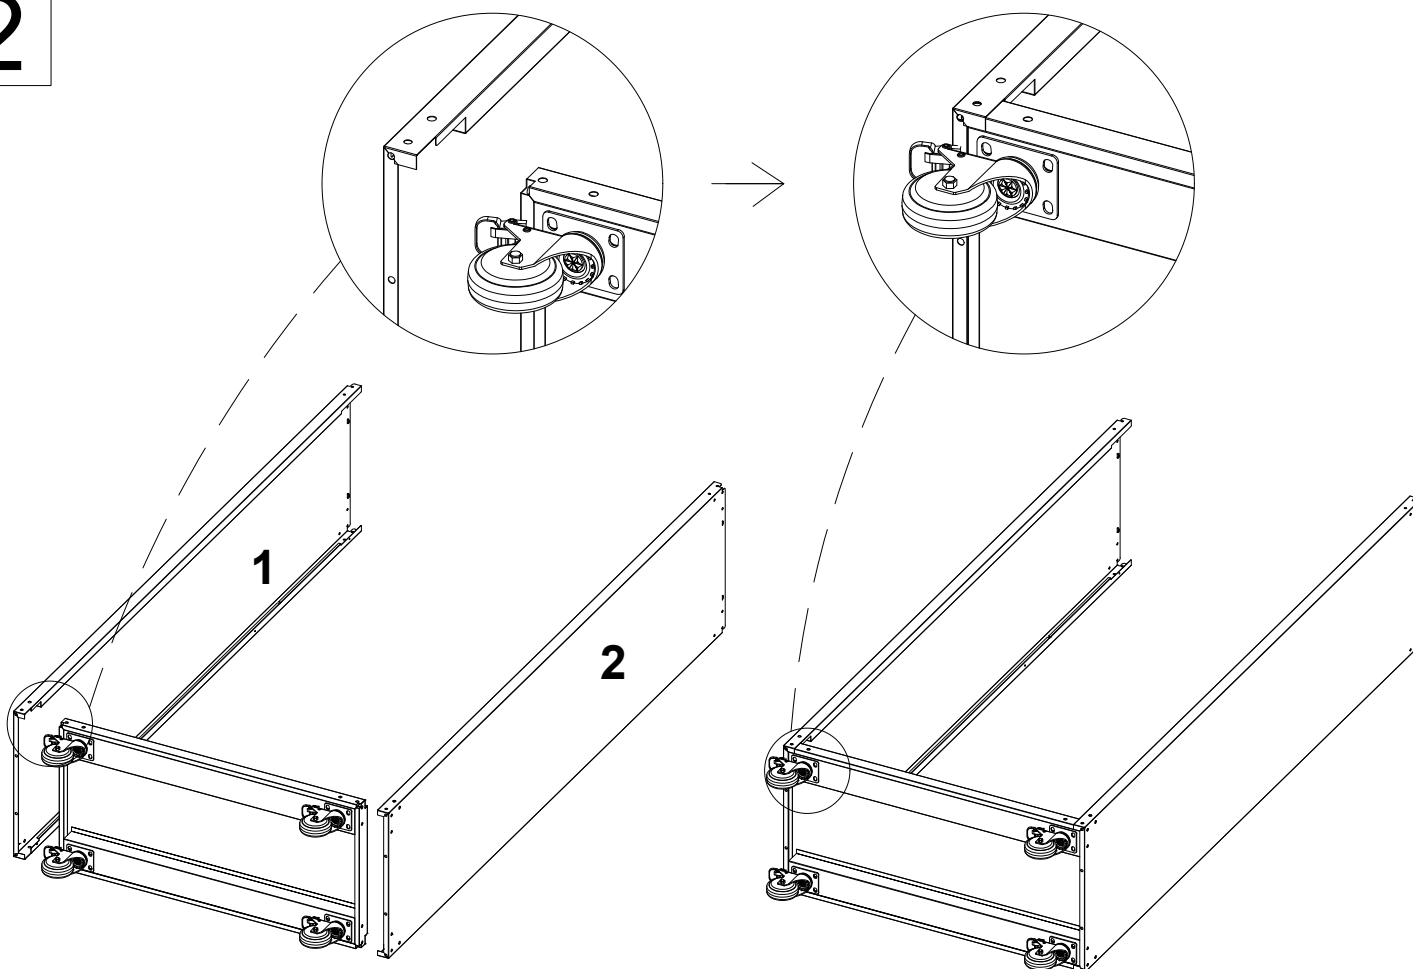


3

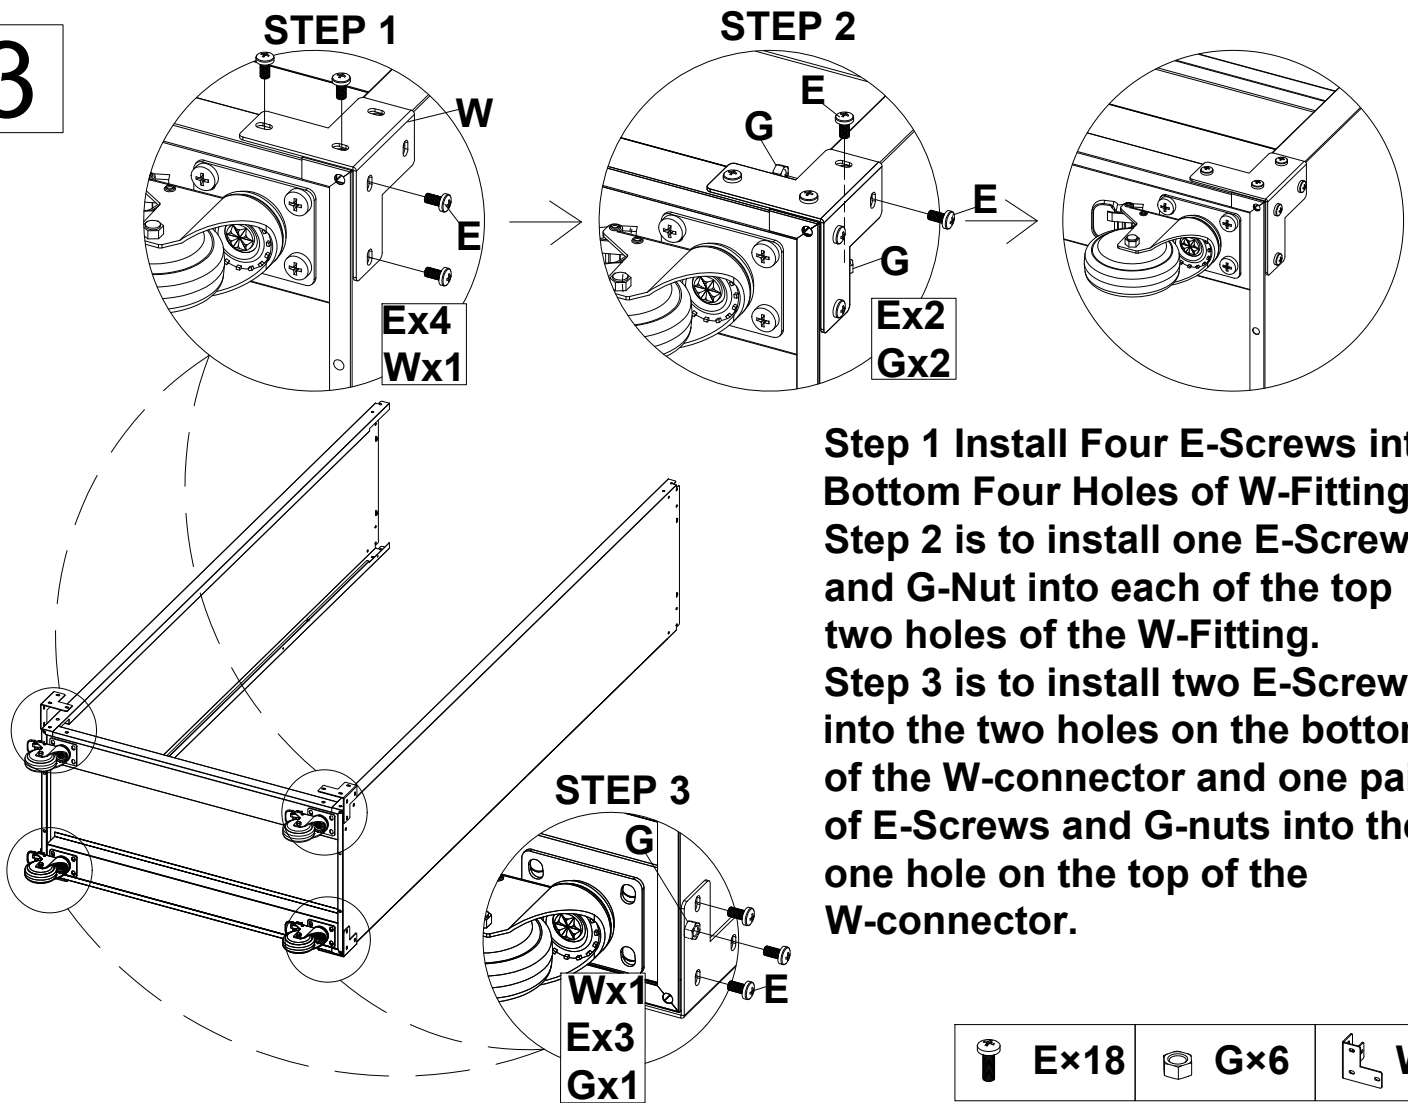


4

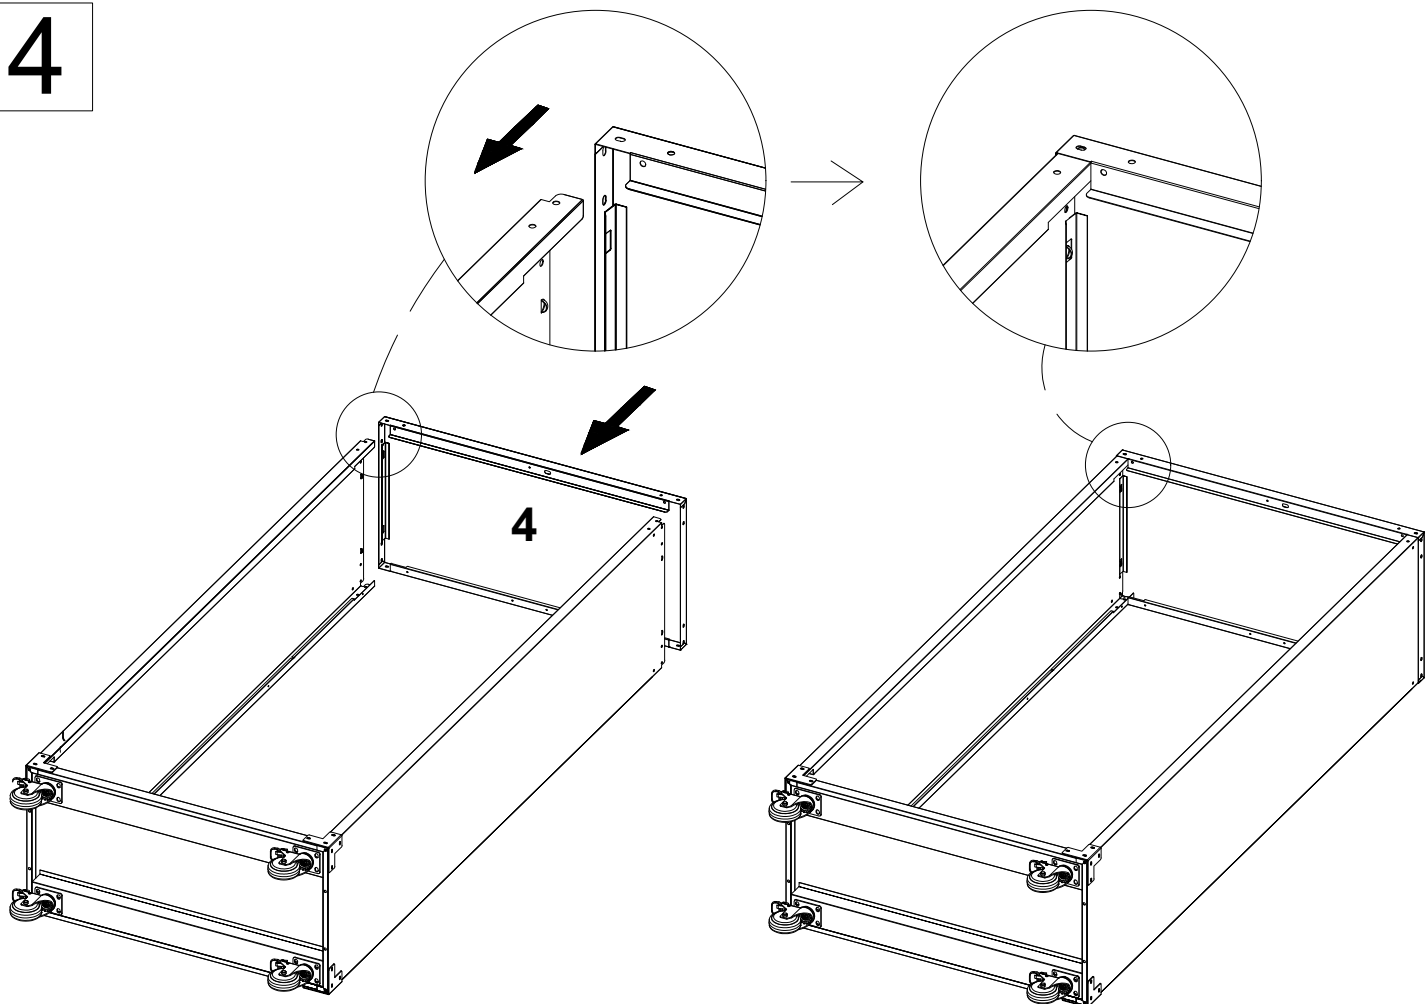

5

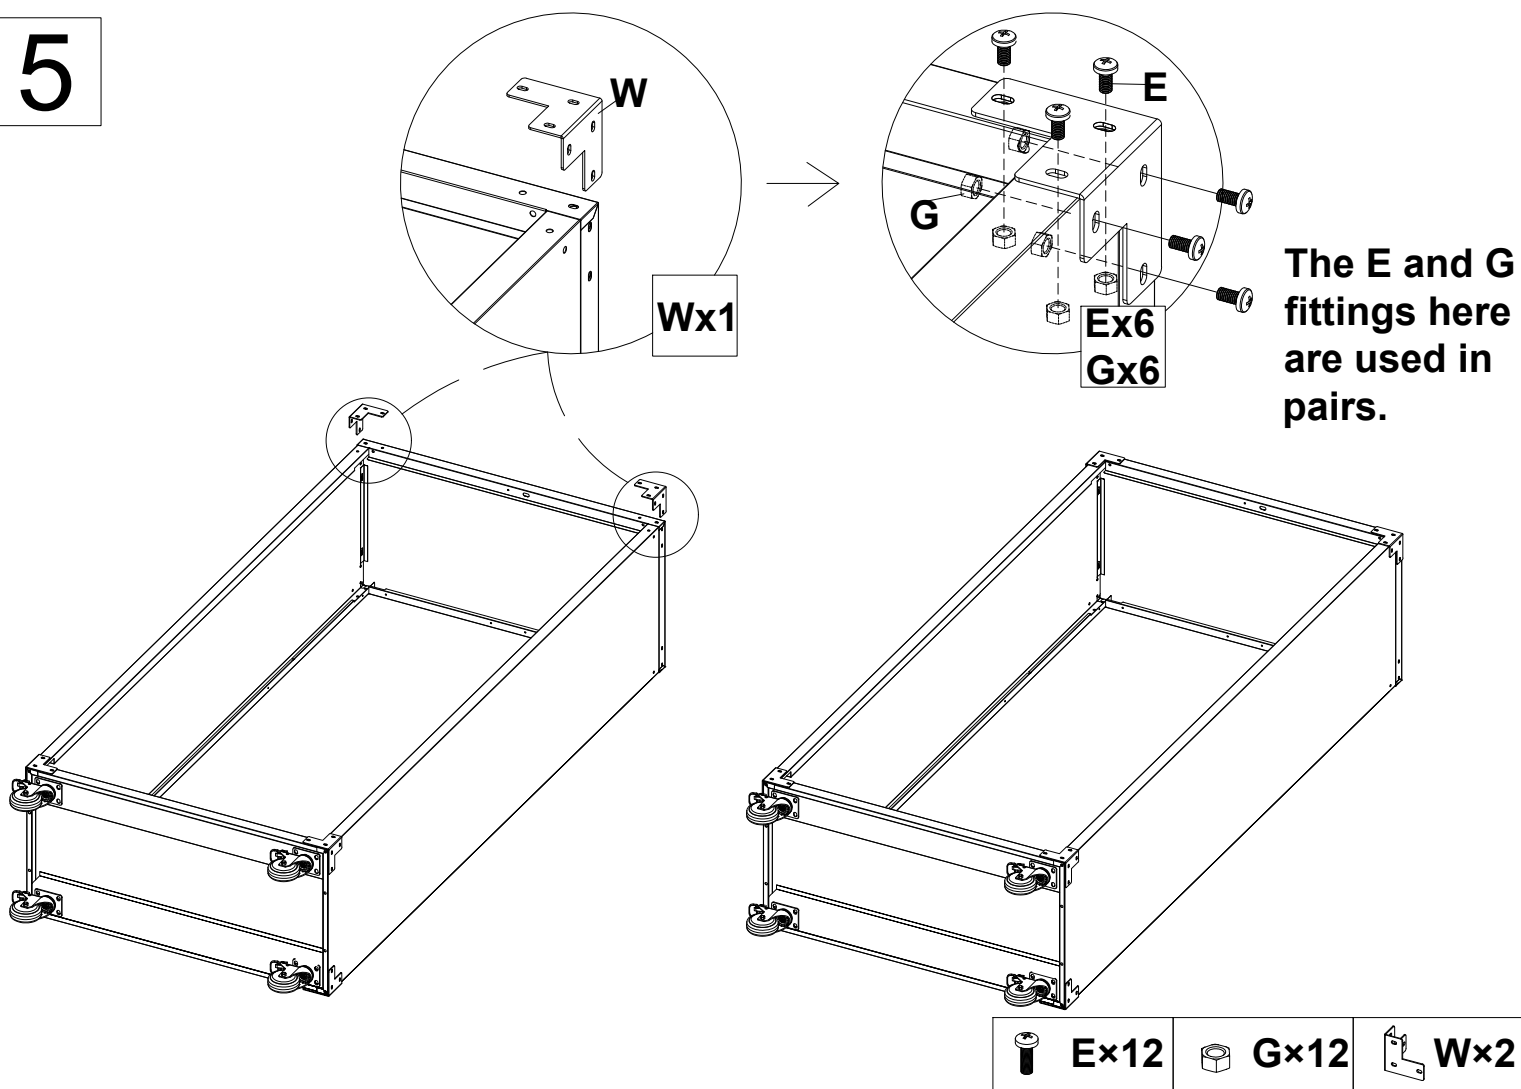


6

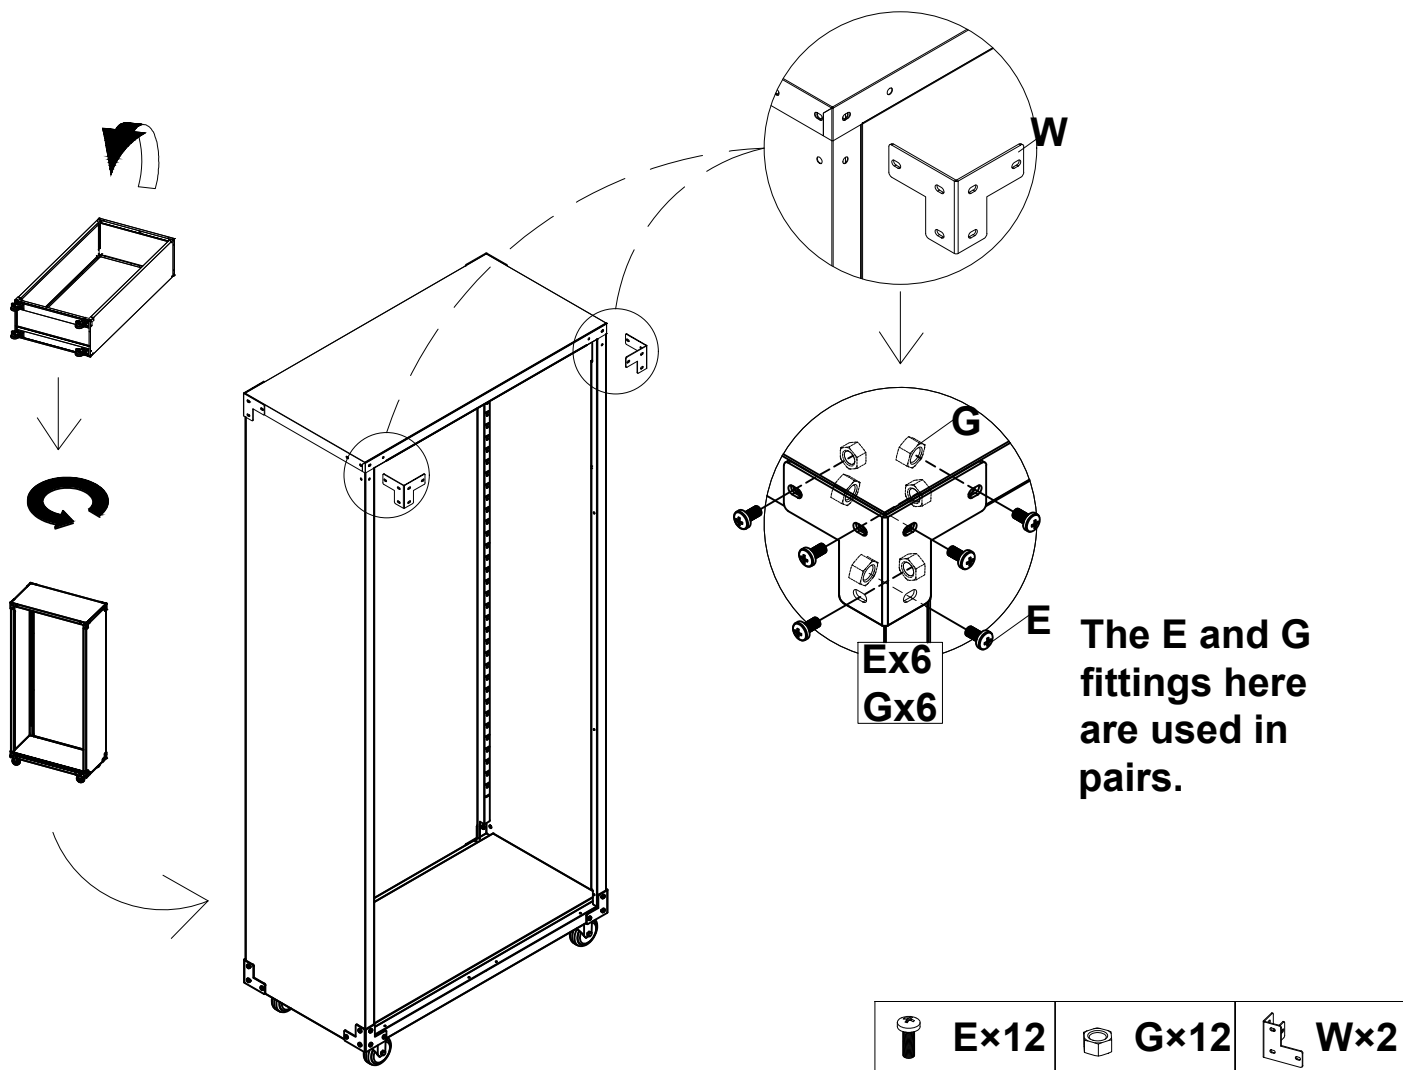


7


STEP 1

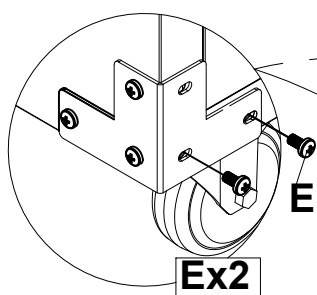

STEP 2

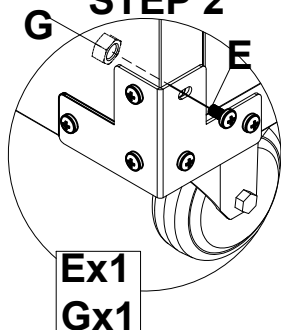

Step 1 starts with installing the two E screws to the bottom of the W fitting
step 2 installs to the top of the W fitting using the E screws and G nuts.




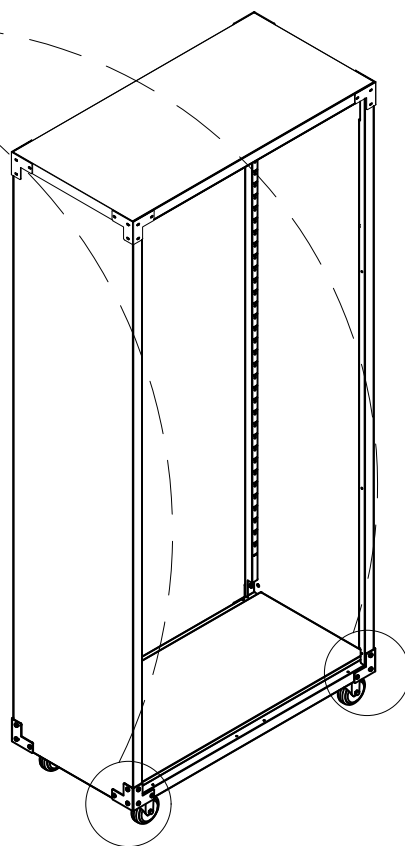


E×6






G×2

8

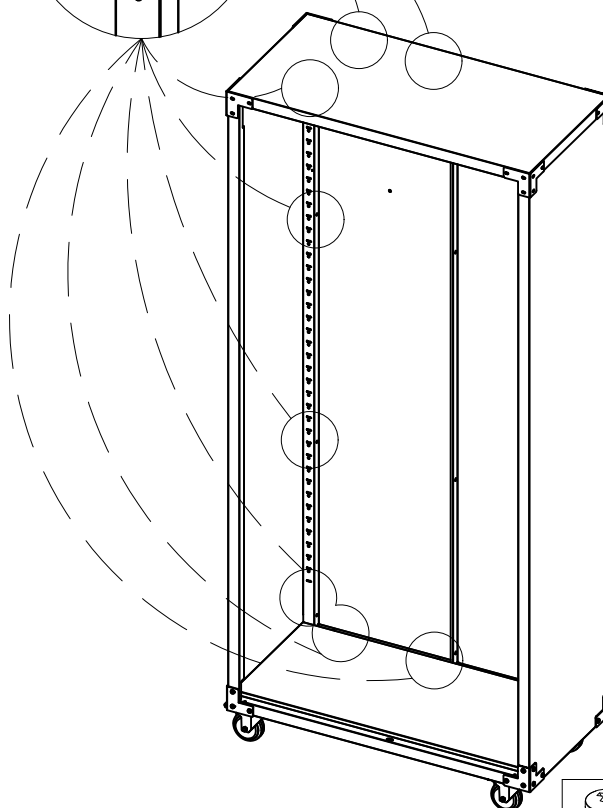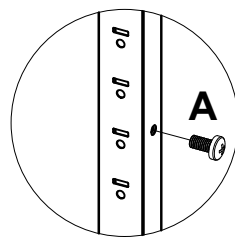
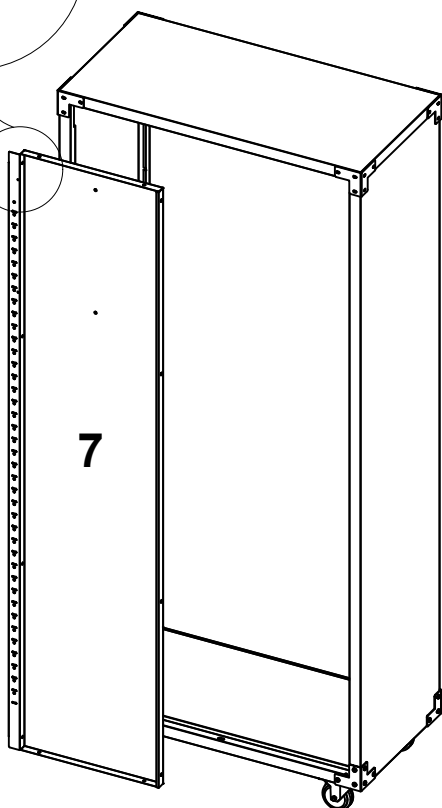
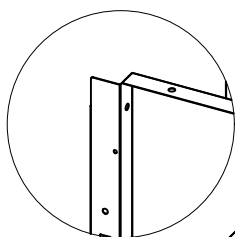


A×8



9

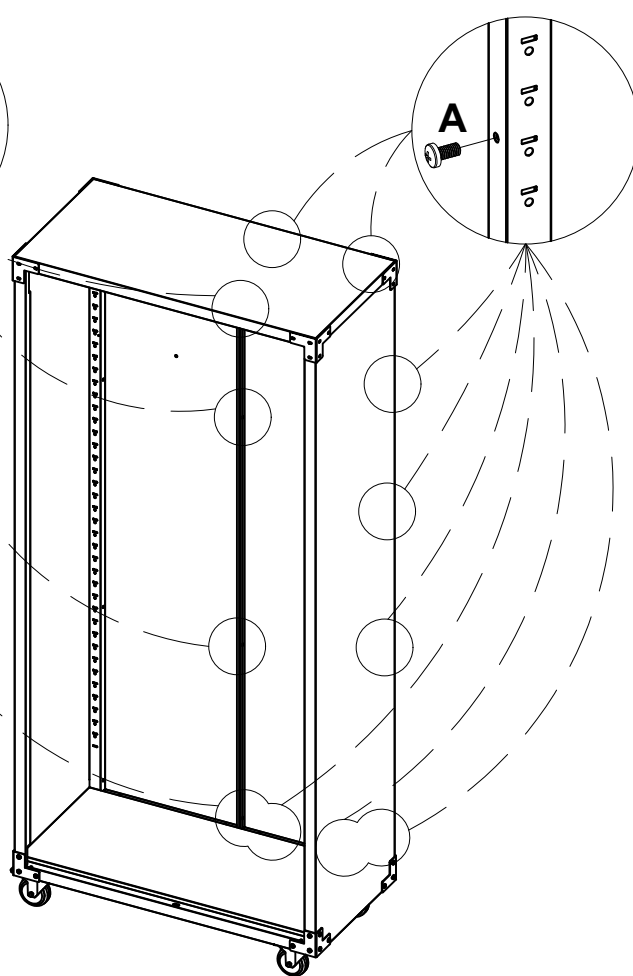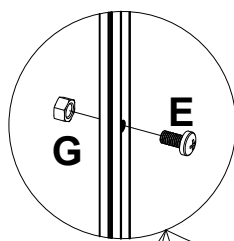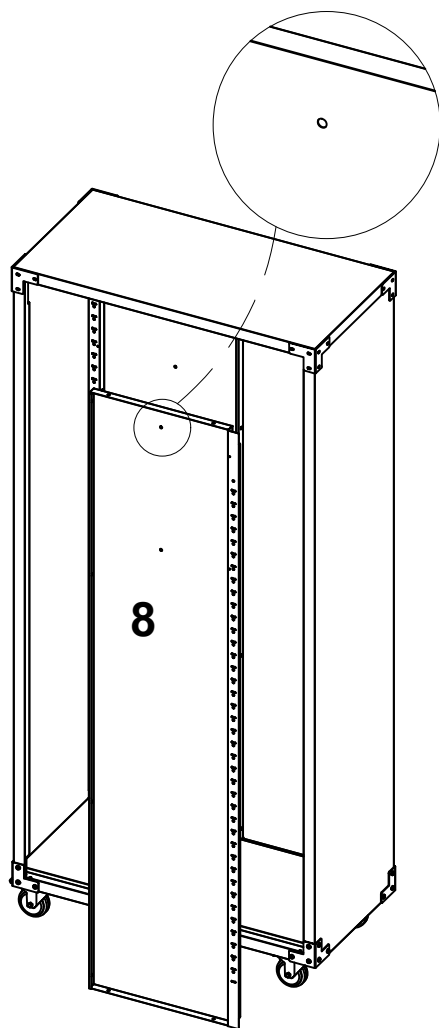




10

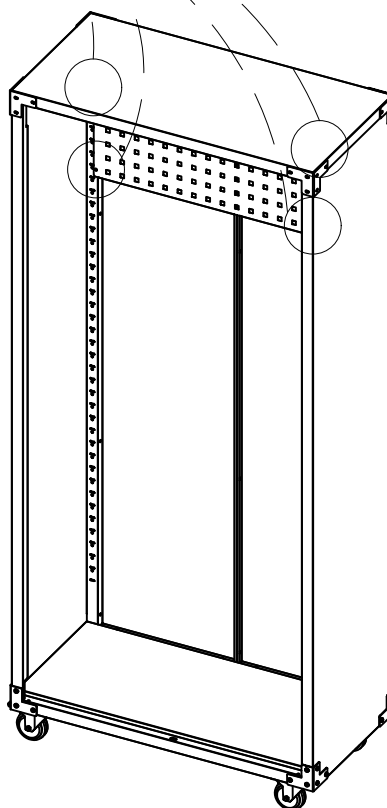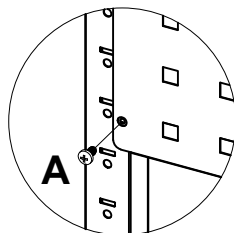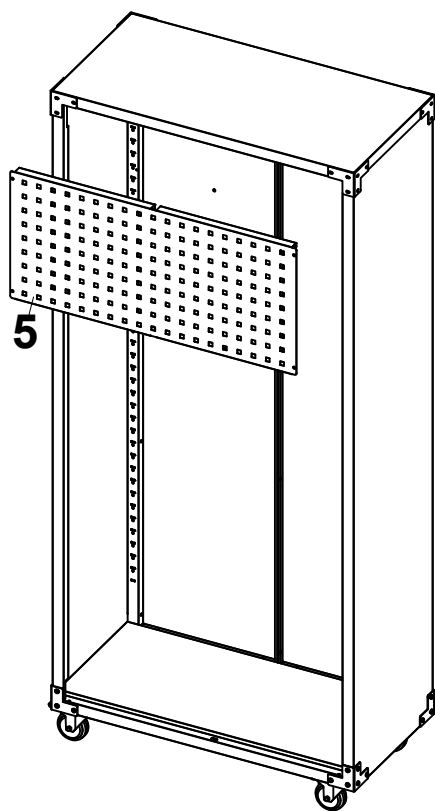



11

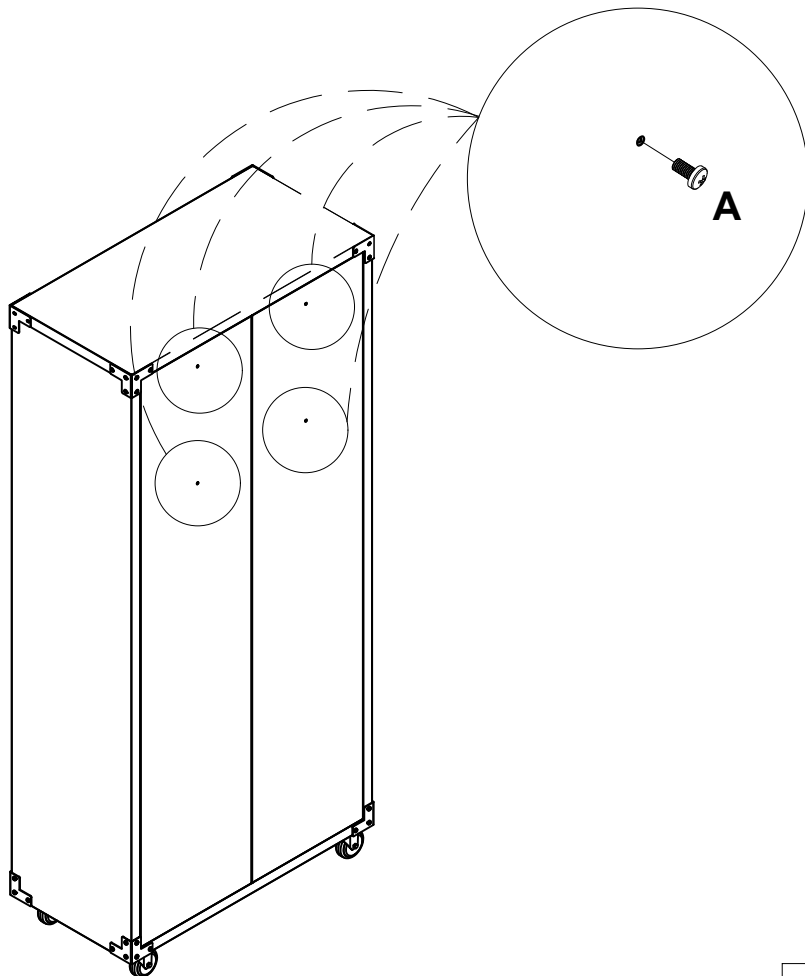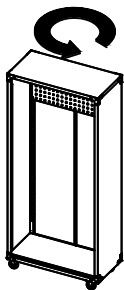

12

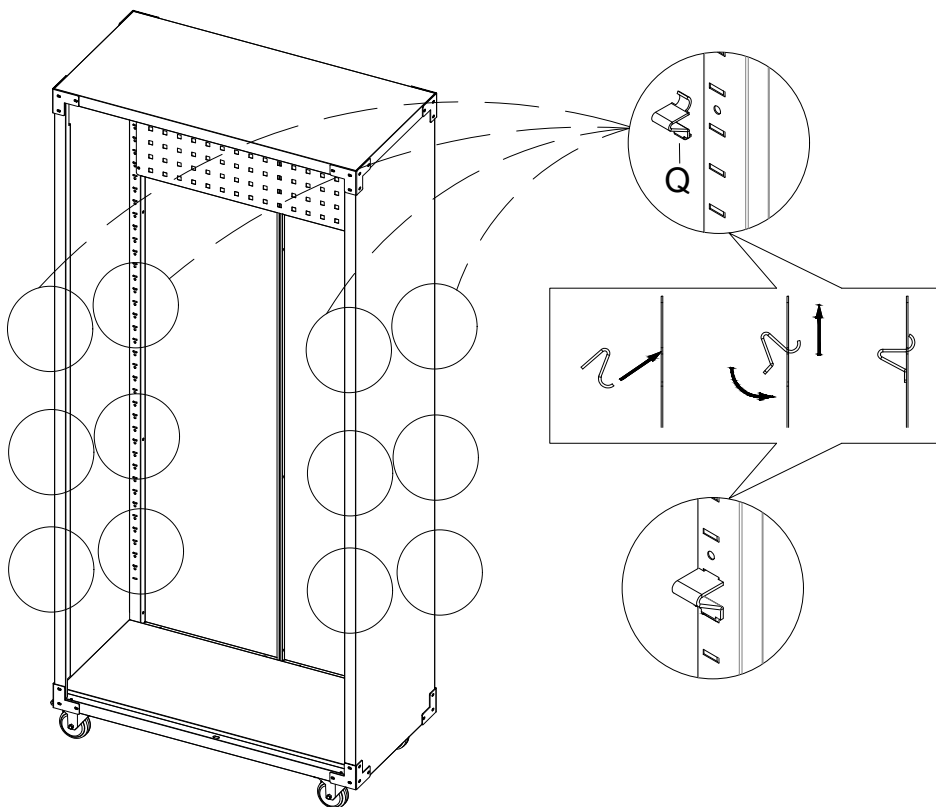



13

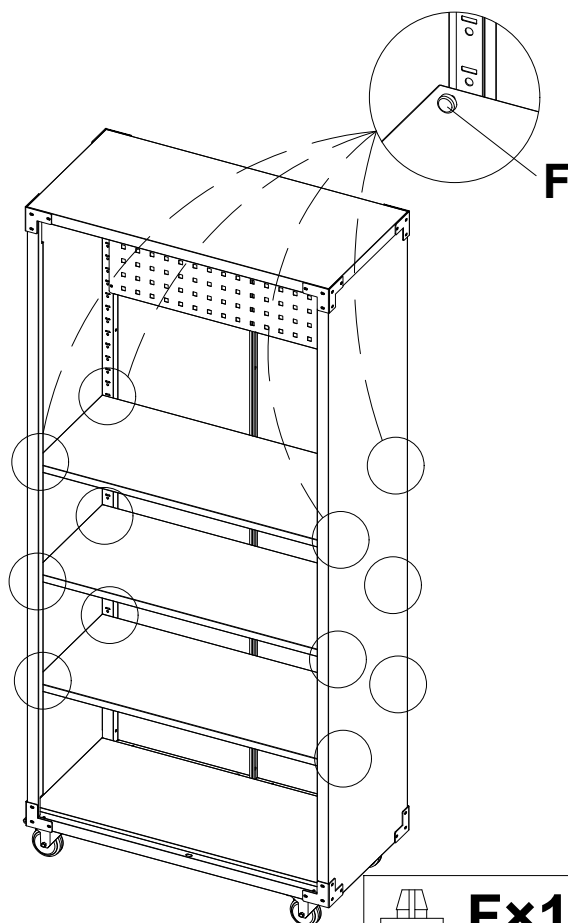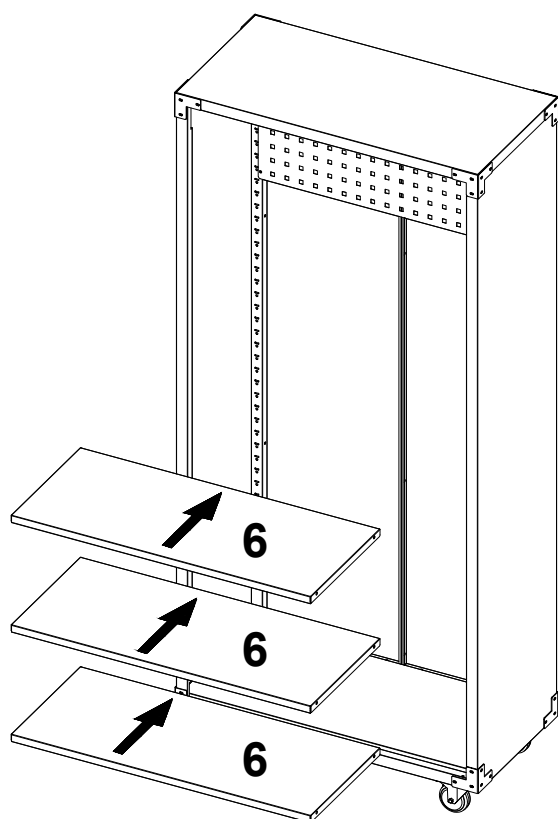

 **F×12**




14

STEP 2

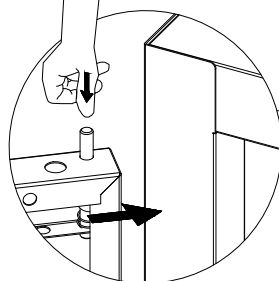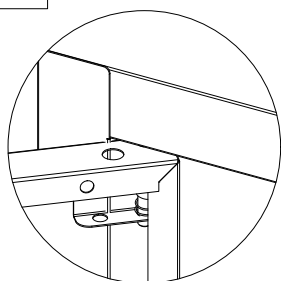


STEP 1

R

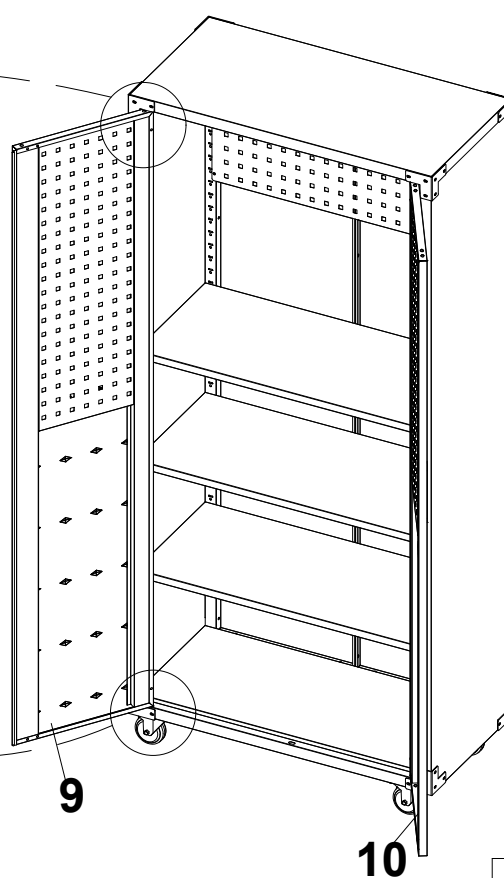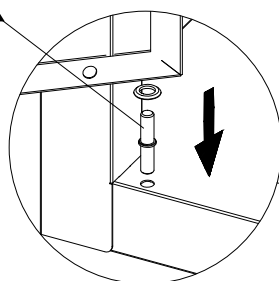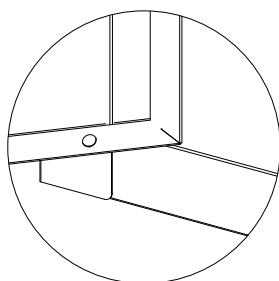

 **R×2**

15

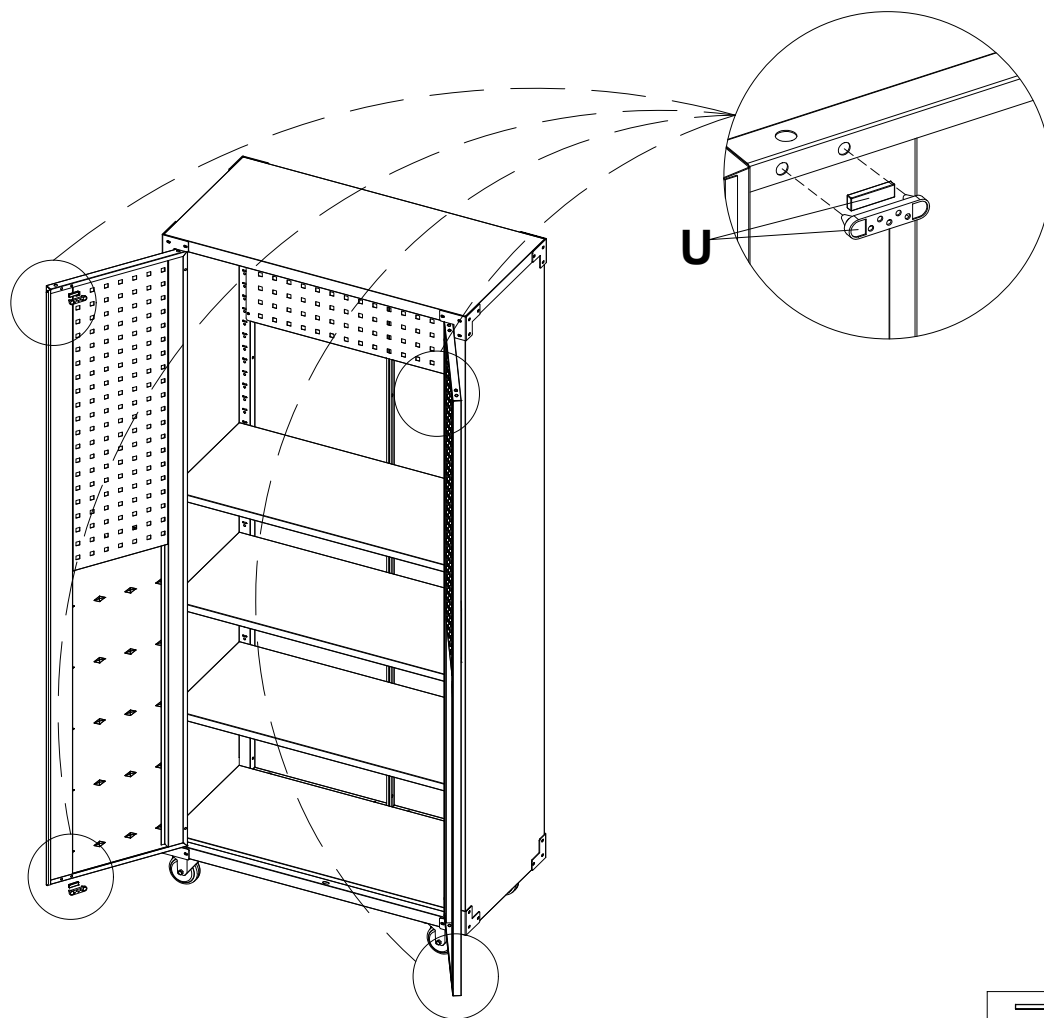

Ux4

16

