


SKU:PHO_0YDDJX62、PHO_0YDD5KFY、PHO_0YDD6B2T

LOT No.:DX-No.1

Assembly Instruction



Trouble shooting:

Missing / Wrong / Broken parts and installation issues





Send email with your question, pic and order NO. to
support@idealhouse.vip



Respond within 24 hours





Issue resolved



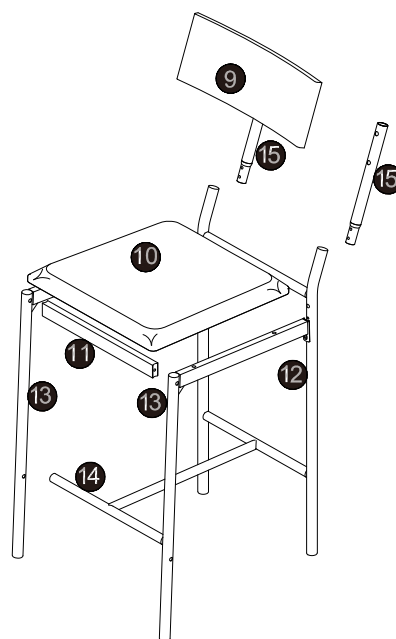
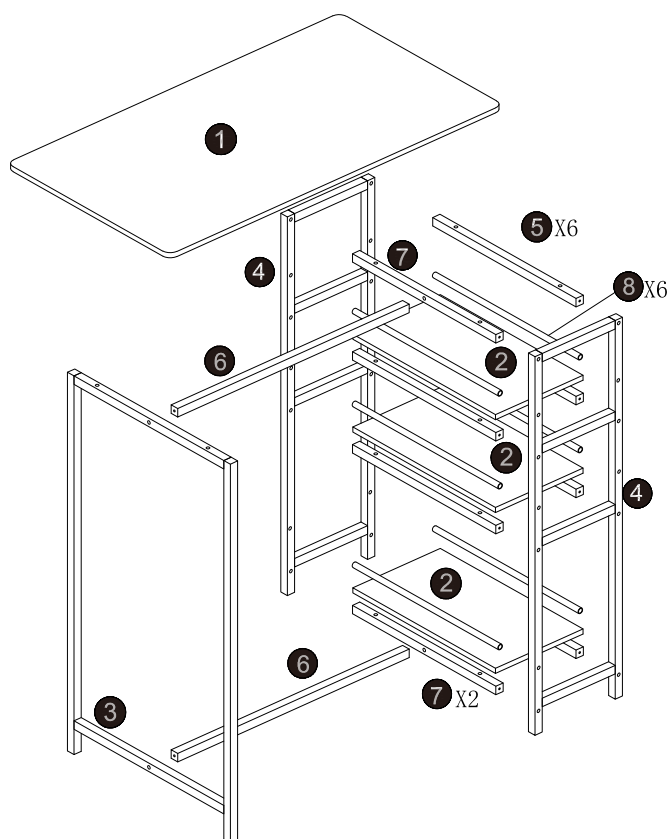


Note: Don't tighten all screws during installation.

components

	915*500mm	1	X 1
	438*240mm	2	X 3
	900*480mm	3	X 1
	900*240mm	4	X 2
	440*20mm	5	X 6
	635*20mm	6	X 2
	440*20mm	7	X 2
	Ø13*440mm	8	X 6
	380*144*34mm	9	X 2
	365/395*390mm	10	X 2
	338*30mm	11	X 2
	710*355mm	12	X 2
	615*380mm	13	X 4
	410*340mm	14	X 2
	262*22mm	15	X 4

Screws & Tools

A		M6*12mm	X 12
B		M6*28mm	X 18
C		M6*30mm	X 8
D		M6*35mm	X 46
E		M6*45mm	X 8
F		4mm	X 1

Check all the components & screws before assembly.
Do not install in case part is missing, contact us to get.
 Send email with your question to support@idealhouse.vip.
 We will resend within 24 hours.


Step1:

(D) M6*35mm




2pcs

(F) 4 mm

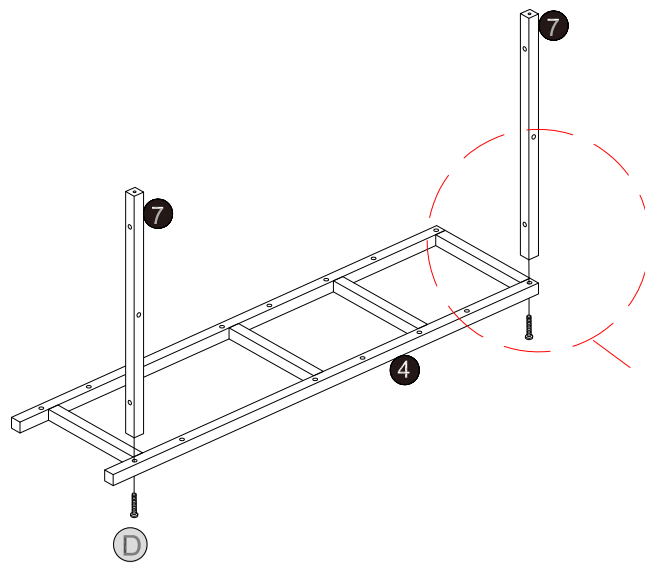

PLS pay Attention the holes

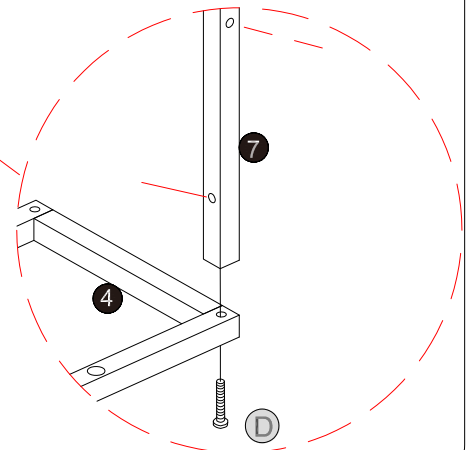


Step2:

(D) M6*35mm



6pcs

(F) 4 mm

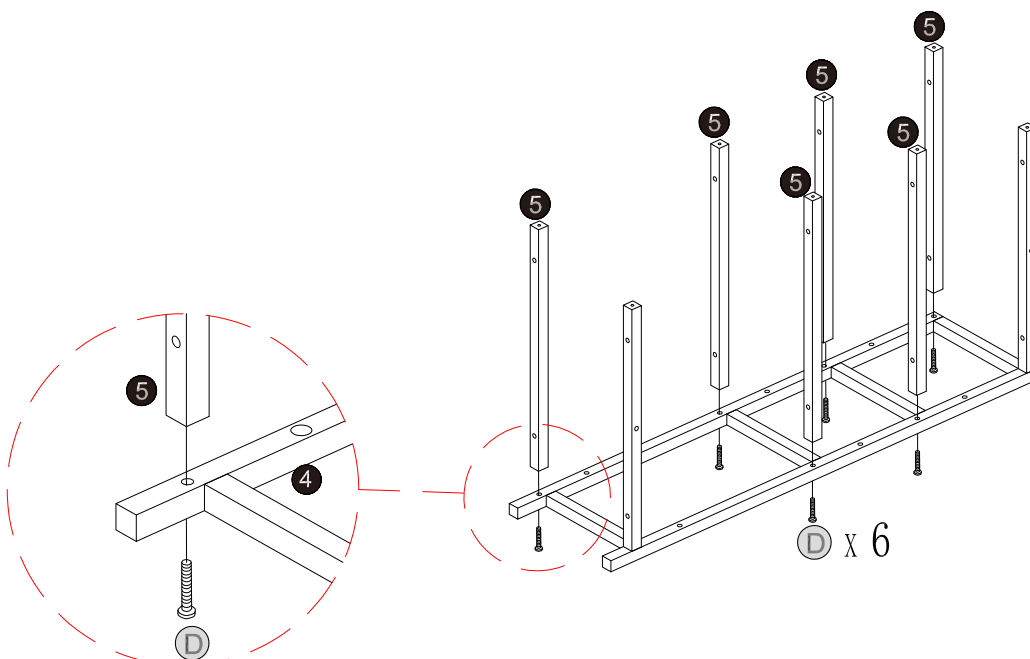




Step3:

(D) M6*35mm



6pcs

(F) 4 mm

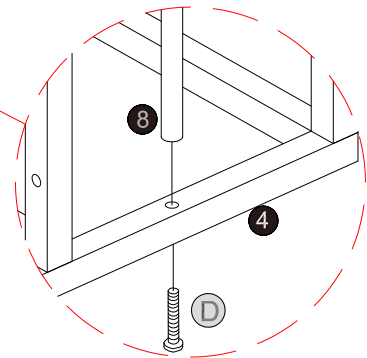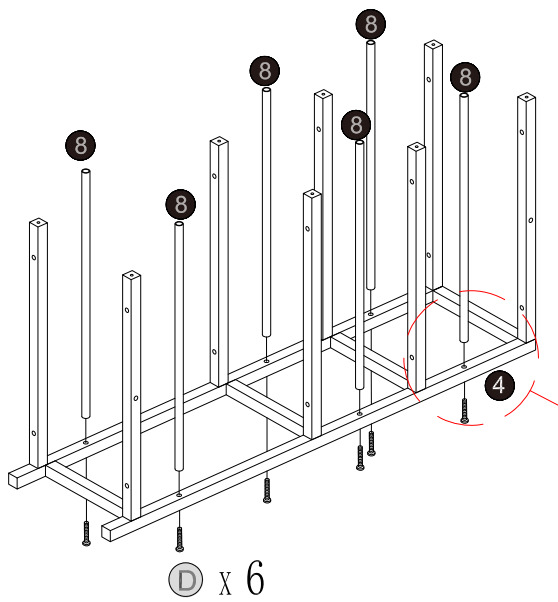



Step4:

(D) M6*35mm




14pcs

(F) 4 mm

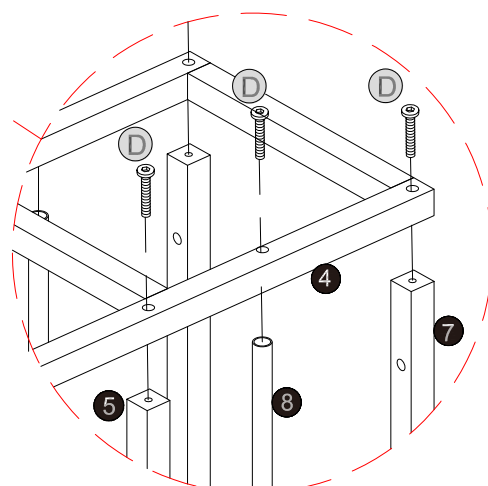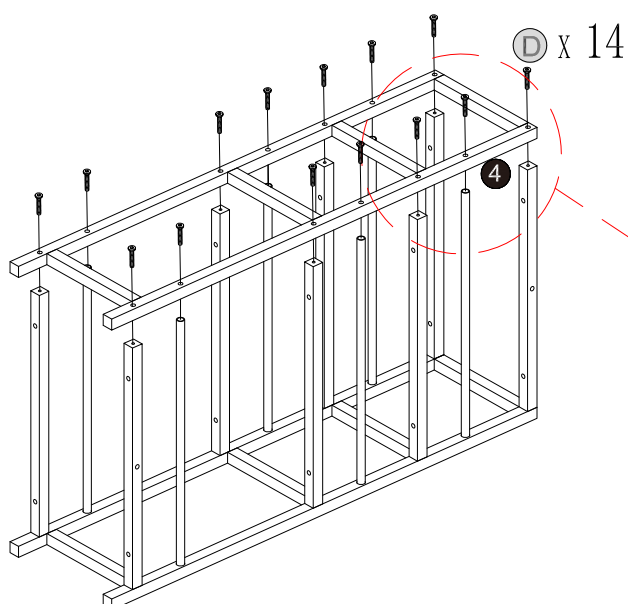

Step5:

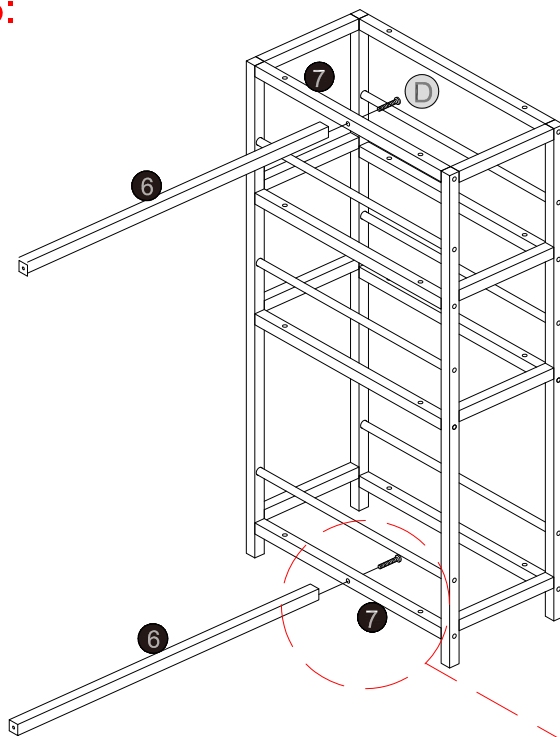


(D) M6*35mm




2pcs

(F) 4 mm

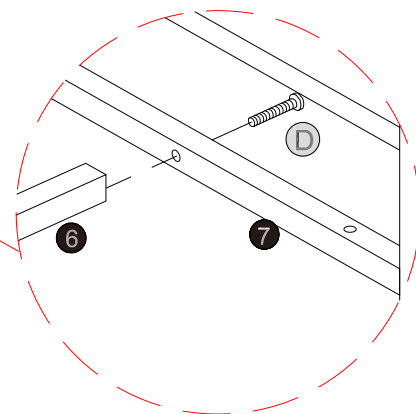

Step6:

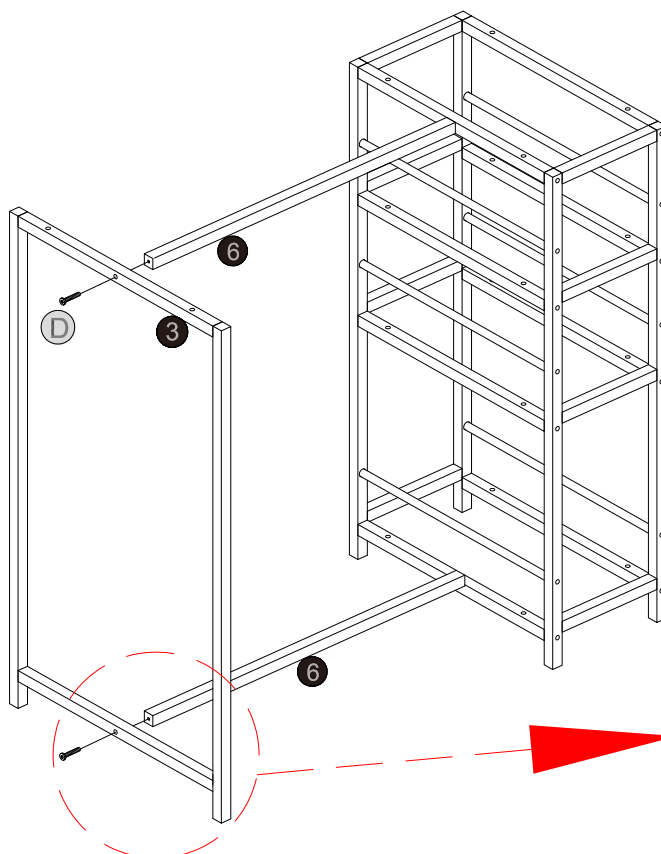


(D) M6*35mm




2pcs

(F) 4 mm

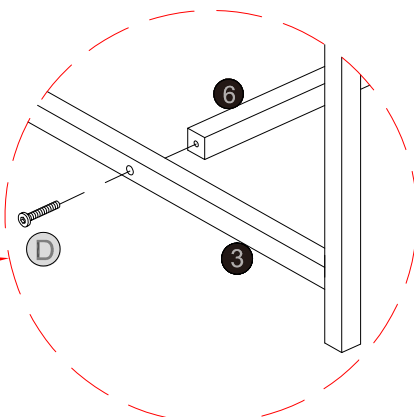

Step7:

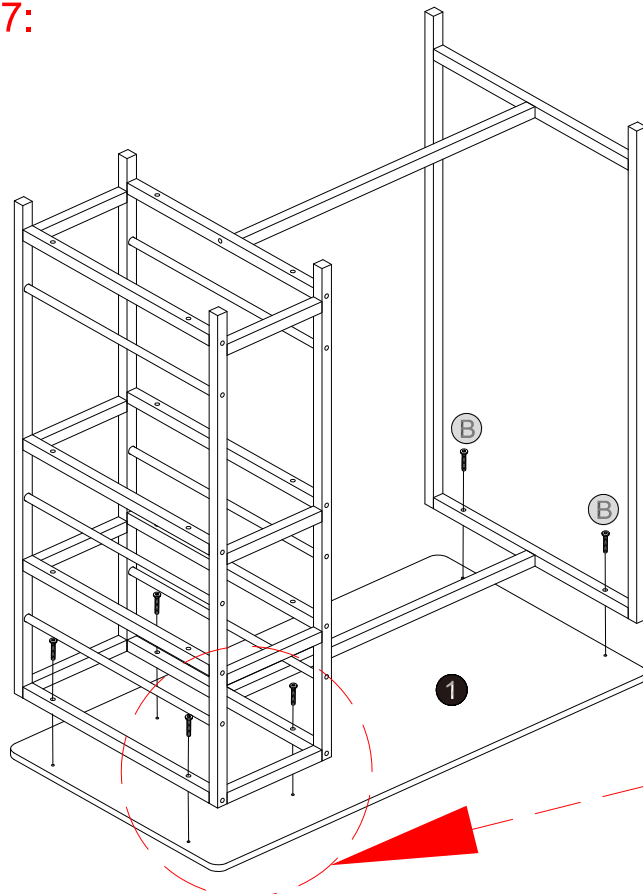


(B) M6*28mm



6pcs

(F) 4 mm

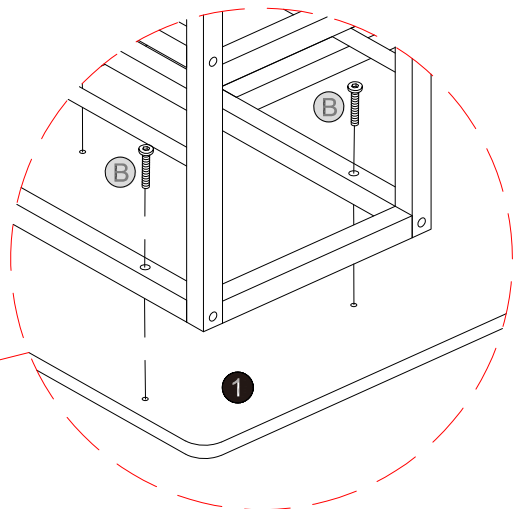


Step8:

(B) M6*28mm





4pcs

(F) 4 mm

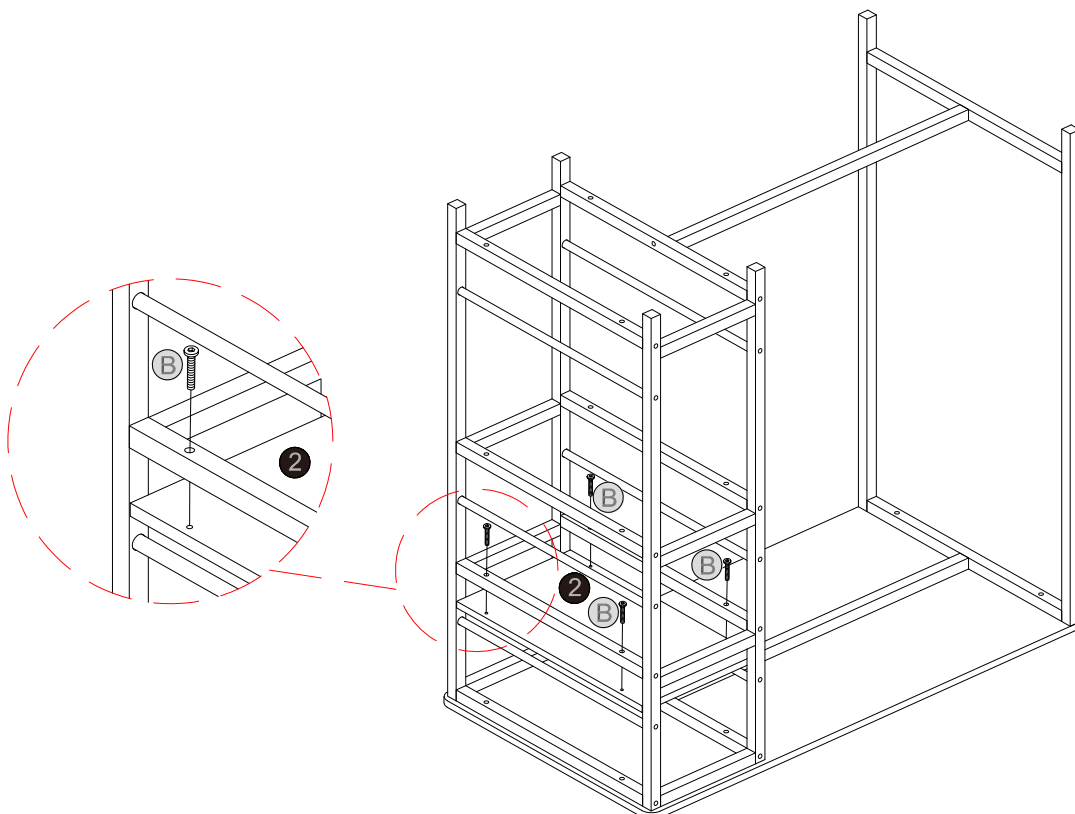

Step9:

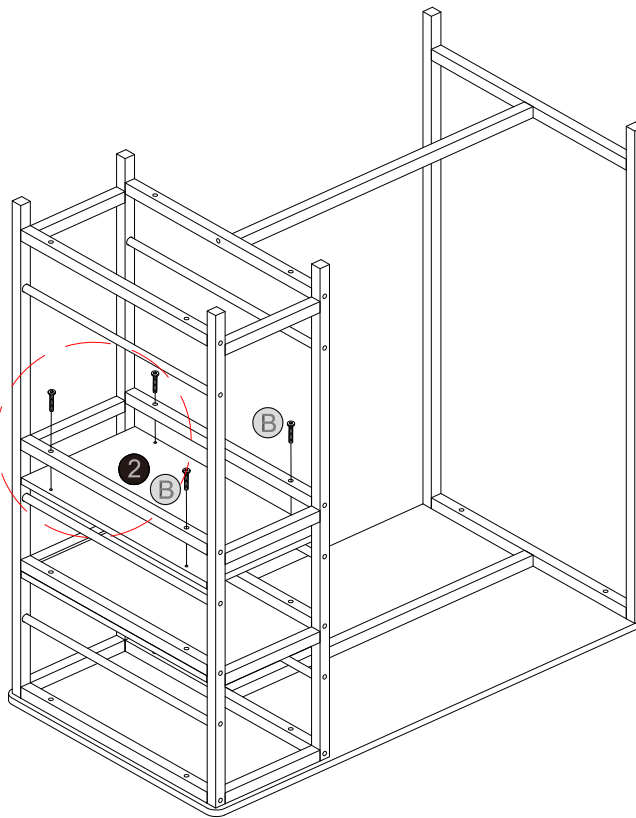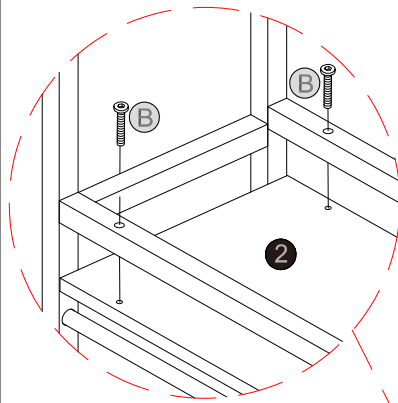

(B) M6*28mm



4pcs

(F) 4 mm





Step10:

(B) M6*28mm





4pcs

(F) 4 mm

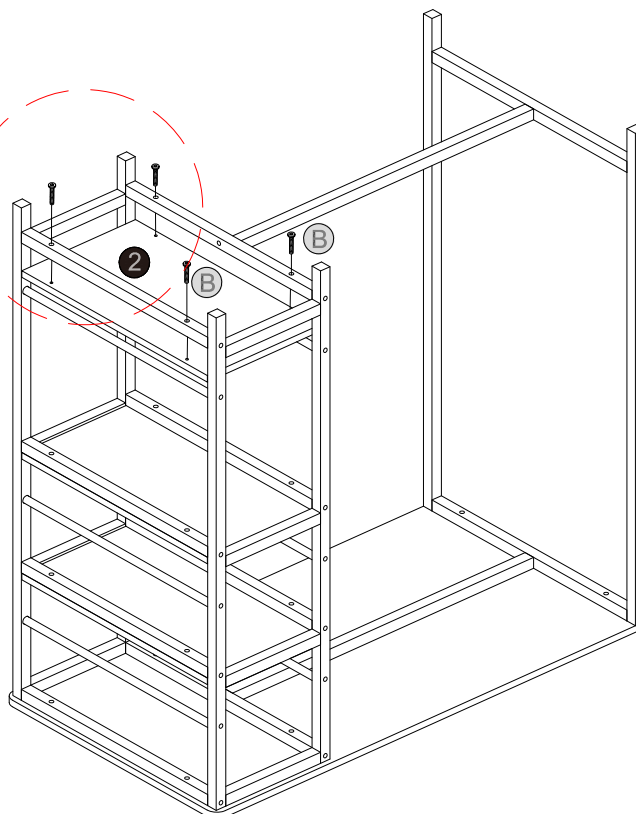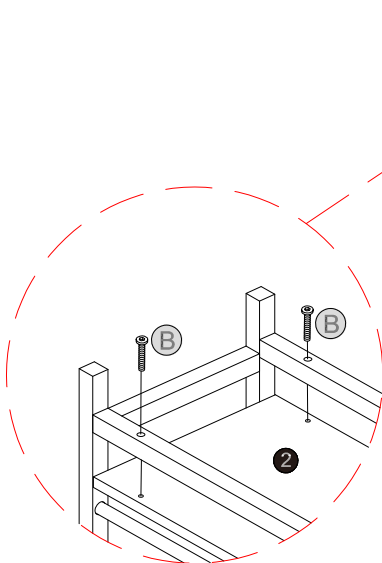

Step11:

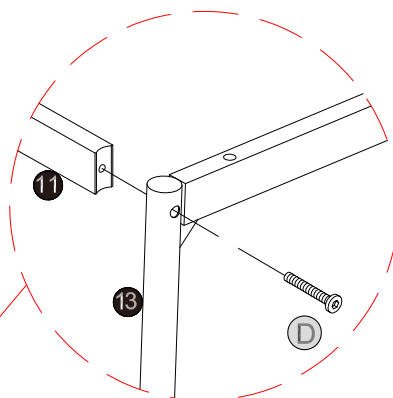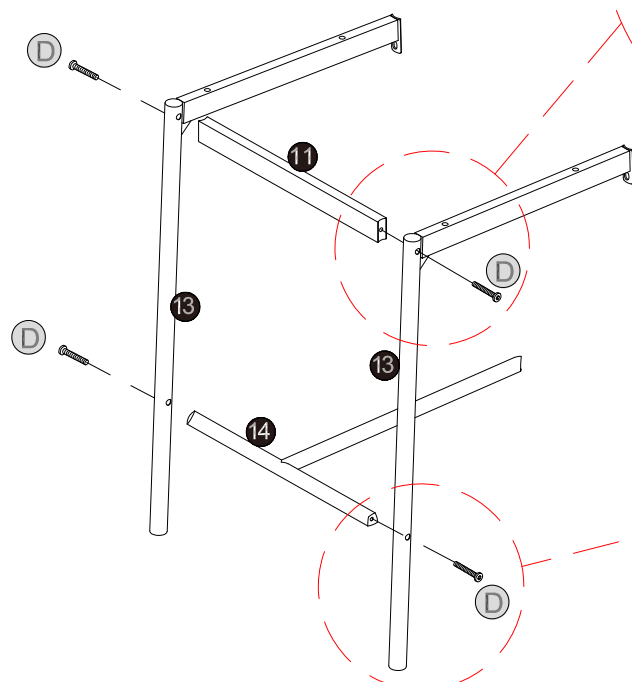


(D) M6*35mm





8pcs

(F) 4 mm

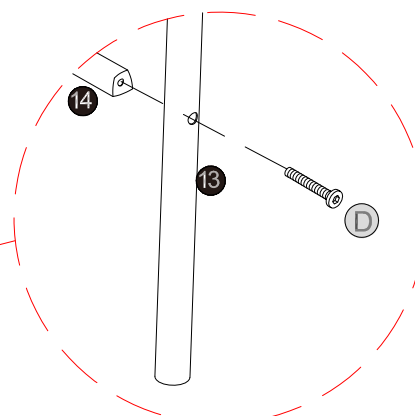

x2

Step12:

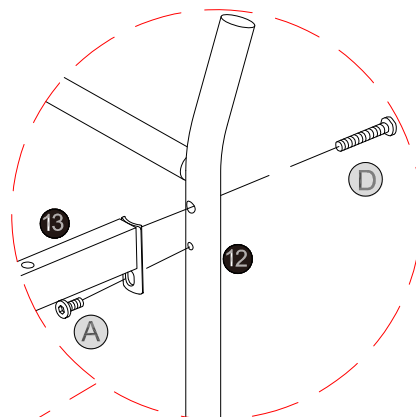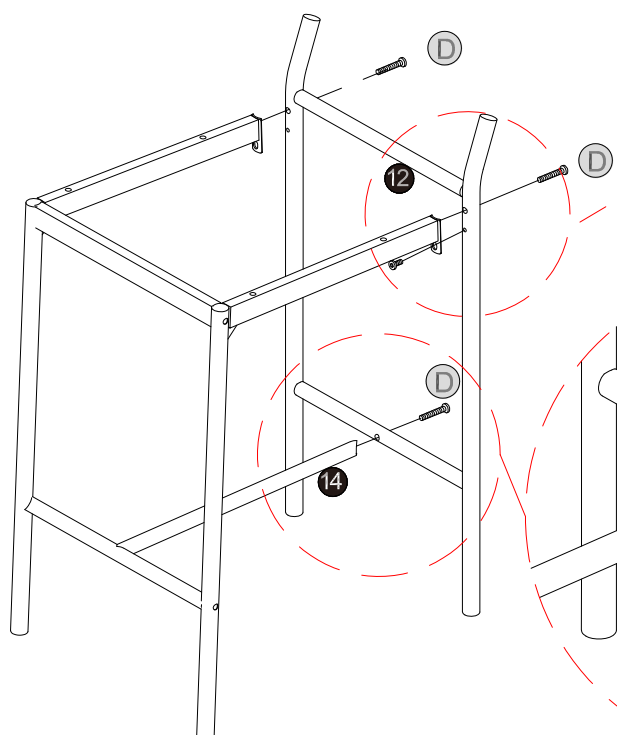

(A) M6*12mm




4pcs

(D) M6*35mm




6pcs

(F) 4 mm

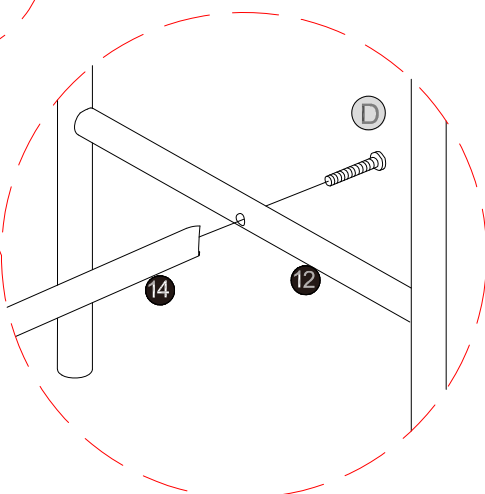

x2

Step13:

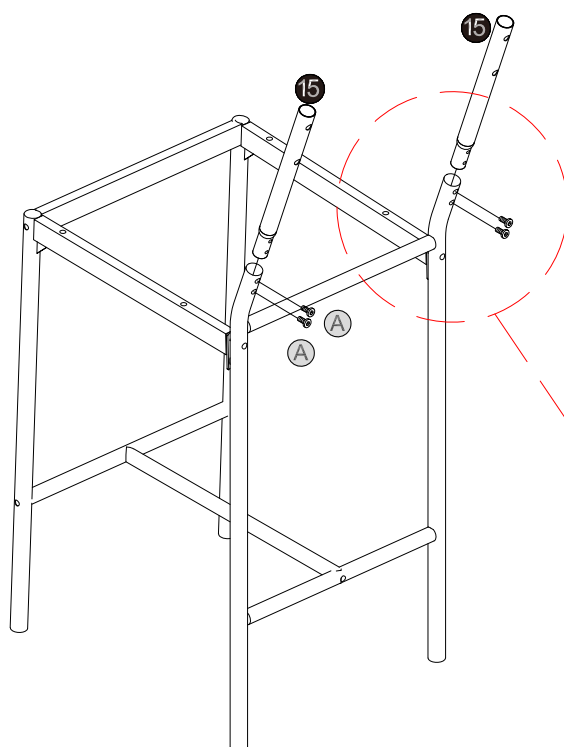


(A) M6*12mm



8pcs


(F) 4 mm

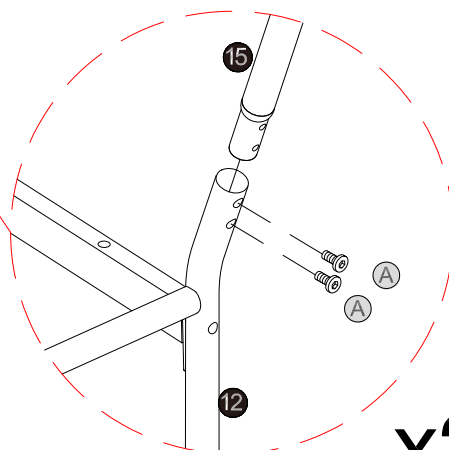

x2

Step14:

Note: Please use C screws to install the chair backrest.
Using the wrong screws will cause damage to the backrest!

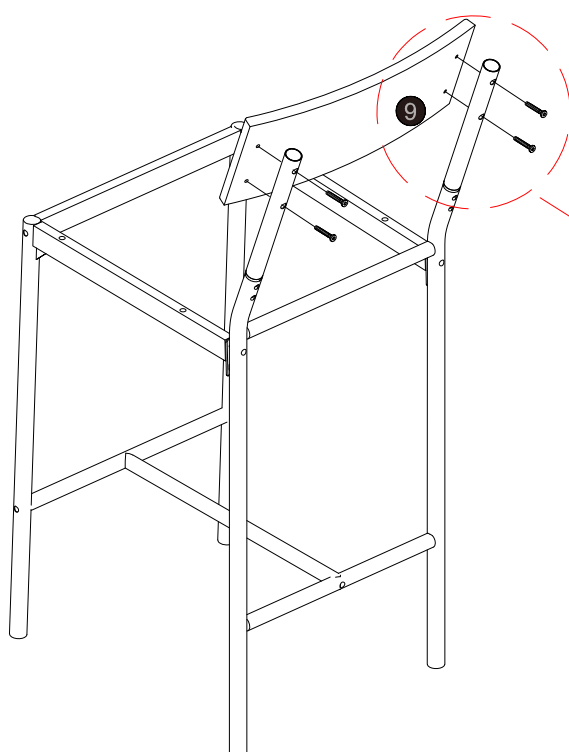


(C) M6*30mm




8pcs

(F) 4 mm

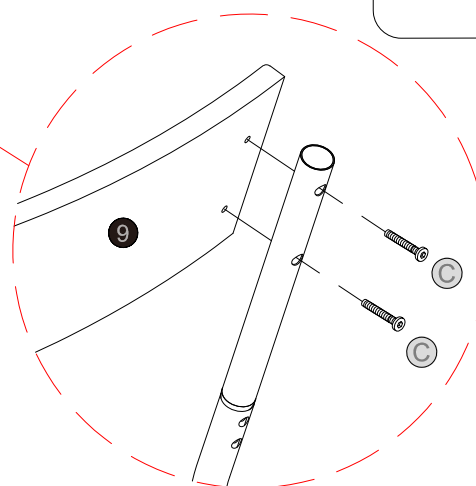

x2




Step15:

Ⓔ M6*45mm




8pcs

Ⓕ 4 mm

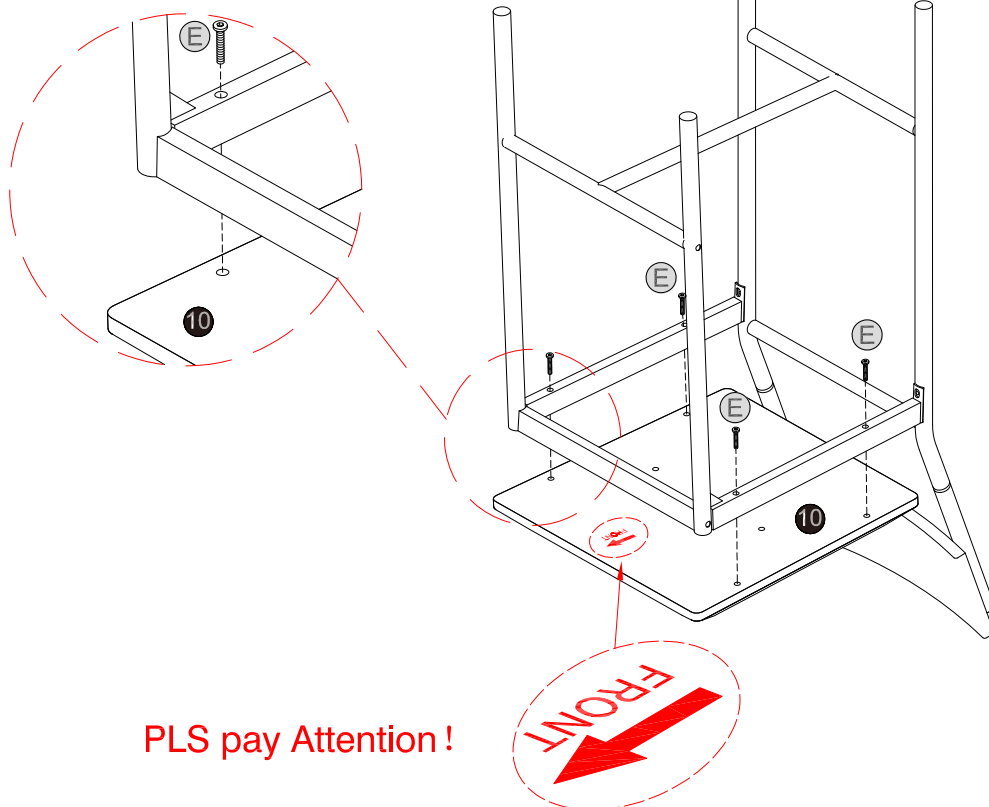

x2

Step16:

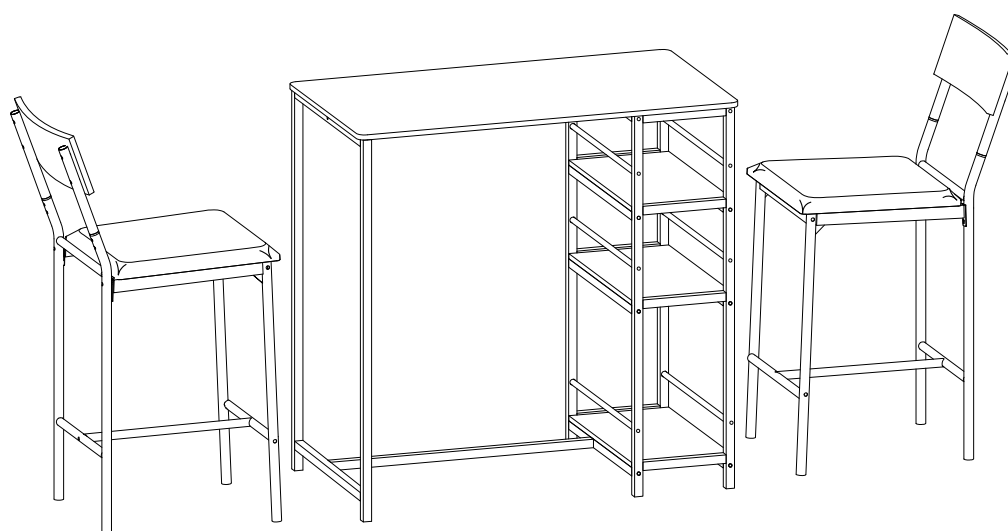

Note:Pls check and tighten all screws.