

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromazďování instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу






H Gennyesevés utasítások

Prestige






Polsterbett-Gestoffeerde bed-Tapicerowane łóżko-Tapitate pat-Upholstered bed-Мягкая кровать-ятак kapitone-Letto imbottito-Lit rembourré
Čaluněná postele čaluněné postele kárpitovaný ágy

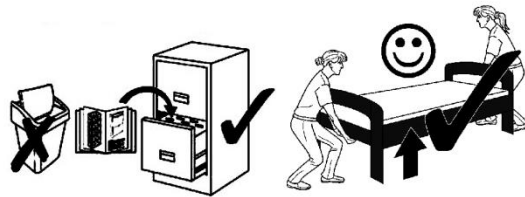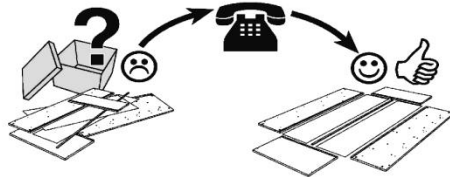






90/120 cm

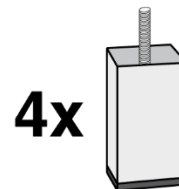
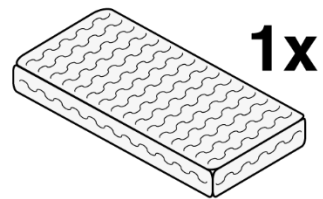
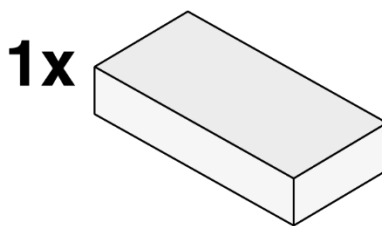
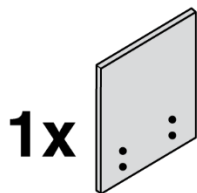


140 cm

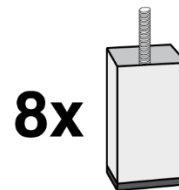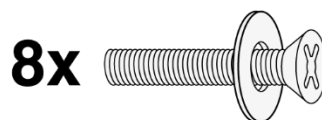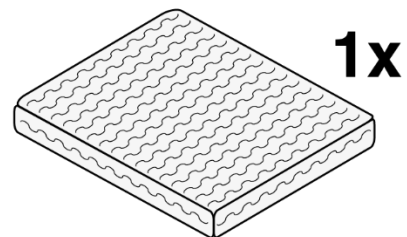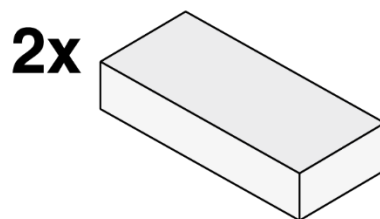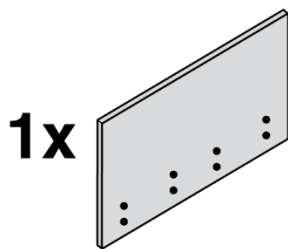

160/180 cm

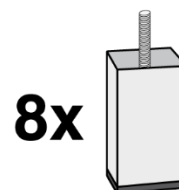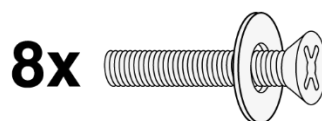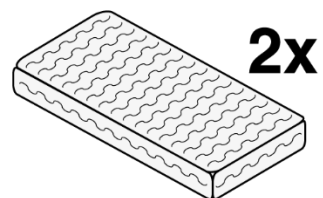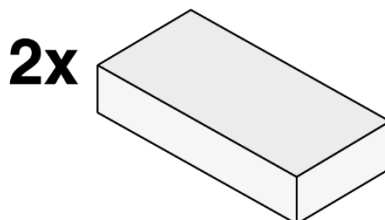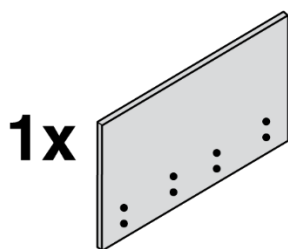

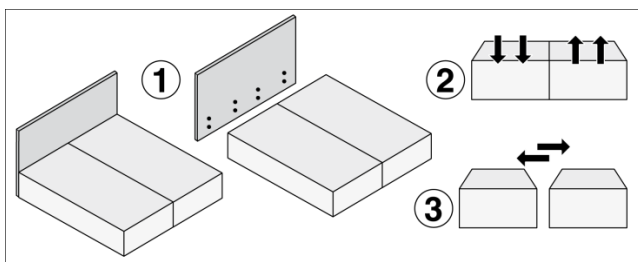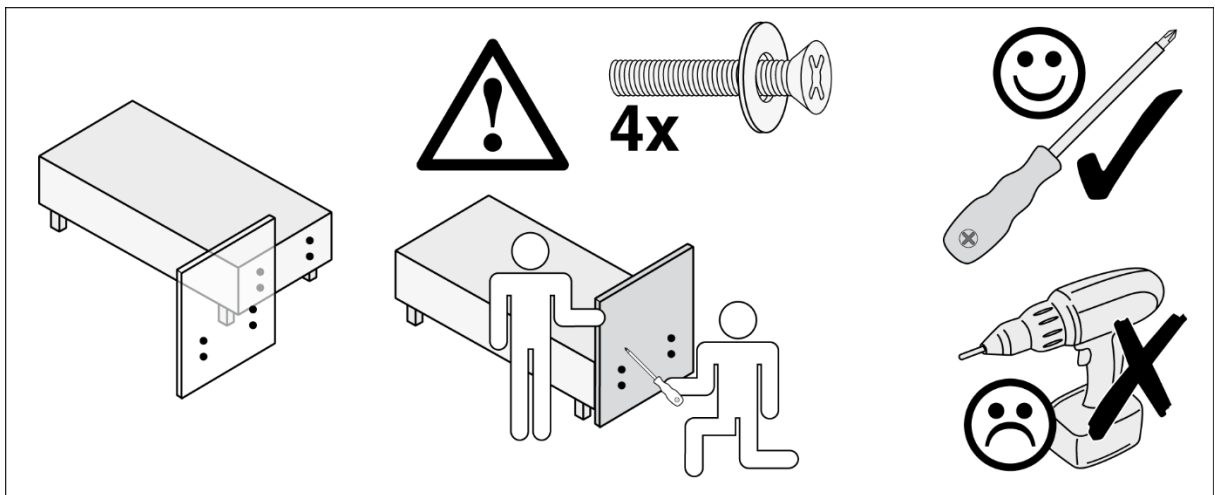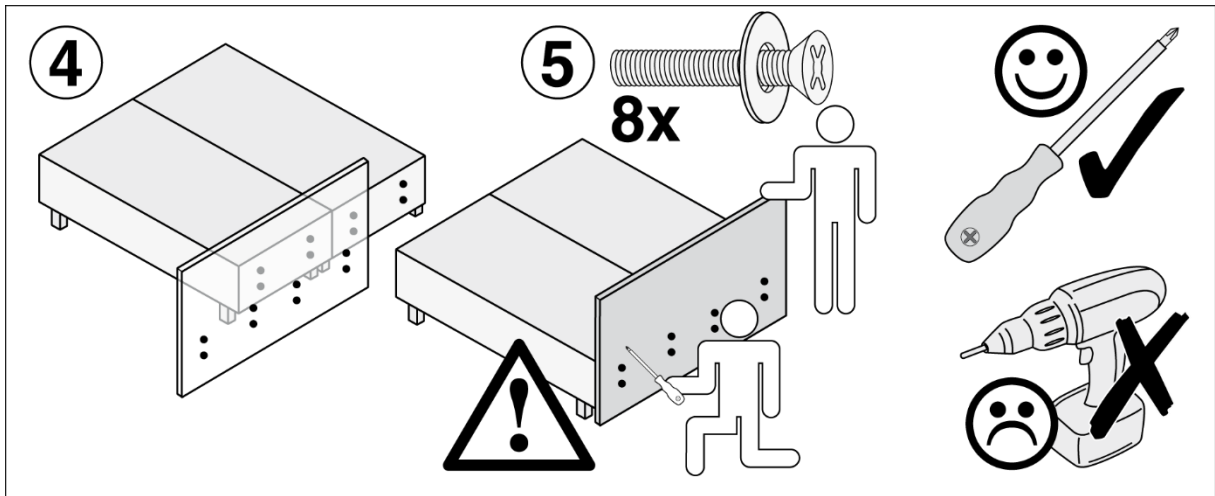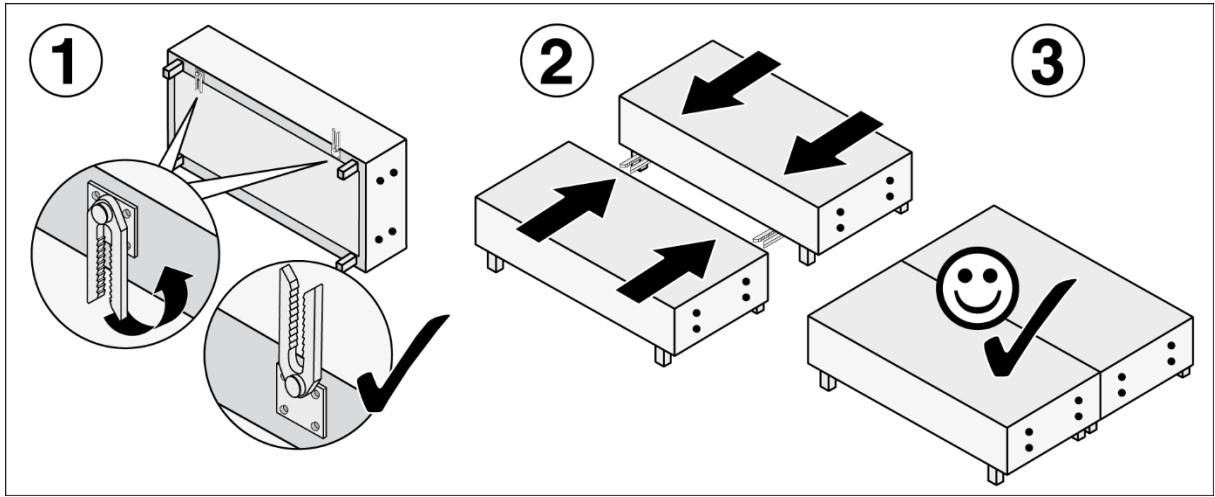

WESTFALIA[®]
Schlafkomfort

Made in Germany

Elastoflex GmbH
Löhner Str. 123
32584 Löhne / Germany