

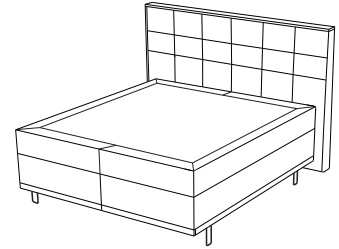


- |                                  |                               |
|----------------------------------|-------------------------------|
| (D) AUFBAUANLEITUNG              | (GB) ASSEMBLY INSTRUCTIONS    |
| (NL) HANDLEIDING VOOR DE MONTAGE | (PL) INSTRUKCJA MONTAŻU       |
| (TR) MONTAJ TALIMATI             | (RU) Инструкция по монтажу    |
| (RO) INSTRUCTIUNI DE ASAMBLARE   | (I) PROCEDURA DI ASSEMBLAGGIO |
| (F) INSTRUCTION D'ASSEMBLAGE     | (SK) POKYNY K MONTÁŽI         |
| (CZ) POKYNY K MONTÁŽI            | (HU) KÖZGYŰLÉS UTASÍTÁSOK     |
| (BG) ИНСТРУКЦИИ ЗА МОНТАЖ        | (SLO) NAVODILA ZA MONTAŽO     |
| (HR) NAPUTCI ZA MONTAŽU          | (S) MONTERINGSANVISNING       |
| (E) INSTRUCCIONES DE MONTAJE     | (LT) DIEGIMO INSTRUKCIJOS     |

# BOXSPRING LINEA 160/180/200x200

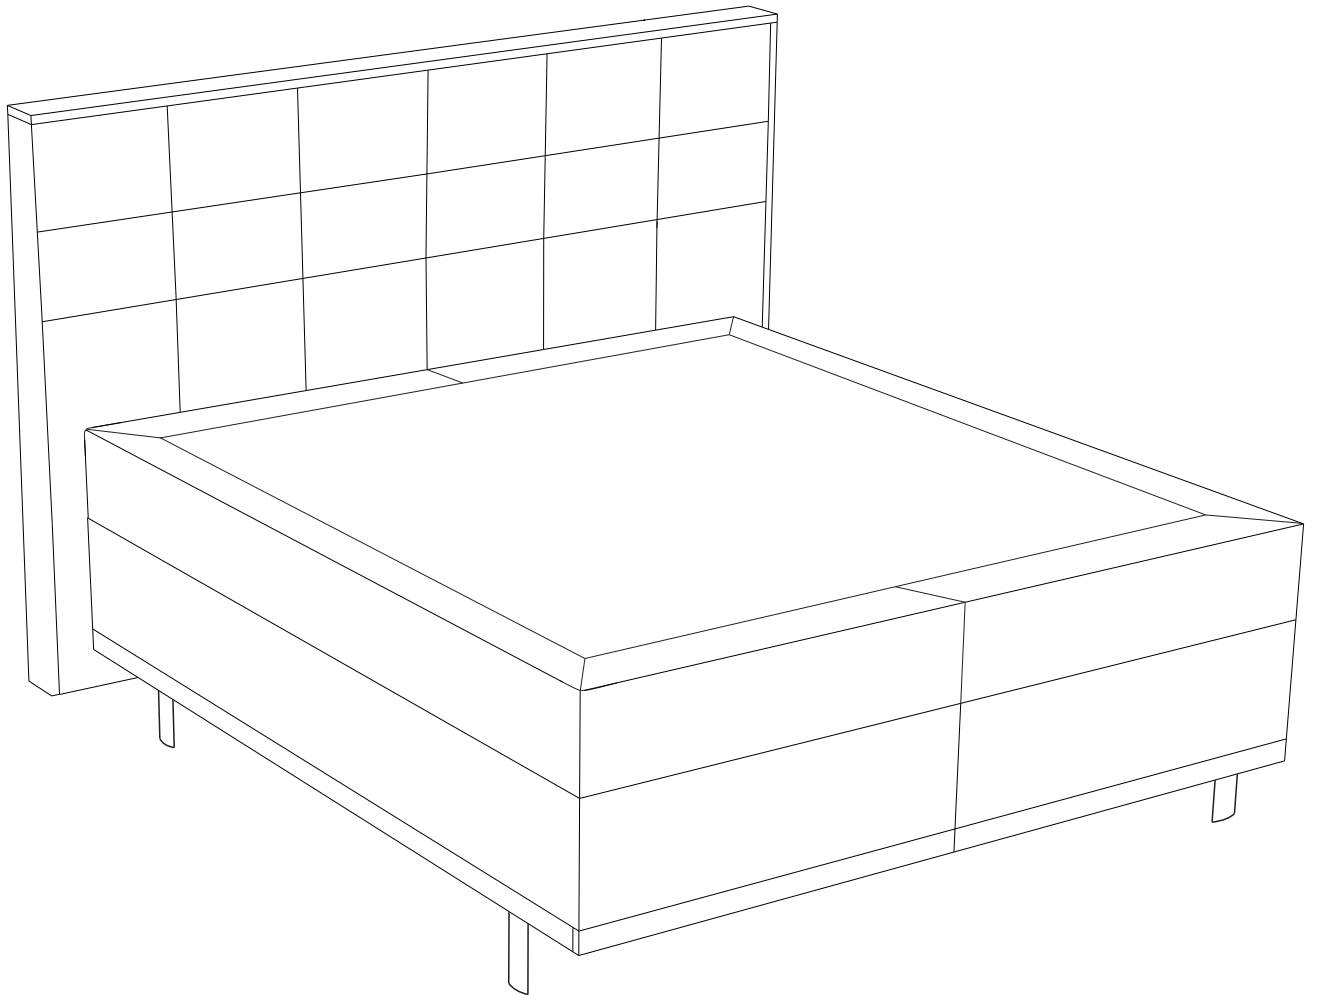

- |                         |                |                |                |                |                          |                |
|-------------------------|----------------|----------------|----------------|----------------|--------------------------|----------------|
| <b>A</b><br>x6<br>M8X80 | <b>B</b><br>x6 | <b>C</b><br>x6 | <b>D</b><br>x1 | <b>E</b><br>x8 | <b>F</b><br>x8<br>H=16cm | <b>G</b><br>x8 |
|-------------------------|----------------|----------------|----------------|----------------|--------------------------|----------------|




<b>PENSEZ AU TRI !</b> ENSEMBLE RÉDUISONS L'IMPACT ENVIRONNEMENTAL DES EMBALLAGES	ÉLÉMENT(S) PLASTIQUE(S)  À JETER	ÉLÉMENT(S) MÉTAL(S) CARTON(S) PAPIER(S)  À RECYCLER





- Ⓛ AUFBAUANLEITUNG
- ⓃL HANDLEIDING VOOR DE MONTAGE
- ⓉR MONTAJ TALIMATI
- ⓇO INSTRUCTIUNI DE ASAMBLARE
- ⓕ INSTRUCTION D'ASSEMBLAGE
- ⒸZ POKYNY K MONTÁŽI
- ⓅG ИНСТРУКЦИИ ЗА МОНТАЖ
- ⓇR NAPUTCI ZA MONTAŽU
- ⓔ INSTRUCCIONES DE MONTAJE


- ⓖB ASSEMBLY INSTRUCTIONS
- ⓅL INSTRUKCJA MONTAŻU
- ⓇU Инструкция по монтажу
- ⓇI PROCEDURA DI ASSEMBLAGGIO
- ⓈK POKYNY K MONTÁŽI
- ⓇU KÖZGYŰLÉS UTASÍTÁSOK
- ⓇLO NAVODILA ZA MONTAŽO
- Ⓢ MONTERINGSANVISNING
- ⓁT DIEGIMO INSTRUKCIJOS

## BOXSPRING LINEA 160/180/200x200

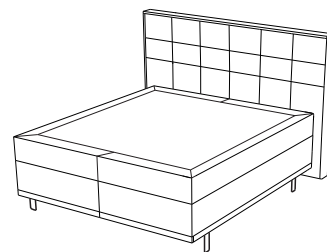




Colli	Teil
1/4	1+4a
2/4	2
3/4	3
4/4	4+4

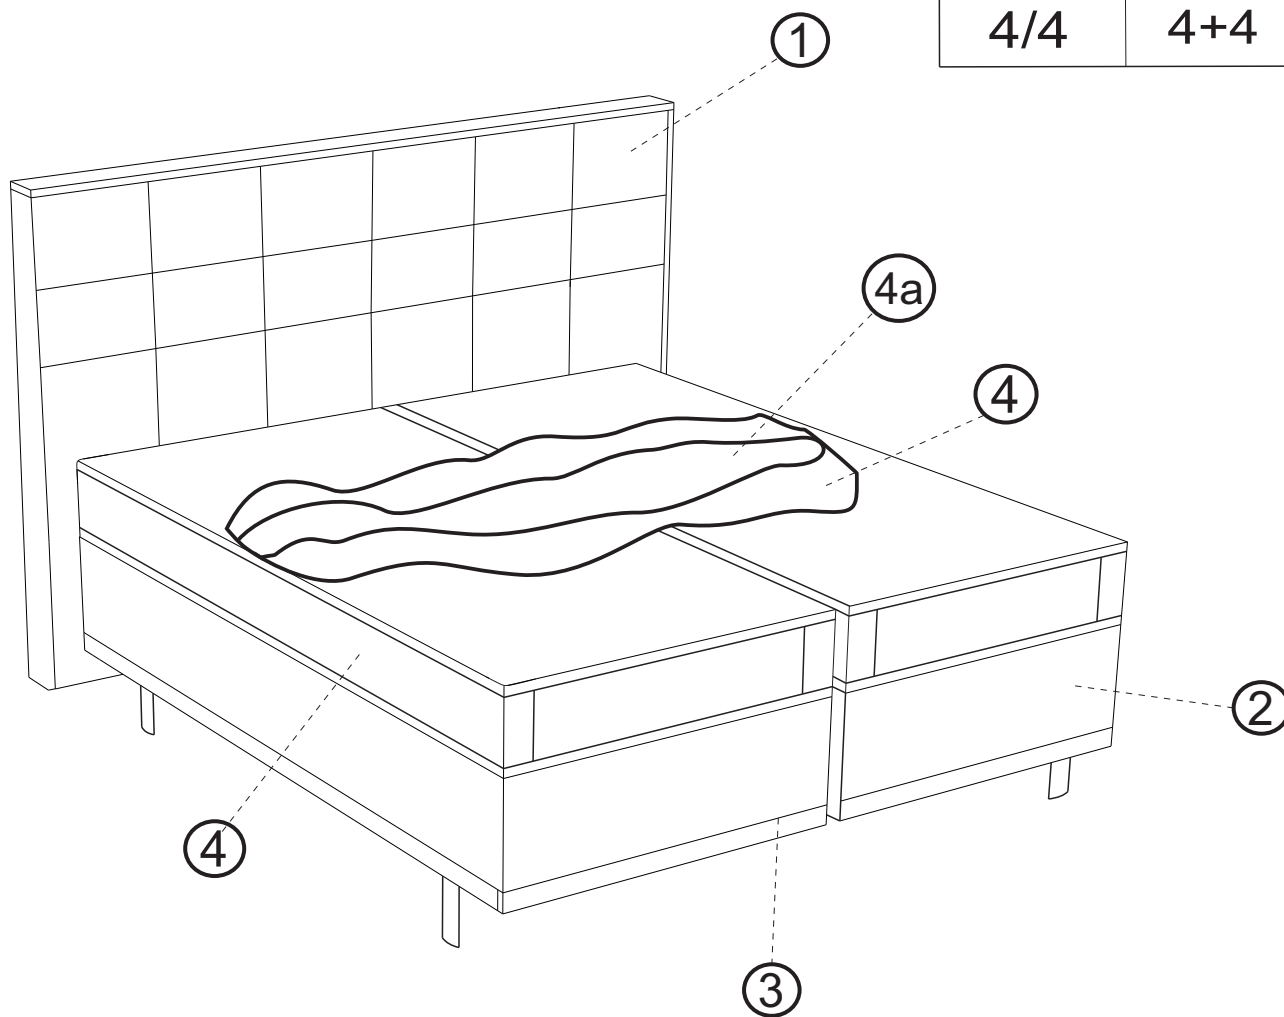


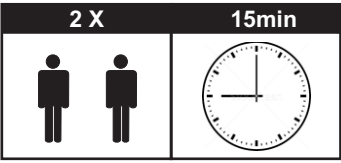

- |                                  |                               |
|----------------------------------|-------------------------------|
| (D) AUFBAUANLEITUNG              | (GB) ASSEMBLY INSTRUCTIONS    |
| (NL) HANDLEIDING VOOR DE MONTAGE | (PL) INSTRUKCJA MONTAŻU       |
| (TR) MONTAJ TALIMATI             | (RU) Инструкция по монтажу    |
| (RO) INSTRUCTIUNI DE ASAMBLARE   | (I) PROCEDURA DI ASSEMBLAGGIO |
| (F) INSTRUCTION D'ASSEMBLAGE     | (SK) POKYNY K MONTÁŽI         |
| (CZ) POKYNY K MONTÁŽI            | (HU) KÖZGYŰLÉS UTASÍTÁSOK     |
| (BG) ИНСТРУКЦИИ ЗА МОНТАЖ        | (SLO) NAVODILA ZA MONTAŽO     |
| (HR) NAPUTCI ZA MONTAŽU          | (S) MONTERINGSANVISNING       |
| (E) INSTRUCCIONES DE MONTAJE     | (LT) DIEGIMO INSTRUKCIJOS     |

# BOXSPRING LINEA 160/180/200x200




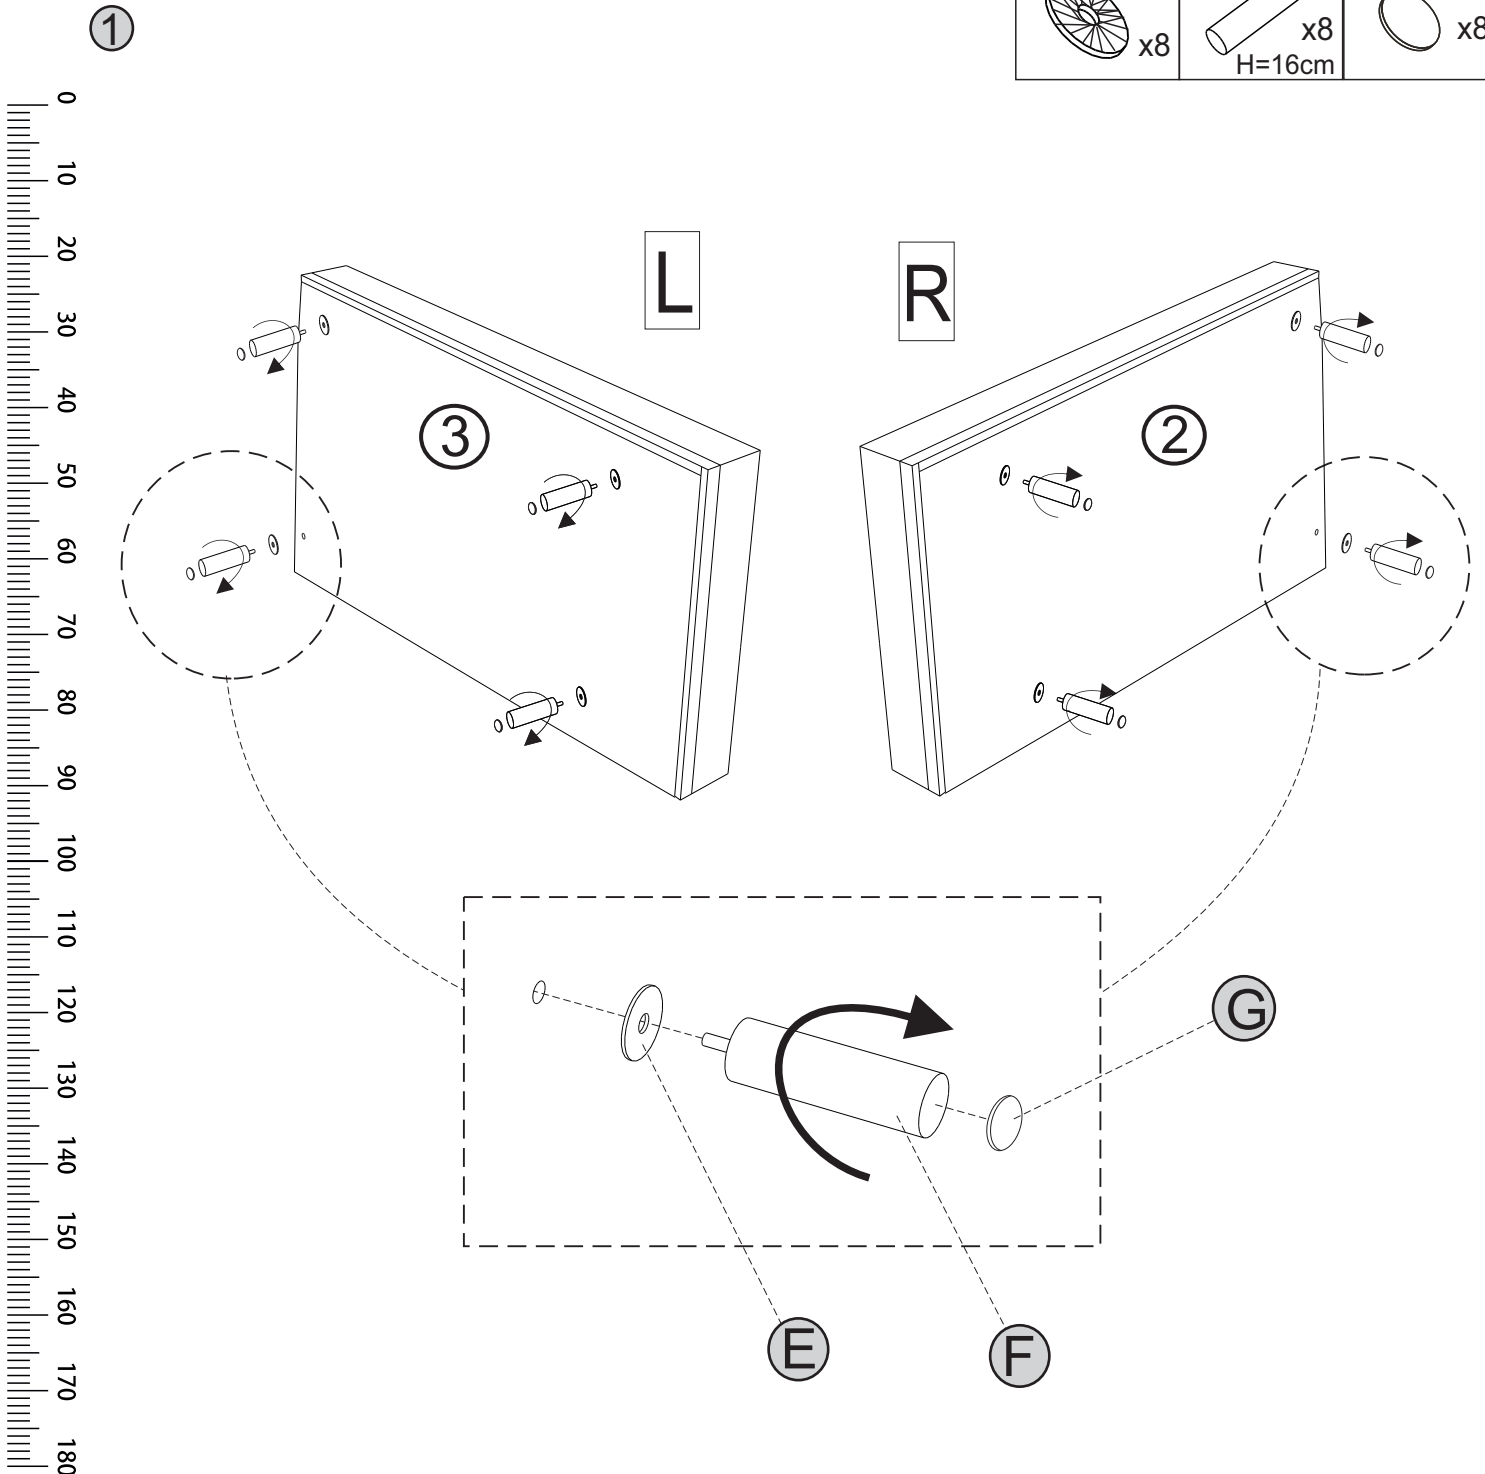

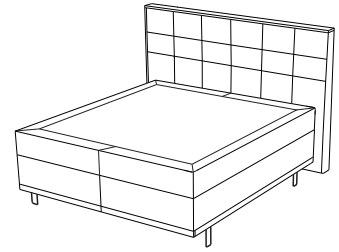


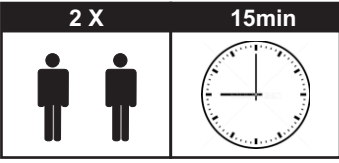


- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) NAPUTCI ZA MONTAŽU
- (E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) KÖZGYŰLÉS UTASÍTÁSOK
- (SLO) NAVODILA ZA MONTAŽO
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS

# BOXSPRING LINEA 160/180/200x200

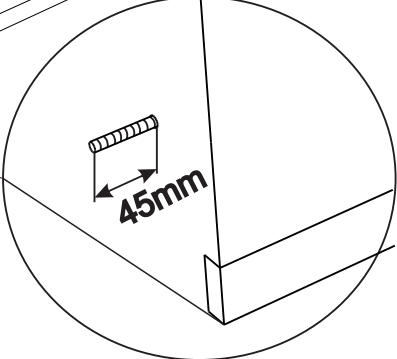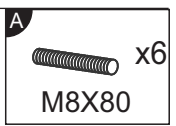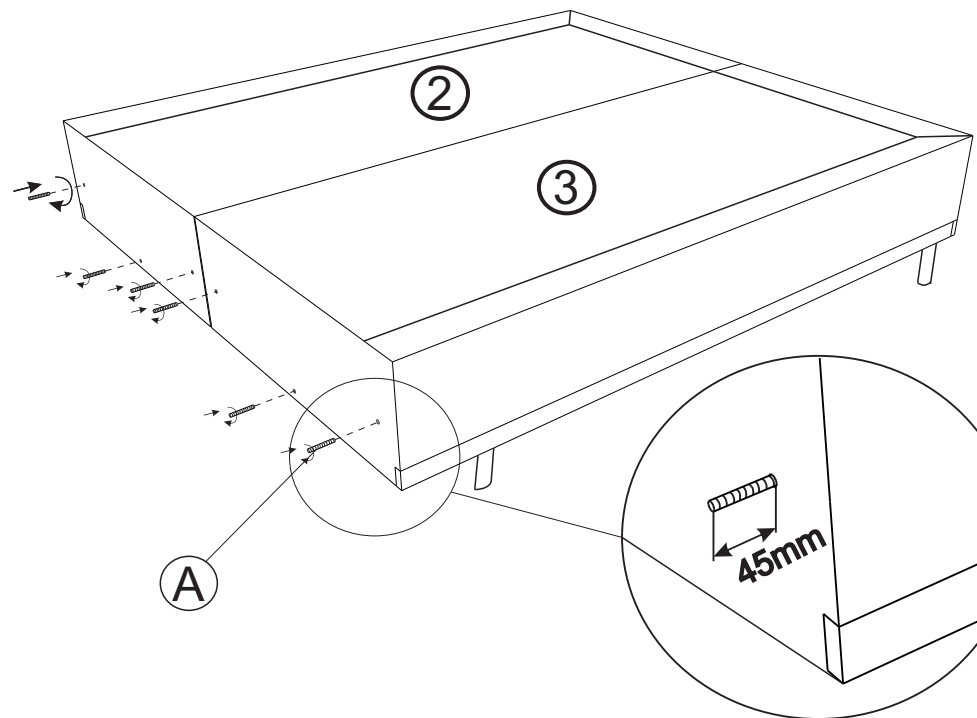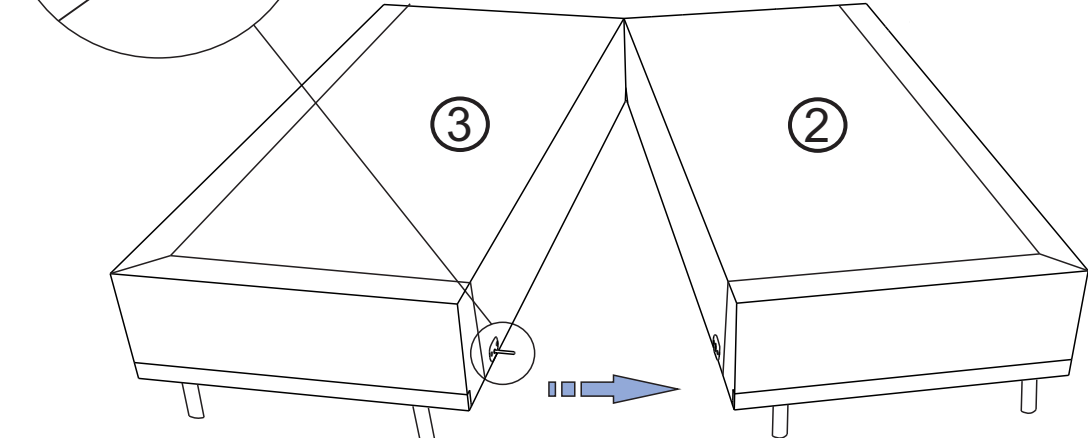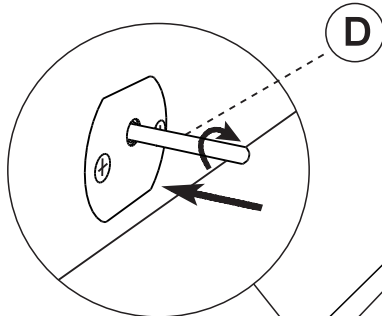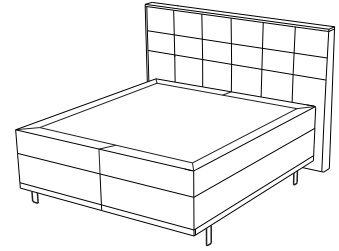


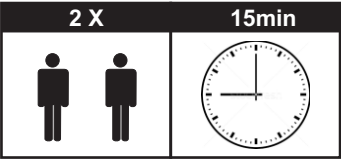



- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) NAPUTCI ZA MONTAŽU
- (E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) KÖZGYŰLÉS UTASÍTÁSOK
- (SLO) NAVODILA ZA MONTAŽO
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS


# BOXSPRING LINEA 160/180/200x200

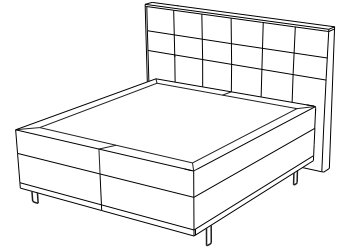


3

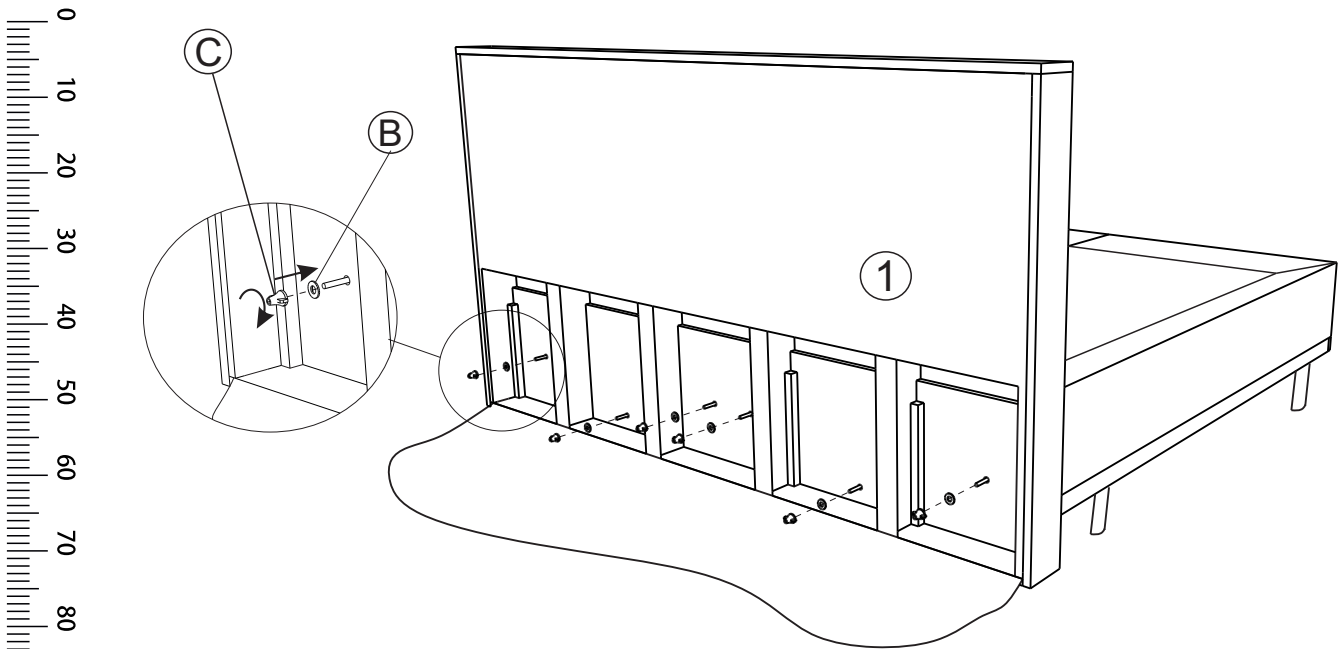

4

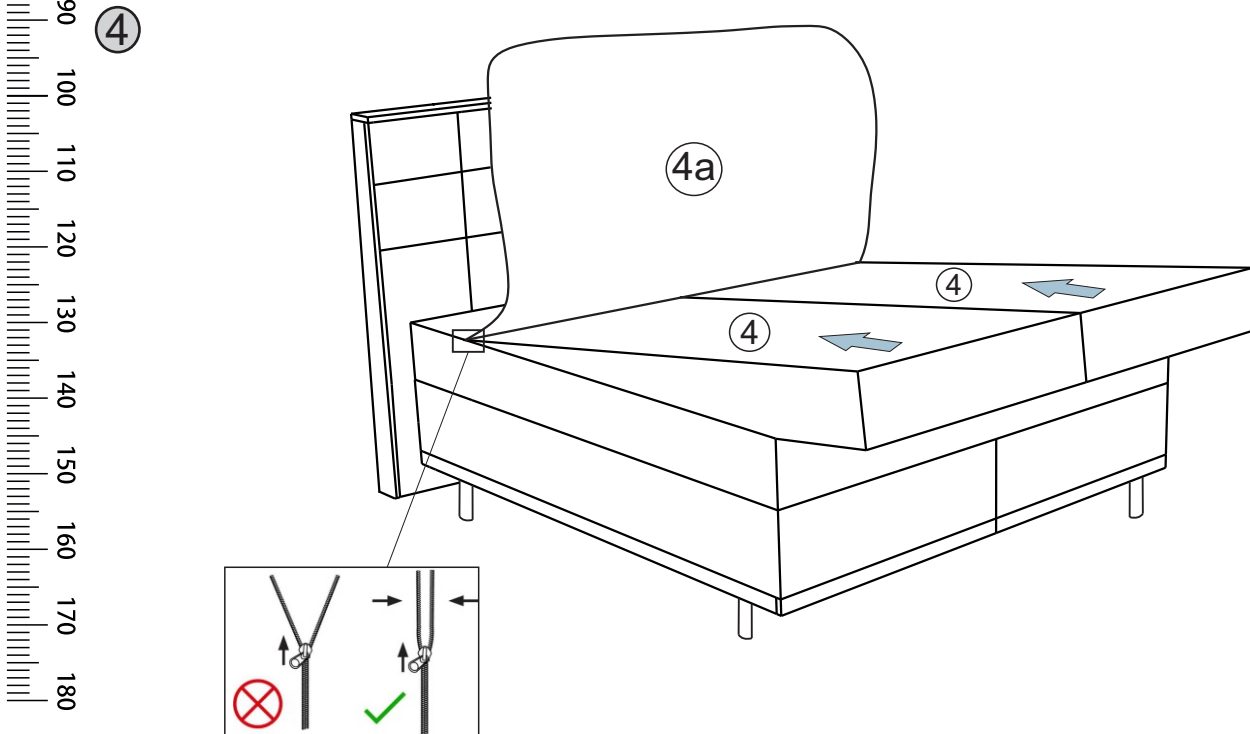

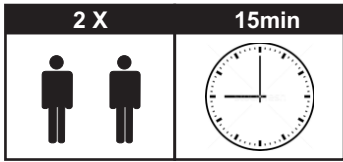

- |                                  |                               |
|----------------------------------|-------------------------------|
| (D) AUFBAUANLEITUNG              | (GB) ASSEMBLY INSTRUCTIONS    |
| (NL) HANDLEIDING VOOR DE MONTAGE | (PL) INSTRUKCJA MONTAŻU       |
| (TR) MONTAJ TALIMATI             | (RU) Инструкция по монтажу    |
| (RO) INSTRUCTIUNI DE ASAMBLARE   | (I) PROCEDURA DI ASSEMBLAGGIO |
| (F) INSTRUCTION D'ASSEMBLAGE     | (SK) POKYNY K MONTÁŽI         |
| (CZ) POKYNY K MONTÁŽI            | (HU) KÖZGYŰLÉS UTASÍTÁSOK     |
| (BG) ИНСТРУКЦИИ ЗА МОНТАЖ        | (SLO) NAVODILA ZA MONTAŽO     |
| (HR) NAPUTCI ZA MONTAŽU          | (S) MONTERINGSANVISNING       |
| (E) INSTRUCCIONES DE MONTAJE     | (LT) DIEGIMO INSTRUKCIJOS     |

## BOXSPRING LINEA 160/180/200x200

