









Inhalt - Contents - Contenu - Inhoud - contenuto - contenido-conteúdo - περιεχόμενο


Beschlagbeutel:


A		B	 15 ohne Rand	C	 8 x 30	D	 8 x
E		F		G		H	 3,5 x 15
I	 0 mm Krop.	J	 9 mm Krop.	K		L	 M4
M		N		O		P	 M6 x 60
Q	 M6 x 12	R	 M4 x 20	S		T	
U	 450mm HD Links	V	 450mm HD rechts	W	 SW 5 SW 4	X	 6,3 x 9
Y	 Kloben 12/13	Z	 M6 x 40	Ä	 12 mm	Ü	 5 x 40
	4 x		4 x		8 x		1 x





Happy 06 930





Schrank 3 Türen

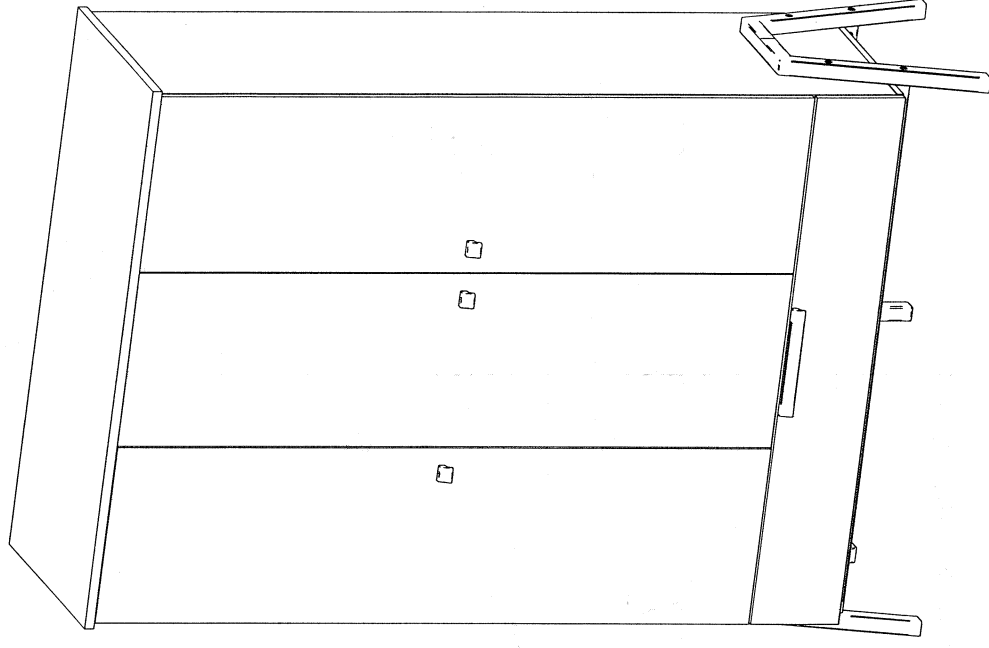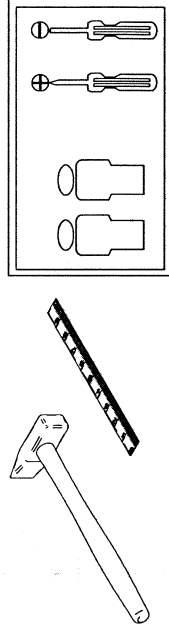


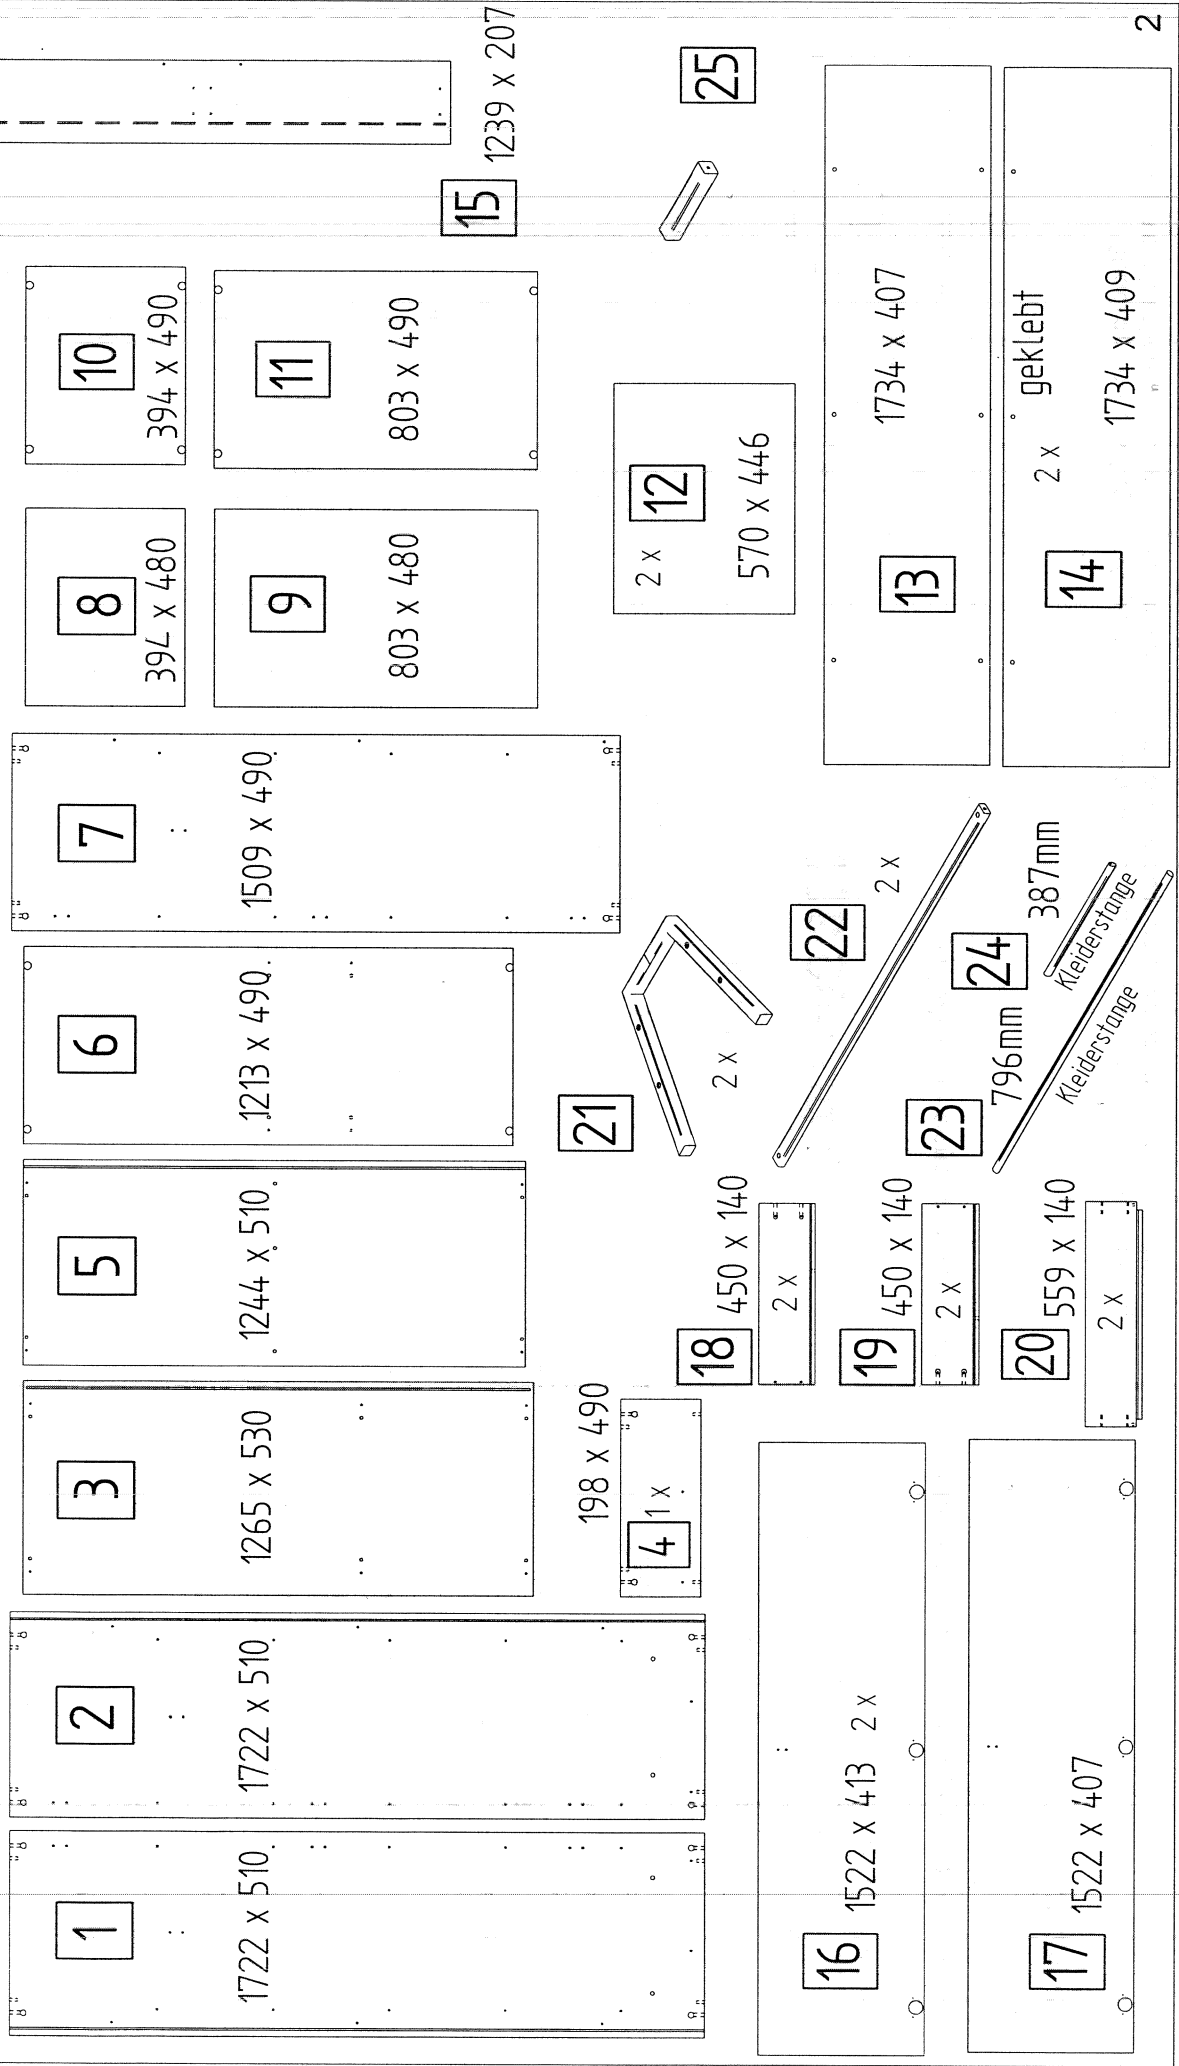


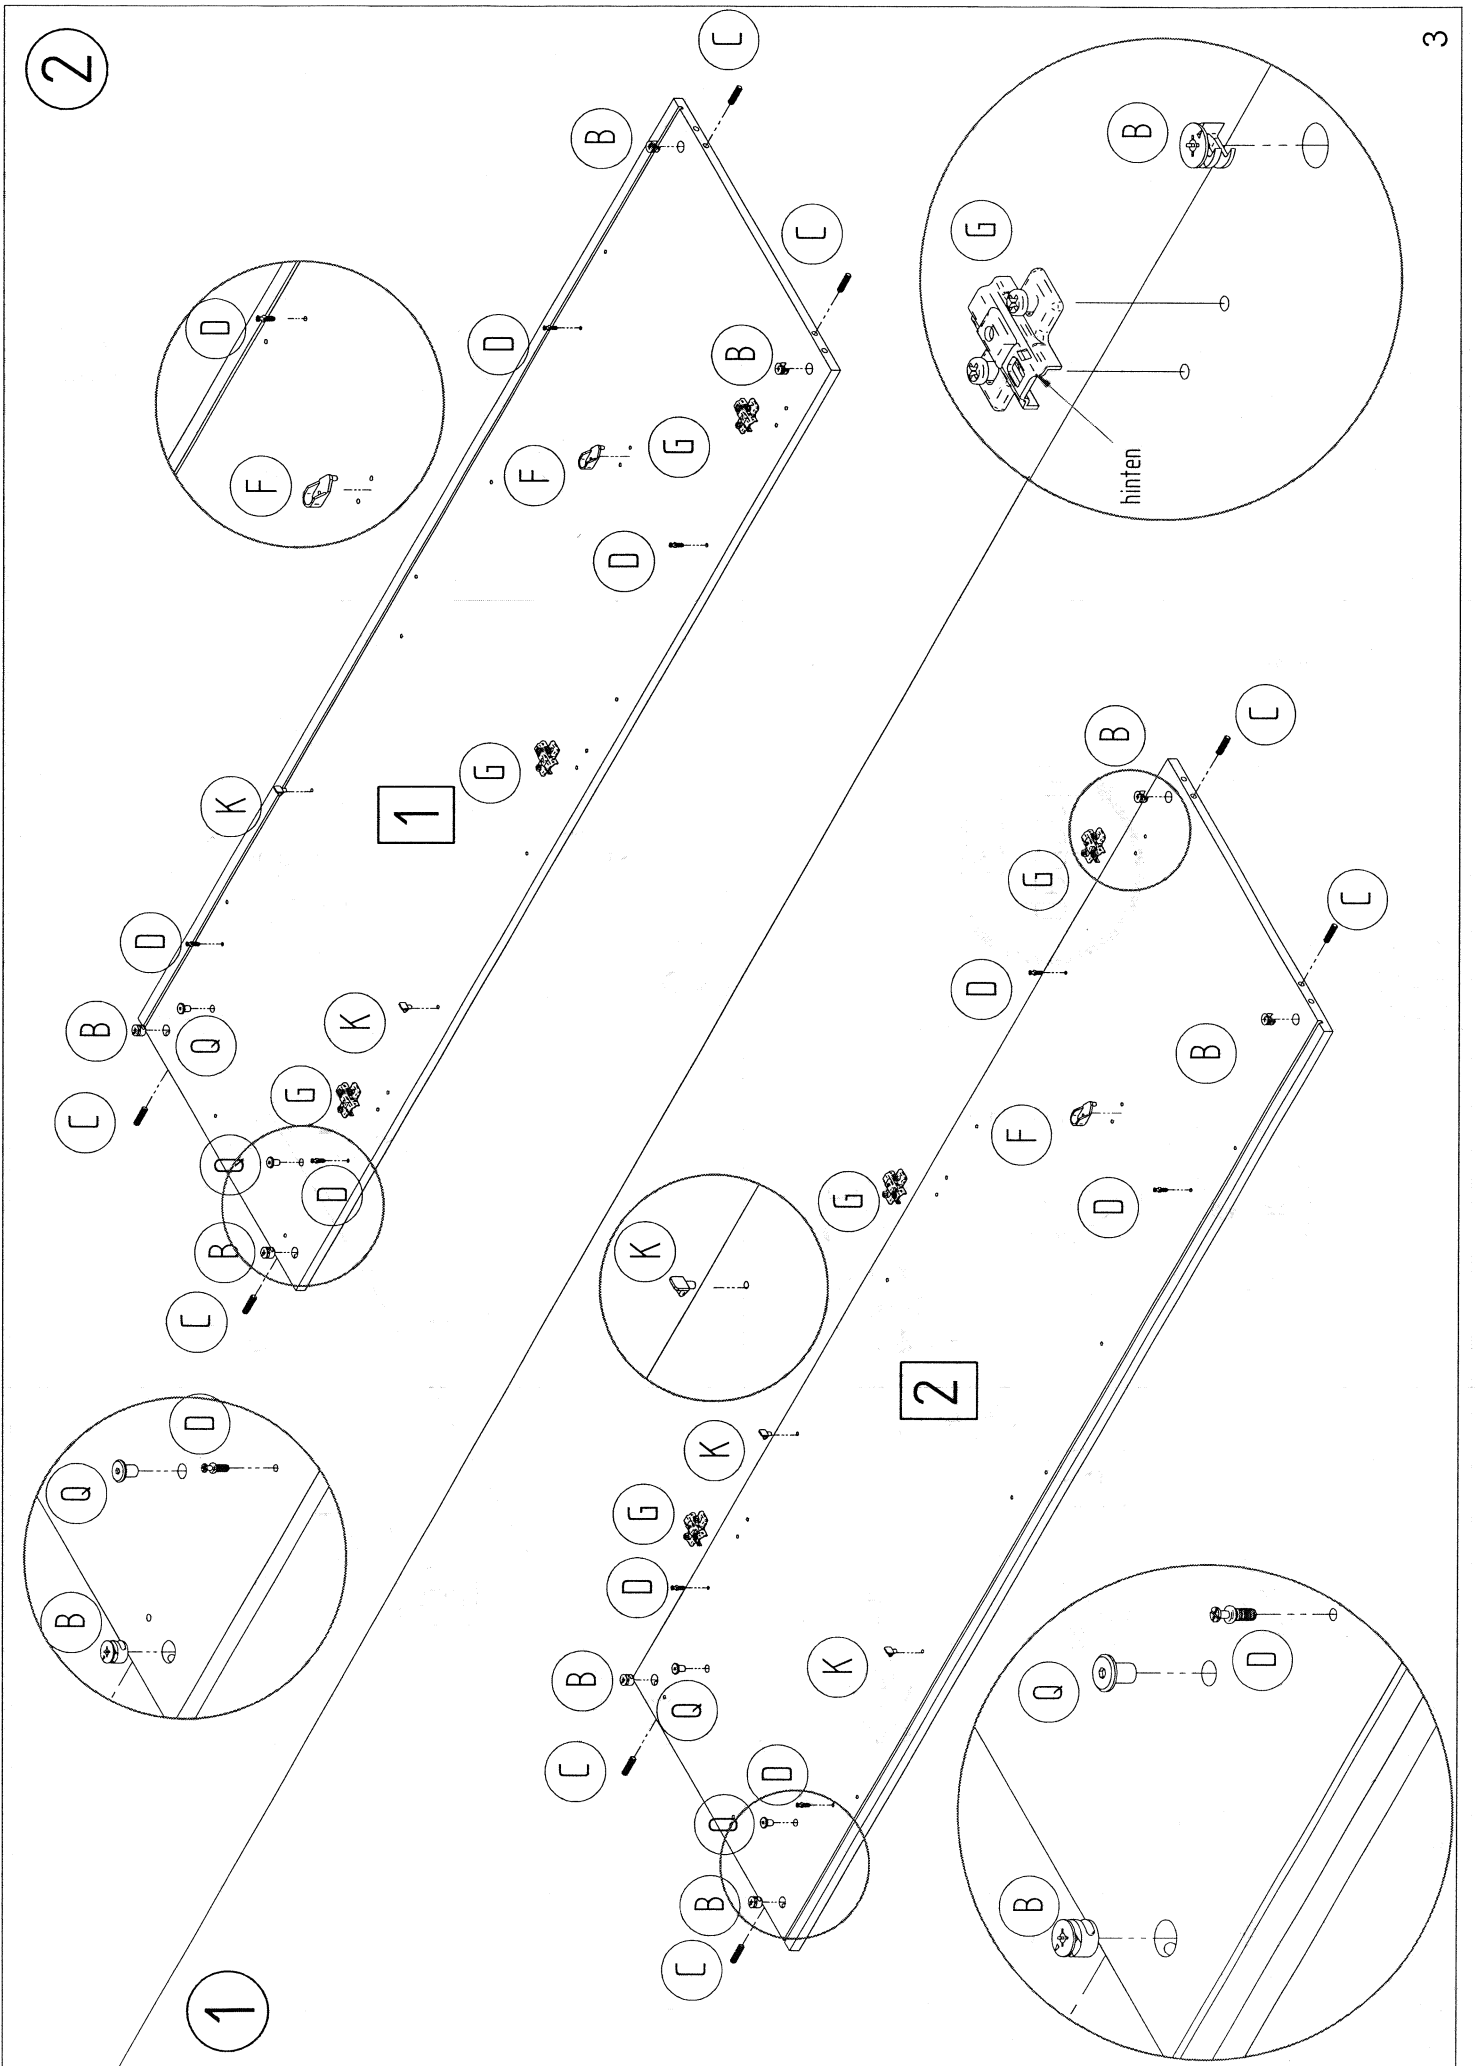

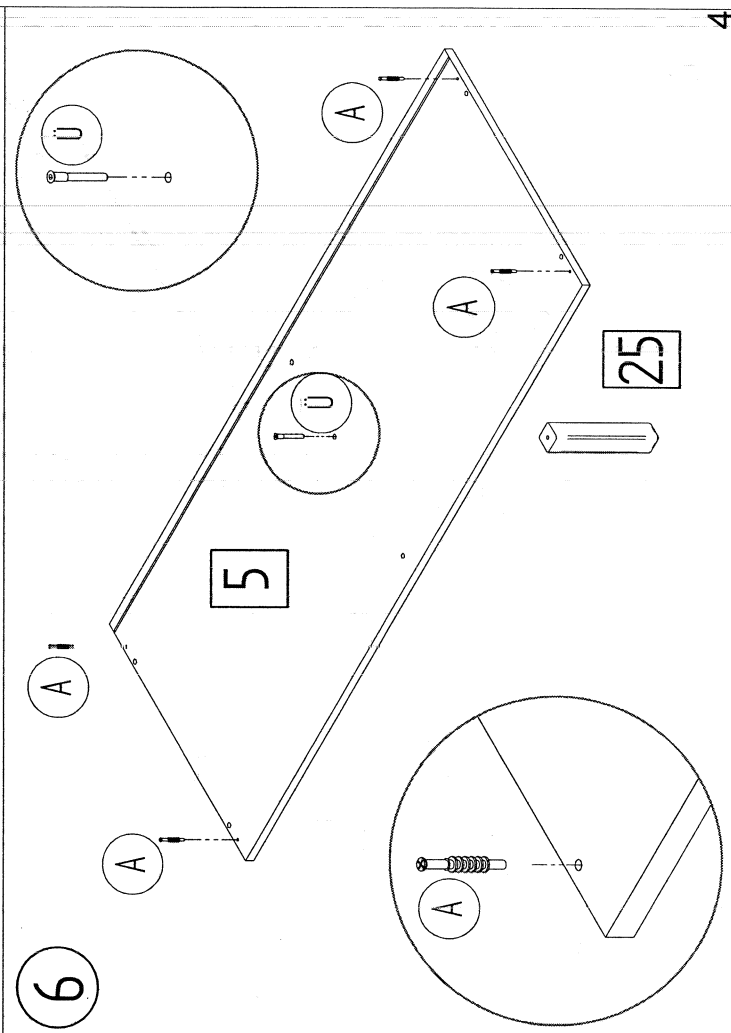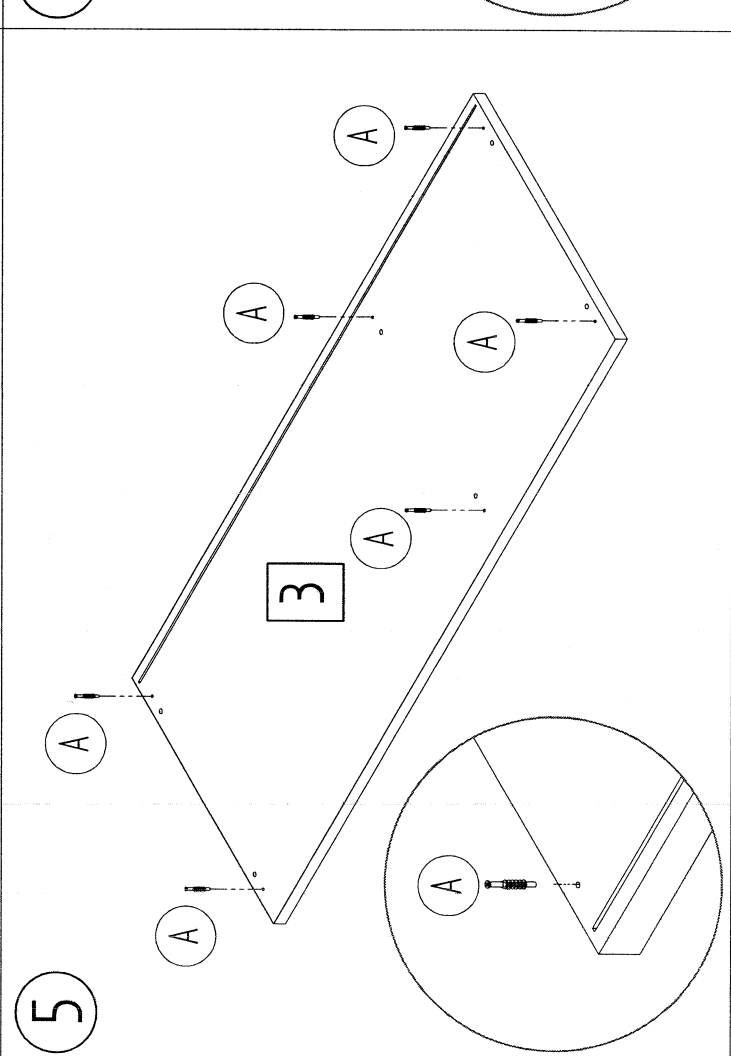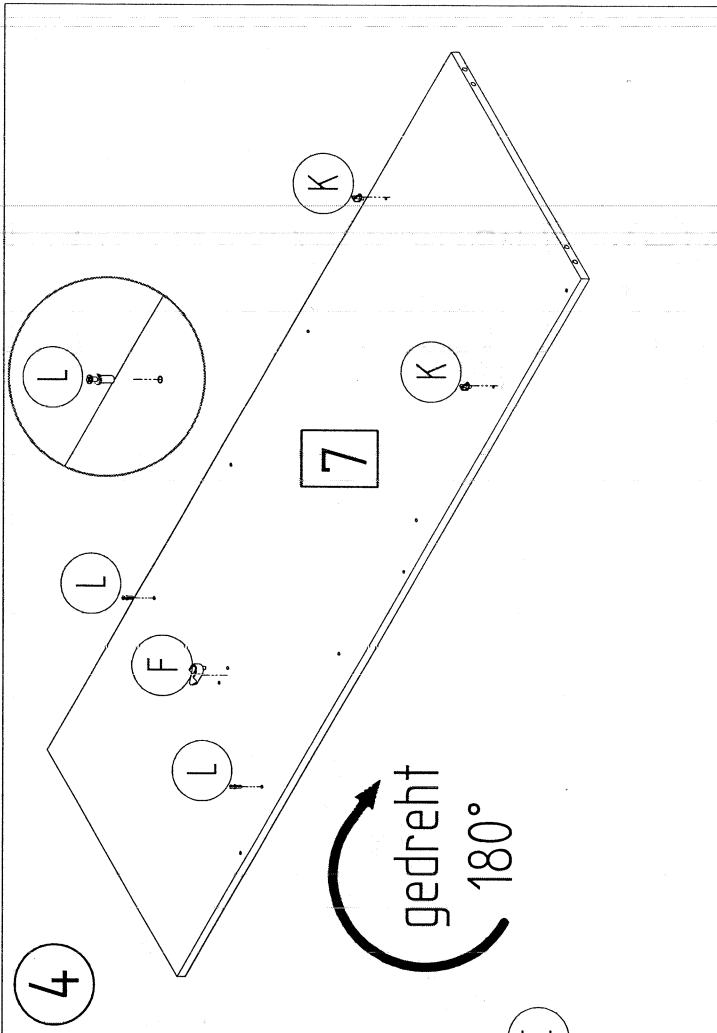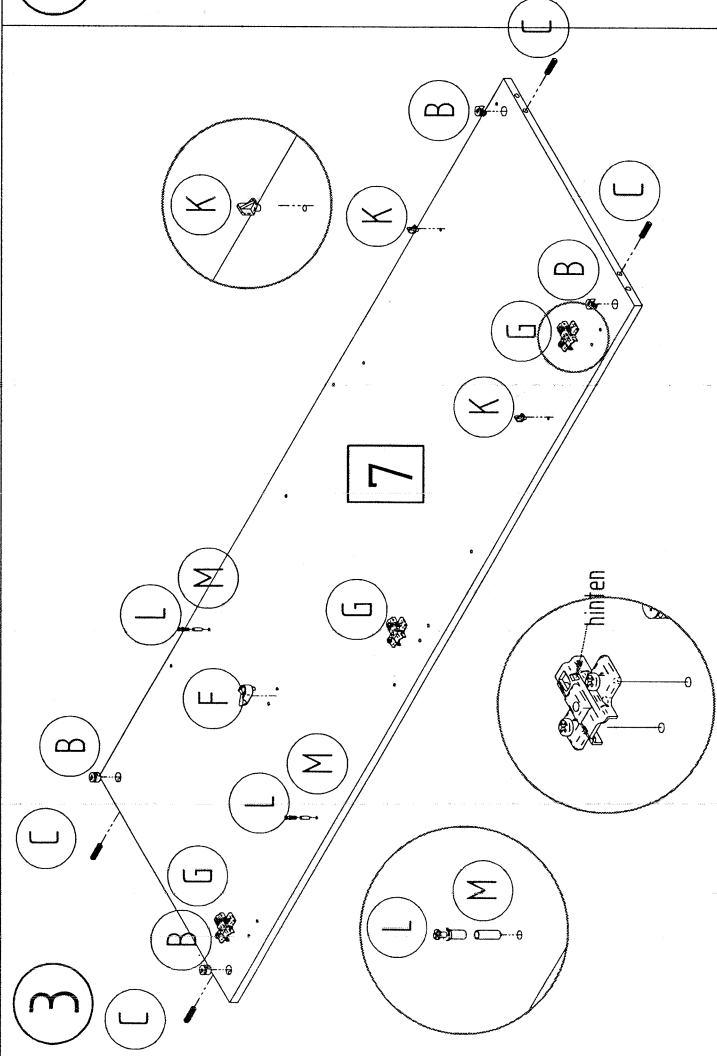


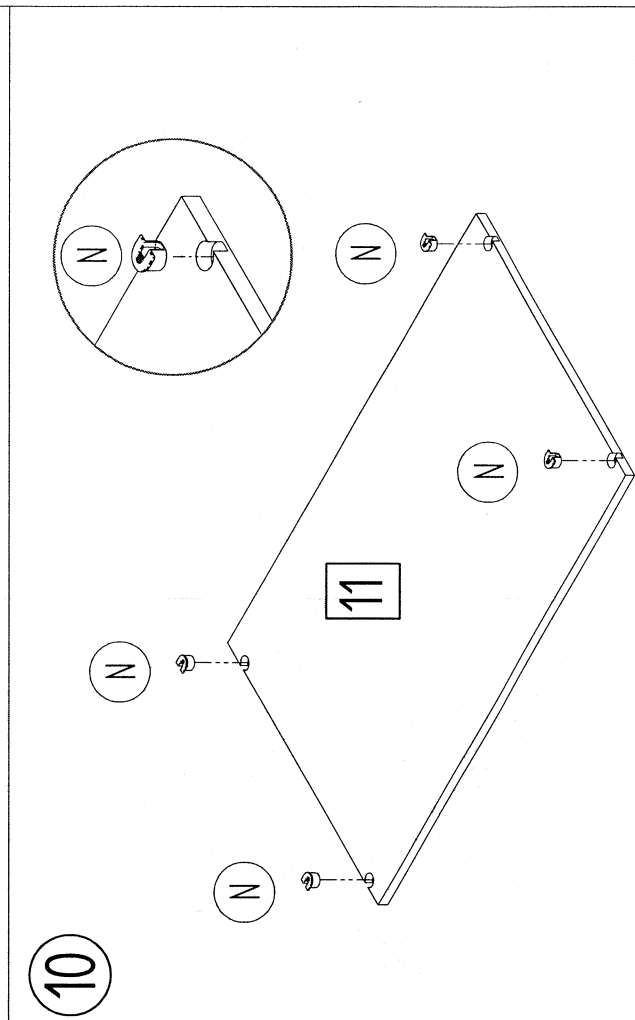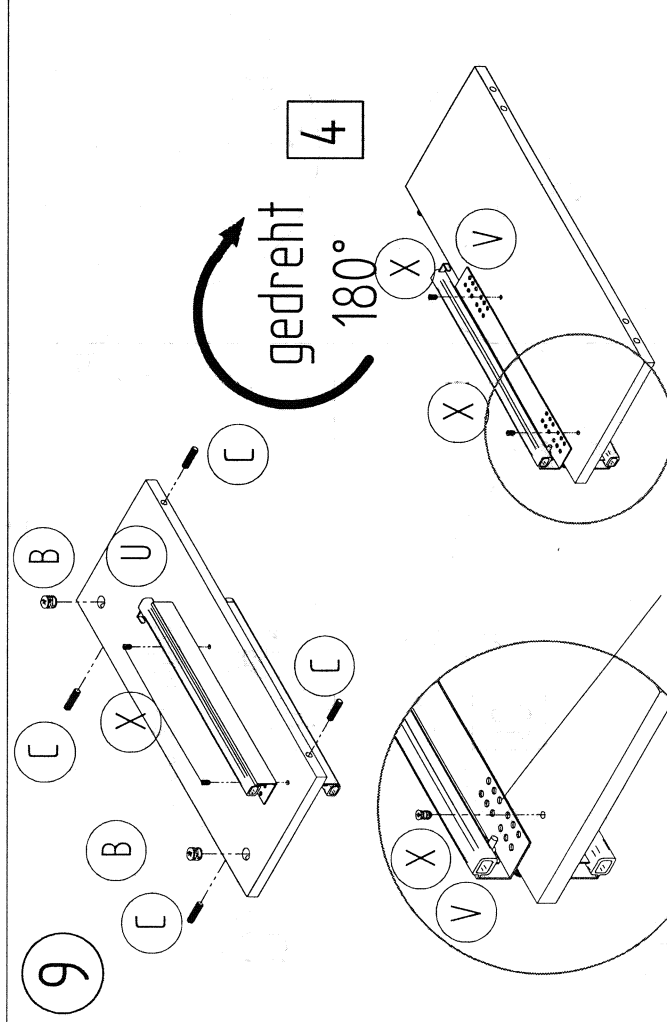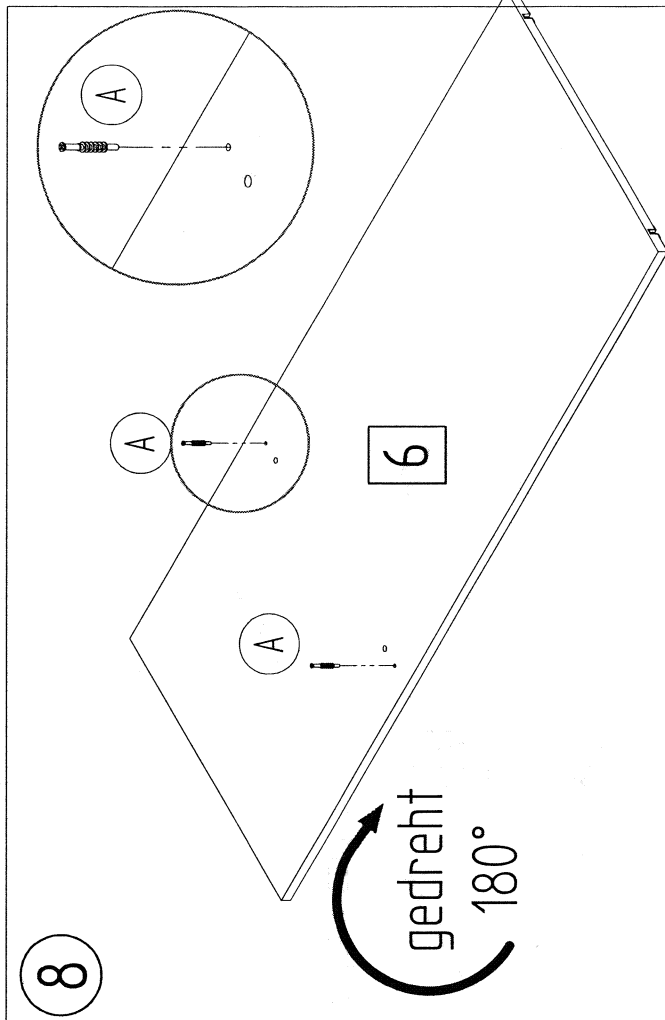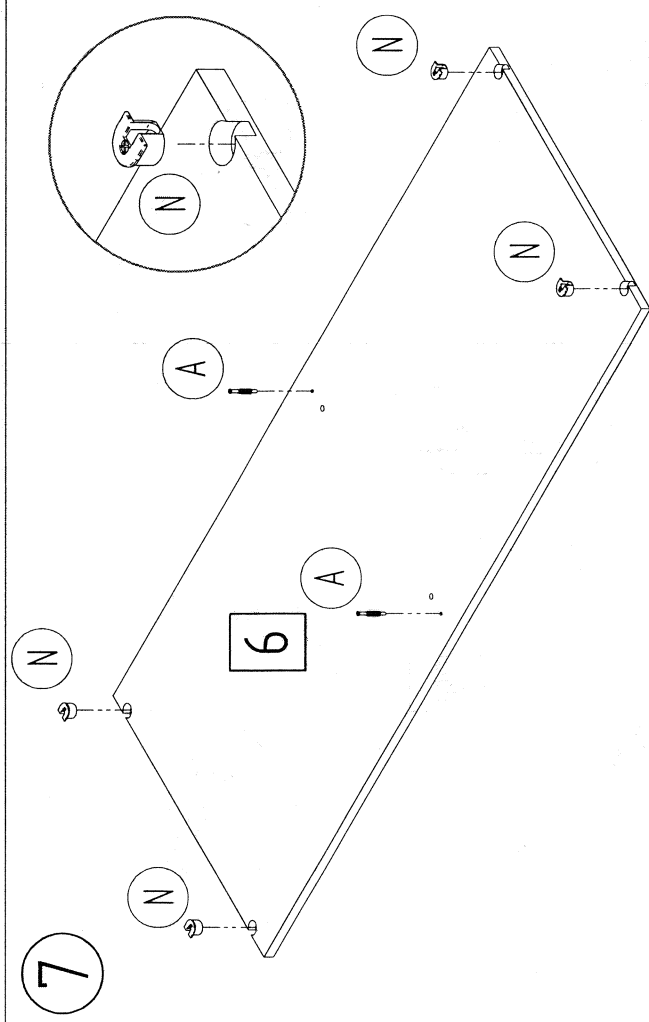



11

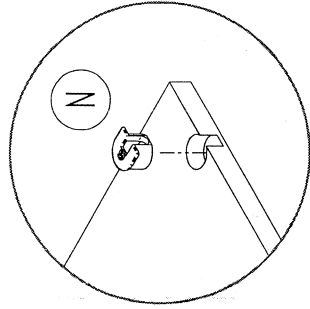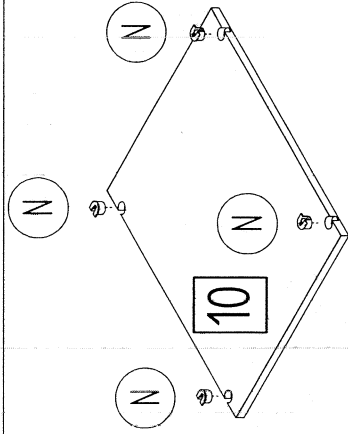




12

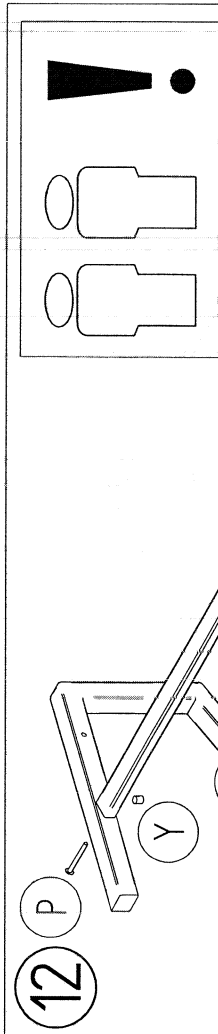

21

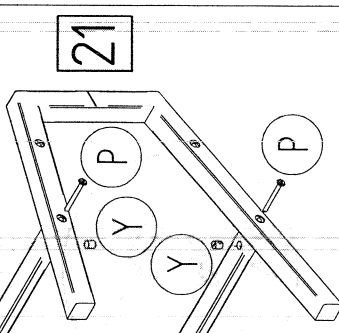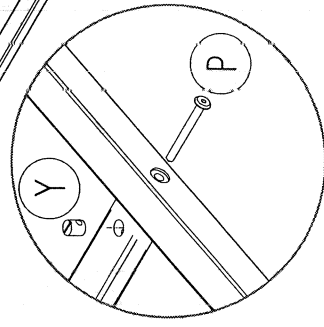



13

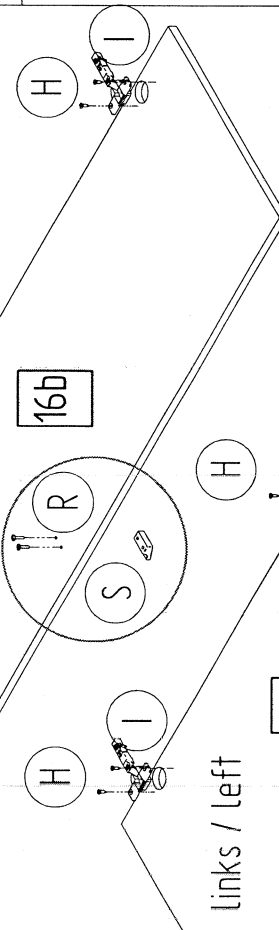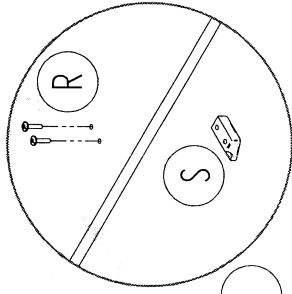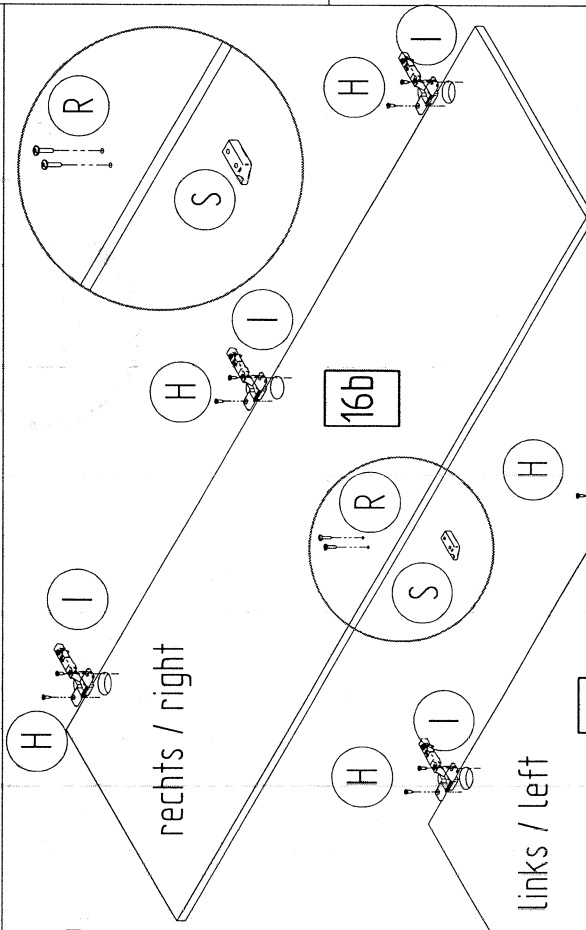




links / left

16a


16b

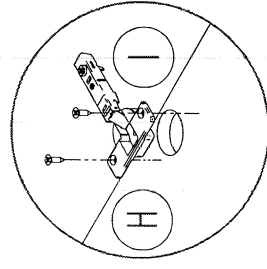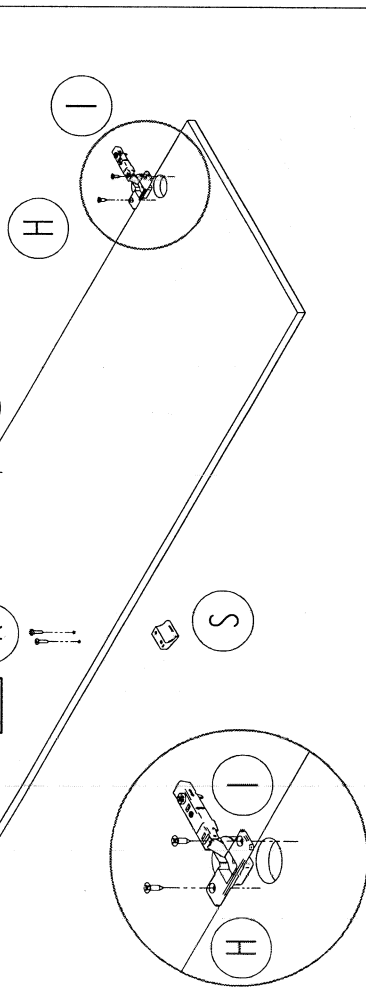


14

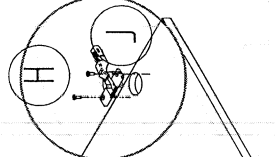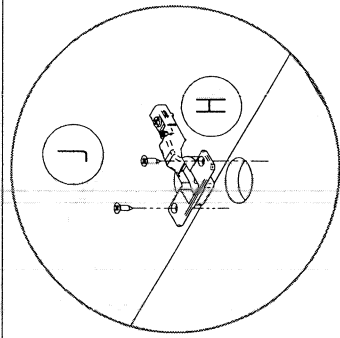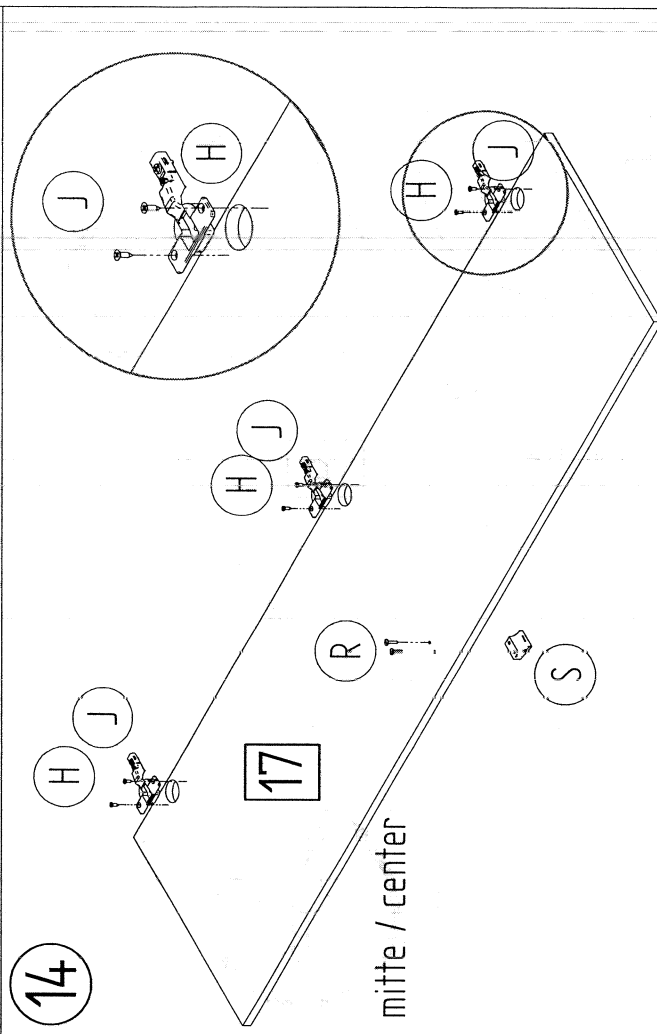


15

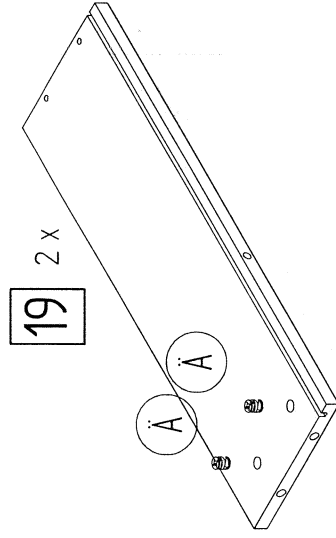


16

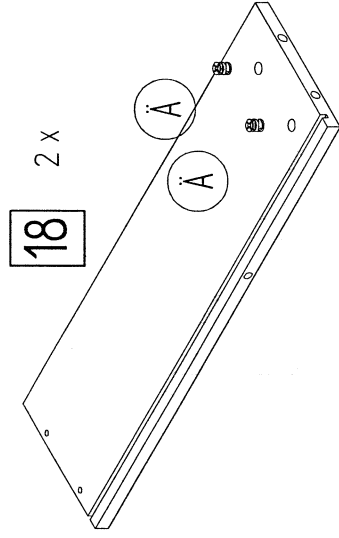



17

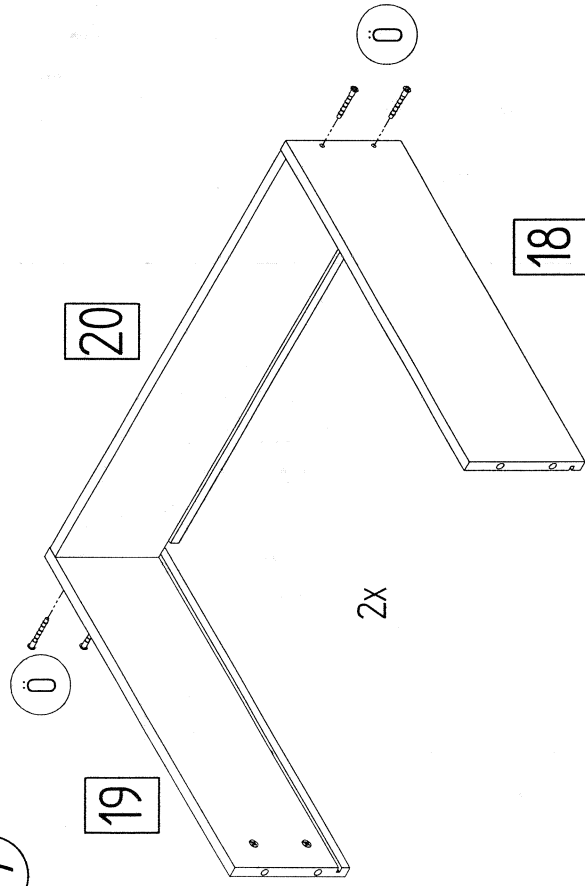



18

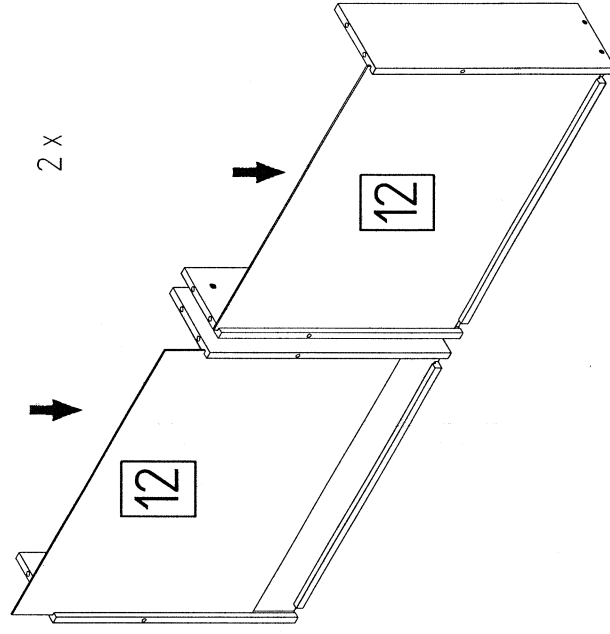


20

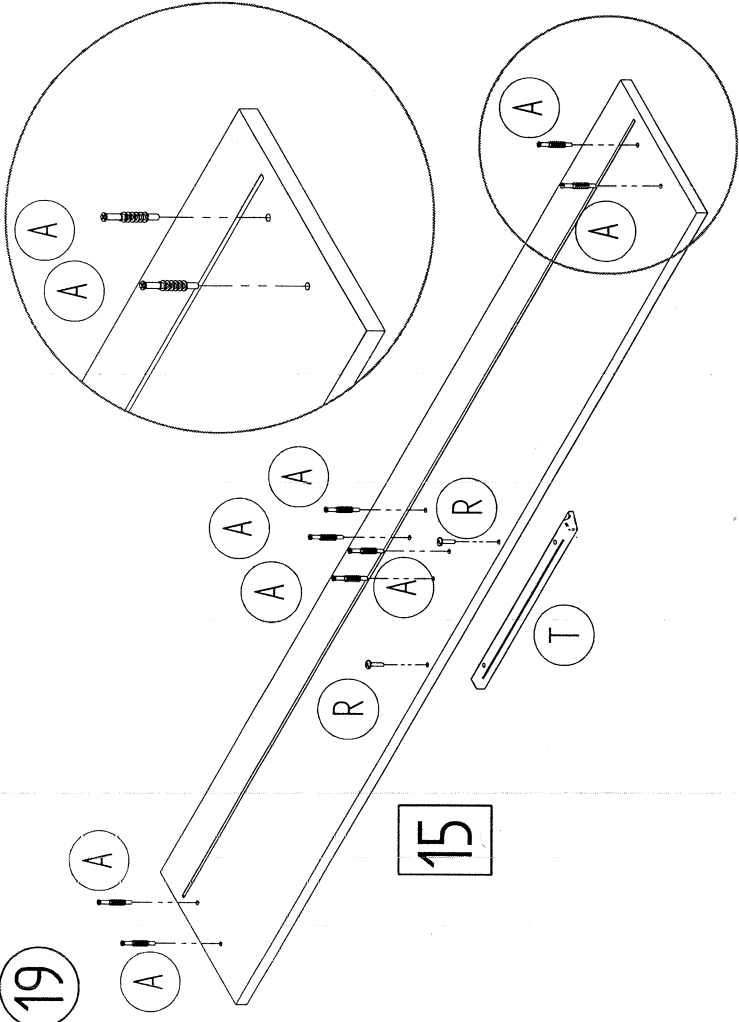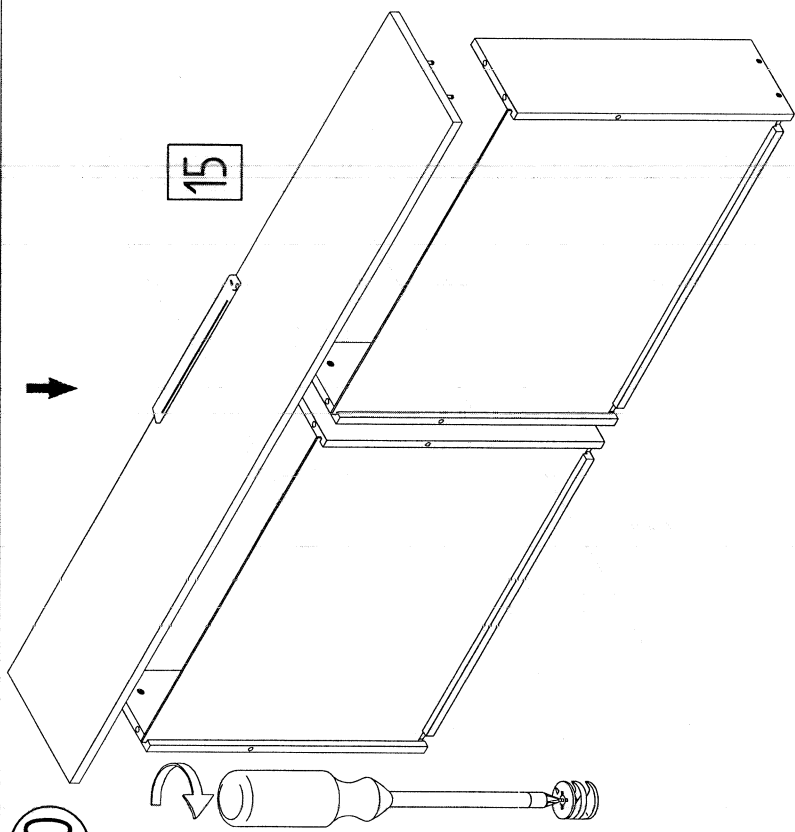


21

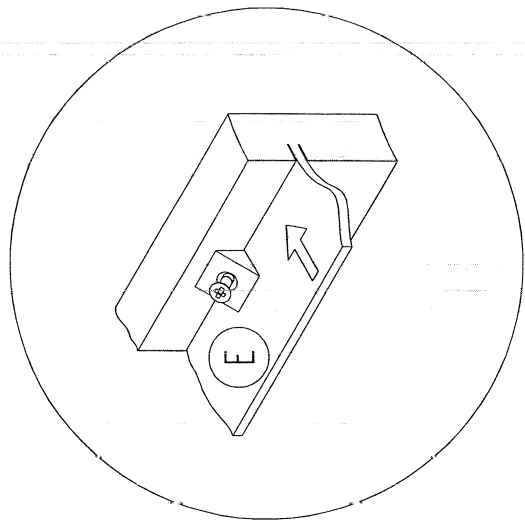
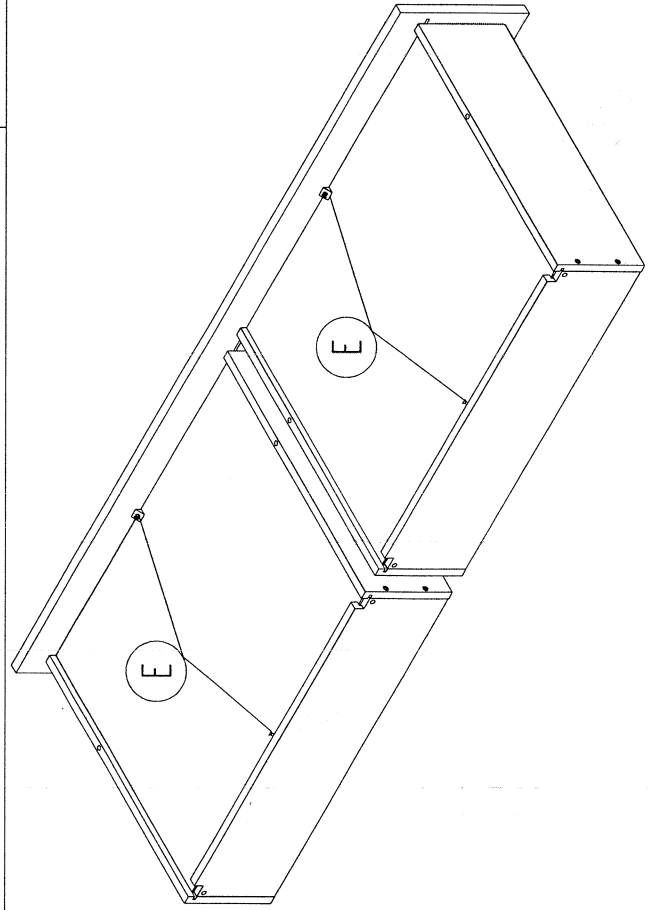




1



Z Z

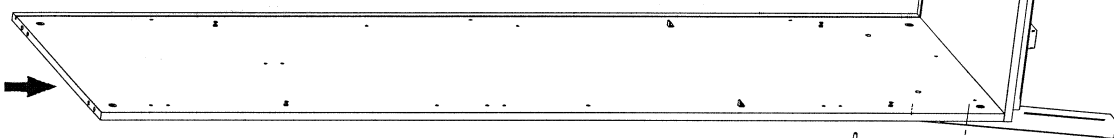
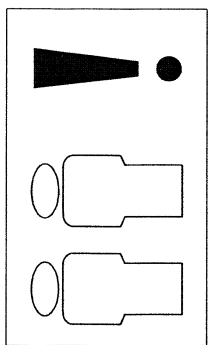


24

2

Z


Z

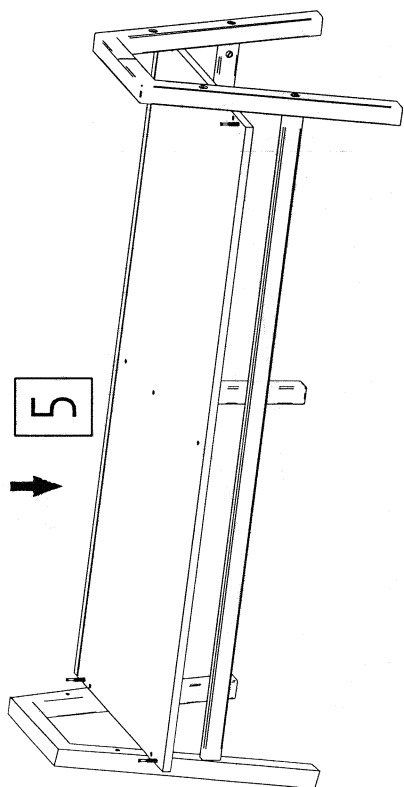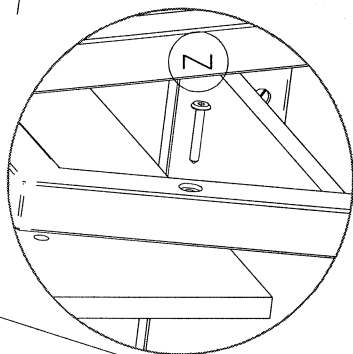


5


23

25

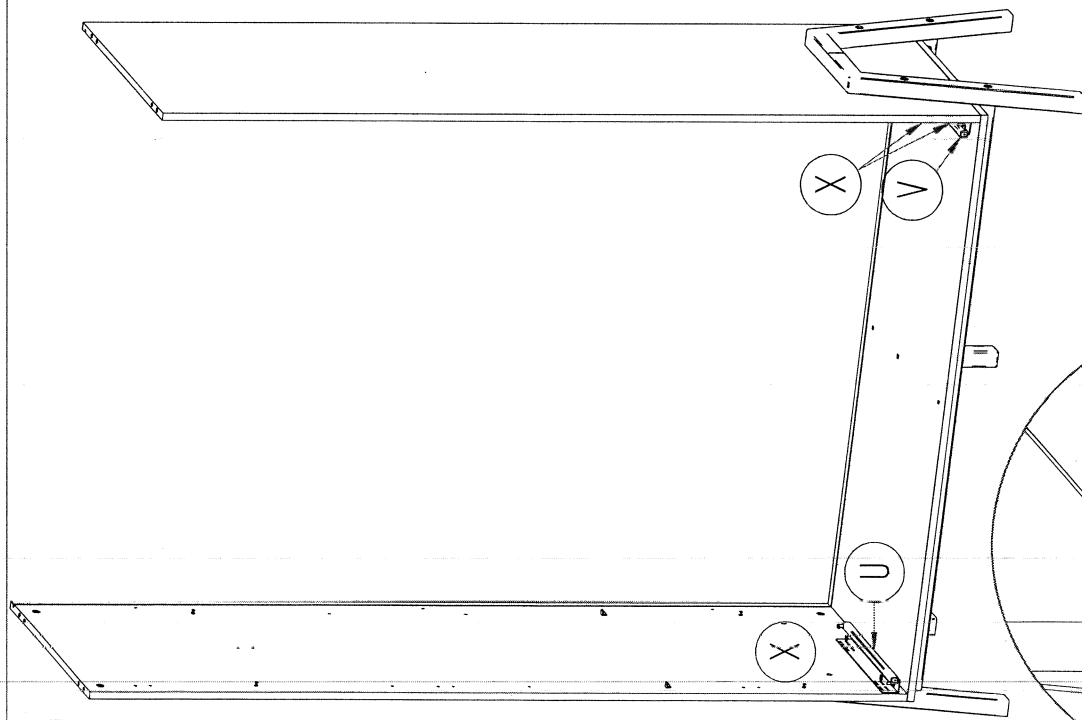


26

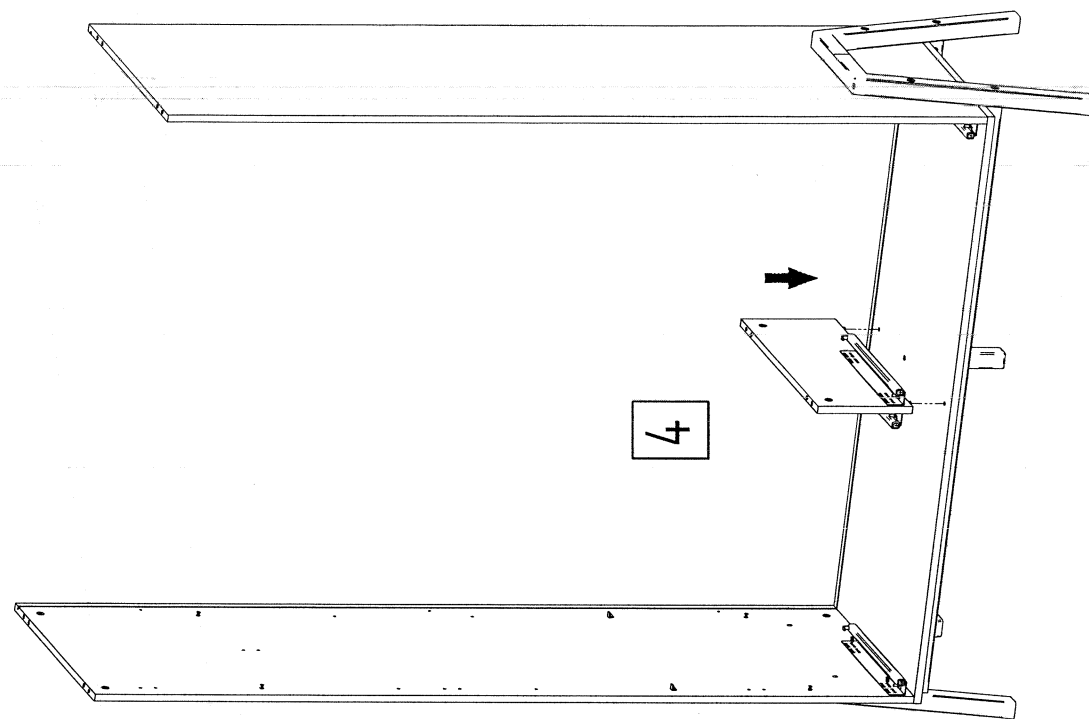



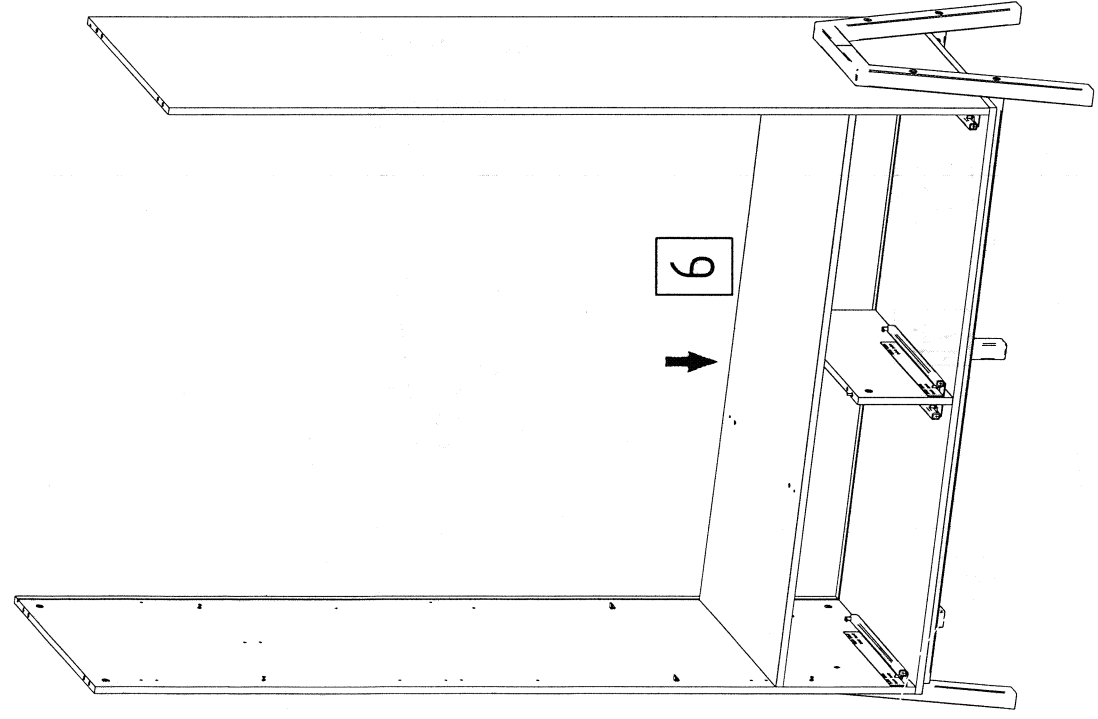


27


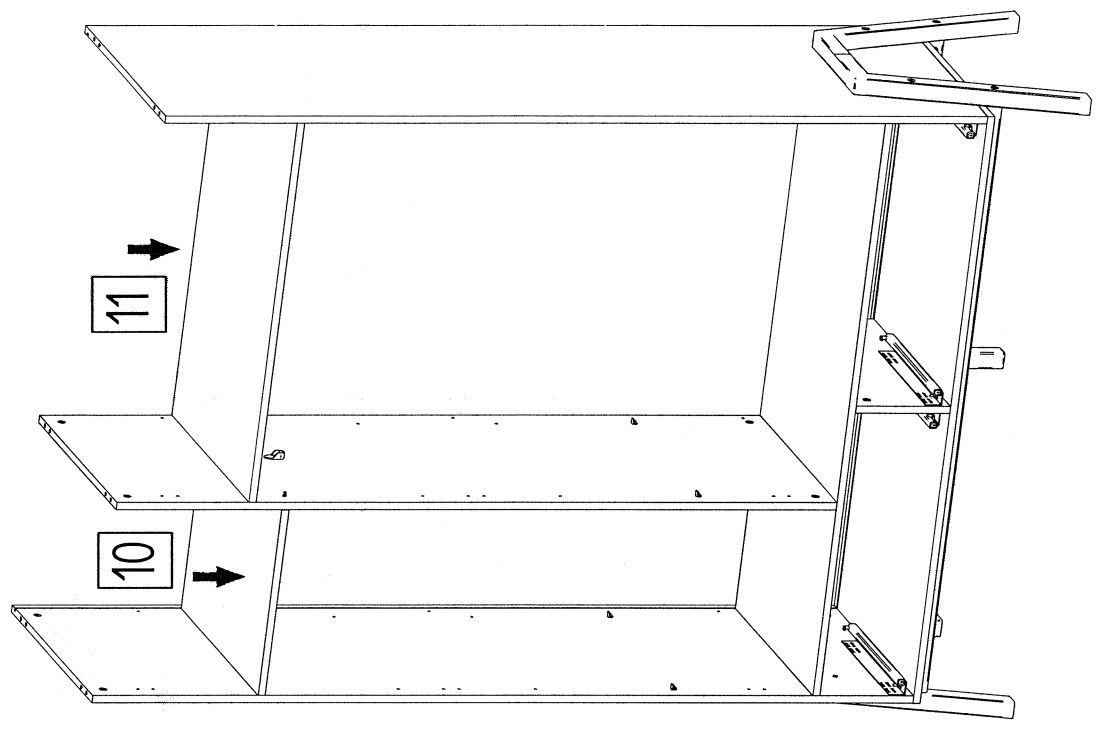


28


30

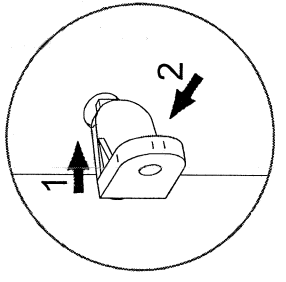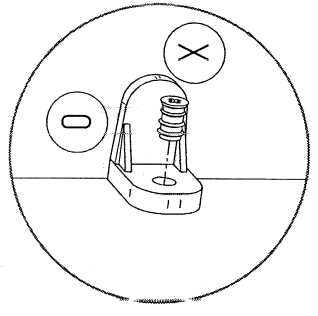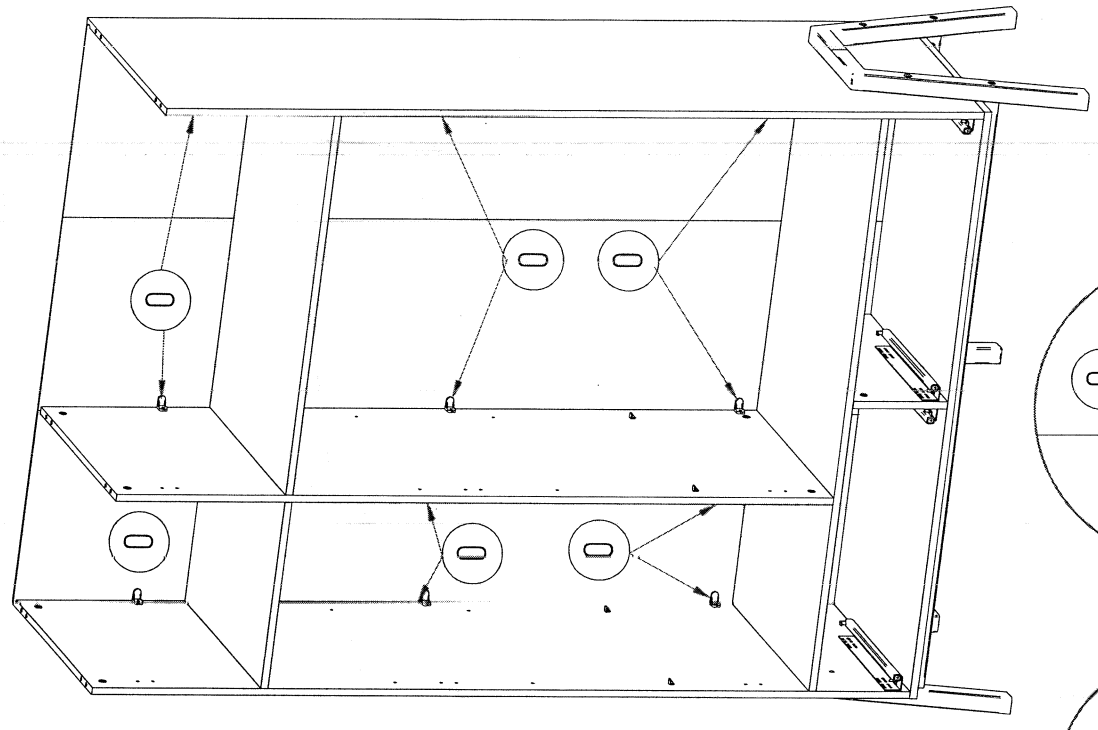


29

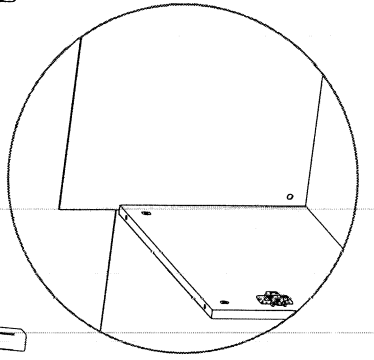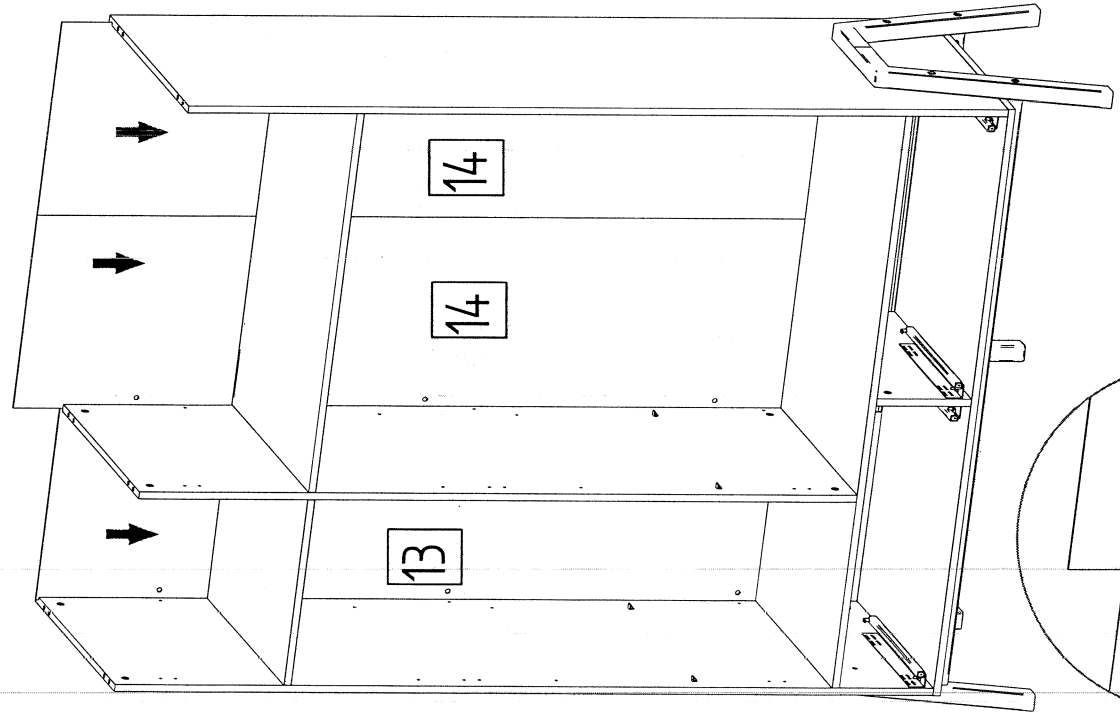




32

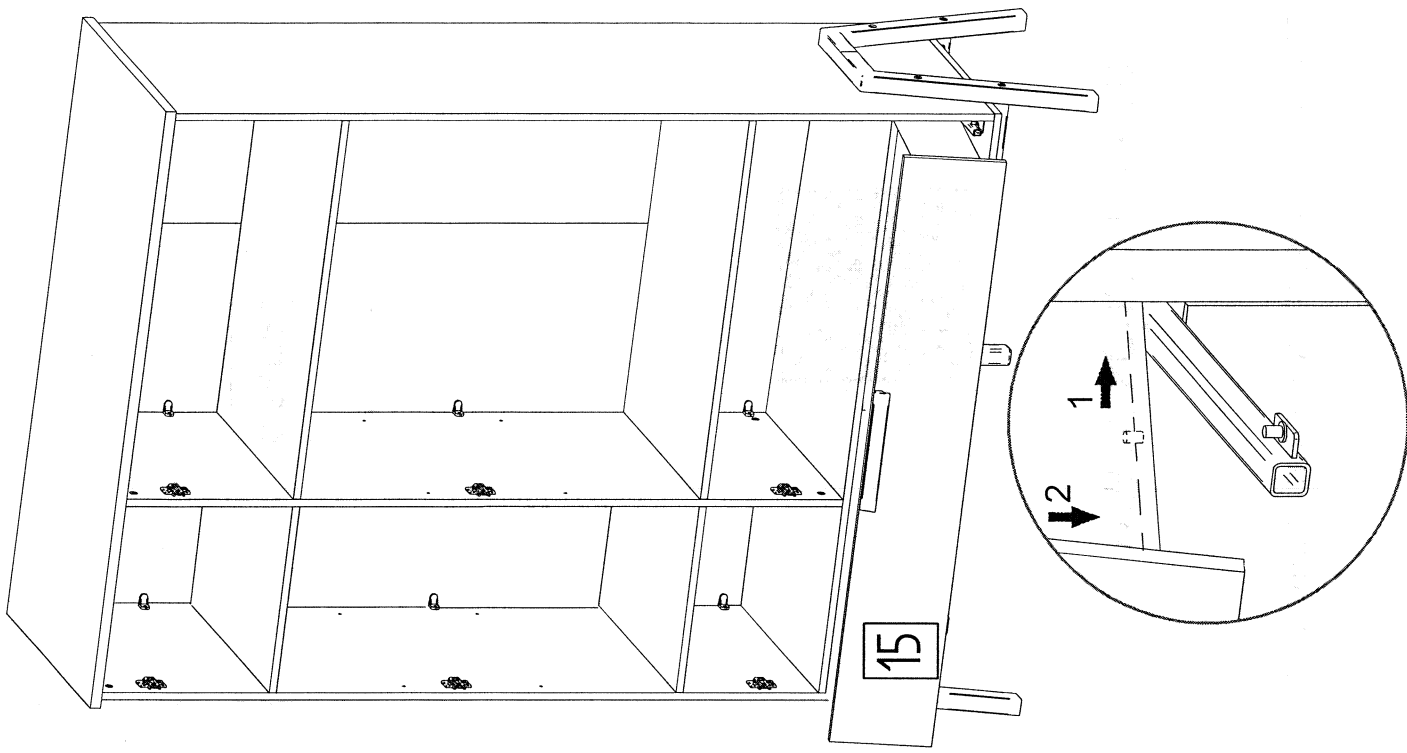

31

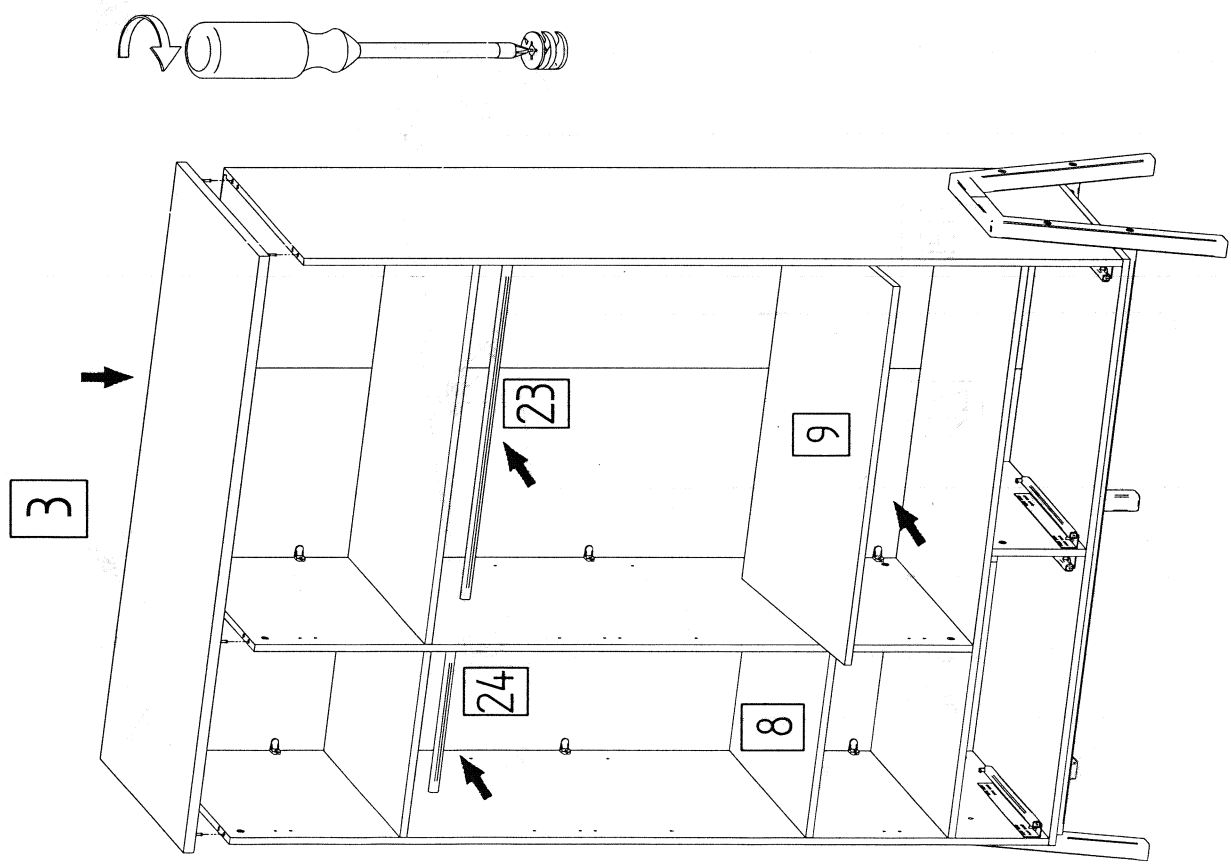




33

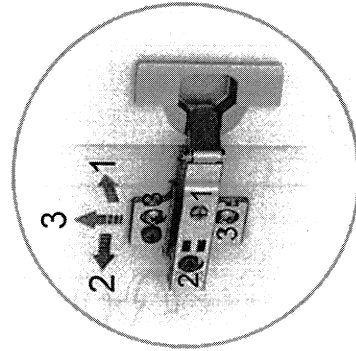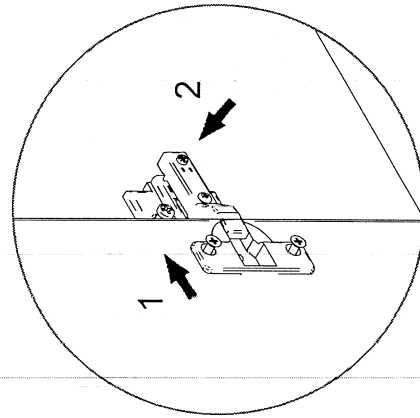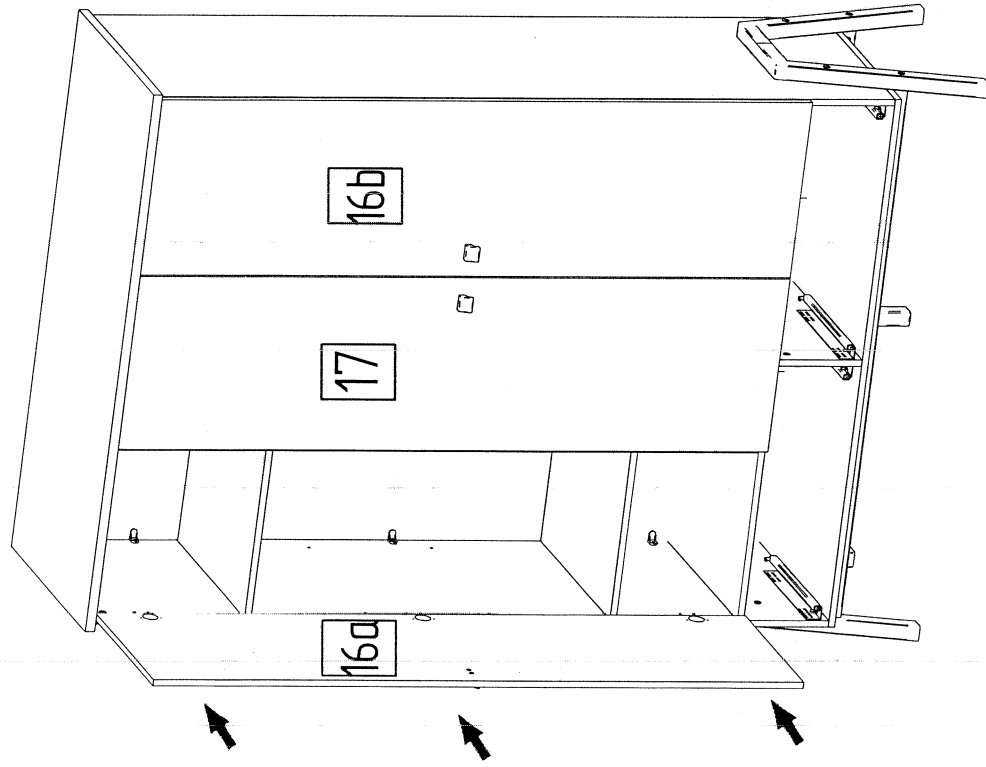

... weitere Infos über unsere Produkte unter

www.schardt.com

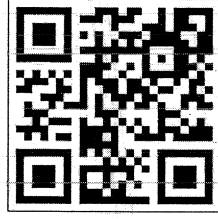

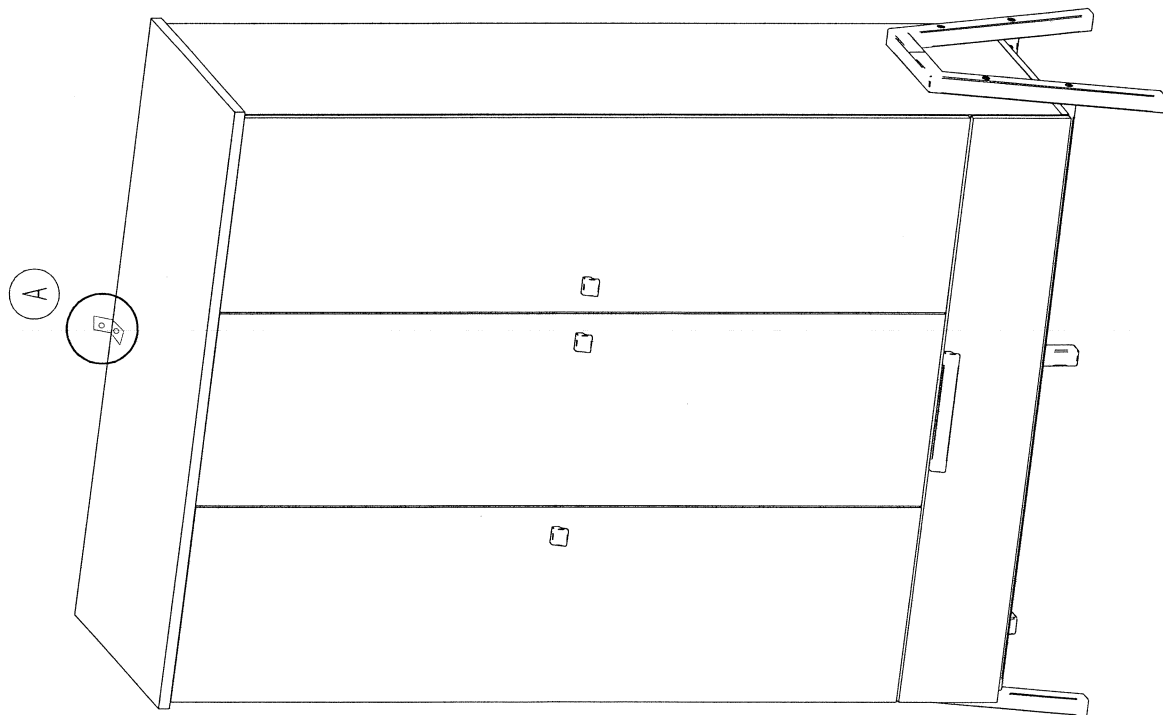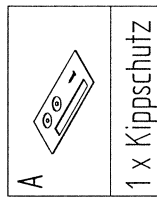

Wandbefestigung:

Den Schrank an der Wand befestigen.

Dazu Kippschutz A entsprechend beiliegender Anleitung anschrauben. Anschliessend Kippschutz an der Wand befestigen. Für die Wand geeignete Dübel verwenden. Vor dem Bohren den Verlauf von Strom- und Wasserleitungen unbedingt überprüfen und berücksichtigen !

