

## NOVA LUCE

## 9236202






Turn off the general switch

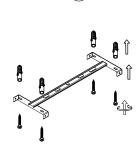


Drill holes & apply plastic anchors With screws



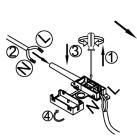

Connect the wires



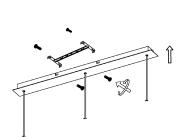


Apply the side screws





Apply the side screws & the bulb

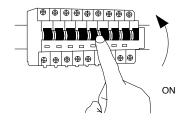

Turn on the general switch

