WF308439AAG/ WF308439AAB

	SERIENNUMMER	TEILE	MENGE
HARDWARELISTE	1	STUHLLEHNE	1
	2	SITZ	1
	3	HINTERBEIN	2
	4	VORDERBEIN	2

△ Achtung!

HARDWARE LISTE	SERIENNUMMER	TEILE	MENGE
	Α	M8X55MM 🗪 🐧 🖟	5
	В	M8X70MM • 0 0	4
	С	SECHSKANTSCHLÜSSEL	1
Ì			

CUSTOMER• •

Thank you for shopping, we are always committed to providing high quality products. In rarecases where the product is damaged, partsare missing or there is a problem withassembly, if you have any objections, please interactwith us, such as missingparts, and chairassembly problems, we will get you the bestsolution as soon aspossible to solve the problem faster, pleaseshow a series of pictures that clearly reflect the product problem. Thank youvery much!

TIPPS:


Suggestion: Apply the screws to theframe before the splicing is complete, tighten the screws, but not completely tighten them. 70% to 80% no problem.


Finally, it is all pulled tight if there is no problem in the assembly. If something goes wrong, such as holes that don'talign, or parts that don't fit, check thedensity of the screws.


6




The legs of the chair are placed inside the sittingframet!

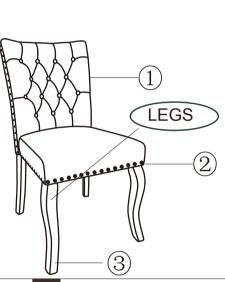


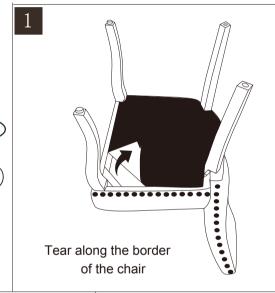

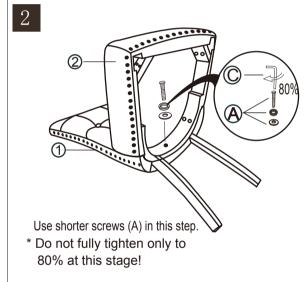


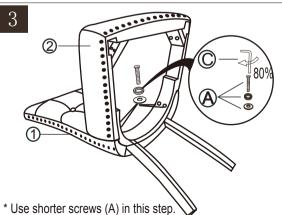

- Do not fully tighten only to 80% at this stage!.

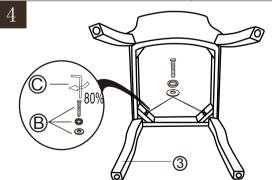

- * Use longer screws (B) in this step.
- * Do not fully tighten only to 80% at this stage!

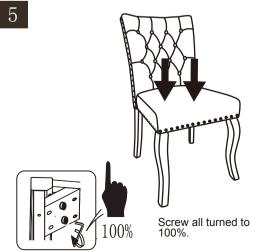



The product can be adapted to the new environment within afew days after assembly. Makesure all screws are installed!