
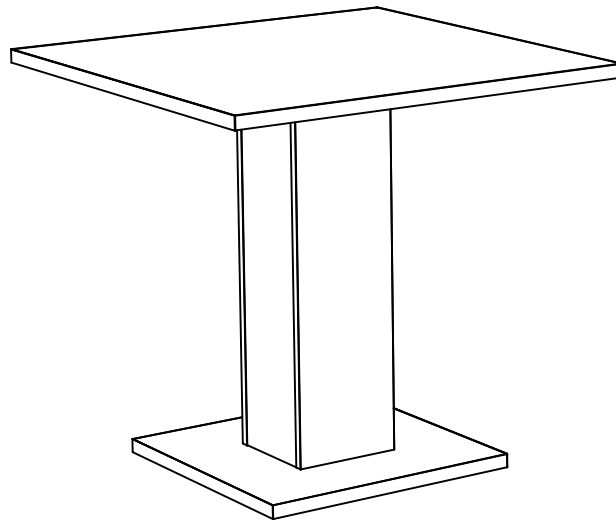


REPC-Nr.:

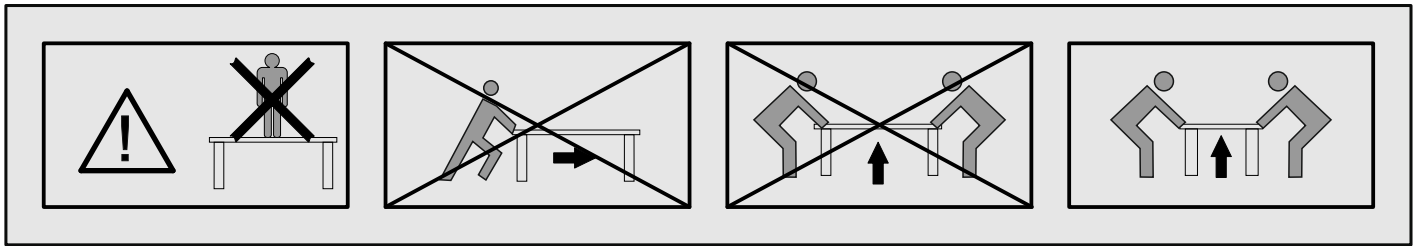


Artikel.-Nr.:

**0563\_80x80**

Montageanleitung.-Nr.:

**MA1-00491**

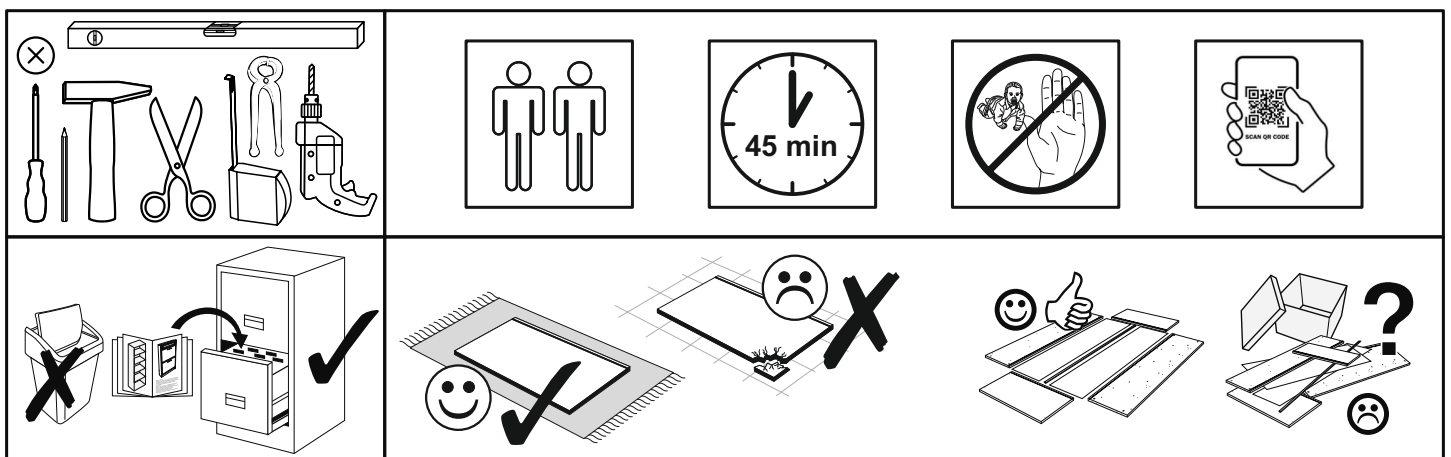

SCAN ME


Das Ersatzteil-Anforderungsformular finden Sie auf  
The replacement parts requisition form you find on  
<https://www.maeusbacher.de/ersatzteile/>

# BT1-00581 Colli 1/1


B01-20		B02-10		B02-20		B05-20	
6x	7,0x70	18x	ø15x12mm	18x		6x	
B02-103		B05-130		B01-242		B01-360	
20x	8x30	5x		1x	SW 6	4x	M6
						B02-183	
						4x	M6x20




▶ SCAN ME




## Colli 1/1

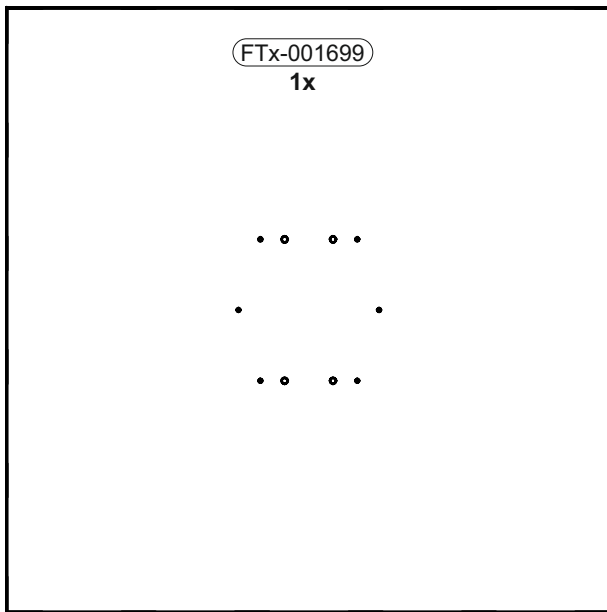


800 x 800

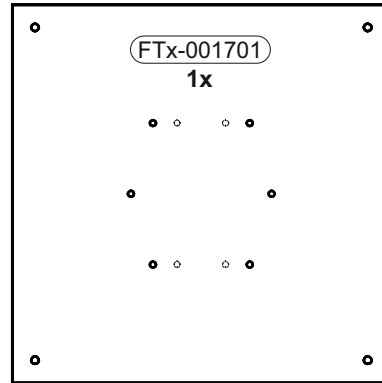

500 x 500

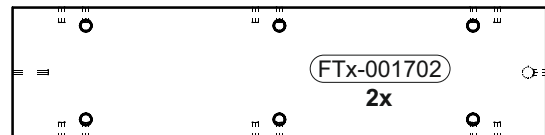






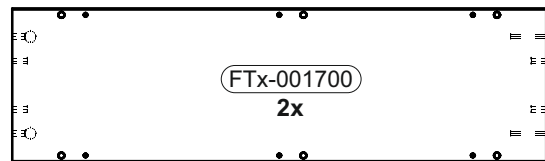706 x 172







706 x 202

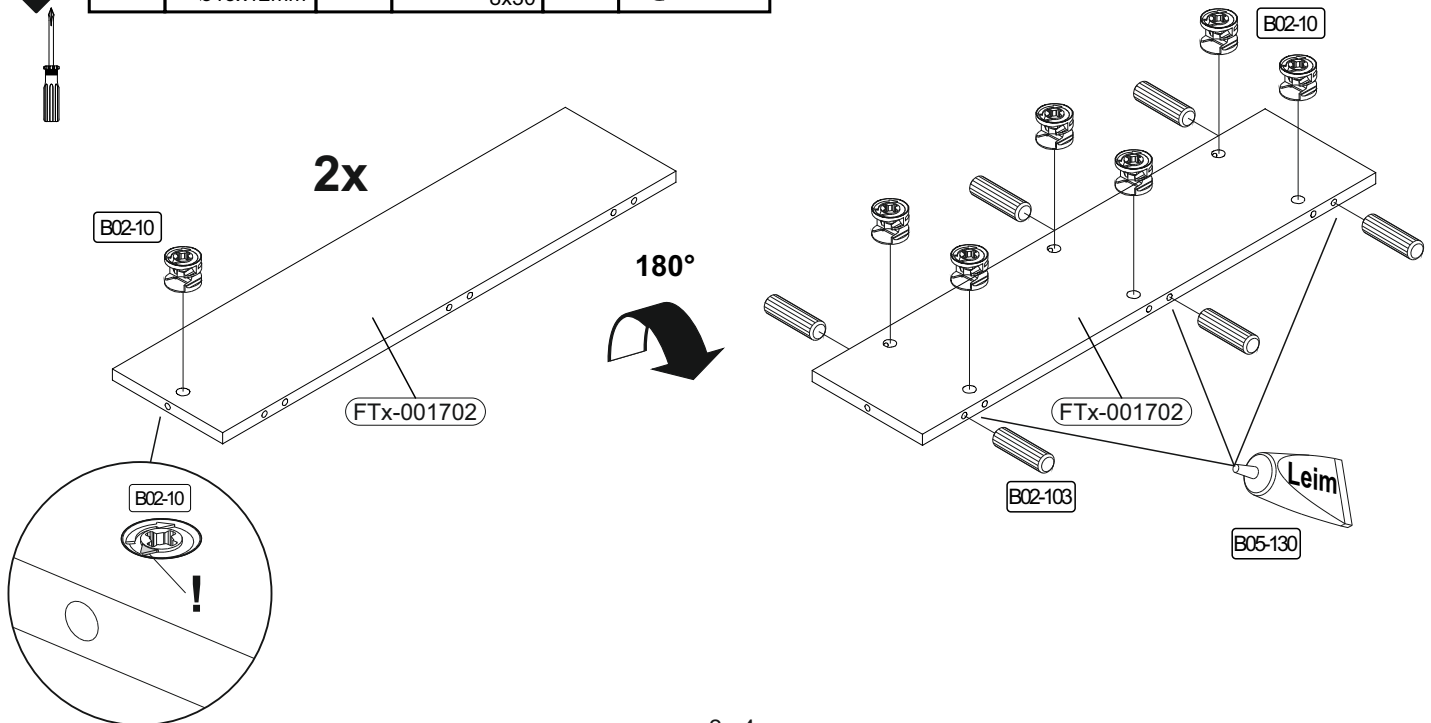
<b>1</b>	B02-10		B02-103		B05-130	
	14x	ø15x12mm	12x	8x30	2x	




<b>2</b>	B02-10		B02-103		B05-130		B02-20	
	4x	ø15x12mm	8x	8x30	1x	Leim	12x	

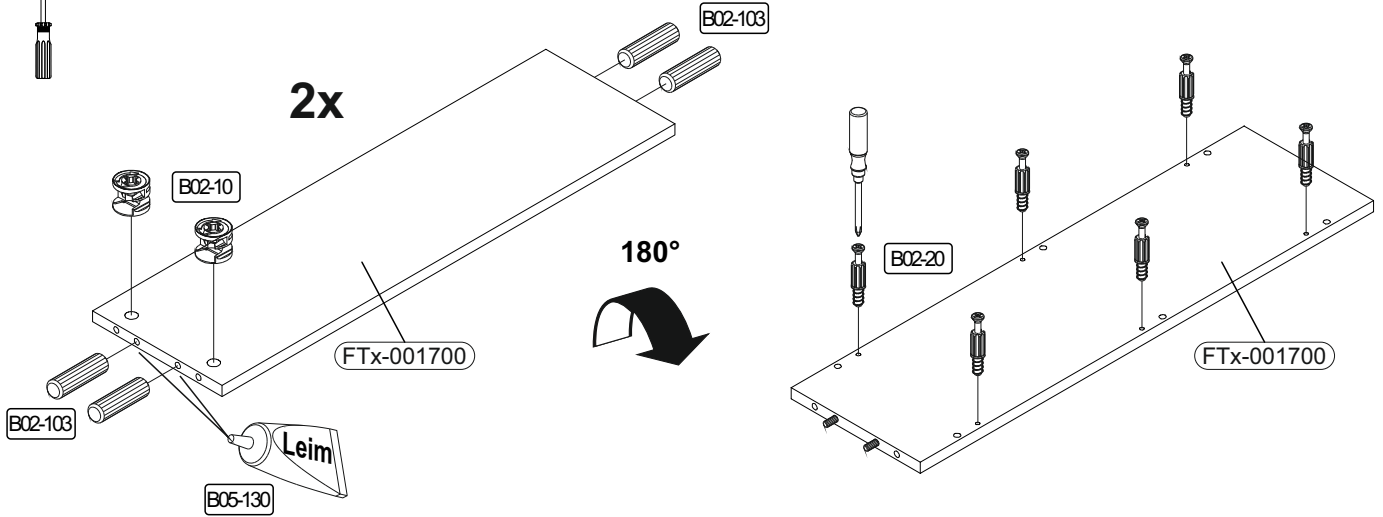

<b>3</b>	B01-360		B01-242		B02-183	
	4x	M6	1x	SW 6	4x	M6x20

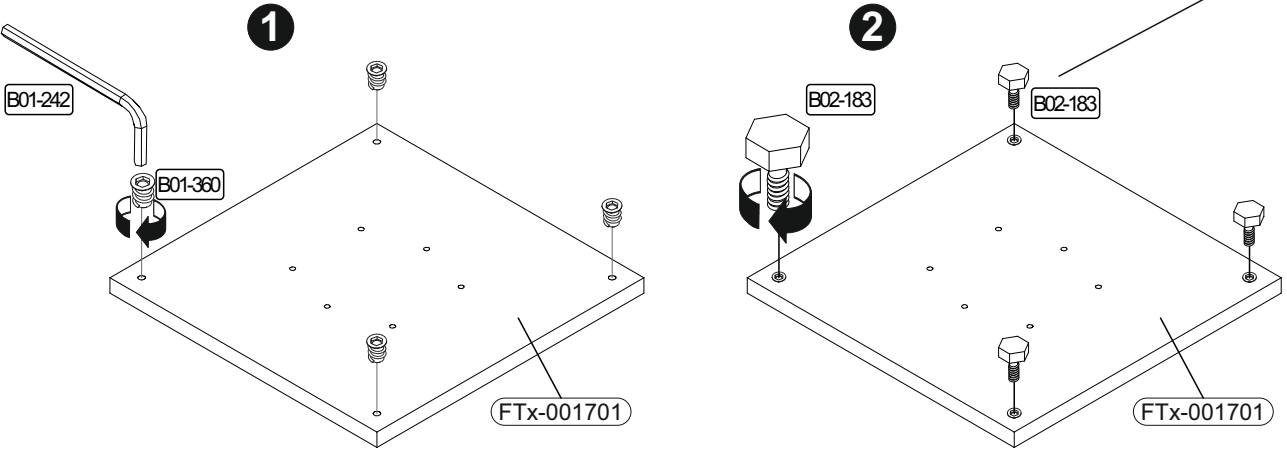

<b>4</b>	B02-20	
	6x	

