


















VERTICAL FILE CABINET ASSEMBLY INSTRUCTIONS

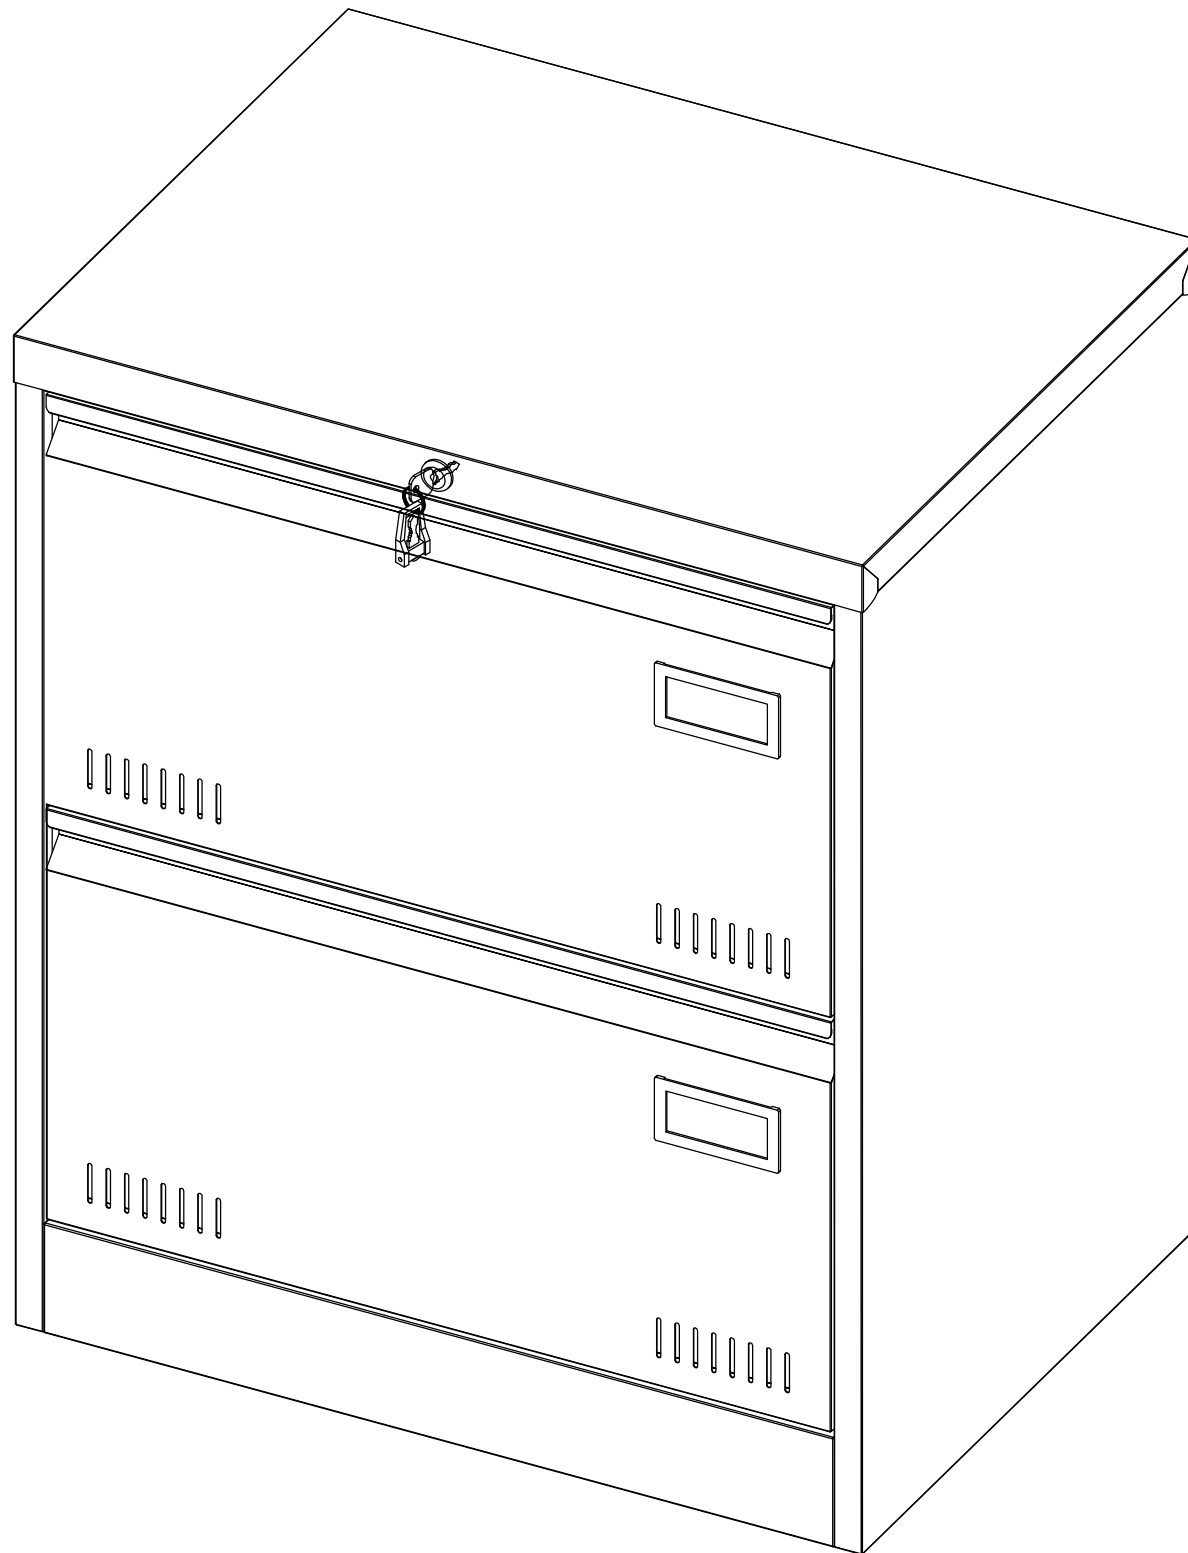


NOTE: PLEASE AN ASSISTANT IS REQUIRED ES
NECESARIO UN AYUDANTE UN ASSISTANT
ESTNECESSAIRE.




**Please scan the QR code to
check the assemble video**

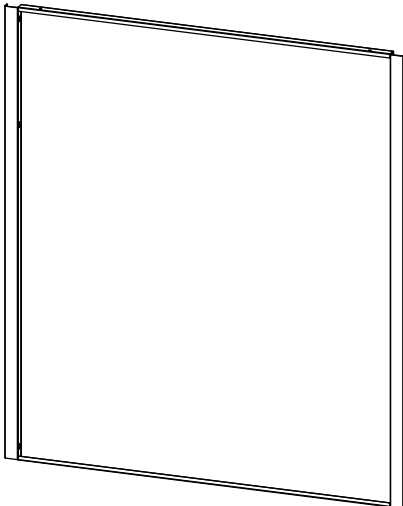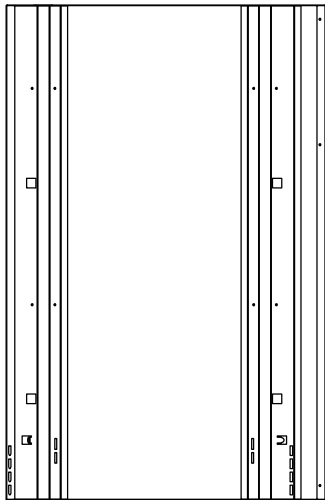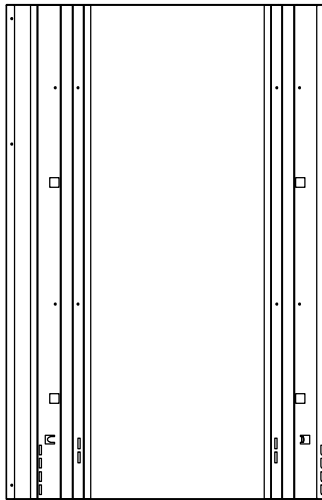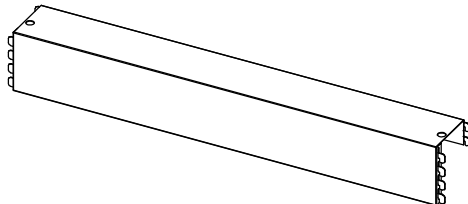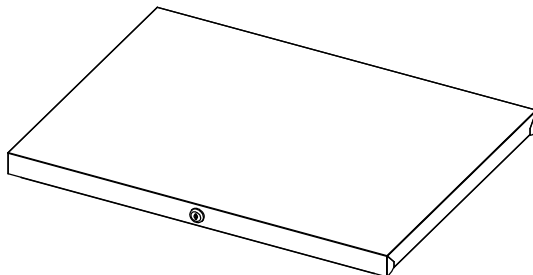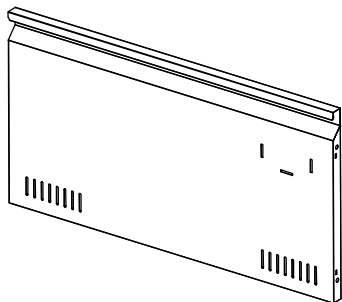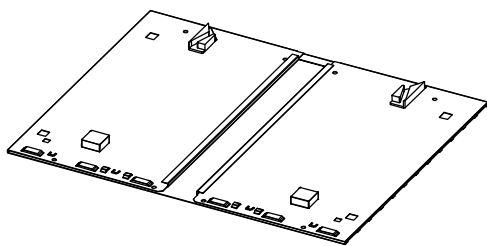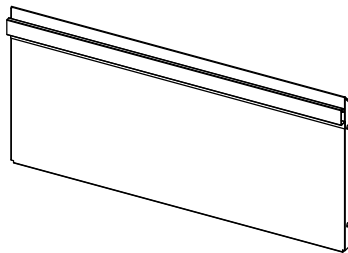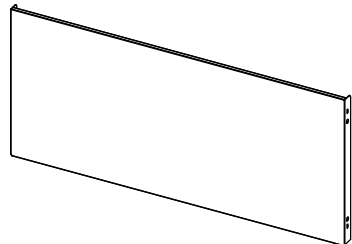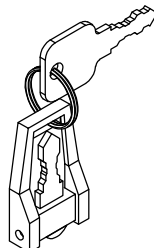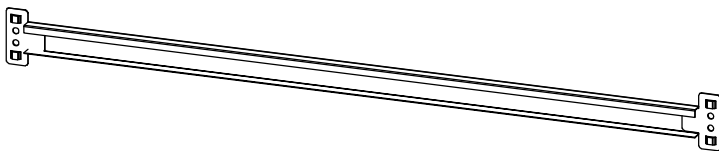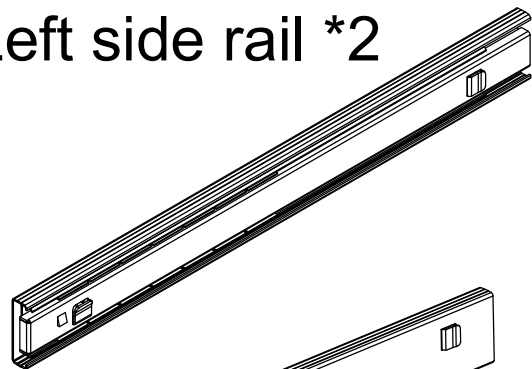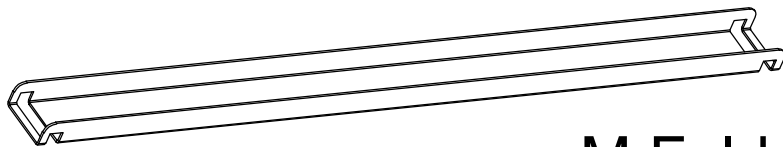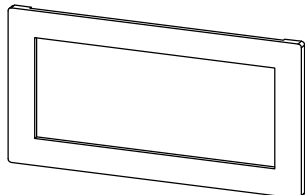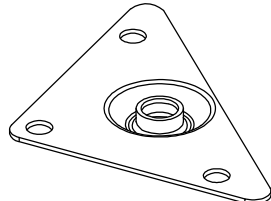
			
A:Backboard	B:Left side	C:Right side	I:lock rod *2
			
D:Bottom rail	E:Top plate	F:Drawer panel *2	
			
G:Drawer body *2	H:Drawer damper *2	J:Drawer Inside panel *2	
			
P:Key	K:pull rod		
			
L:Left side rail *2	M:Folder adjusting lever *2		
			
R:Right side rail *2	X:Label frame *2	Y:Triangular fixing board *4	Z:Self-tapping yarn *22

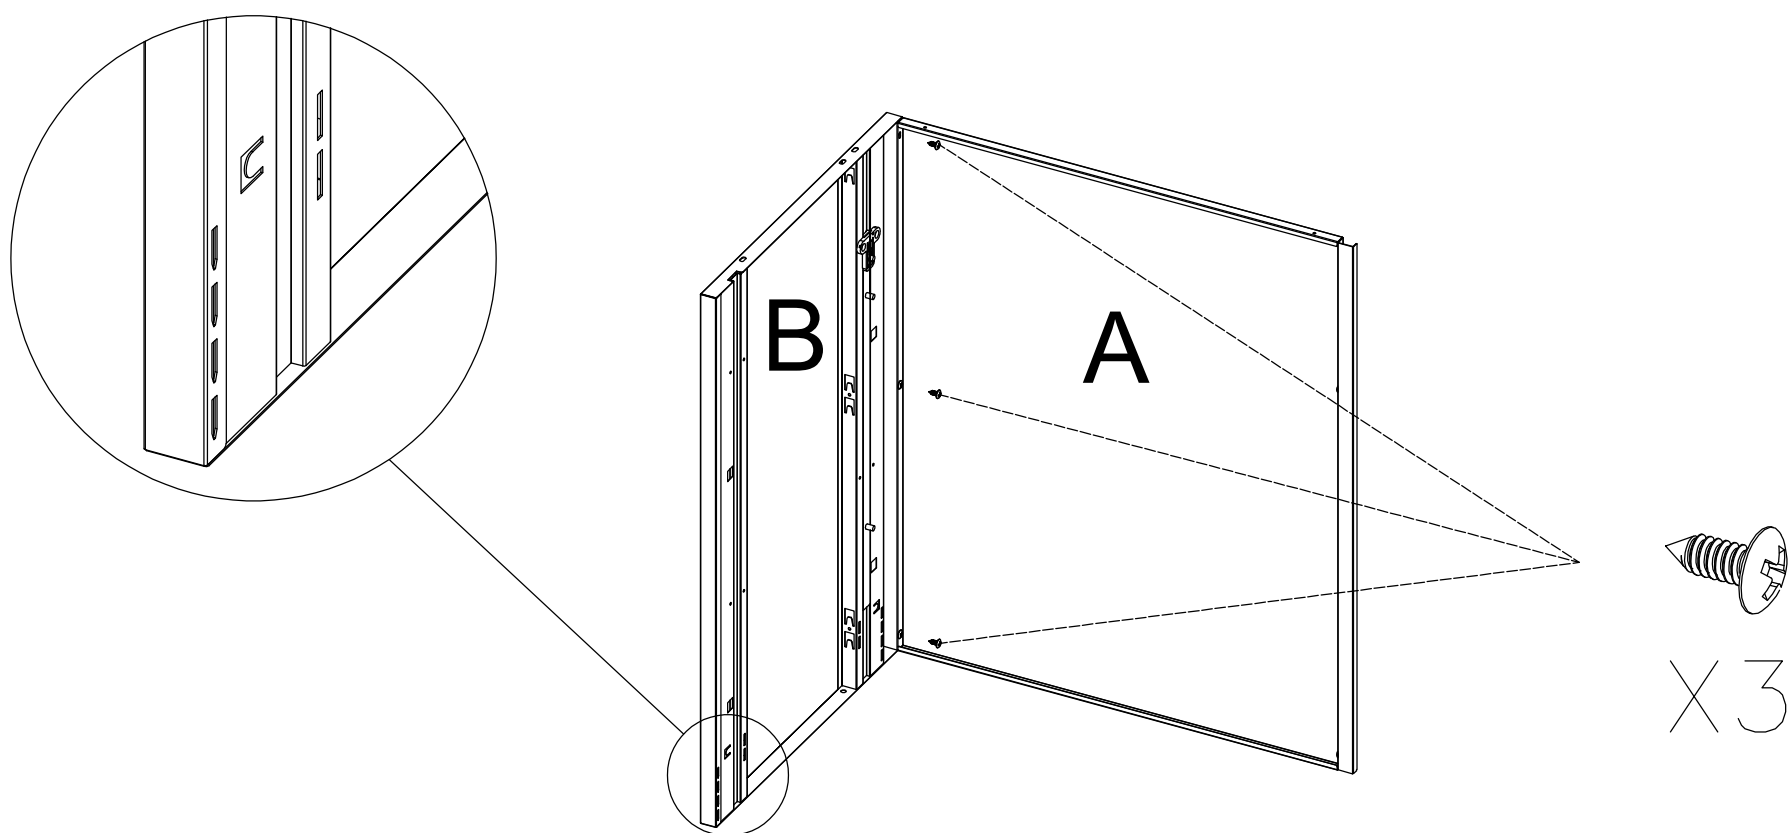

1.Install A and B

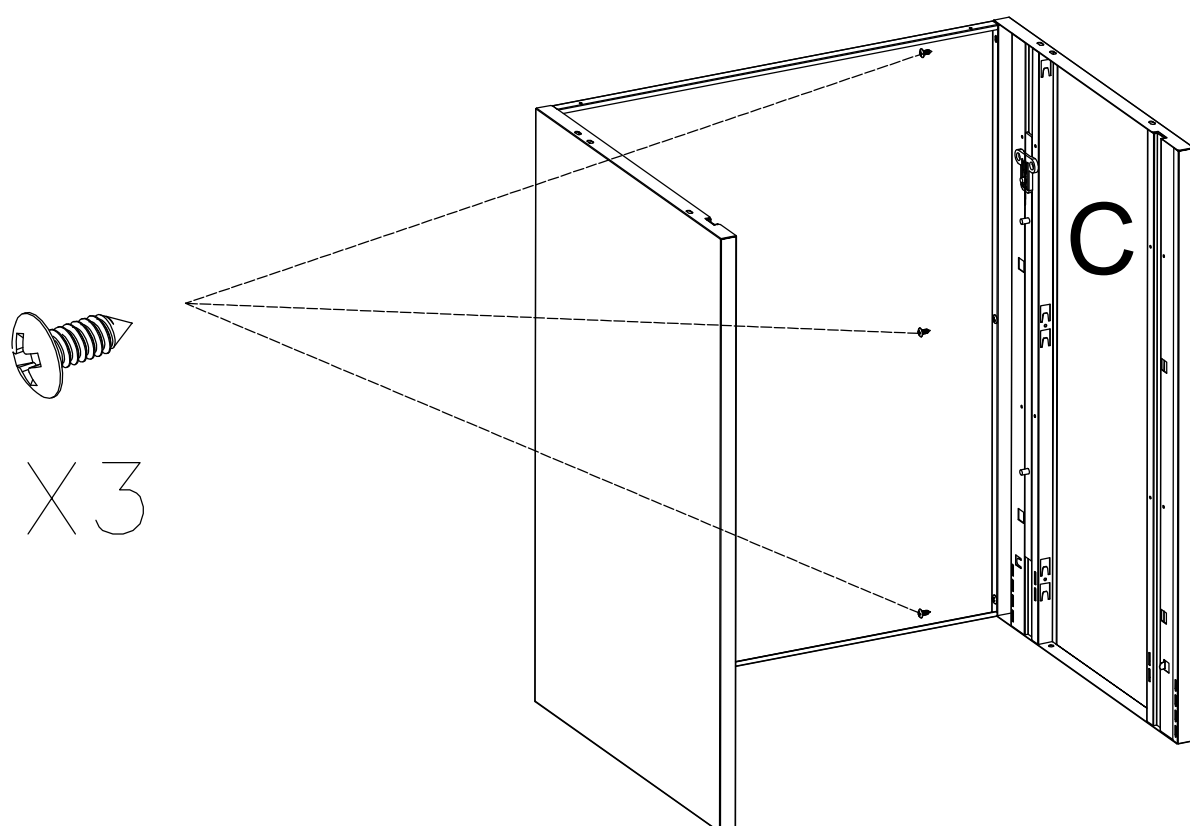


2.Install A and C

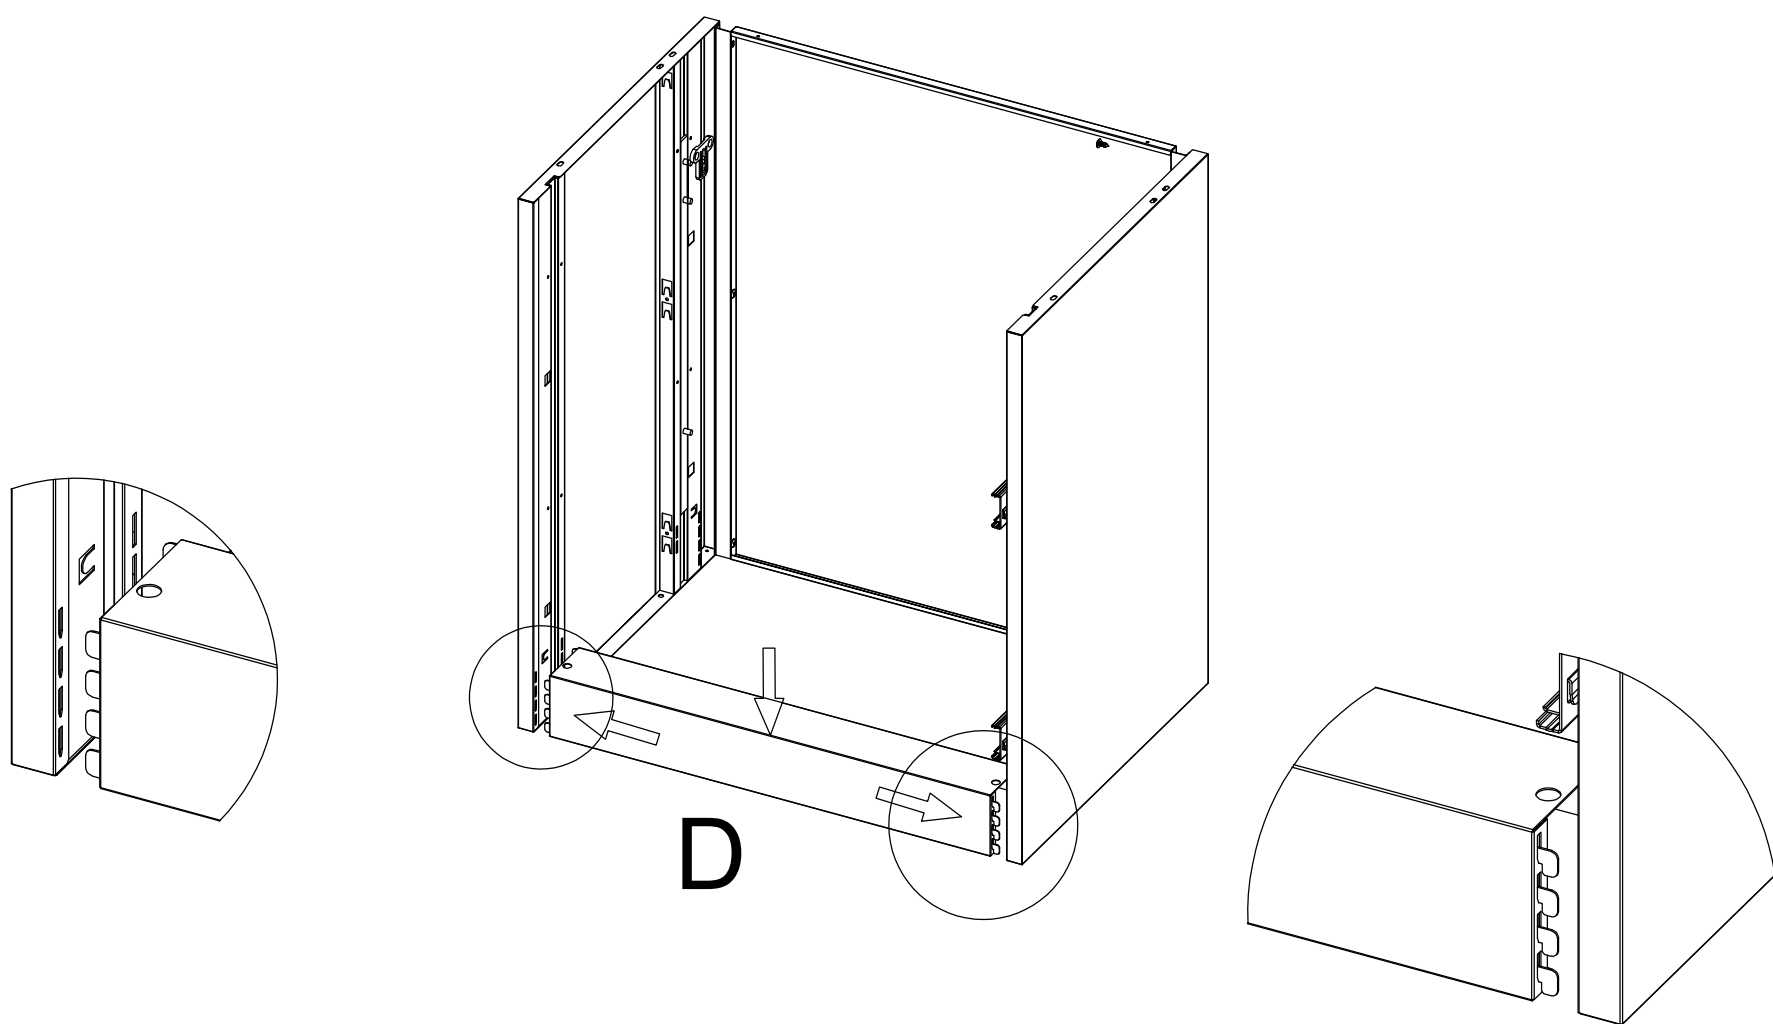


D

3.Install D



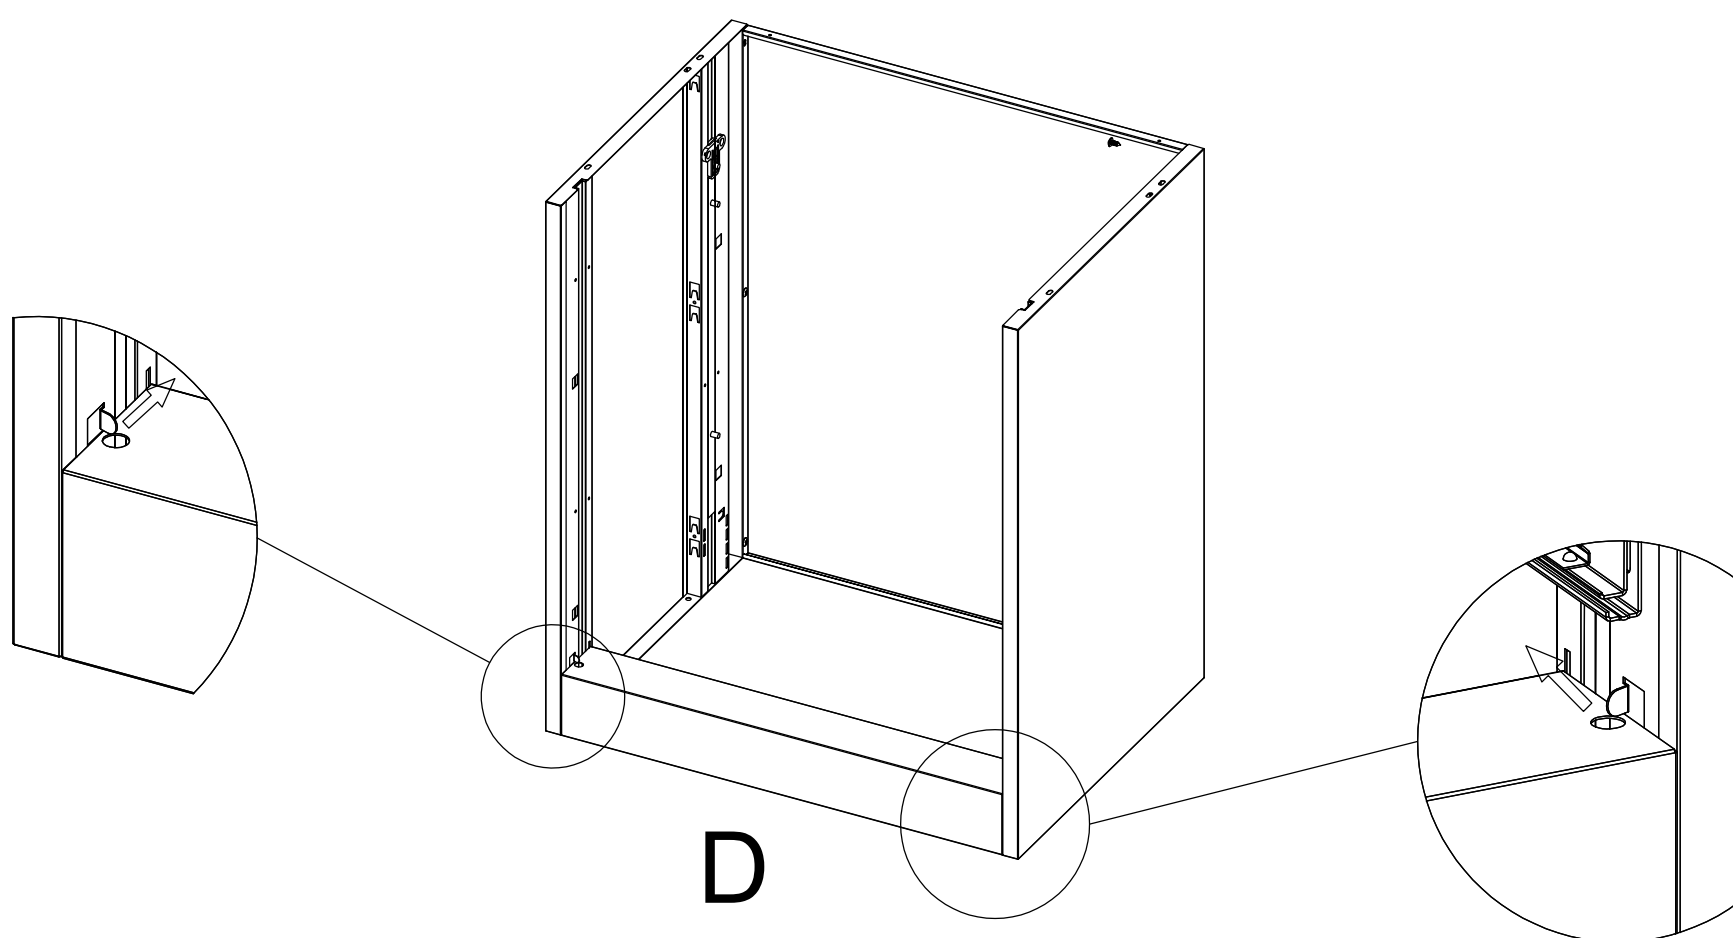


D


4.Open baffle

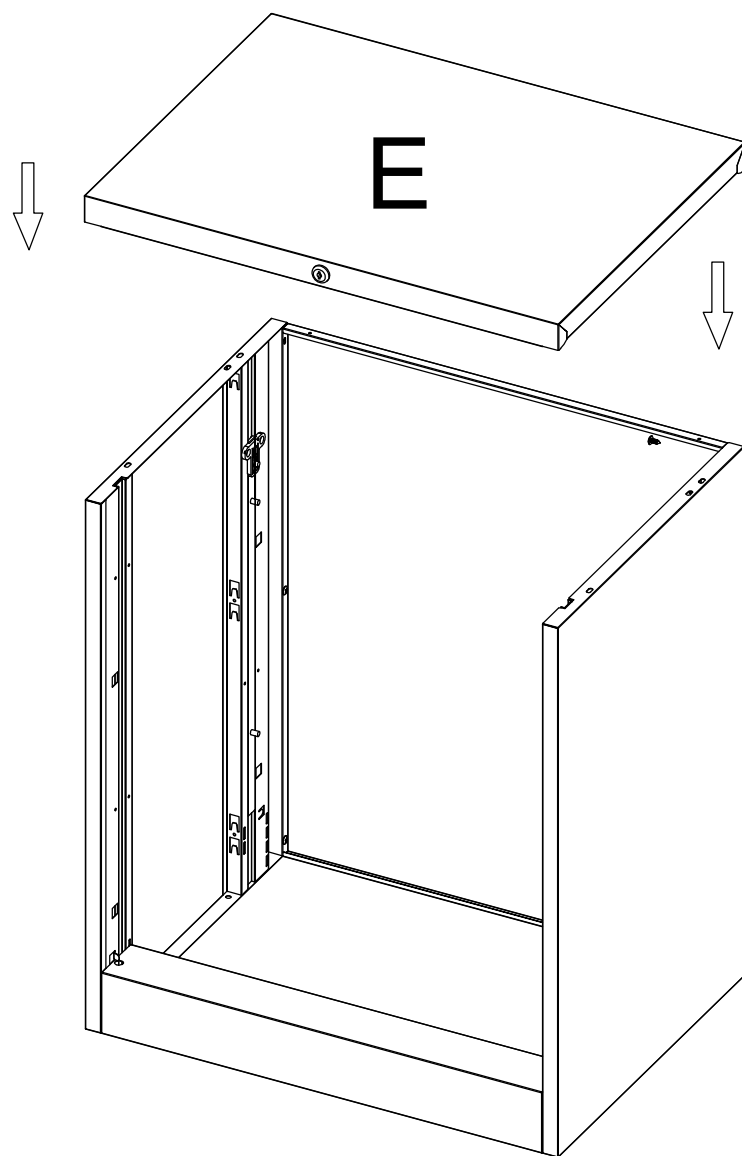


5.Install E

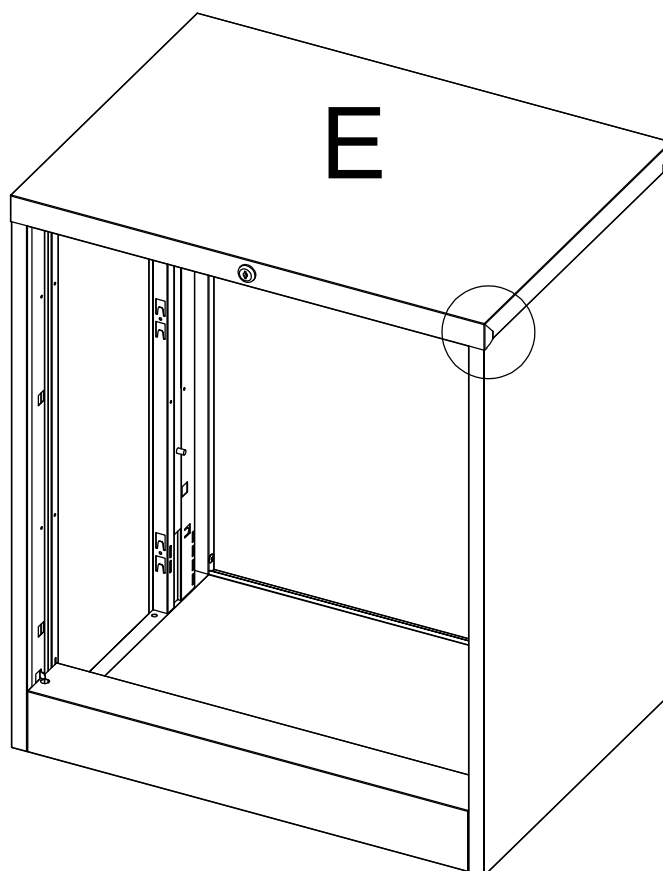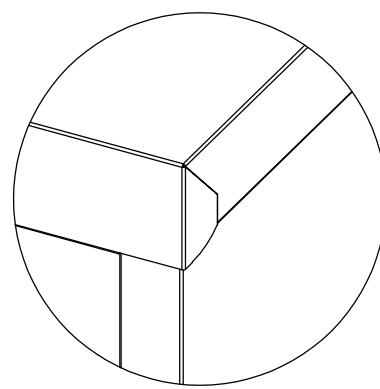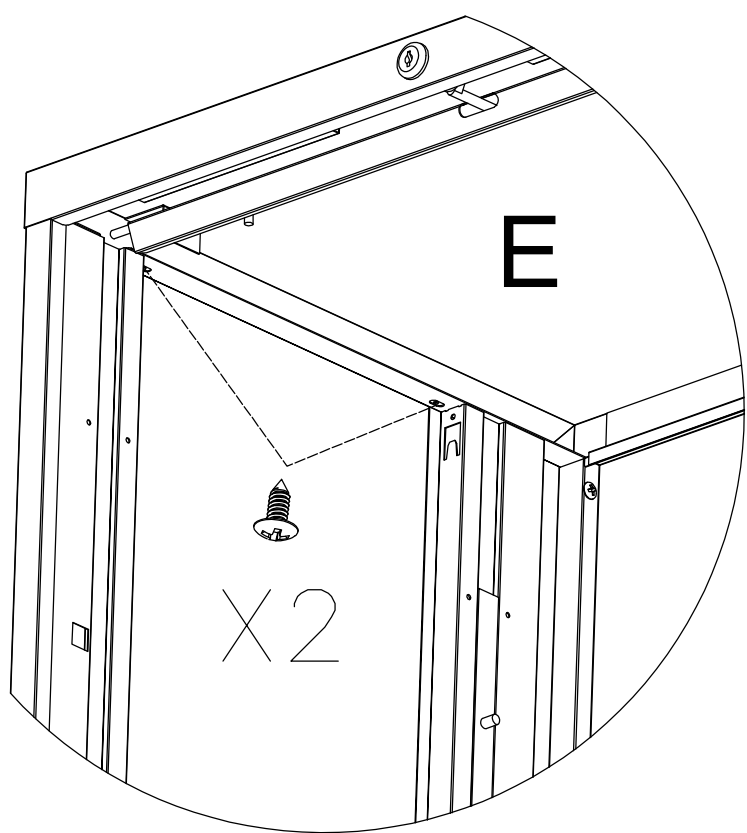




6.Fix with screw

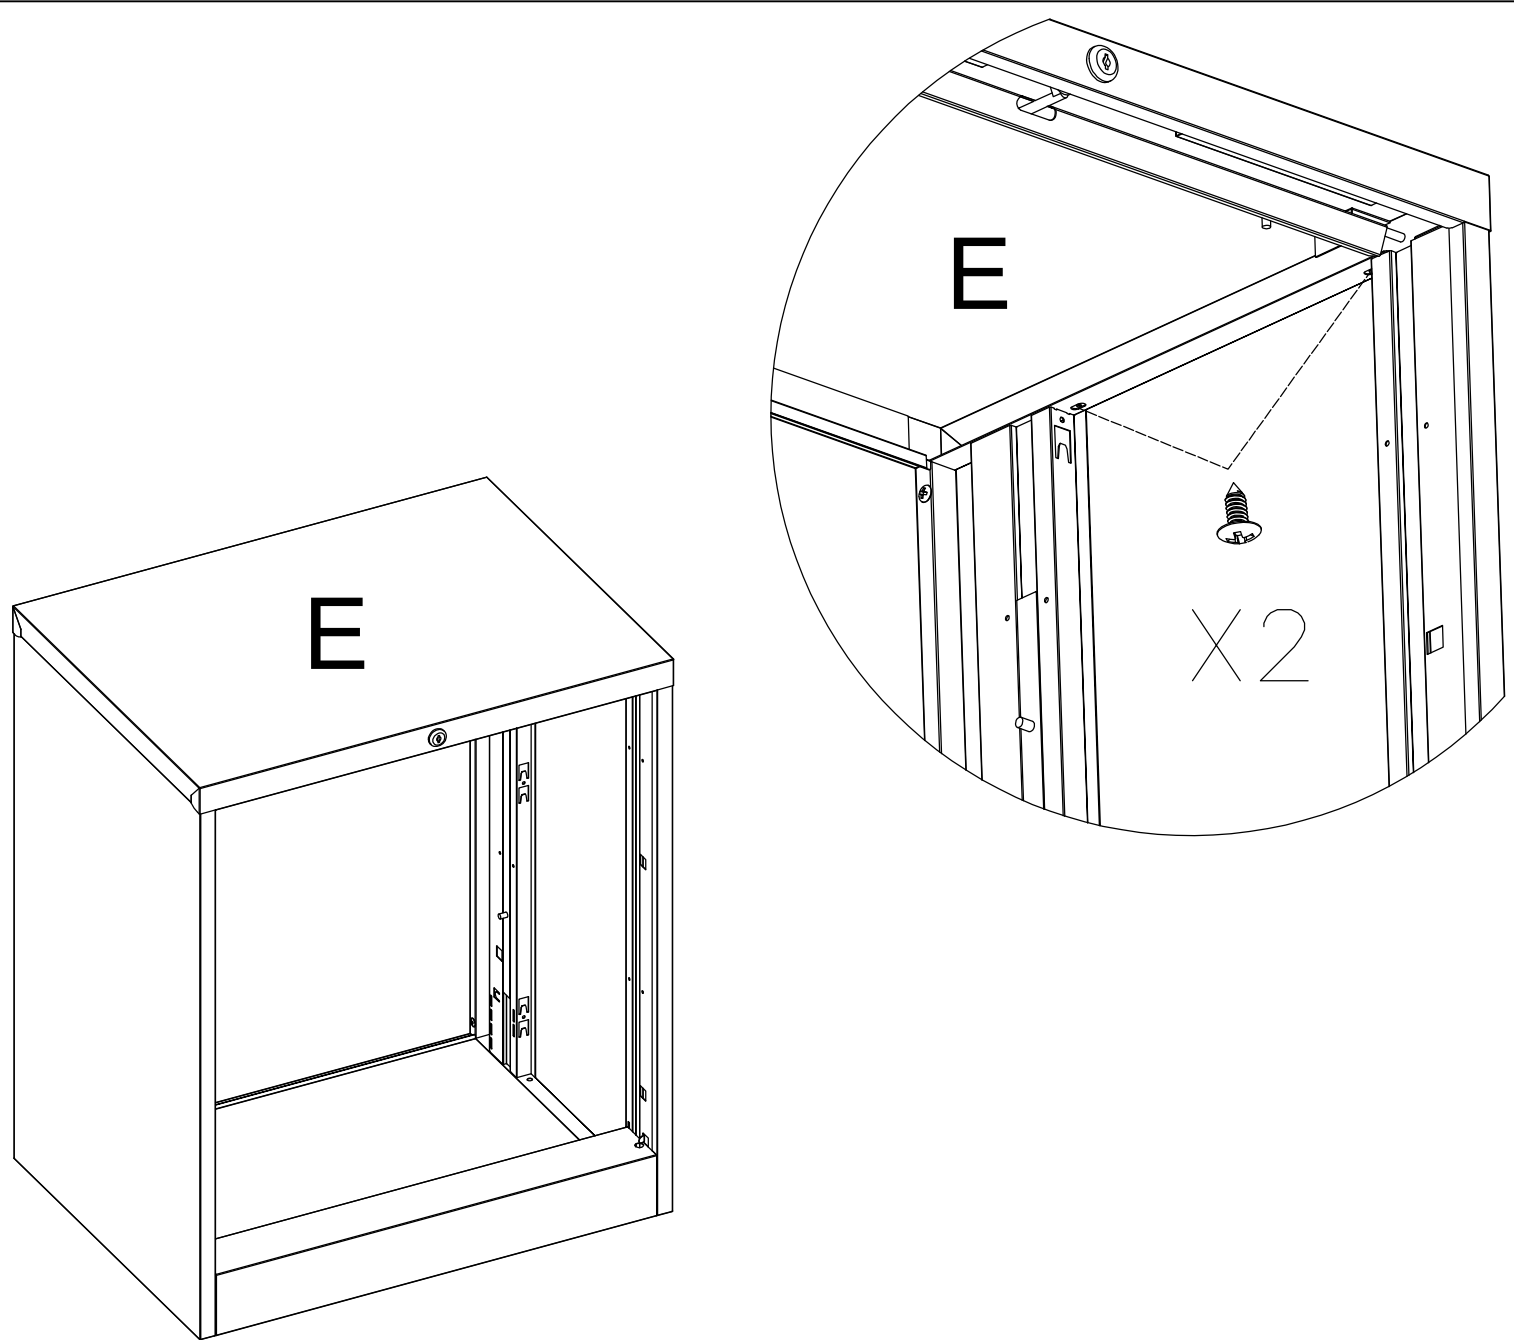




7. Fix with screw

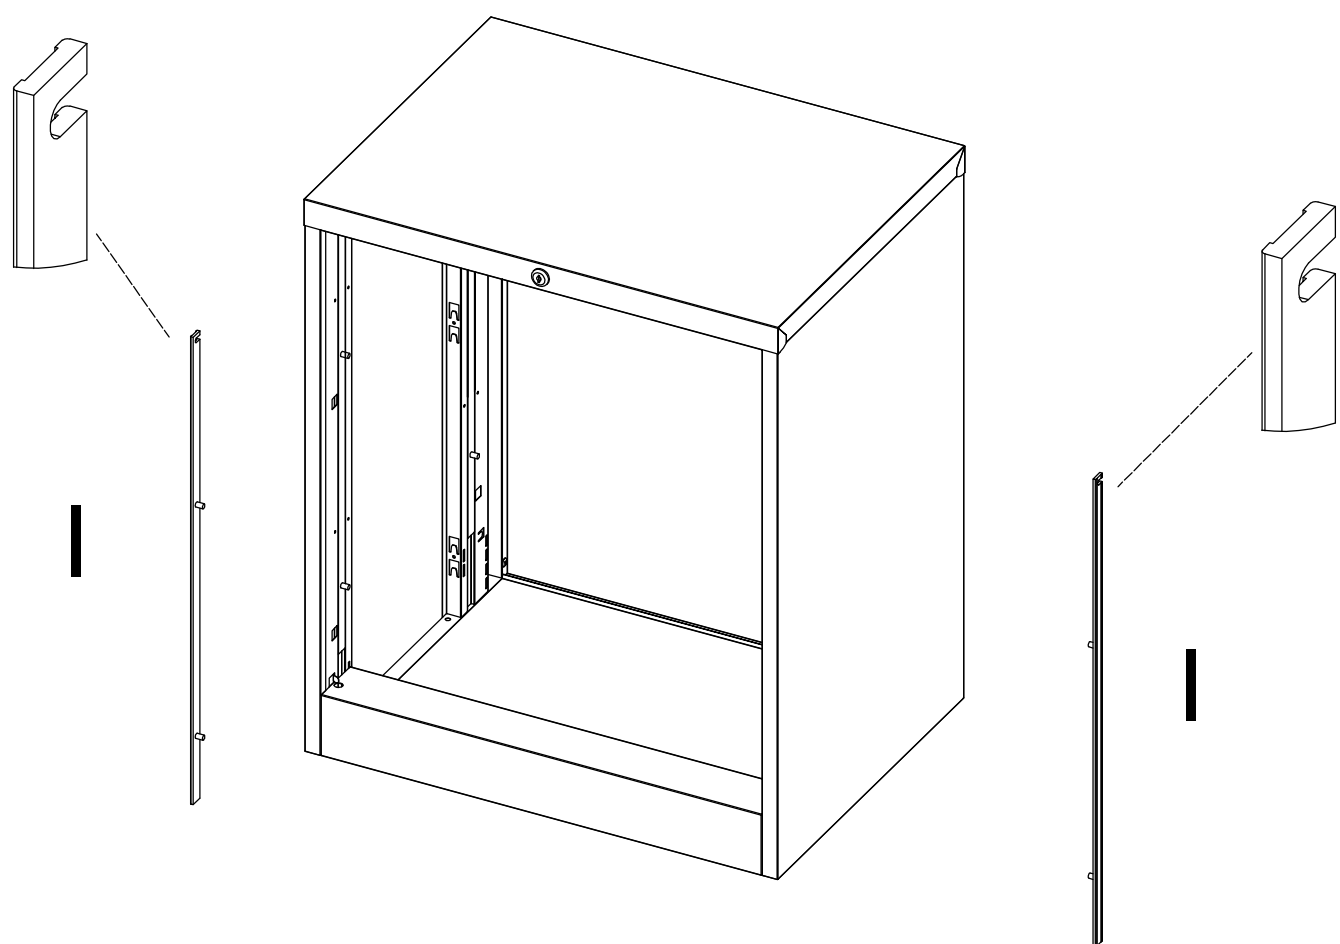


8. Install I

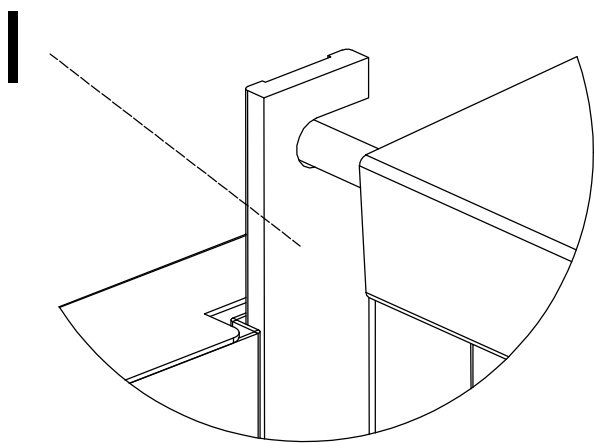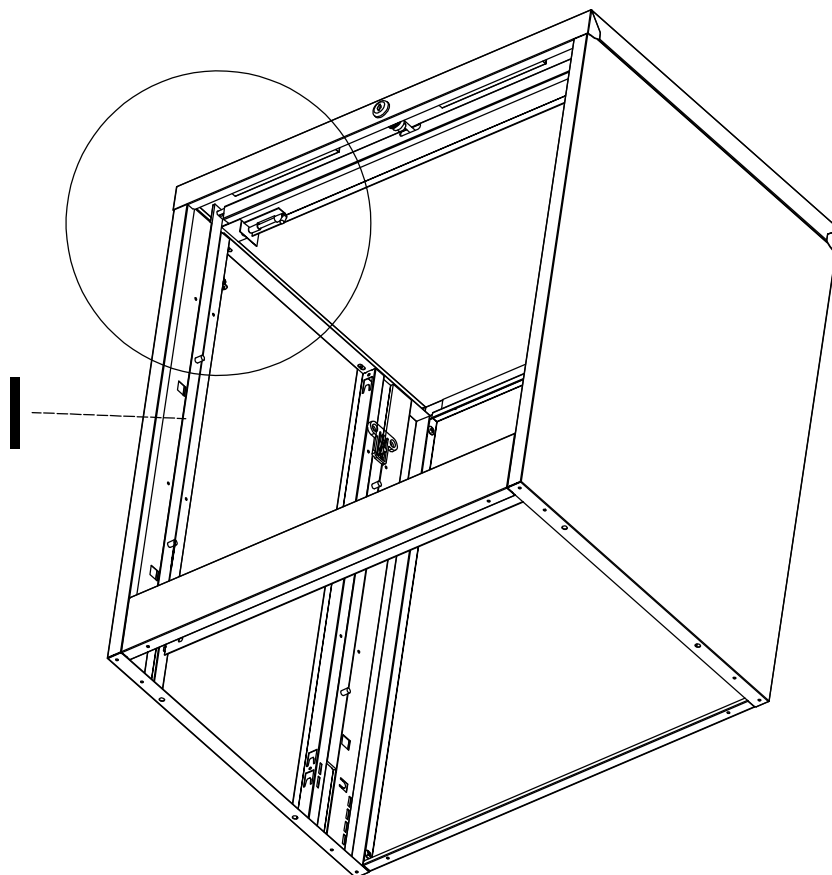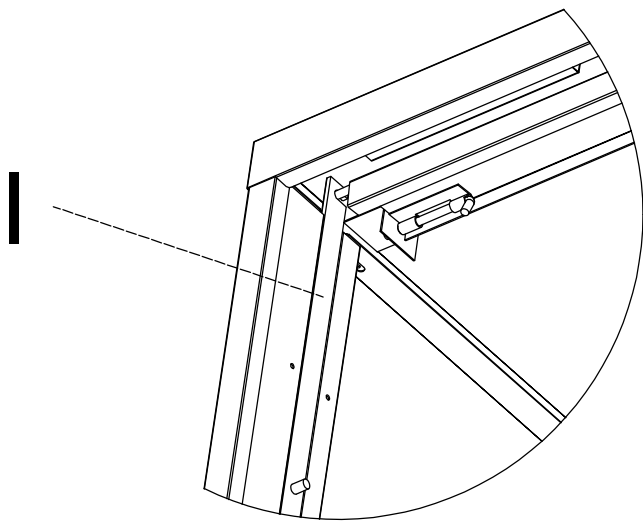


9.Install I

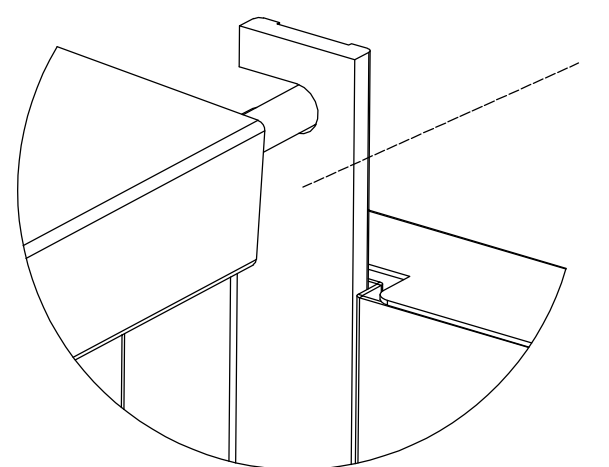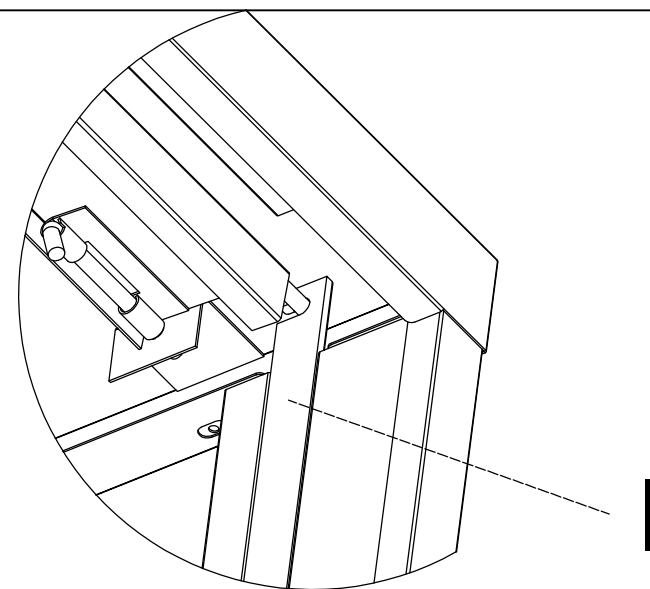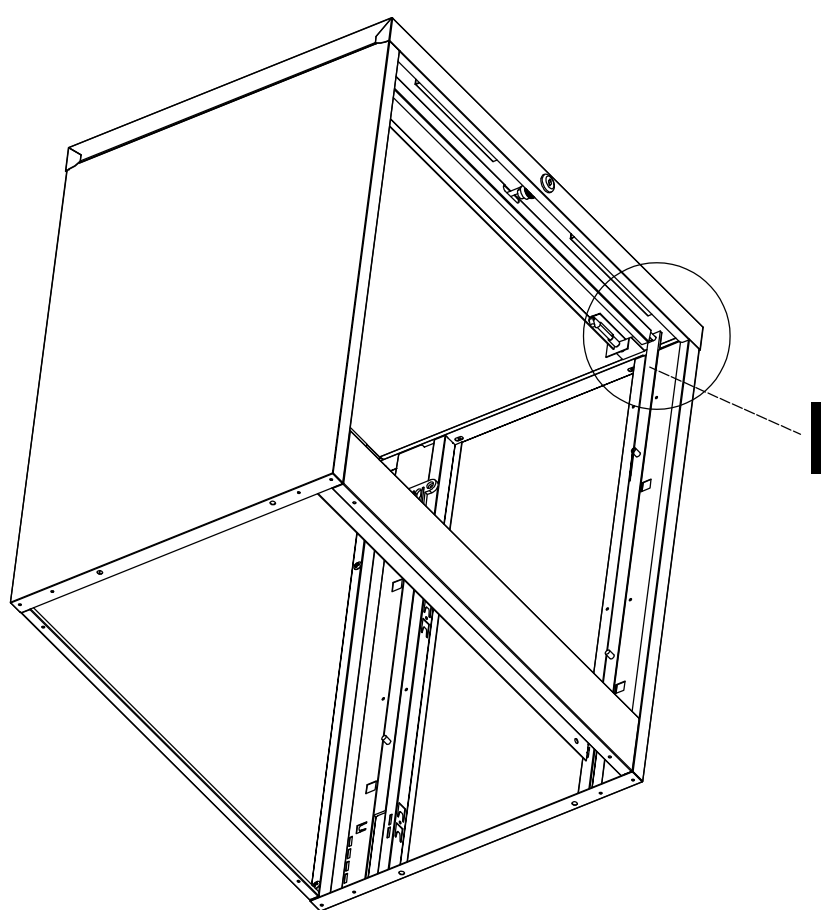


10.Install I

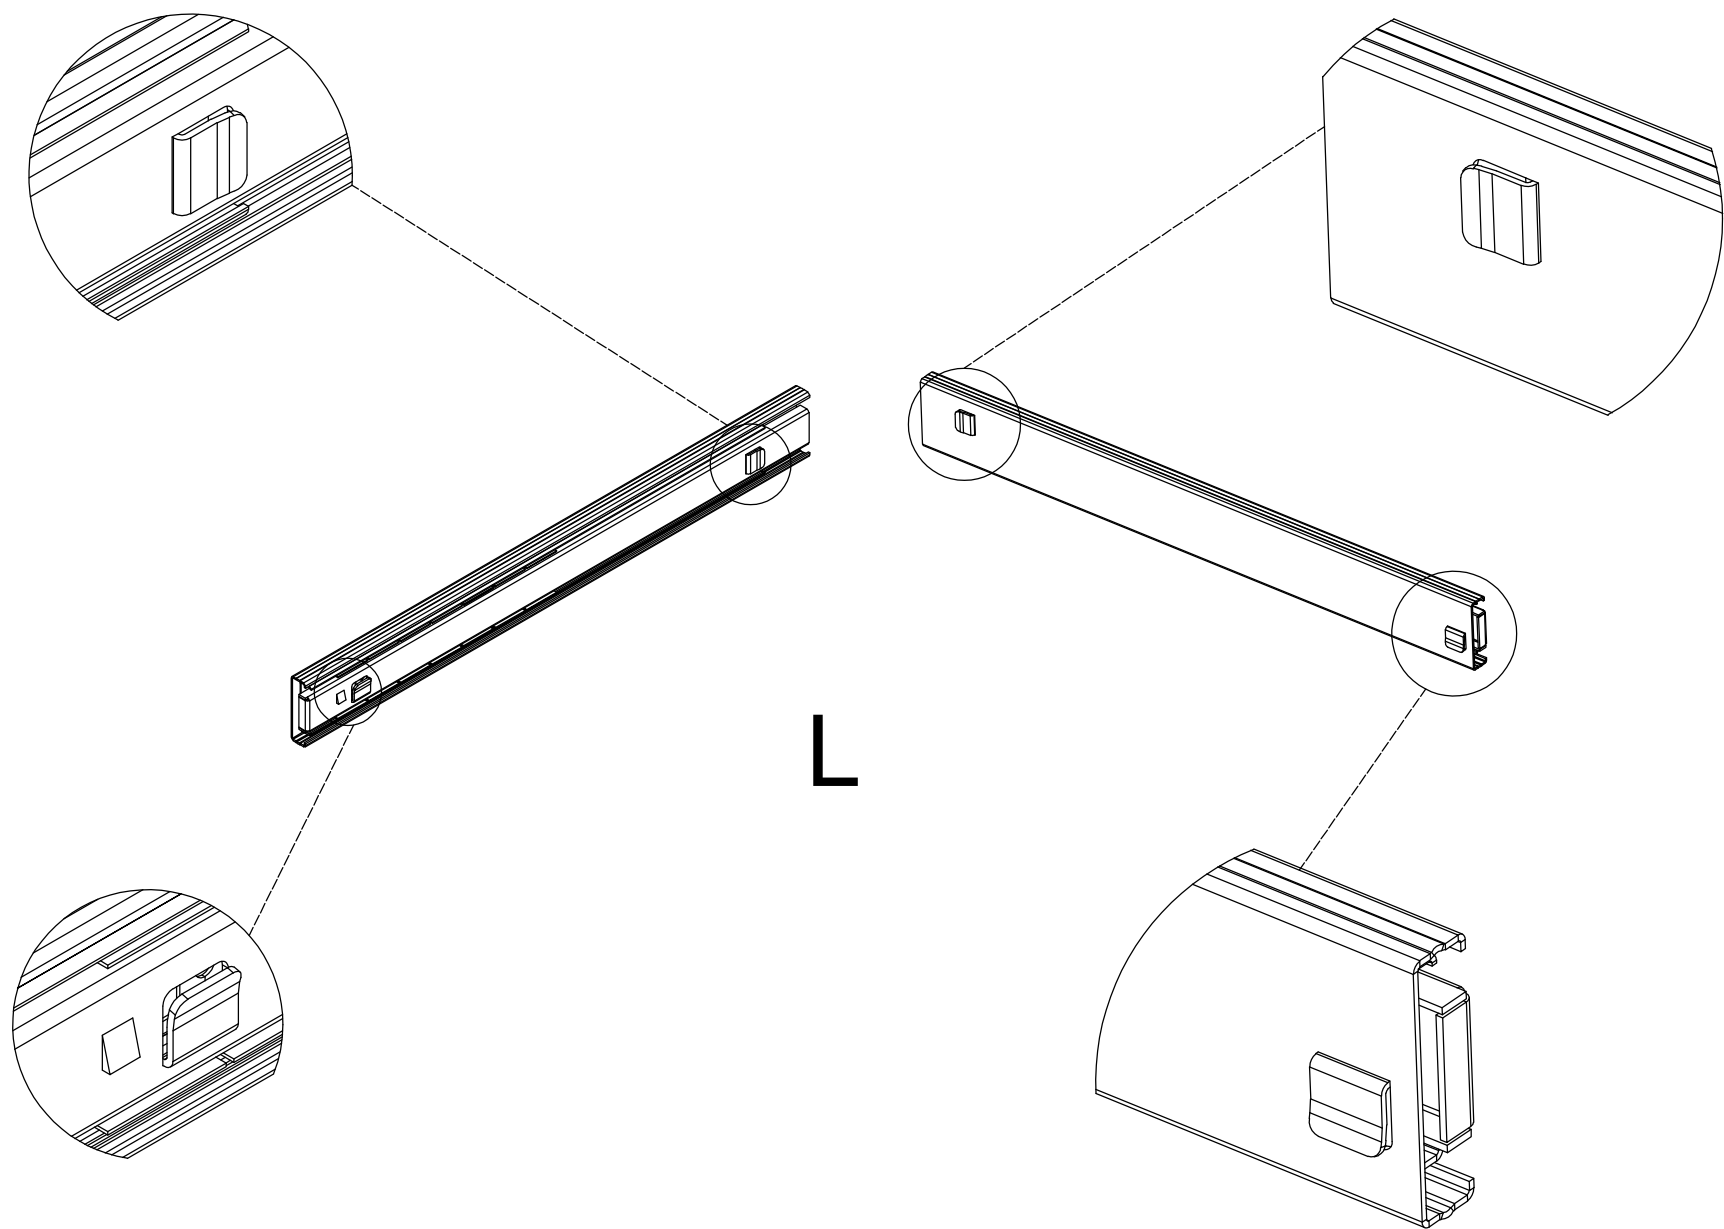


11.Left side rail L

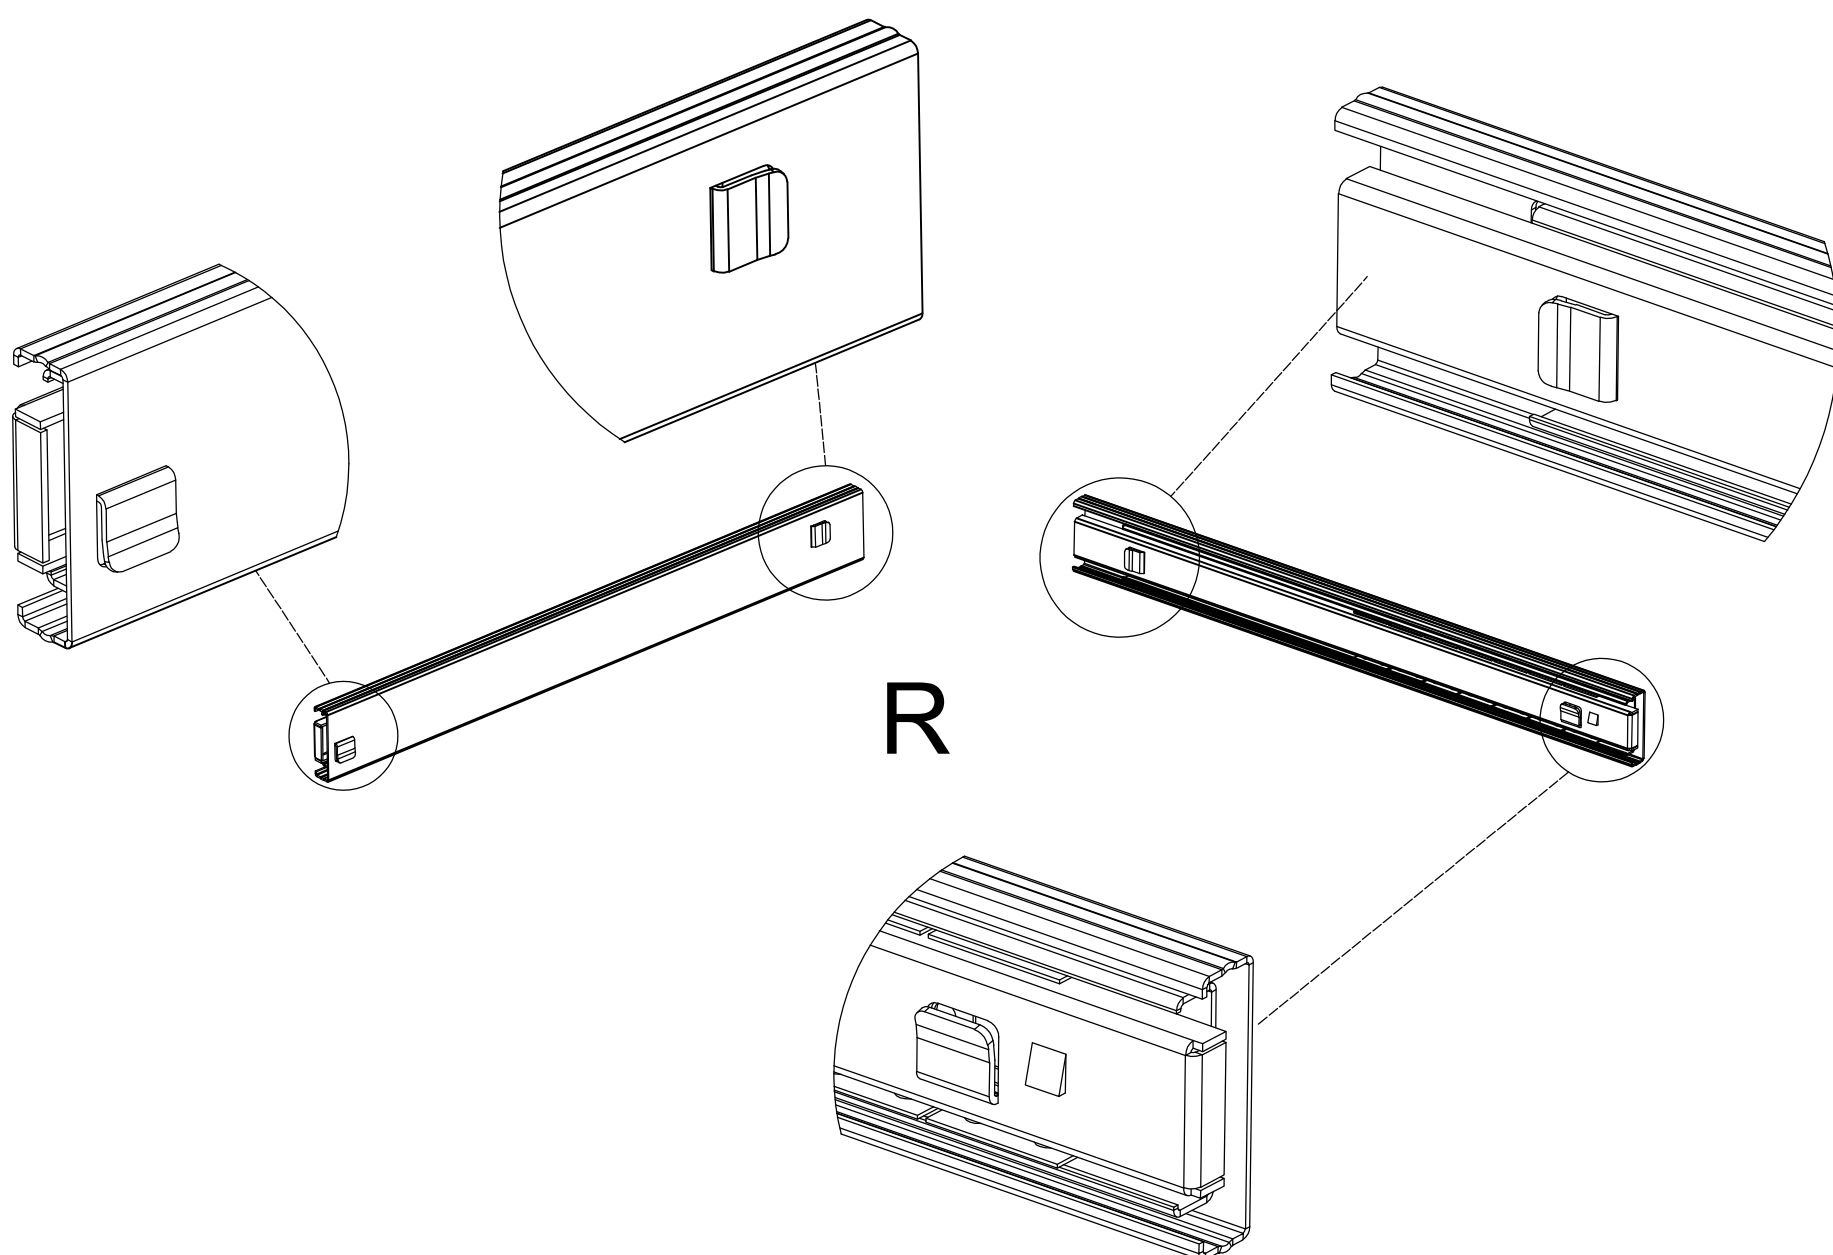


12.Right side rail R

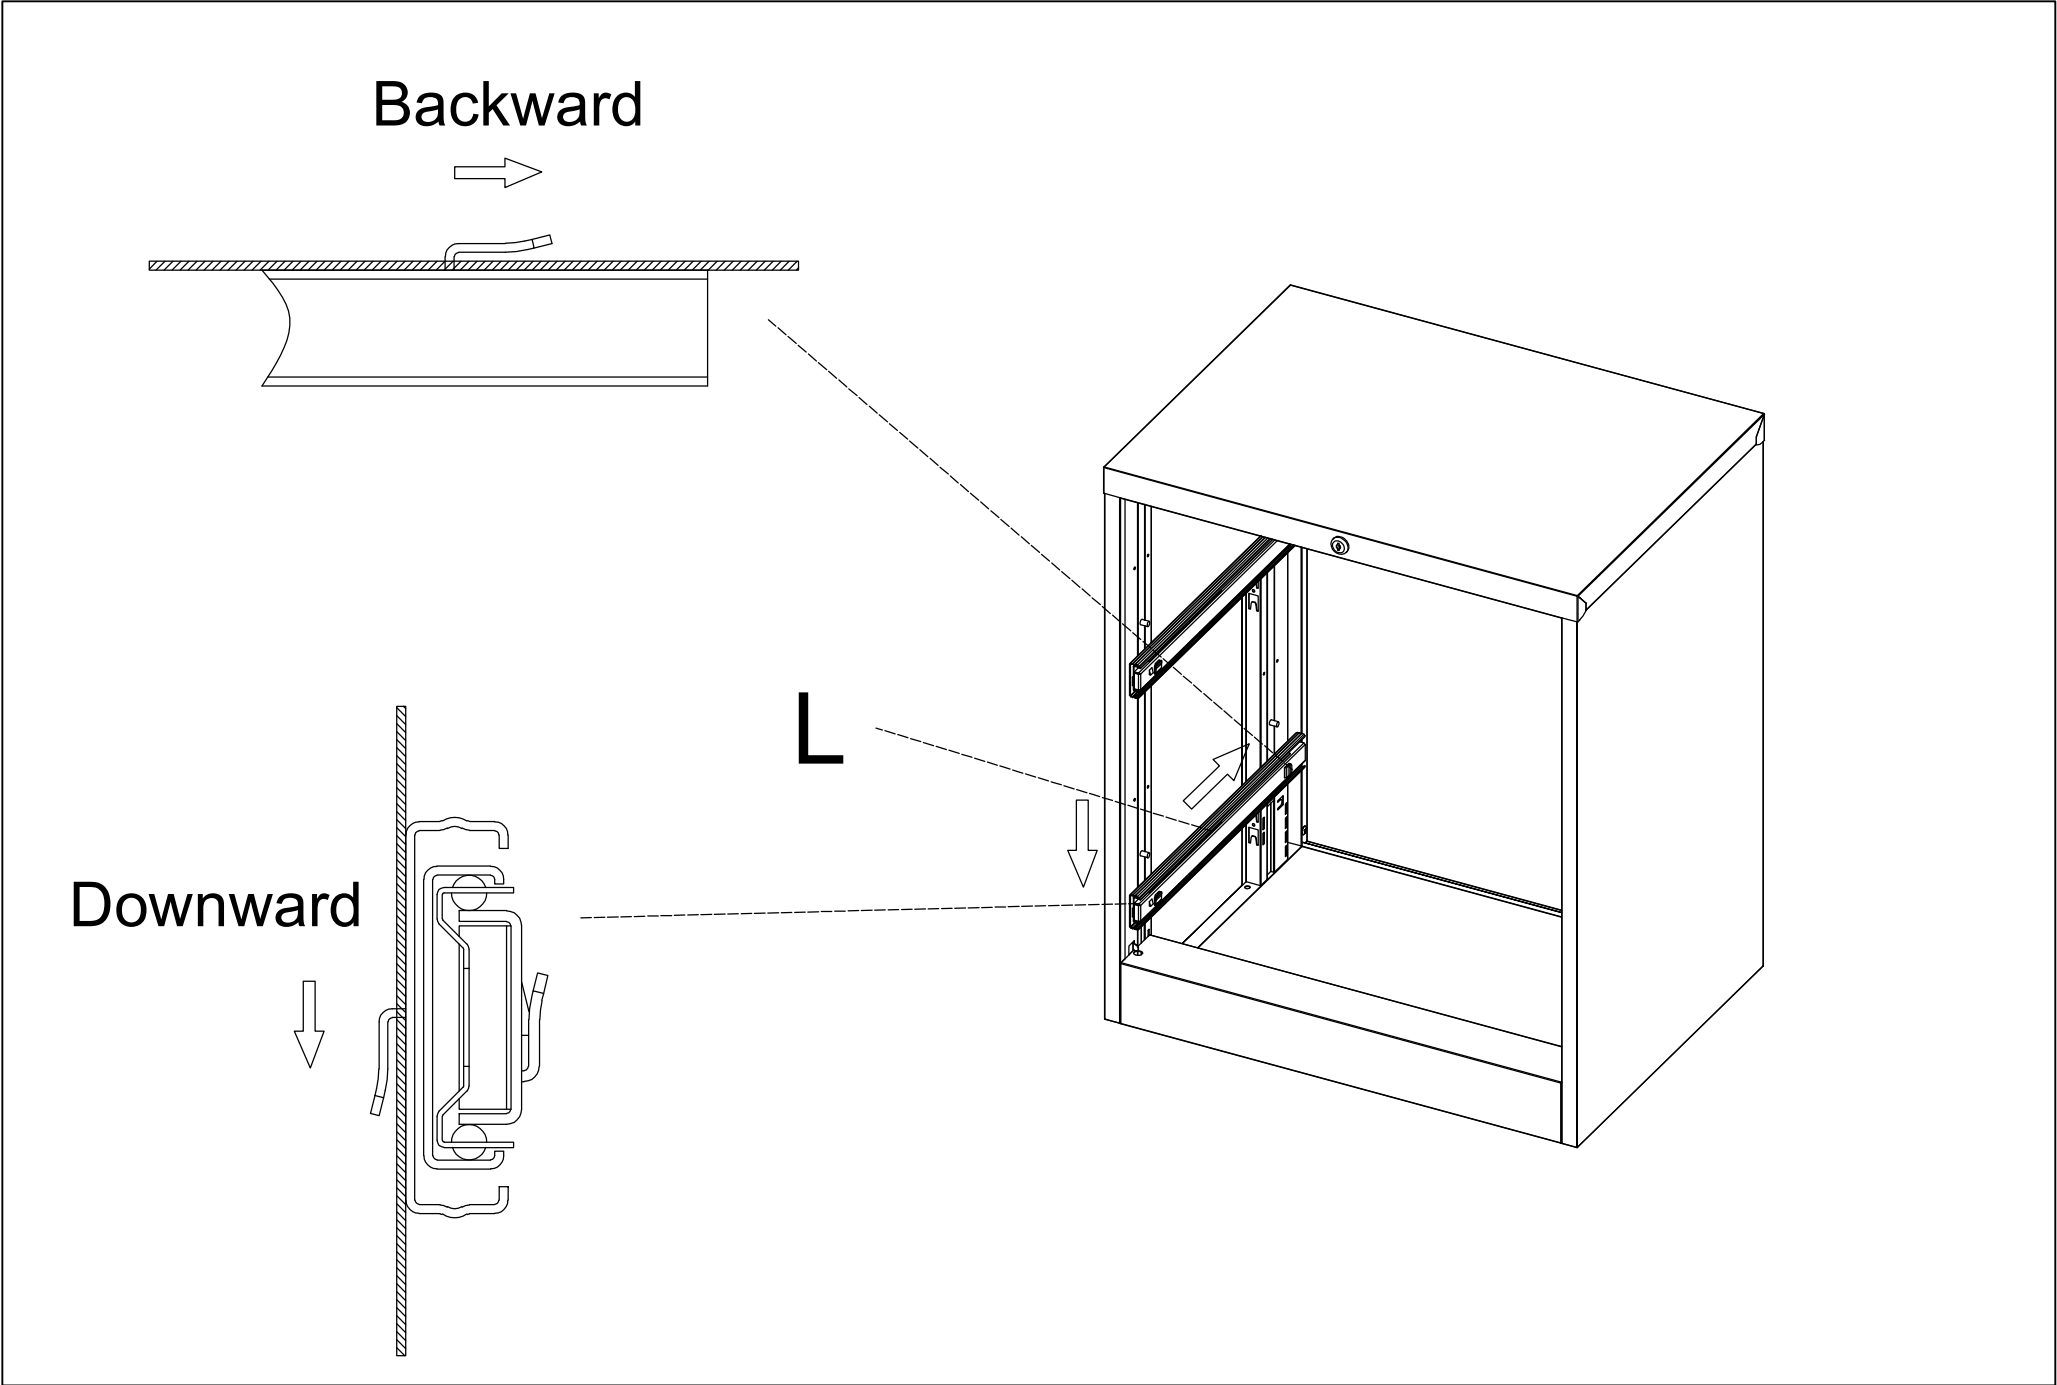





13.Left side rail L

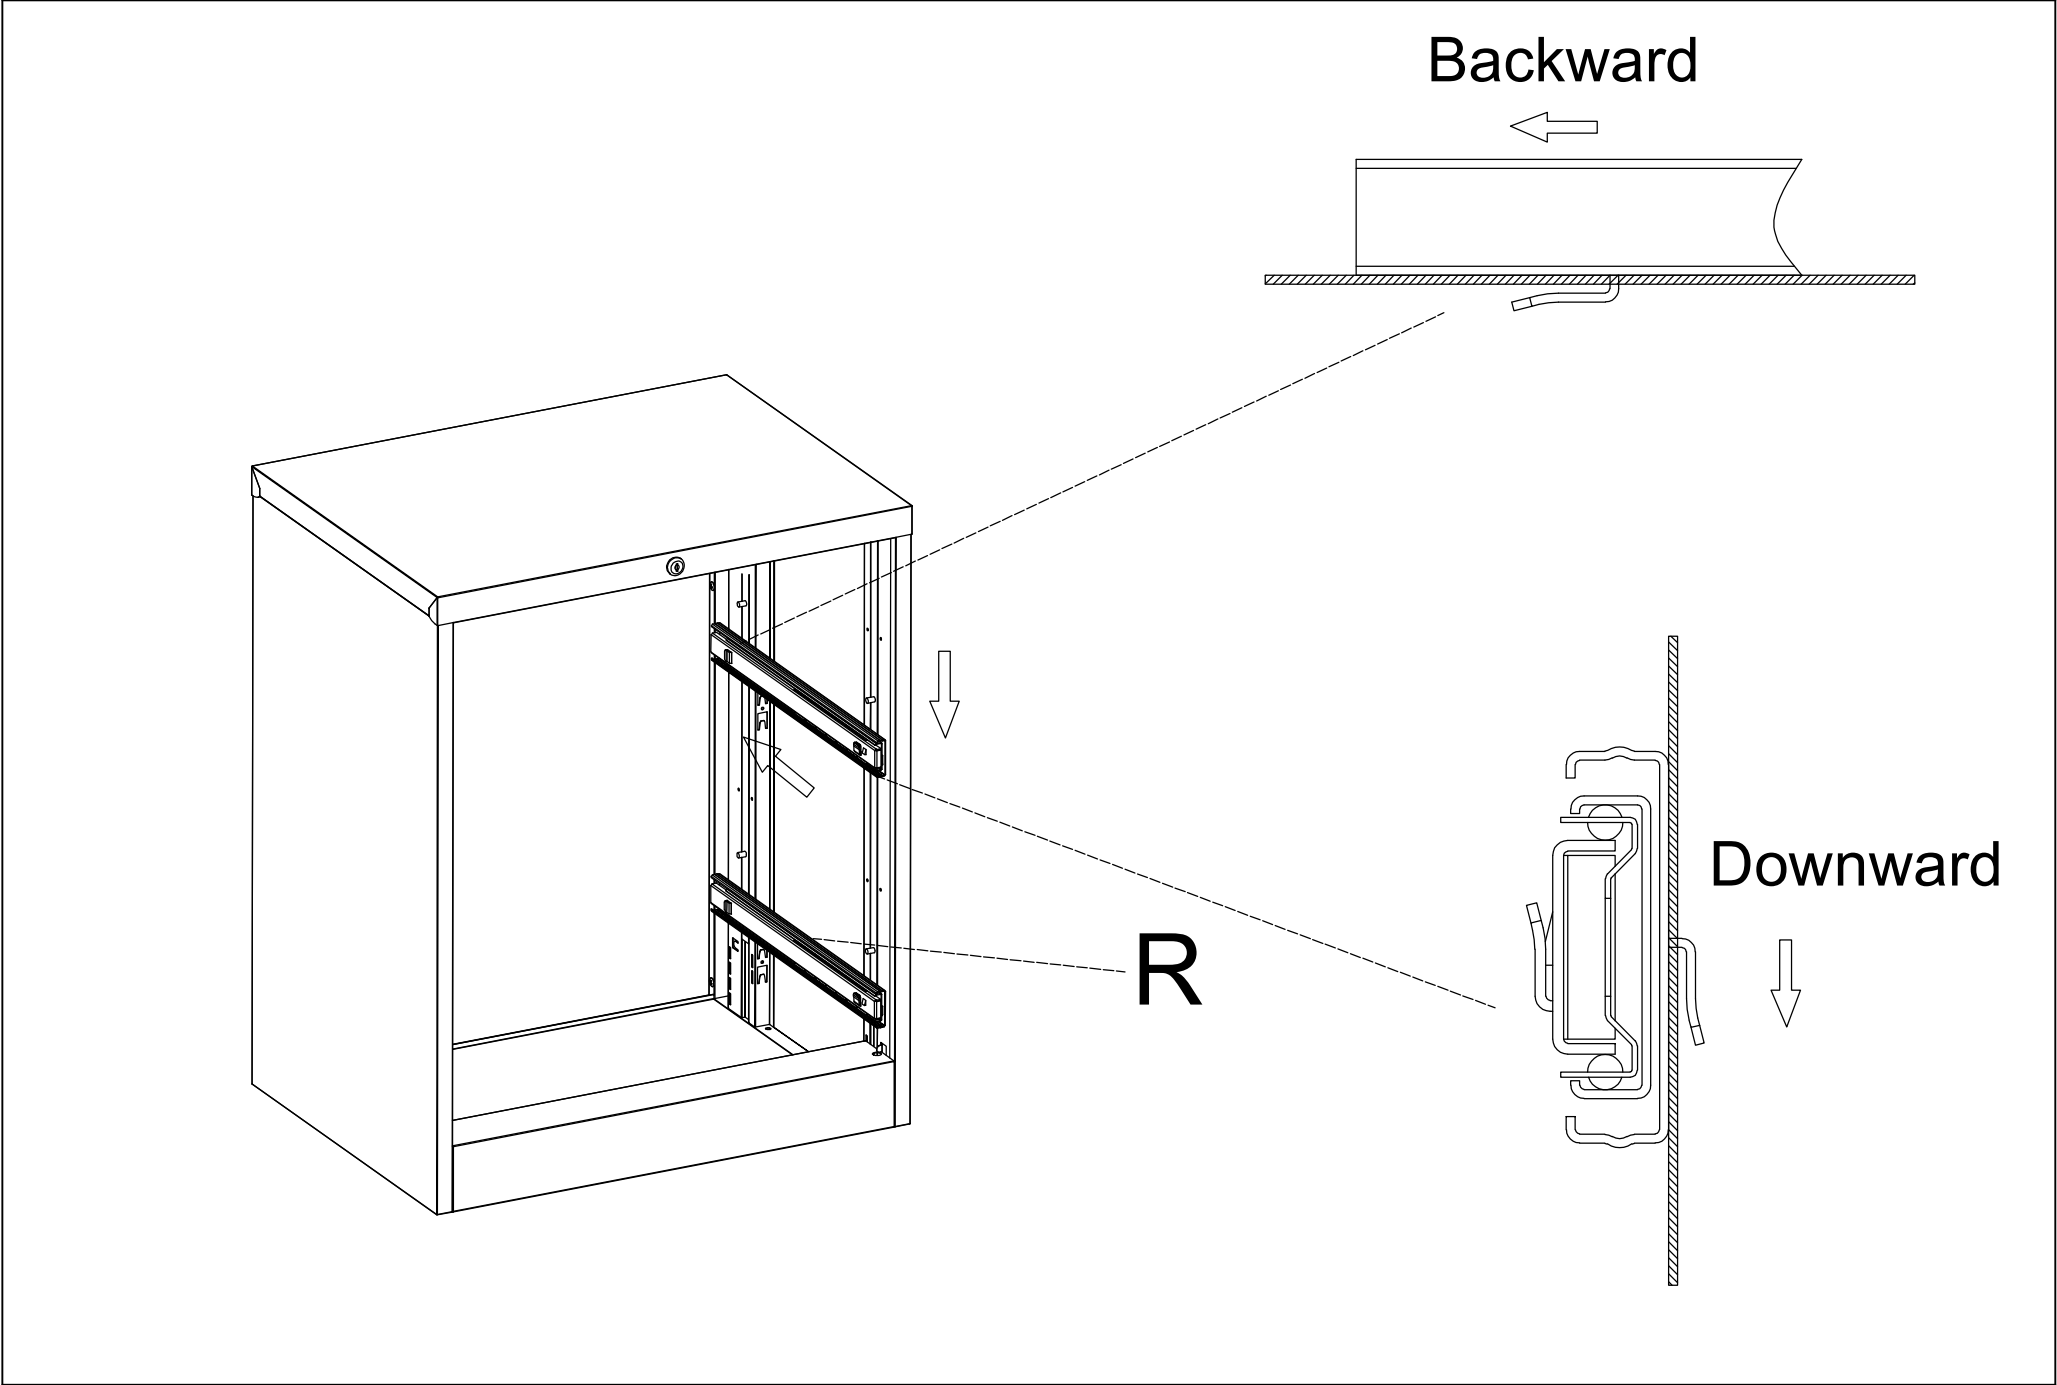


14.Right side rail R

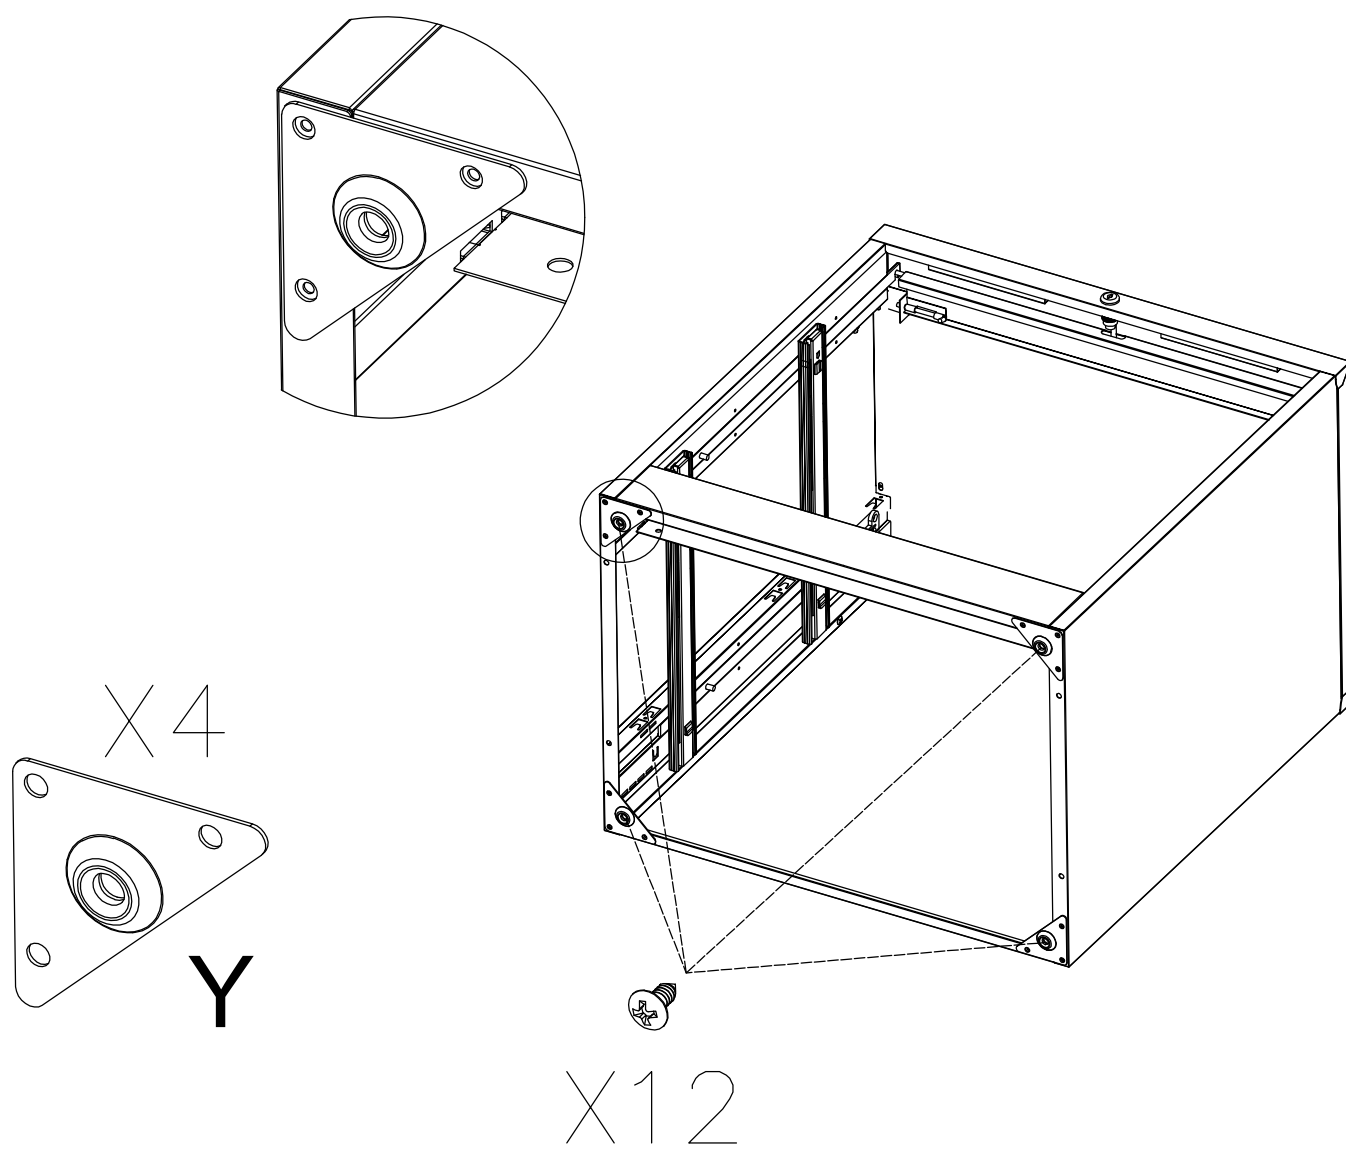


15.Install Y

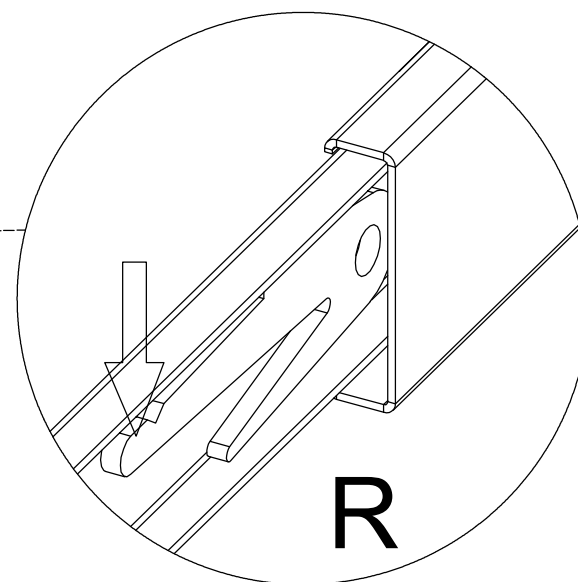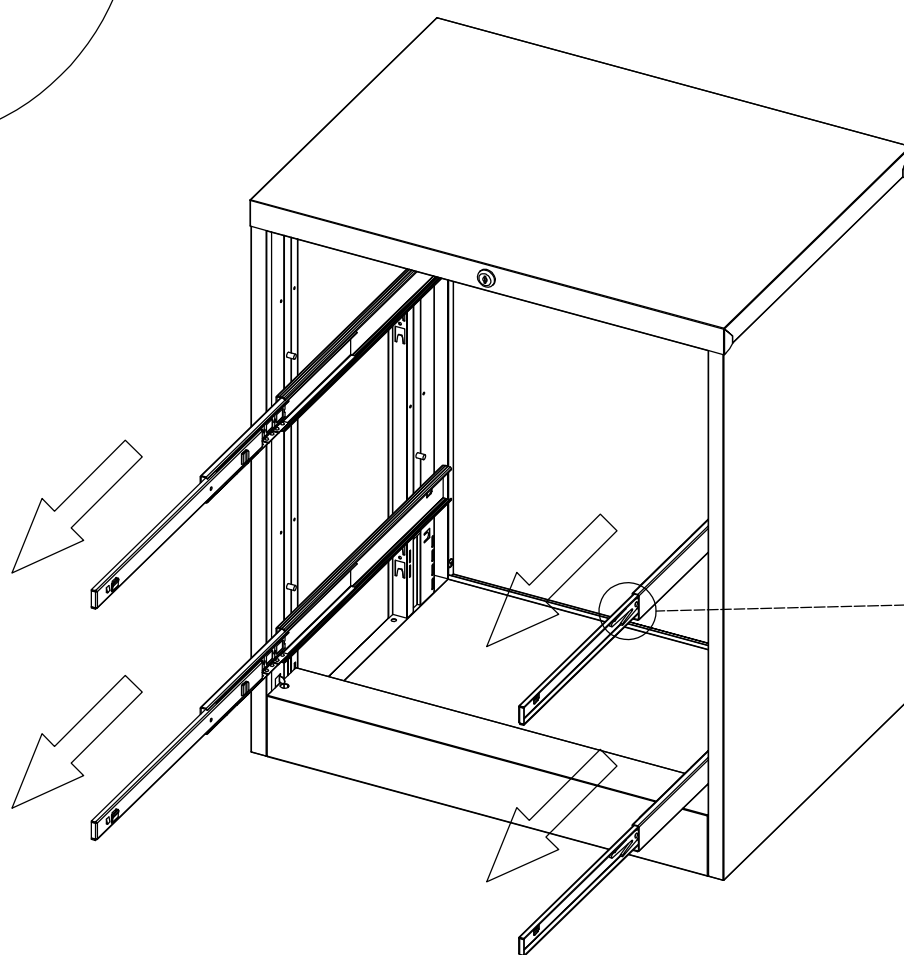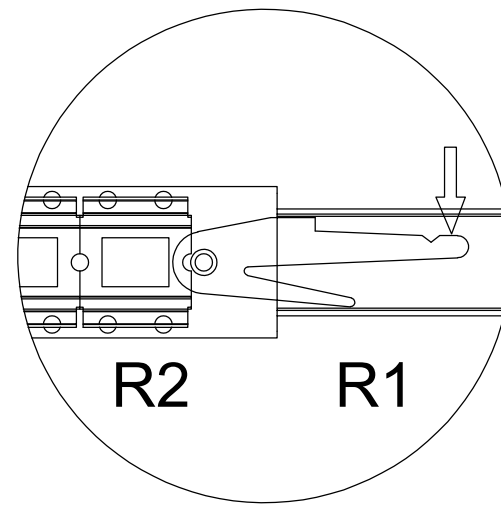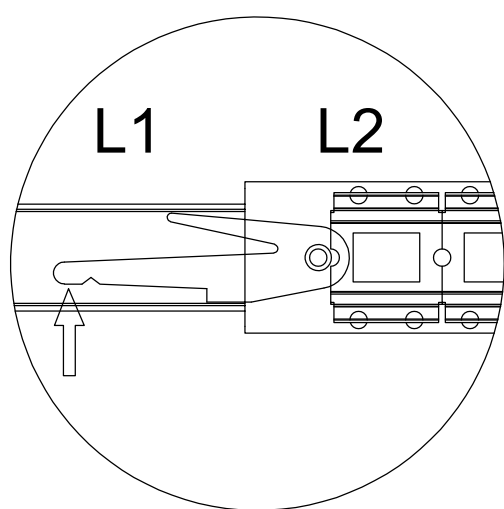


16.Divide the slide rail into L1(R1) and L2(R2)

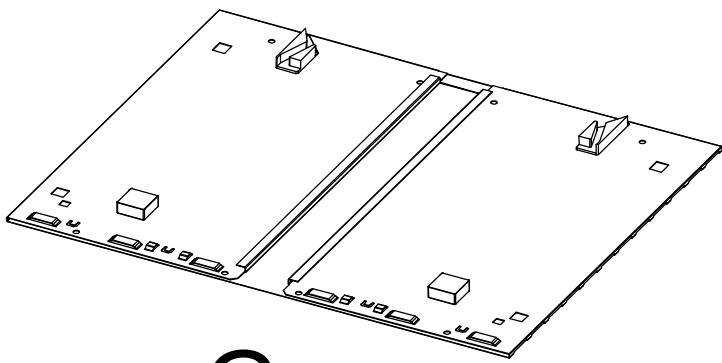


G

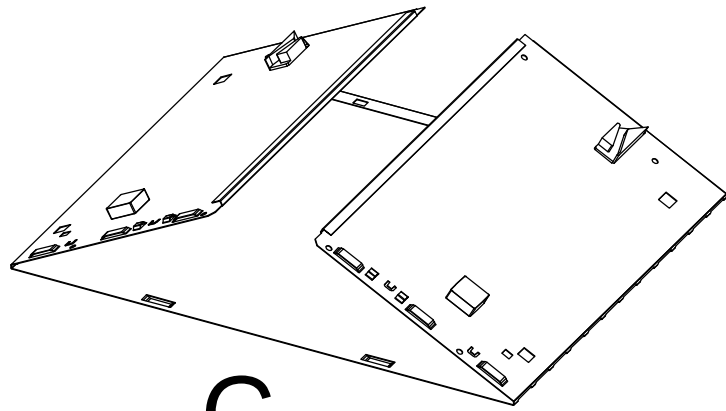

G

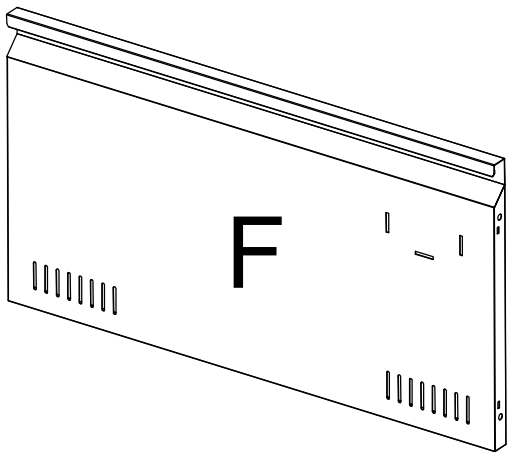


F

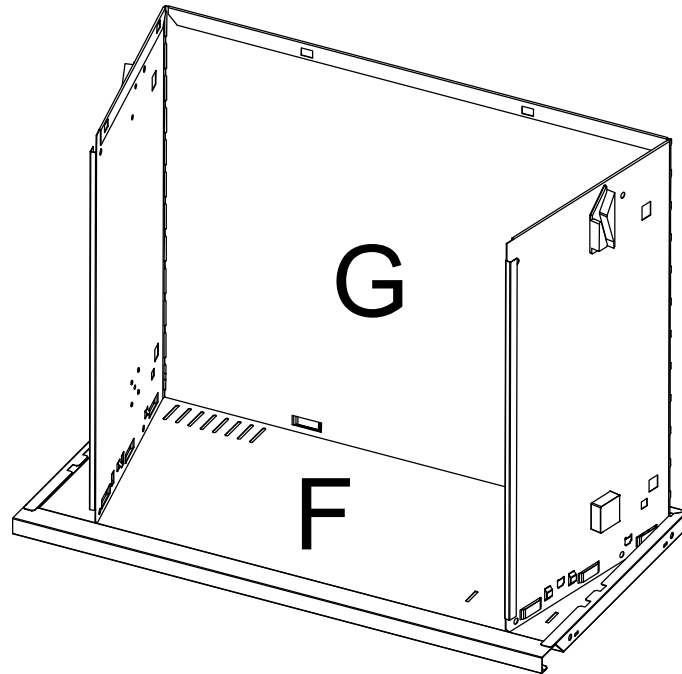


G

F



17.Combine F and G.

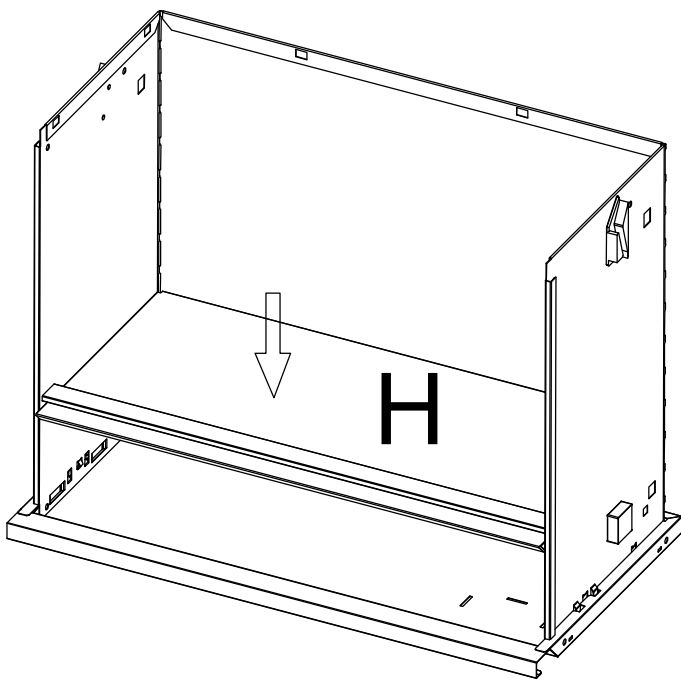


H

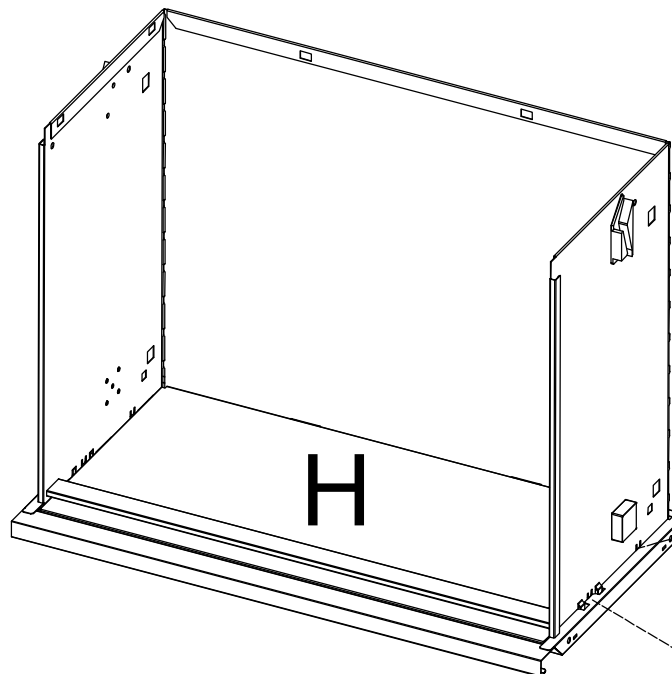


H

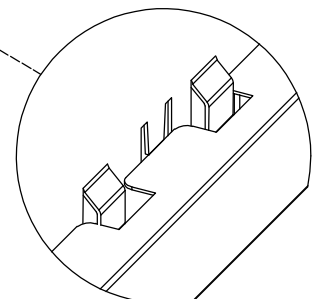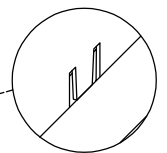


18.Combine F, G,and H.

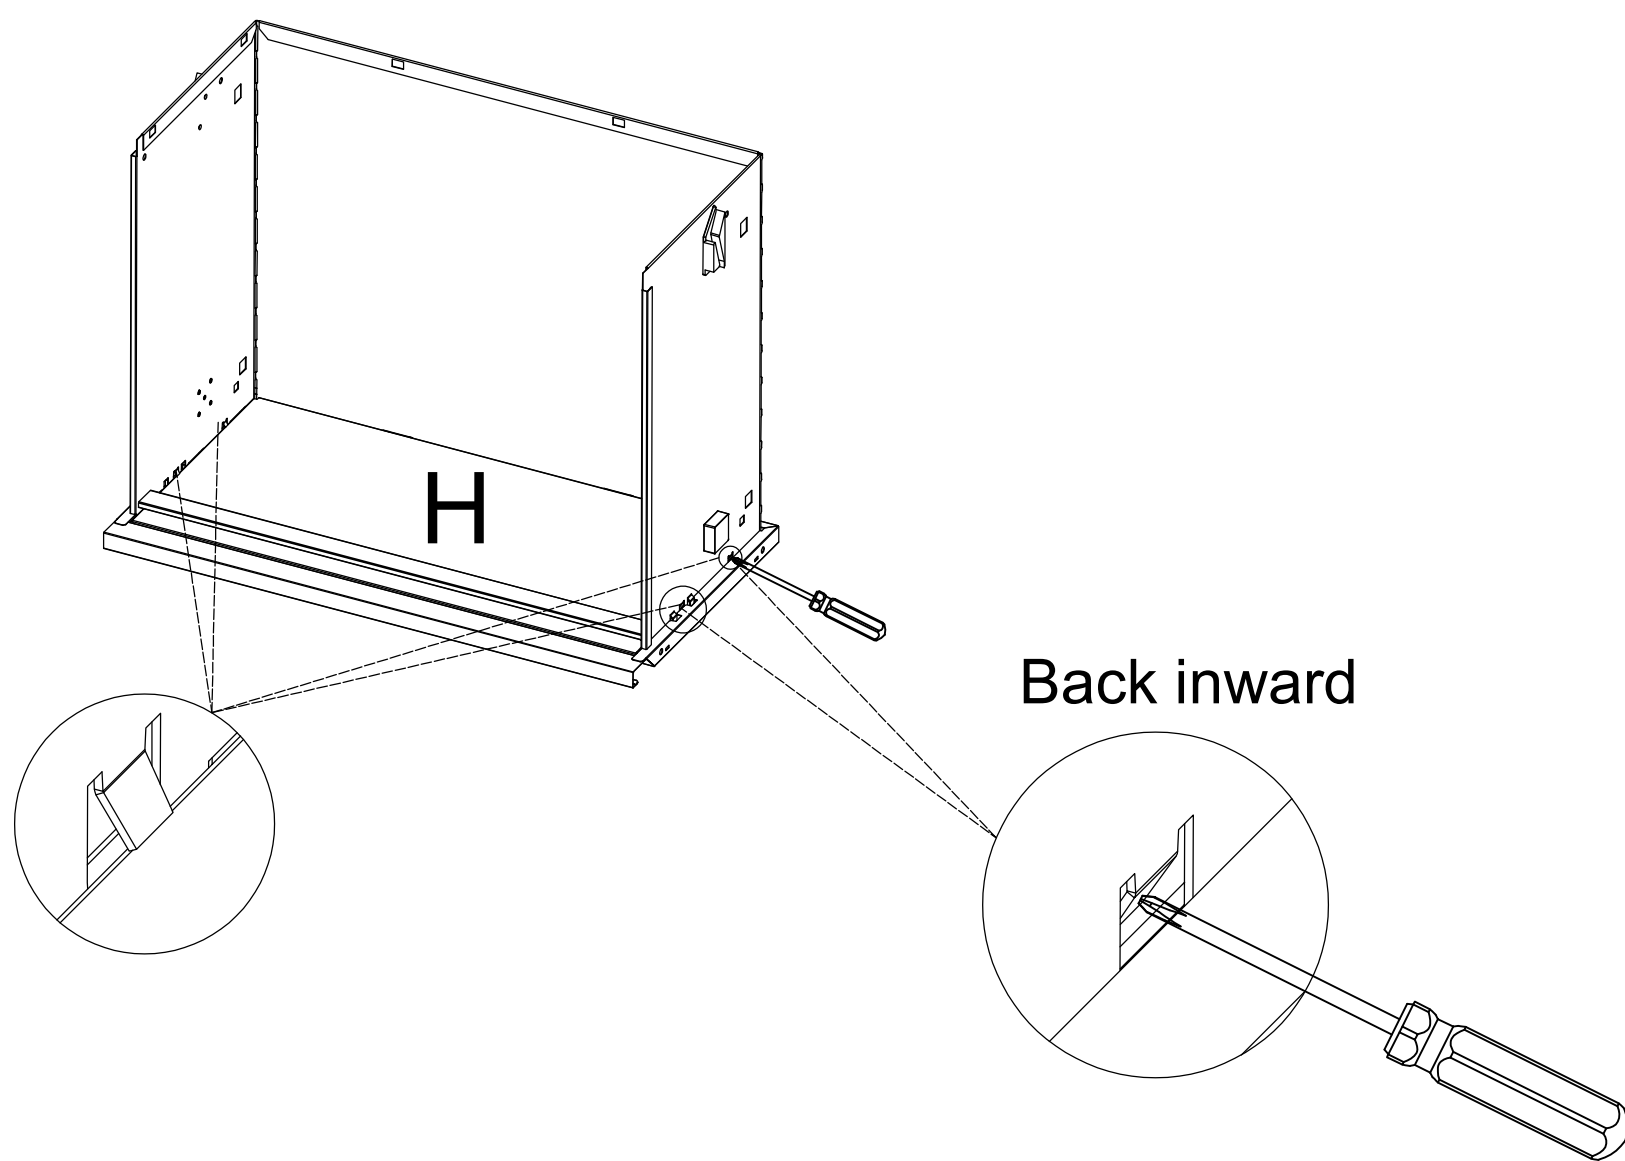


19.Open baffle

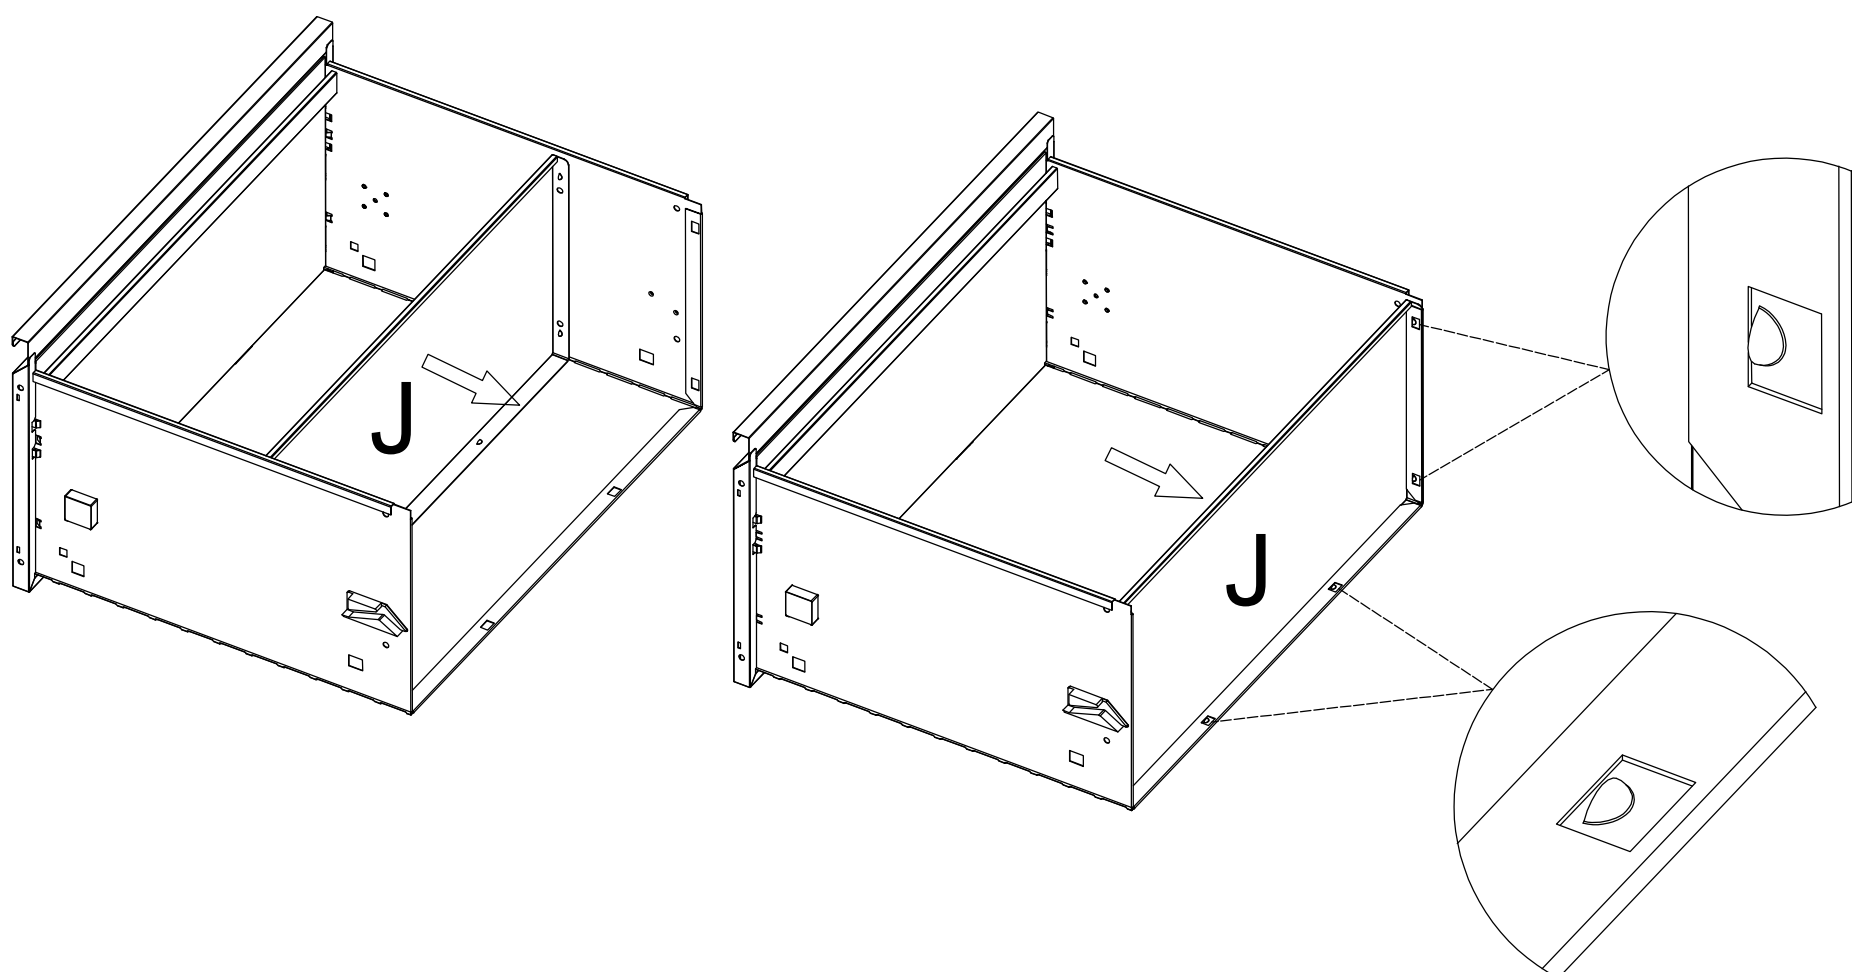


20.Combine F, G, H, and J.

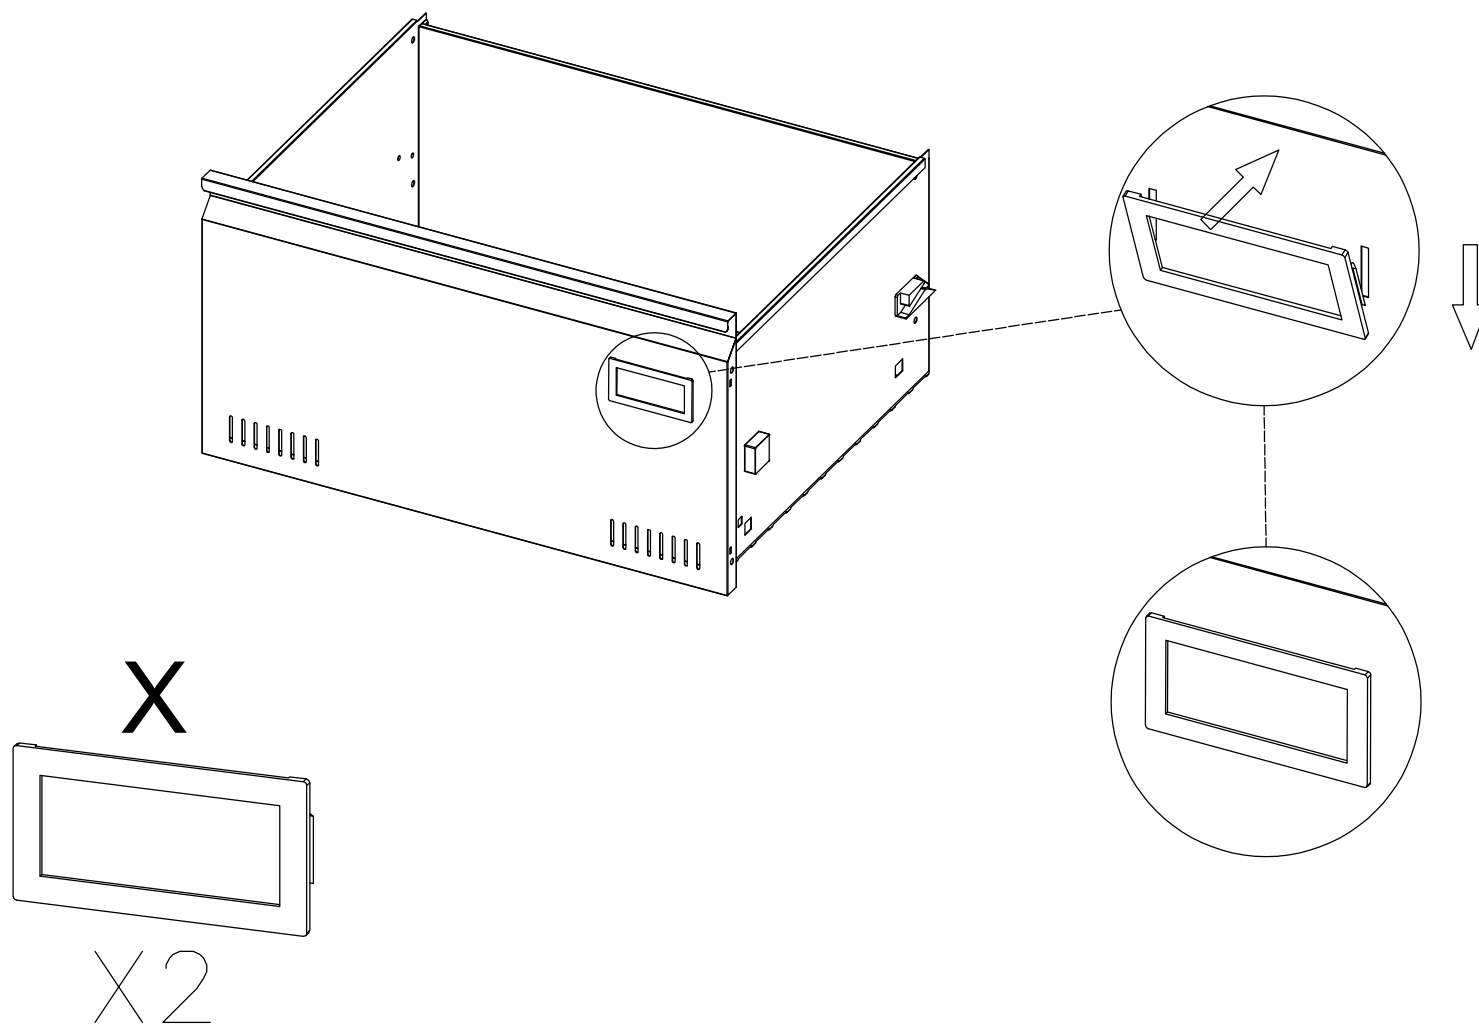


21.Install X

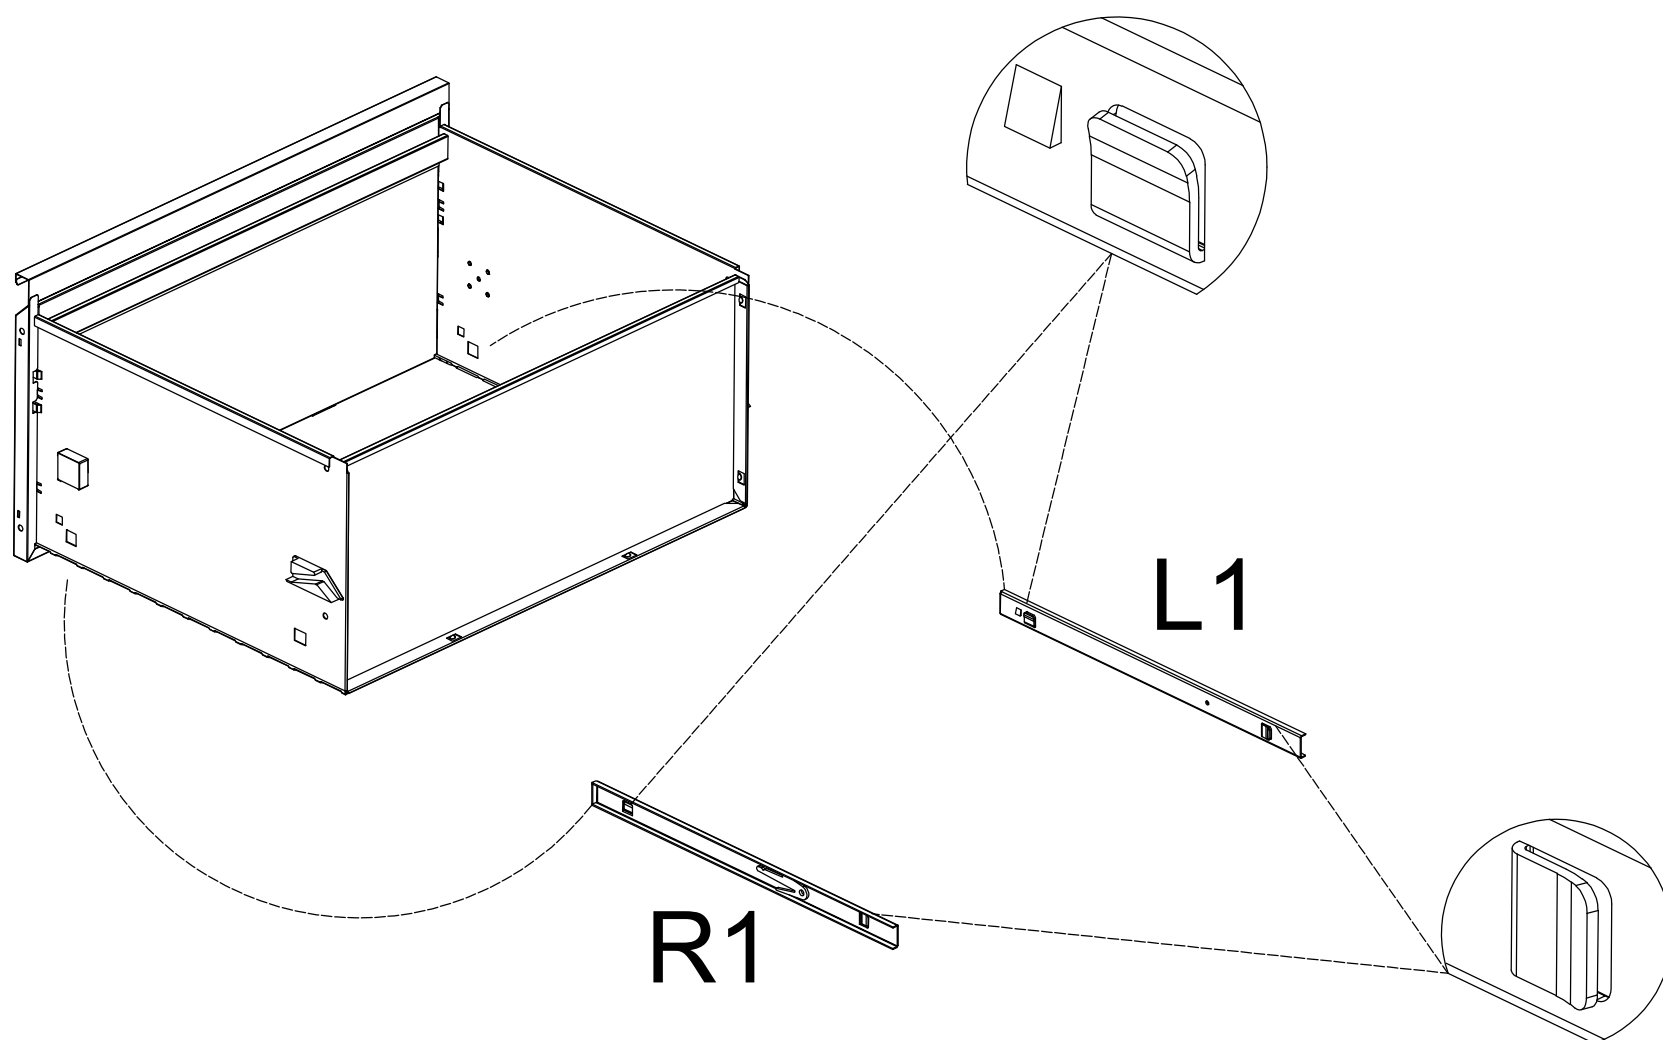

22.Install L1 and R1

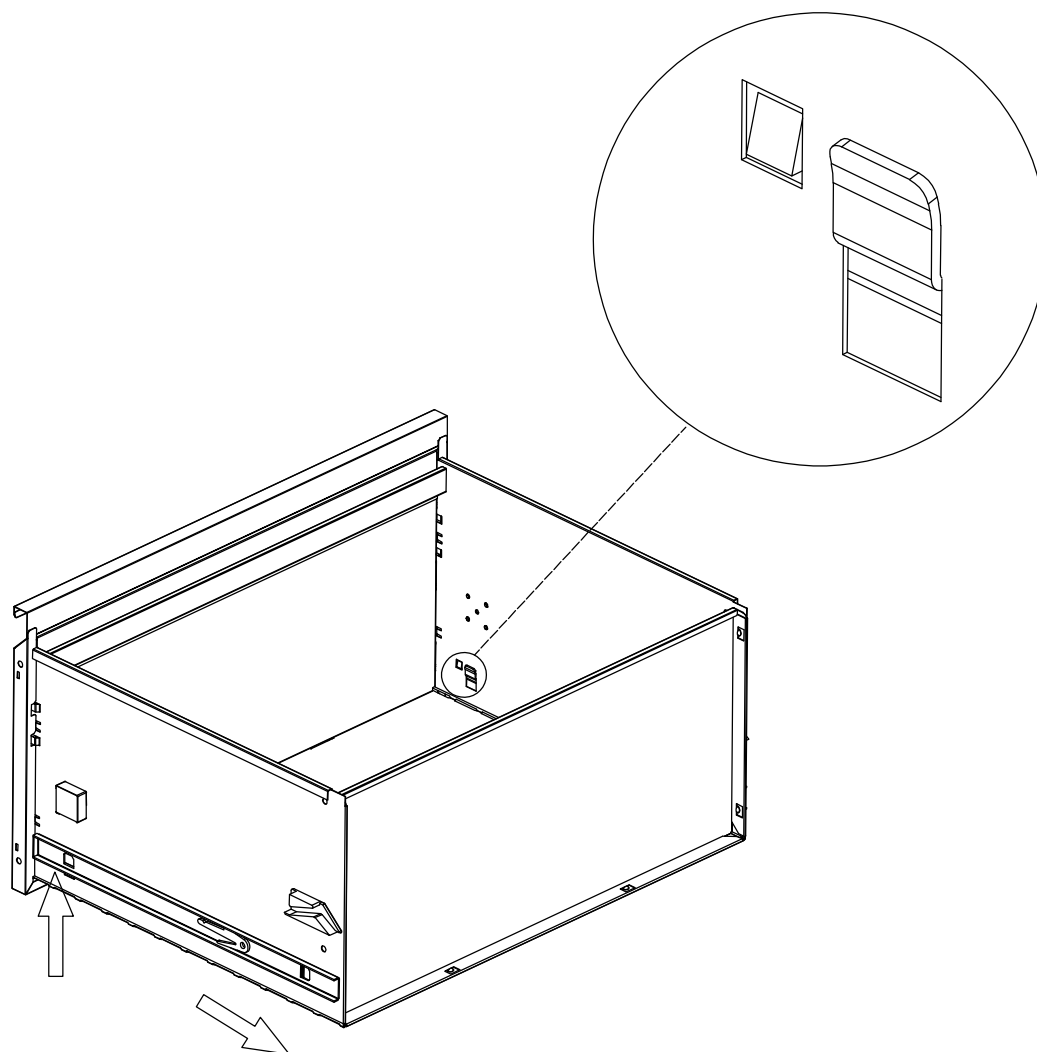


23.Install L1 and R1

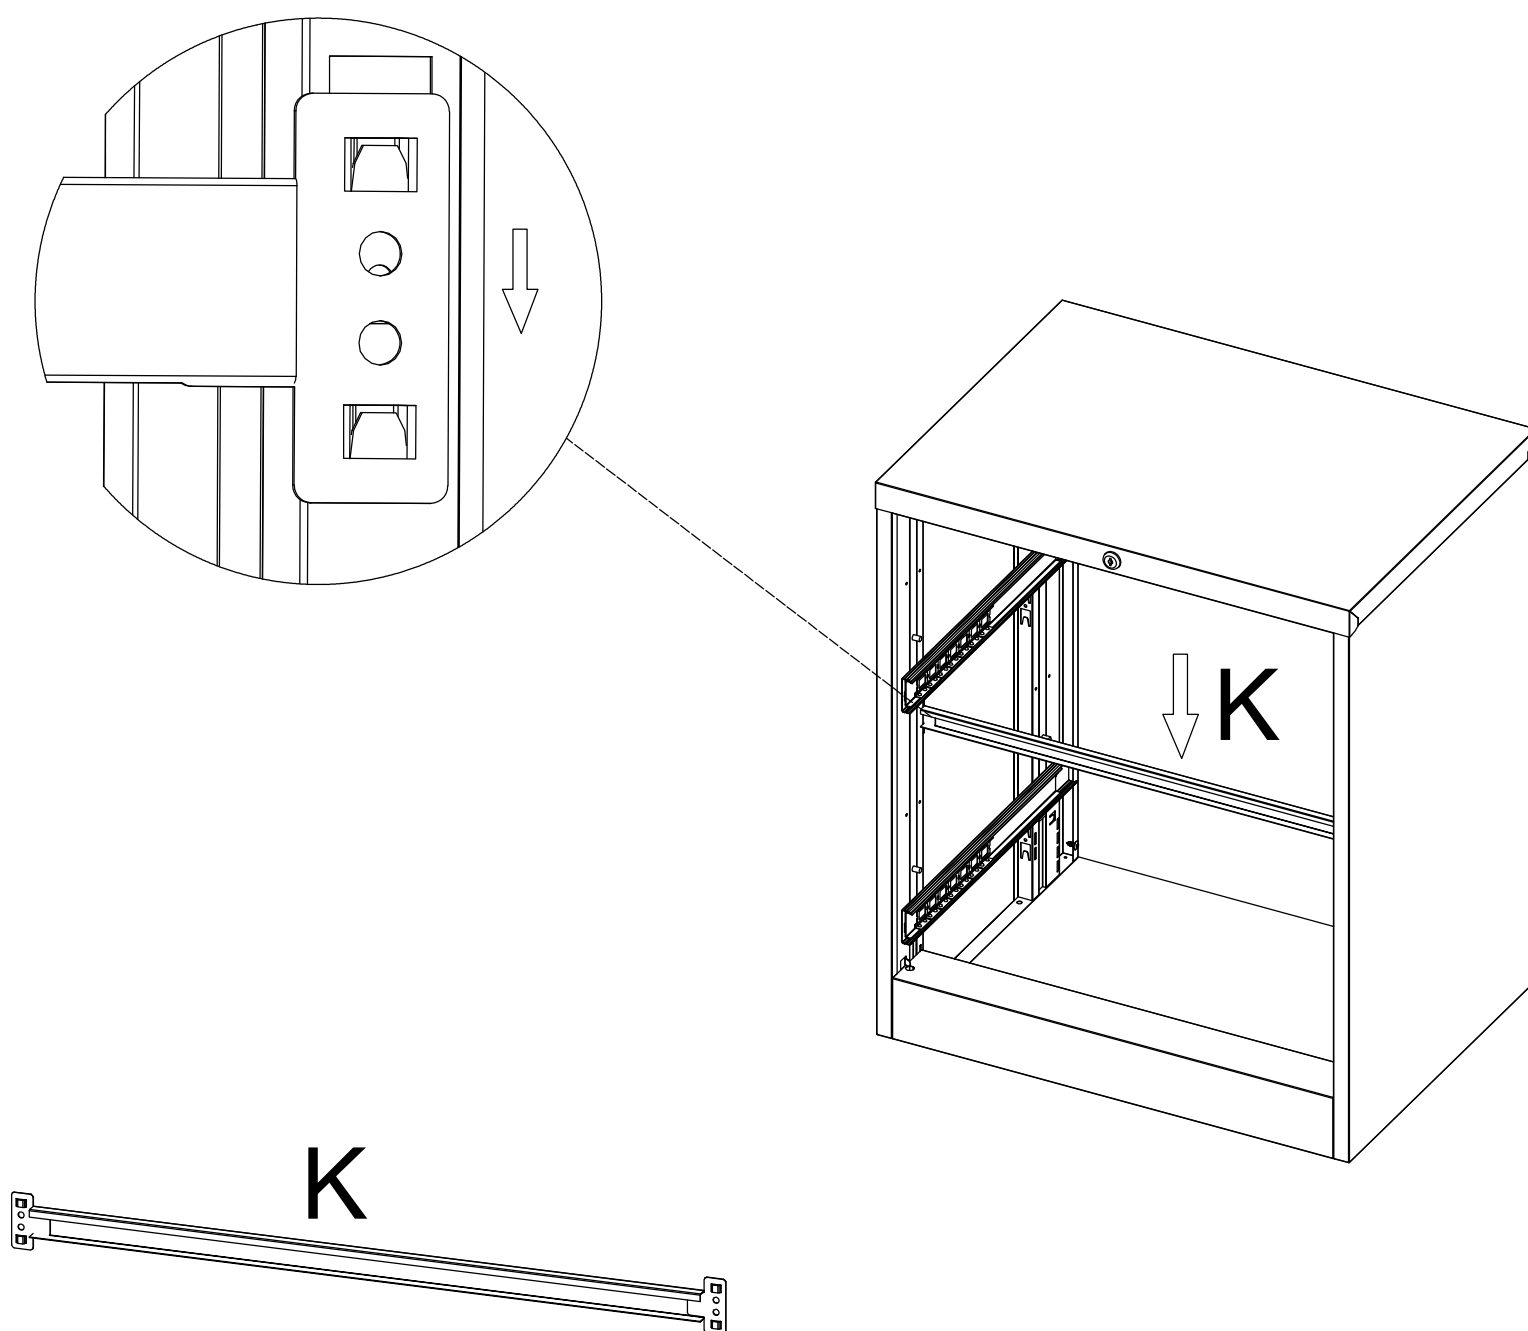


24.Install K

Insert the P and turn it
clockwise 180 degrees

Pull out L2(R2)

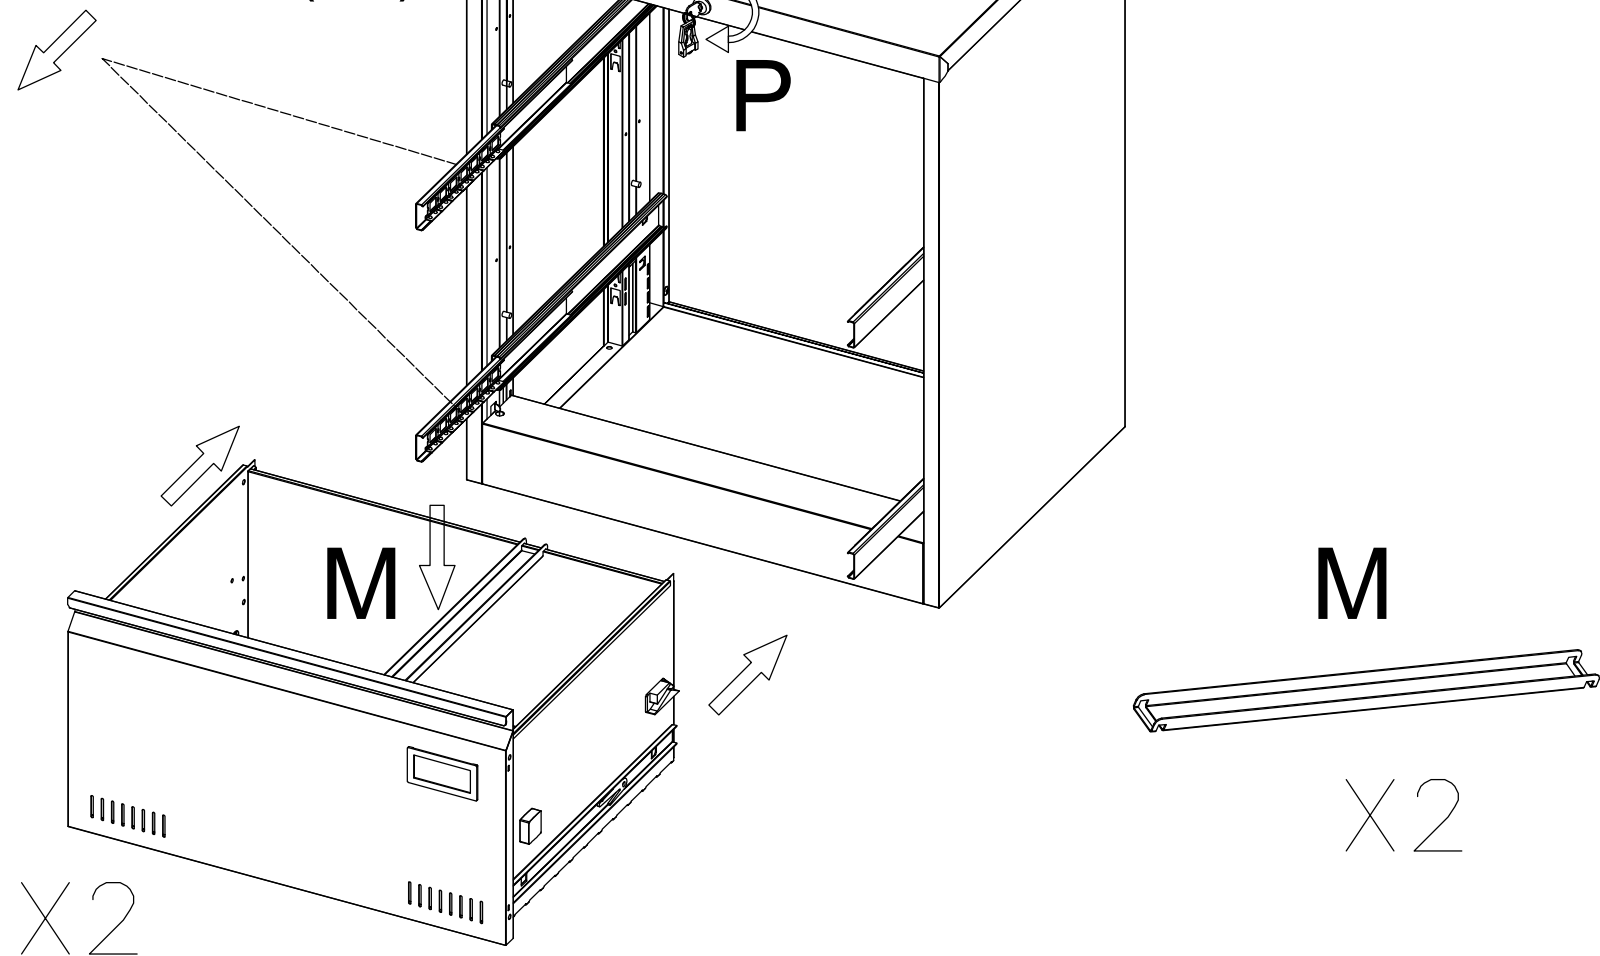

25.Install drawer and M

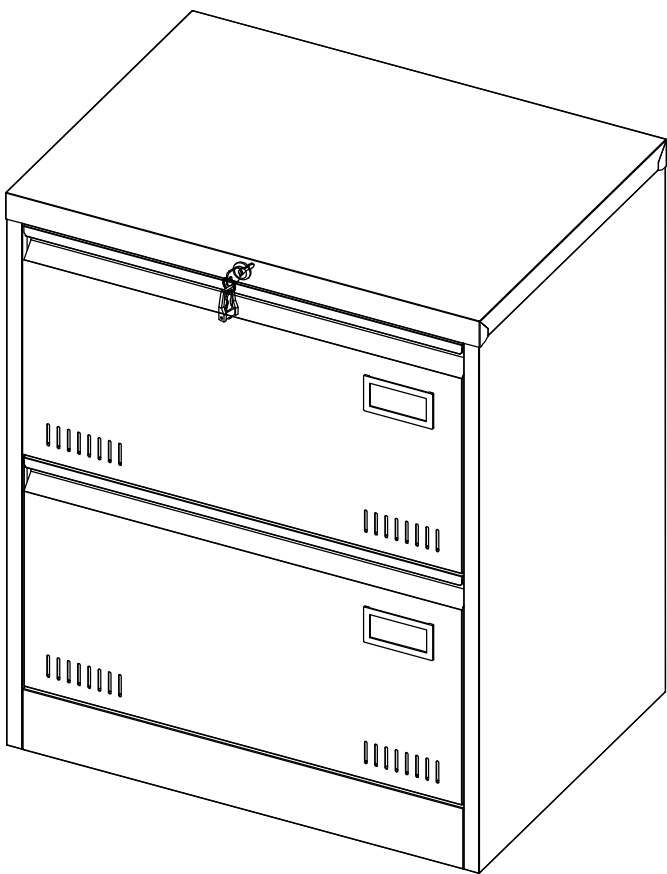

26.Assembly completed