


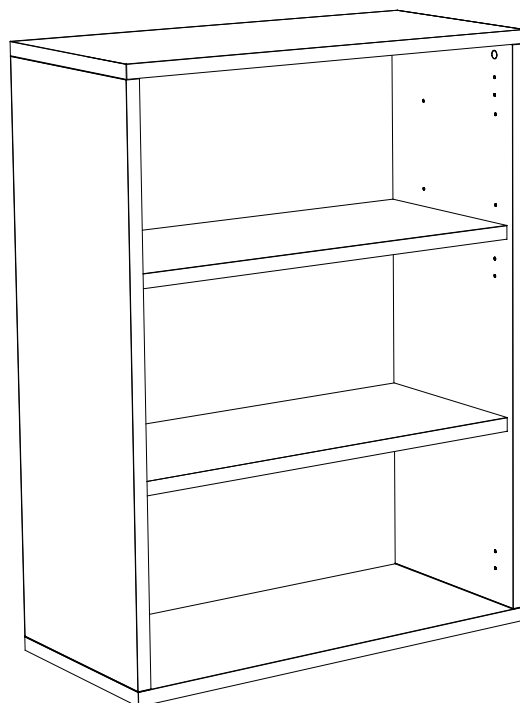


Artikel.-Nr.:

Montageanleitung.-Nr.:

2000-R-82x111

MA1-00565

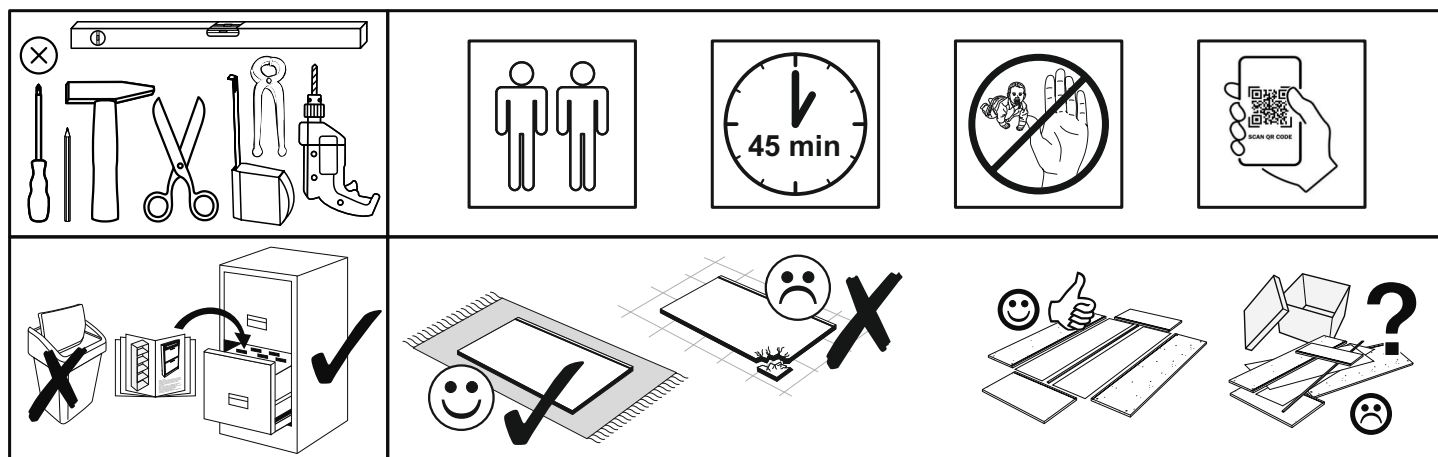


SCAN ME


Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00663 Colli 1/1


B01-20	 7,0x70	B01-30	 3x16	B01-90	 3,5x20	B05-185	
4x		14x		4x		4x	
B02-10	 ø15x12mm	B02-20		B05-20		B08-80	
12x		12x		4x		1x	

BT1-00005 Colli 1/1


B01-123	 4,0x15	B02-173	
8x		4x	




Colli 1/1

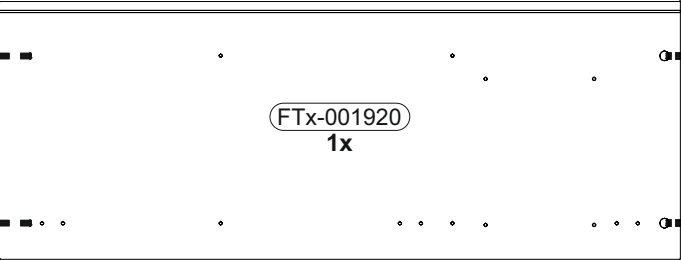


1042x394

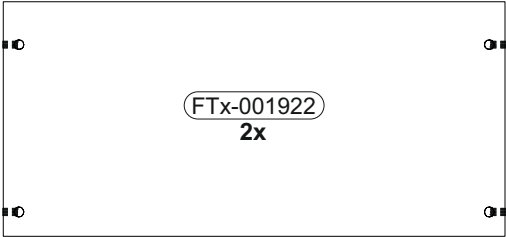

768x359

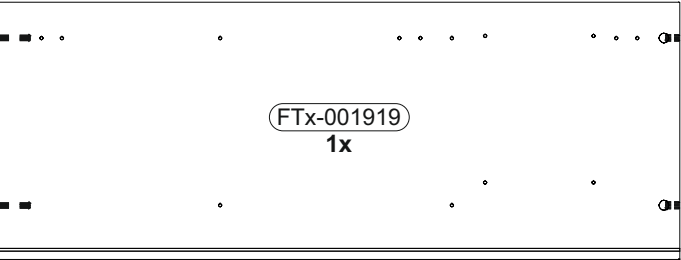


1042x394

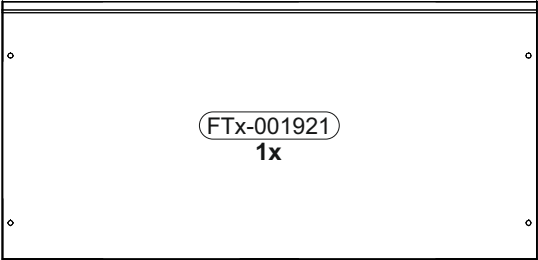







819x395









351x780

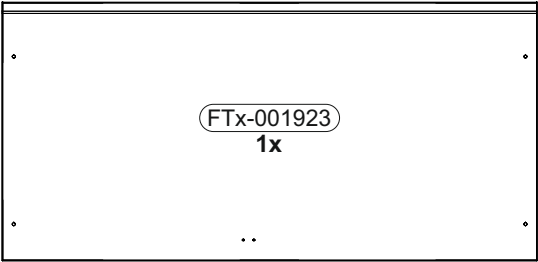


819x395

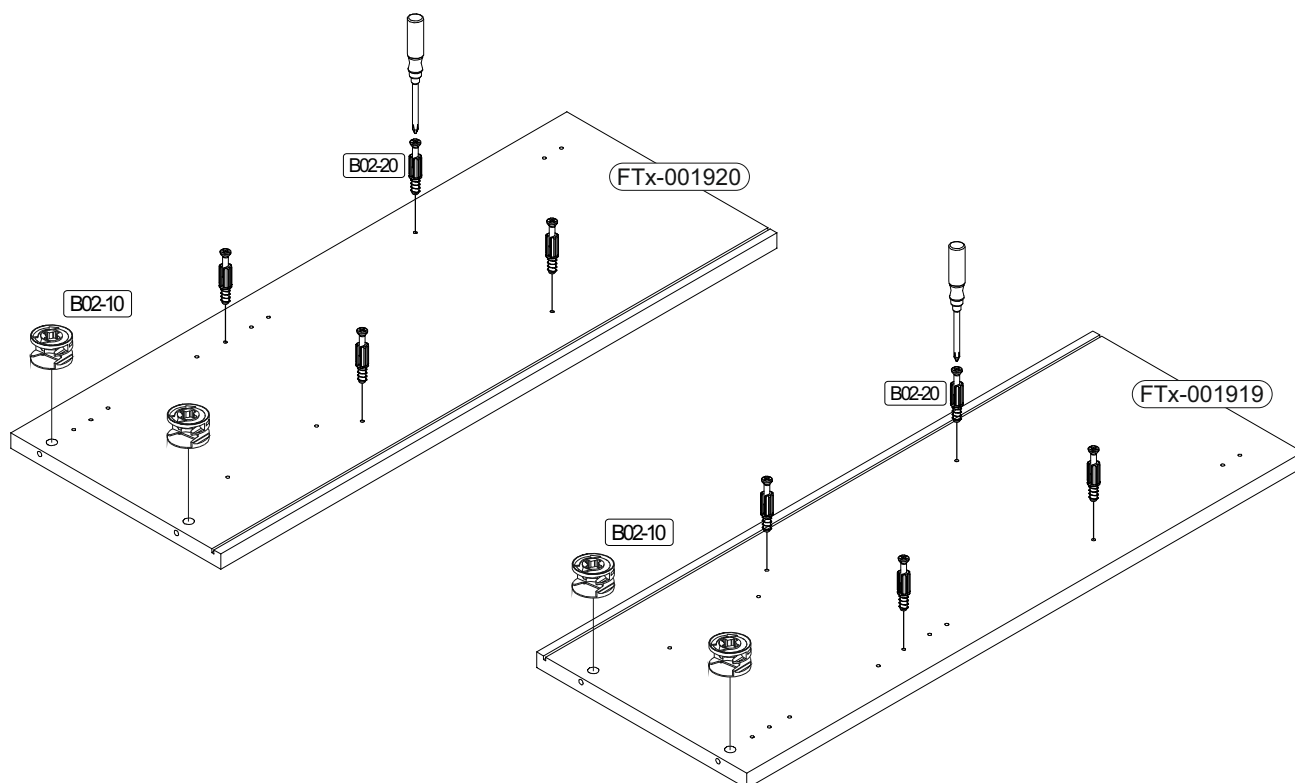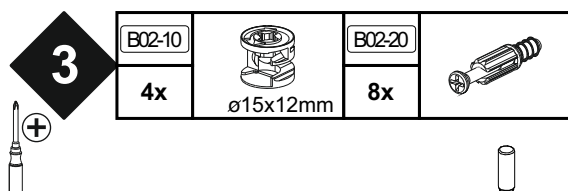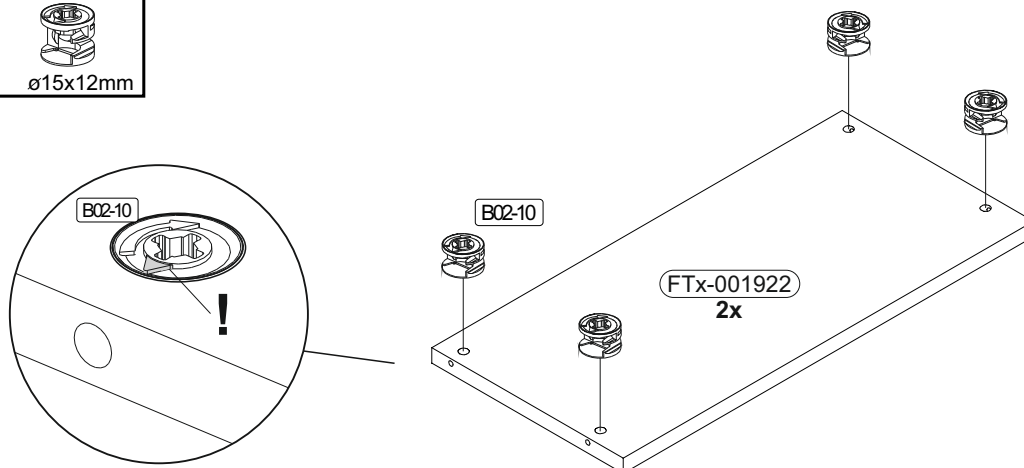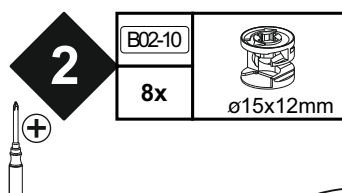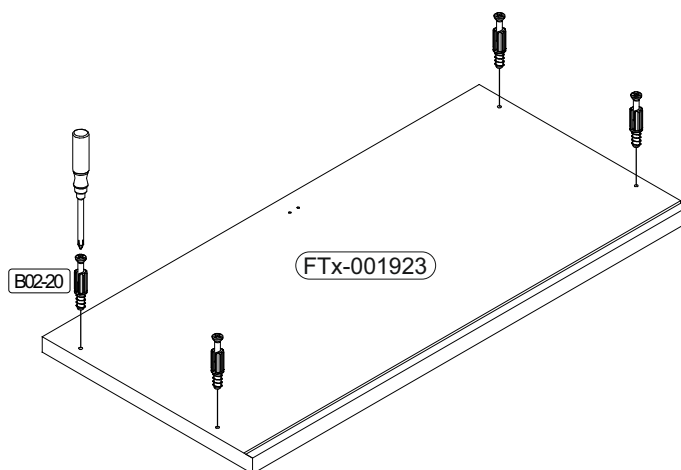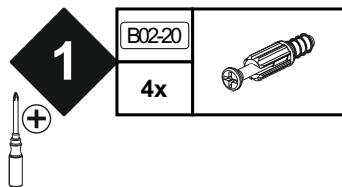


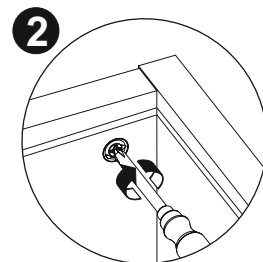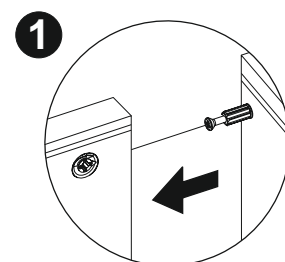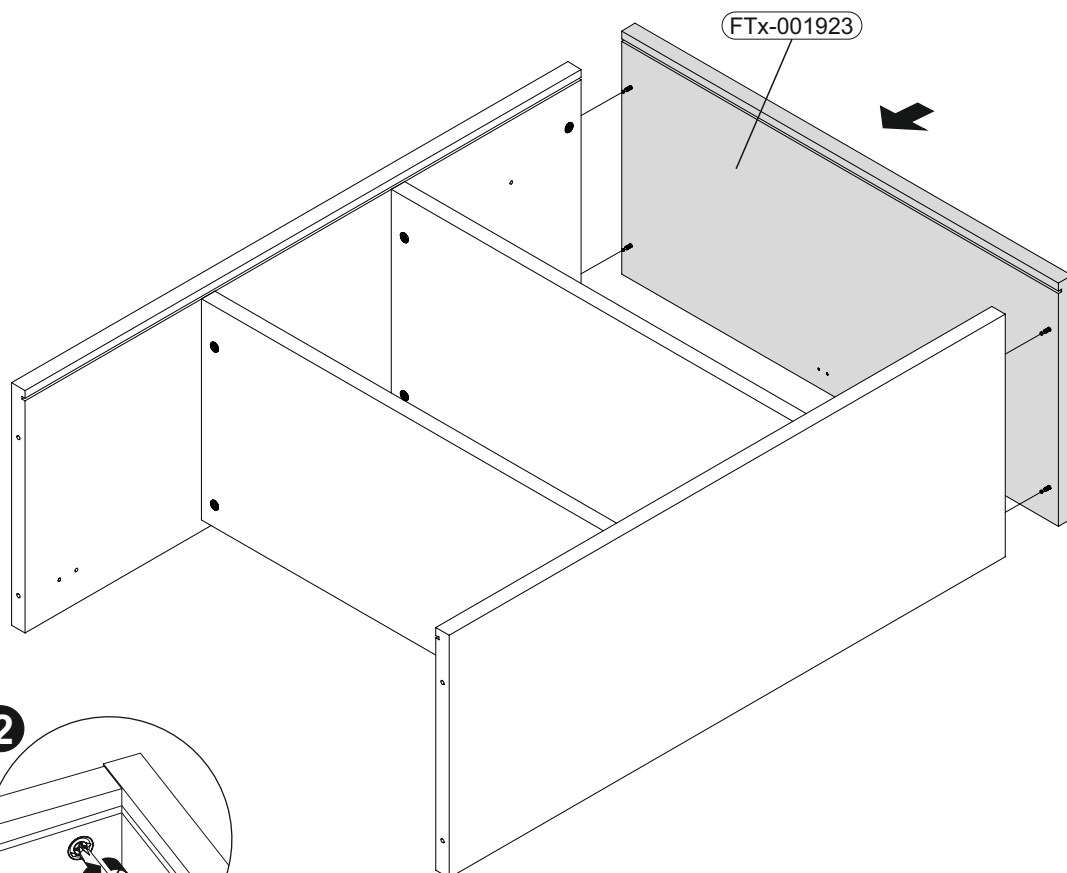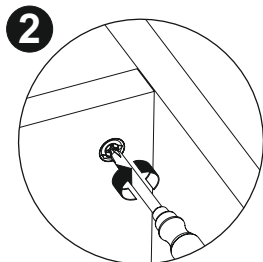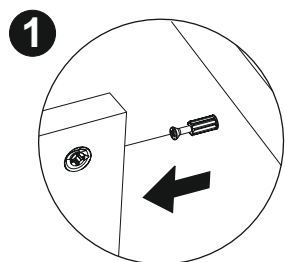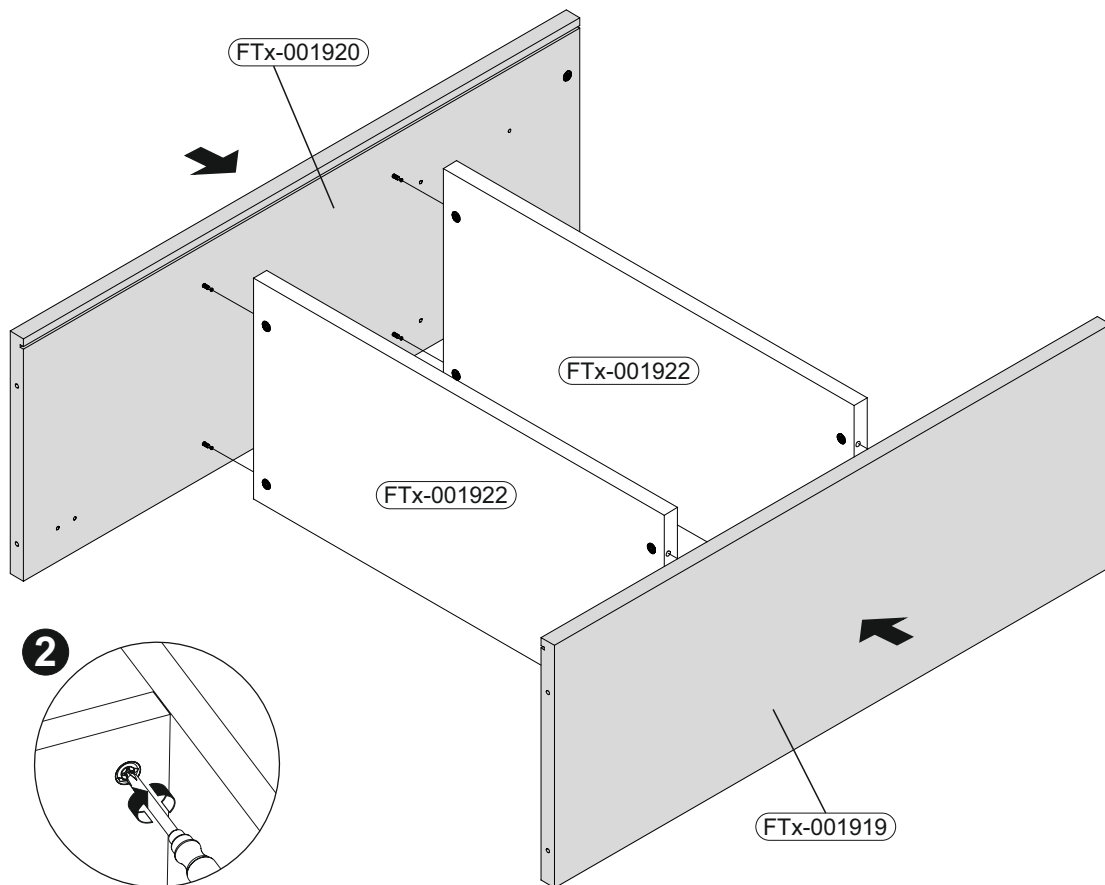

6




B01-20	
4x	7,0x70

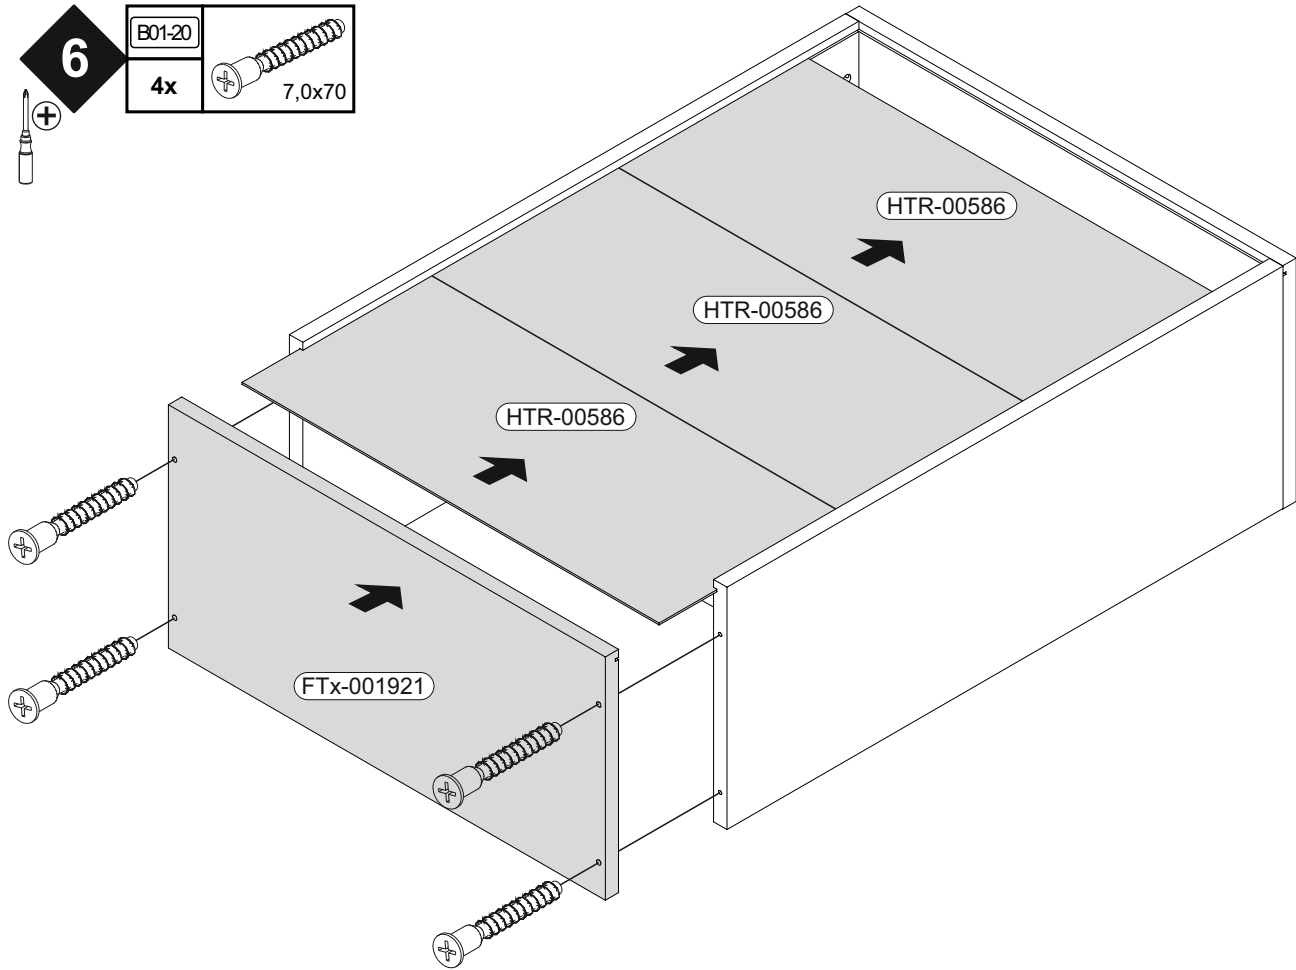



7






B01-123		B02-173	
8x	4,0x15	4x	

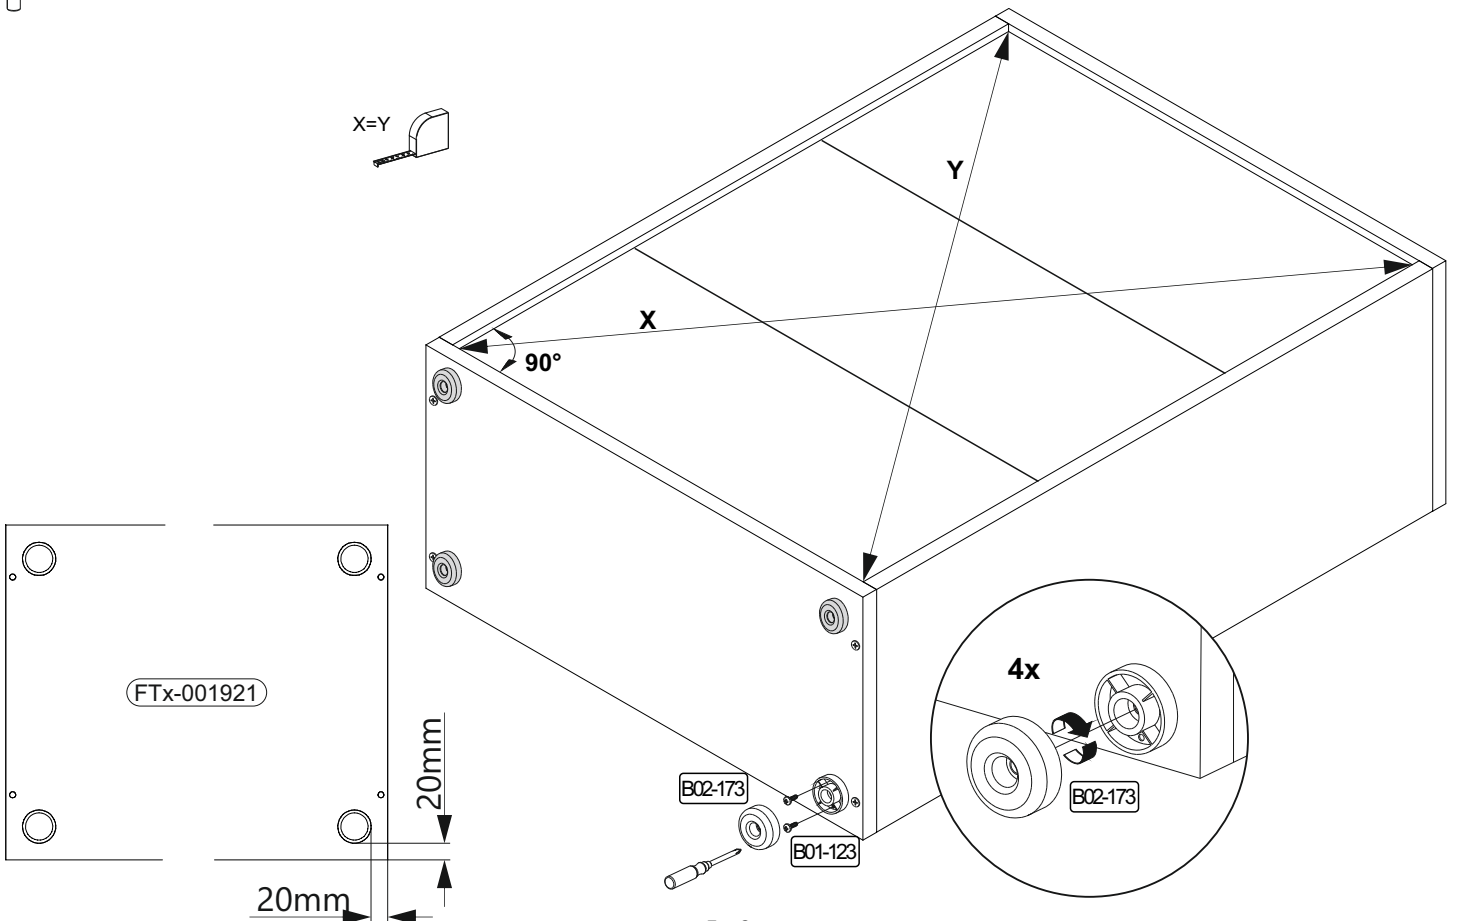

8	B01-30	14x	3x16
	B01-90		
	4x	3,5x20	
	B05-185		
	4x		

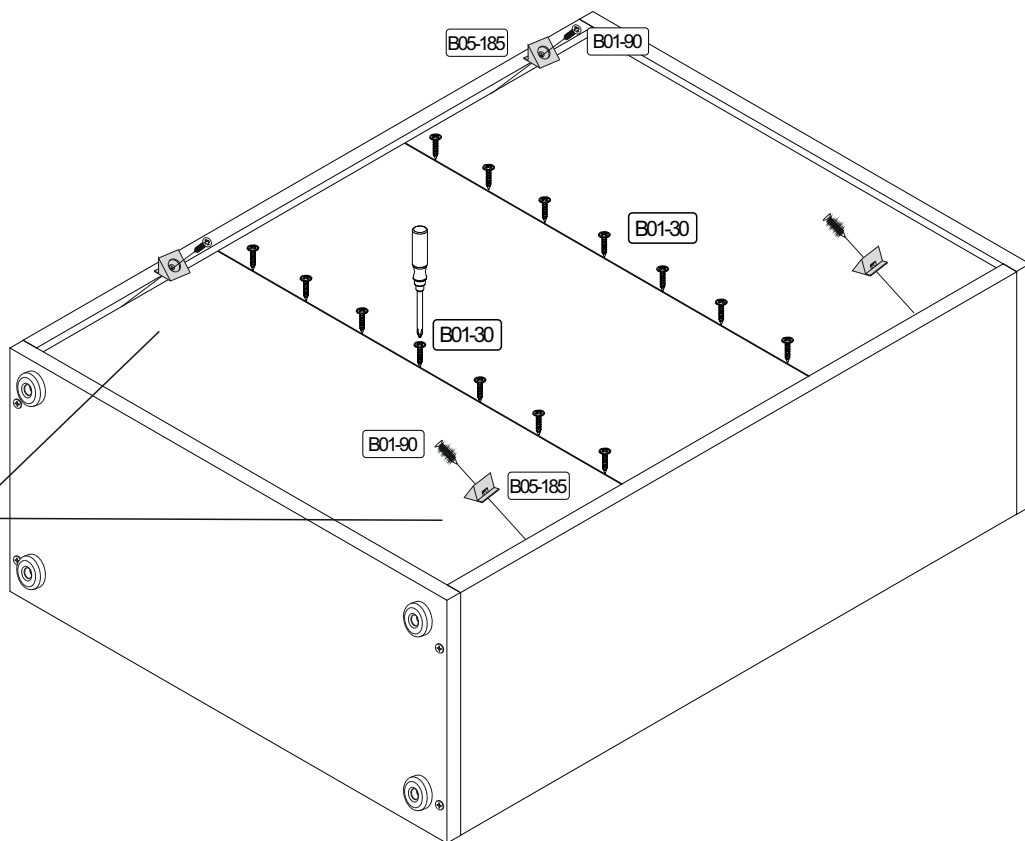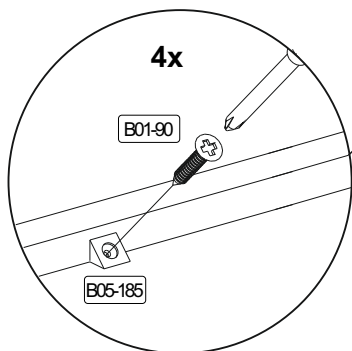


9	B08-80	1x	B05-20	4x	

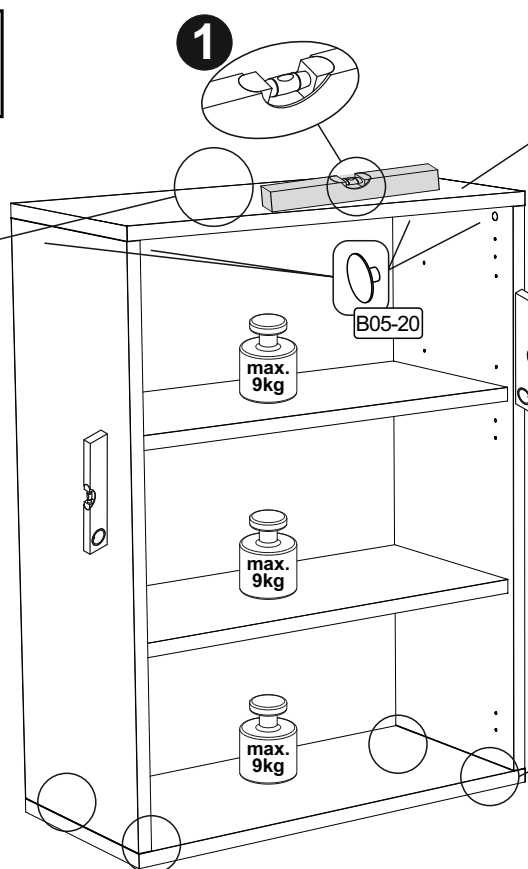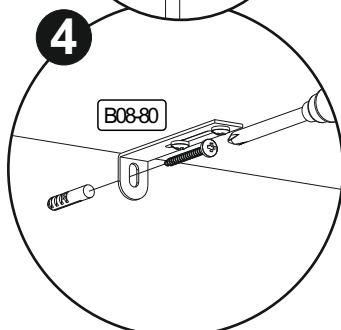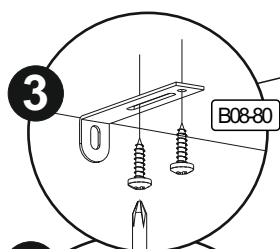

max.
9kg



▶ SCAN ME

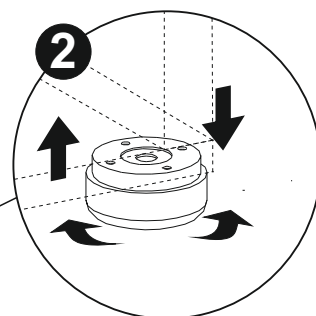

Achtung • Attention



(D)

Wandbefestigung dient als Kippschutz - unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!

(GB)

The wall fastening serves to prevent tipping - be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!