

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromážďovací instrukce

I Istruzioni per il montaggio






F Instructions de montage

RU Инструкция по монтажу

H Gennyvesedés utasítások

Boxspringbett Kristal

Polsterbett-Gestoffteerte bed-Tapicerowane łóżko-Tapitate pat-Upholstered bed-Мягкая кровать-yatak kapitone-Letto imbottito-Lit rembourré
Čalunené posteľ Čalunené posteľ kárpitovaný ág

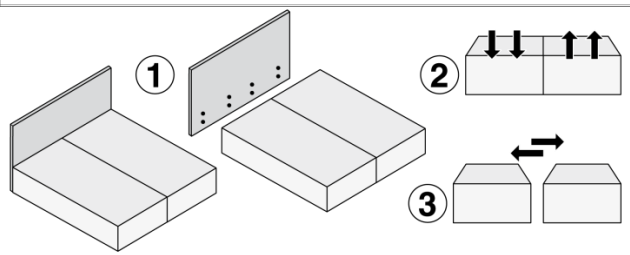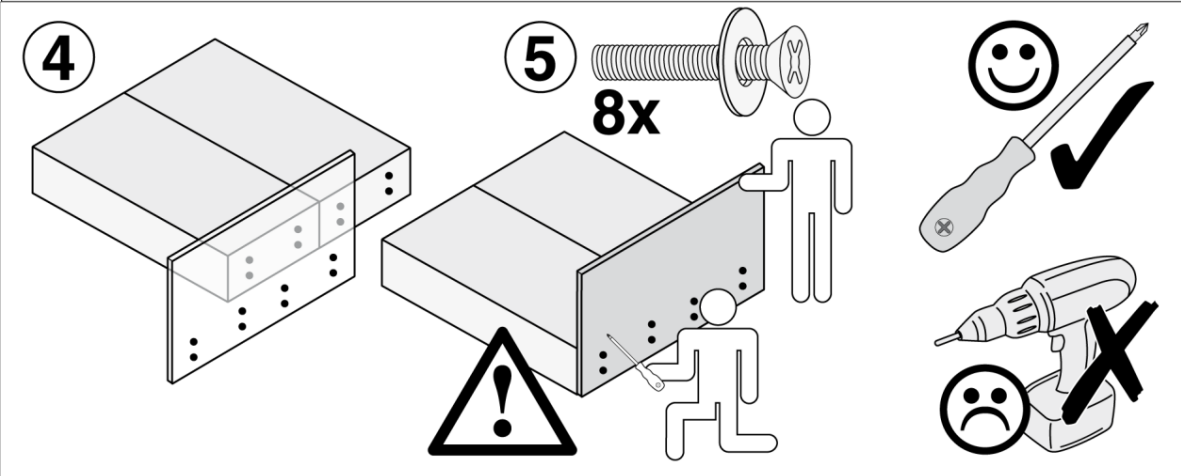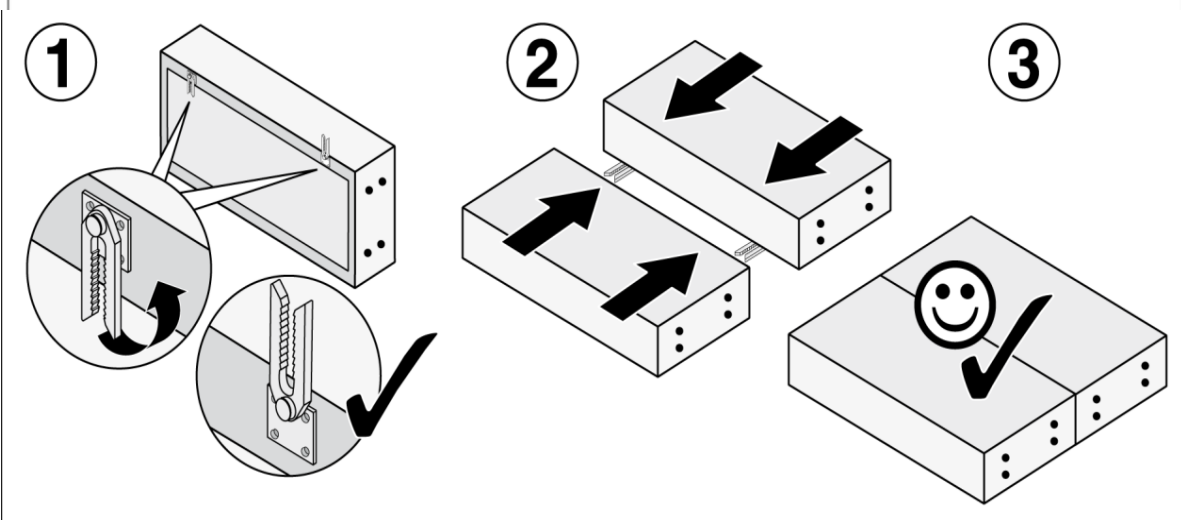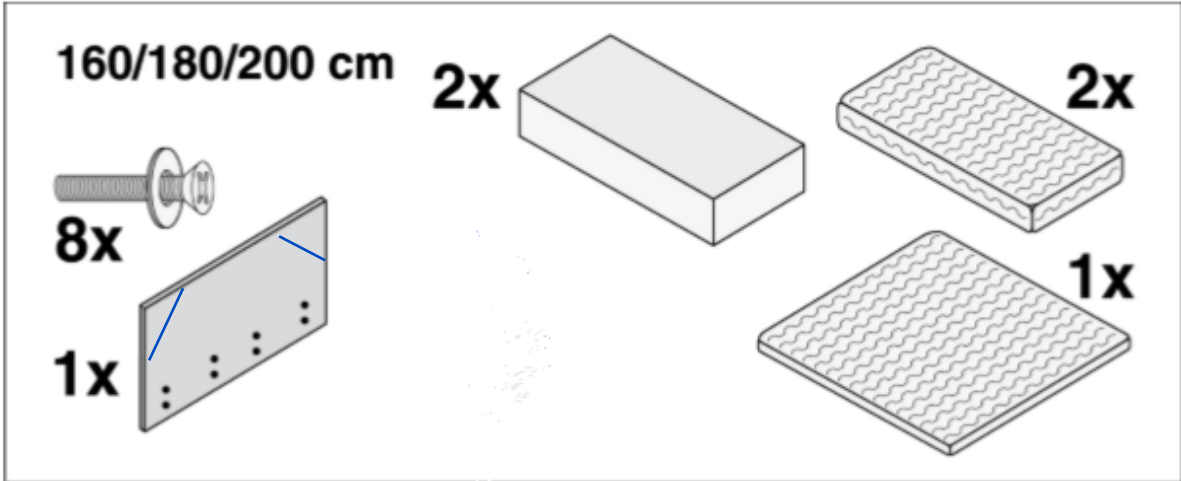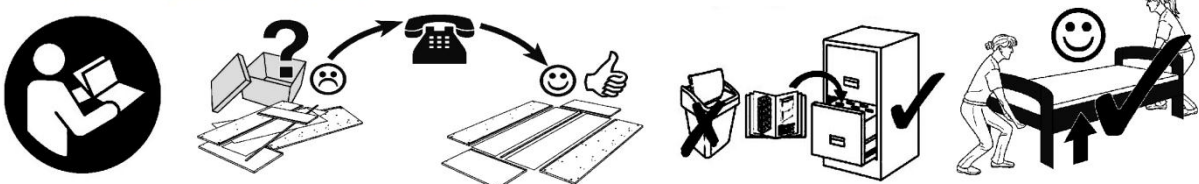

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne