

ASSEMBLY INSTRUCTIONS

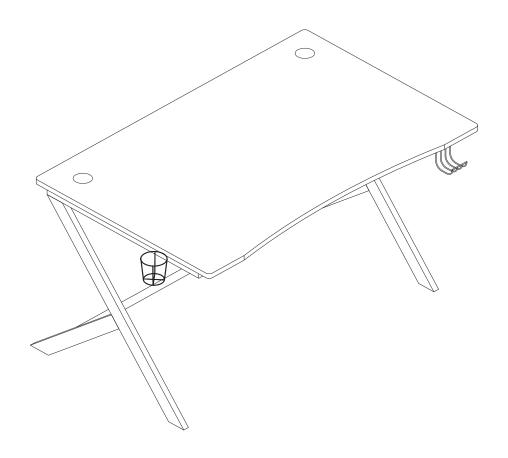


PARTS:

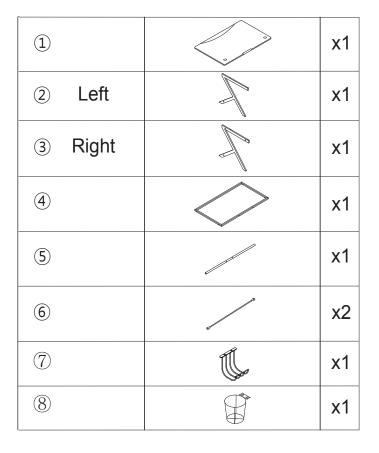


A. 6x12mm		x8	
B. 6x40mm		х6	
C. 6x60mm		x4	
D. Foot		x4	
E. Allen Wrench		x1	
560mm 560mm		-	
XRocker /// ///	MAN XRocker	MANUA XRocker	
700mm	700mm	——	
365mm	365mm		
LEF	FT RIC	RIGHT	




Attention: DO NOT TIGHTEN THE SCREWS UNTIL ALL PARTS ARE IN RIGHT POSITIONS.

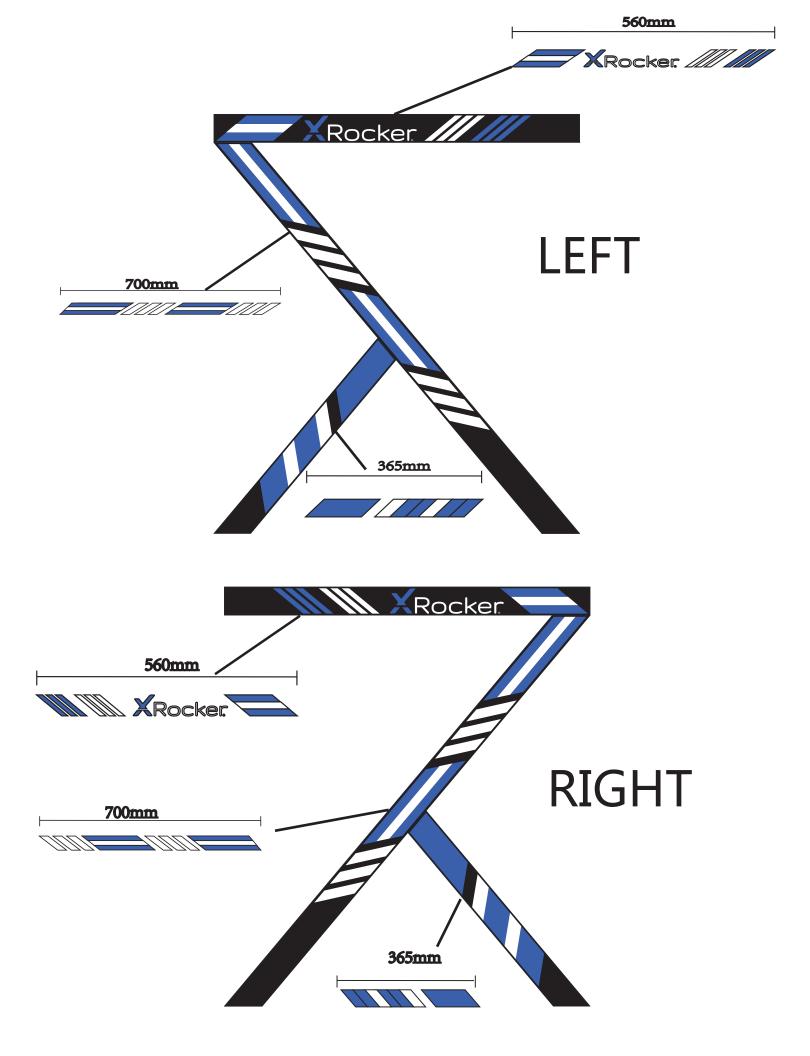


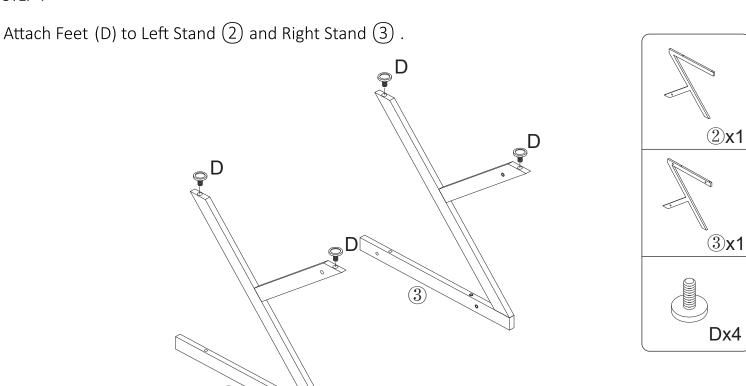


STEP 2 -----

Attach Lower Bar (5) to Right Stand (3) and Left Stand (2) with Screws (B) (6x40mm) by Allen Wrench (E). Then attach Steel Frame (4) with Screws (B) (6x40mm) by Allen Wrench (E) as shown.

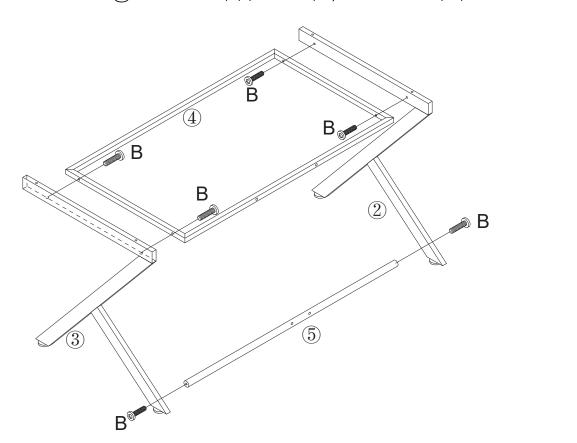




Attach two Support Bars 6 to Steel Frame 4 and Lower Bar 5 with Screws (A) (6x12mm) by Allen Wrench (E).

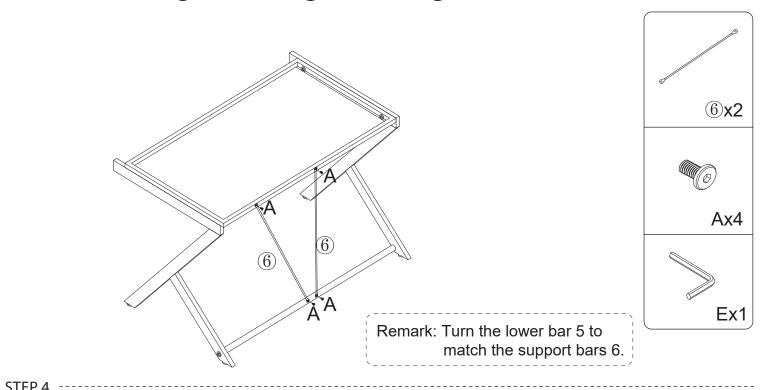

Attach Headphone Holder $\bigcirc{7}$ and Cup Holder $\bigcirc{8}$ to Desktop $\bigcirc{1}$ with Screws (A) (6x12mm) by Allen Wrench (E).

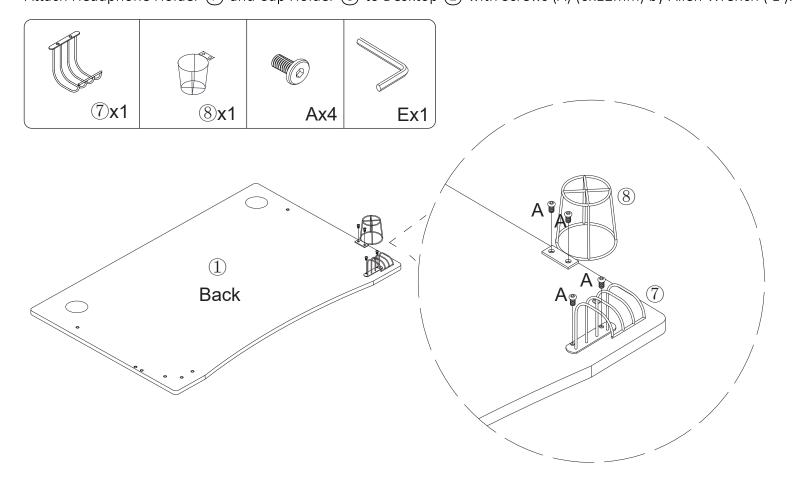

Attach Desktop 1 to Left Stand 2 and Right Stand 3 with Screws (C) (6x60mm) by Allen Wrench (E).

