
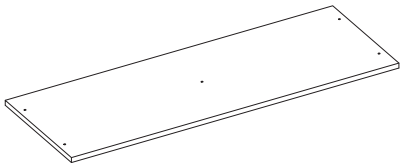
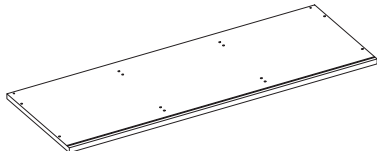
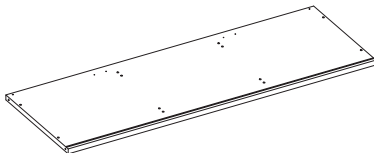










**INSTRUCTION MANUAL/BEDIENUNGSANLEITUNG/NOTICE D'UTILISATION/
MANUAL DE INSTRUCCIONES DE USO/MANUALE DI ISTRUZIONI**
PARTS LIST/STÜCKLISTE/PARTS LIST/LISTA DE PIEZAS/LISTA DEI PEZZI

A  1000x350mm 1pc	B  940x330mm 1pc	C  940x330mm 1pc			
D  2pcs 940mm	E  1pc 940mm	F  2pcs 940mm	G  525x302mm 3pcs	H  515x315mm 2pcs	
I  515x305mm 1pc	J  515x305mm 1pc	K  512x320mm 1pc	L  512x320mm 1pc	M  295x290mm 3pcs	
N1  2pcs	N2  2pcs	N3  M4x25mm 2pcs	O  4pcs	P1  16pcs	
P2  16pcs	P3  8pcs	Q  2pcs	R  M3x10 4pcs	S  2pcs	T  M3x7 4pcs
U  12pcs	V  M6x30 11pcs	W  M6x40 4pcs	X  M5x45 4pcs	Y  4pcs	Z  1pc







ASSEMBLY/MONTAGE/ASSEMBLAGE/MONTAJE/ASSEMBLAGGIO







Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
 Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
 Serrez toutes les vis à 60% d'abord puis serrez à 100%.
 Primero apriete los tornillos al 60% y después al 100%.
 Stringere le viti dapprima al 60% e successivamente completamente al 100%.




1

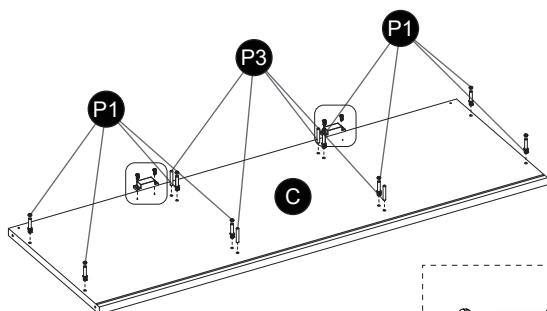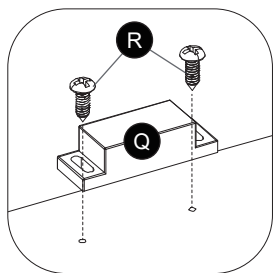


2

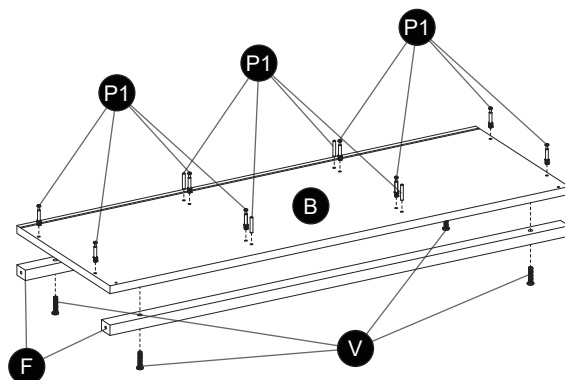

3

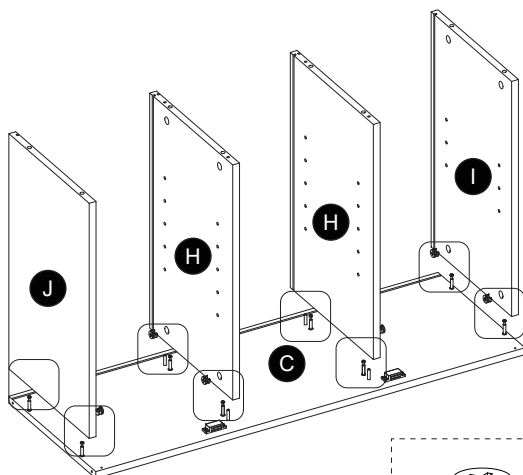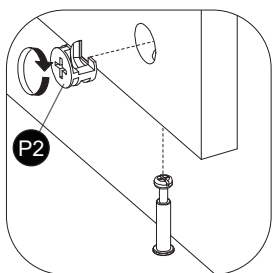

4



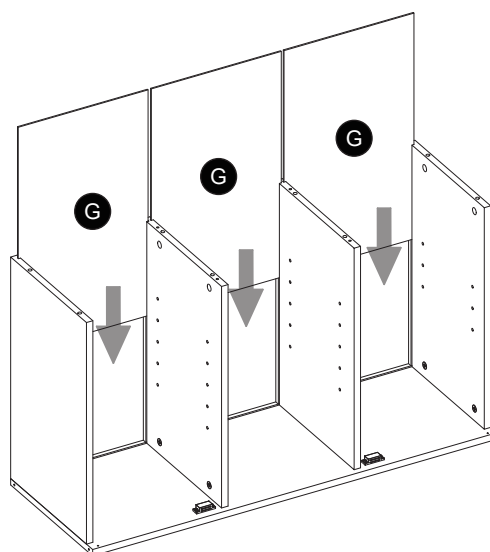






Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
Serrez toutes les vis à 60% d'abord puis serrez à 100%.
Primero apriete los tornillos al 60% y después al 100%.
Stringere le viti dapprima al 60% e successivamente completamente al 100%.



5

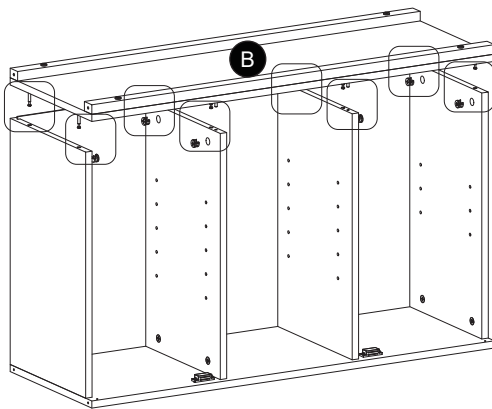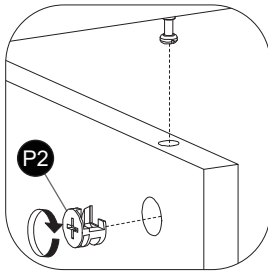



6

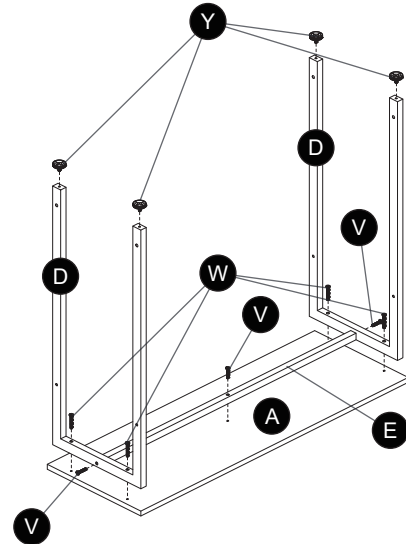

7

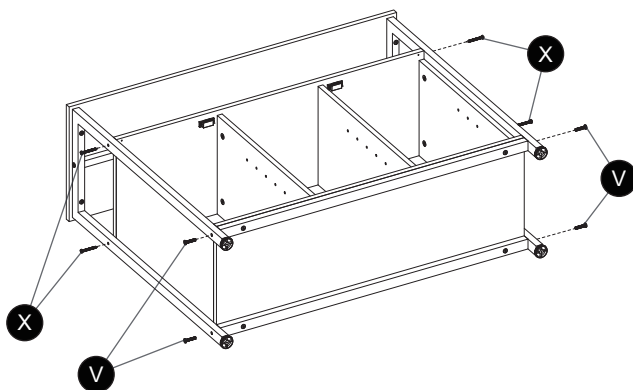

8

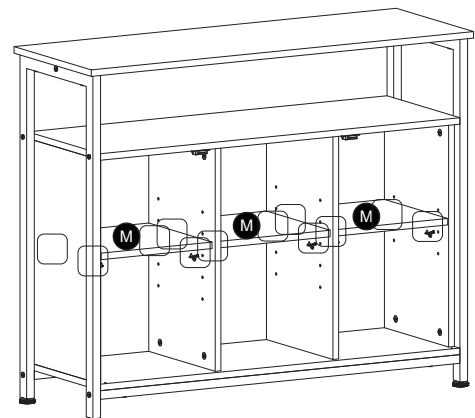
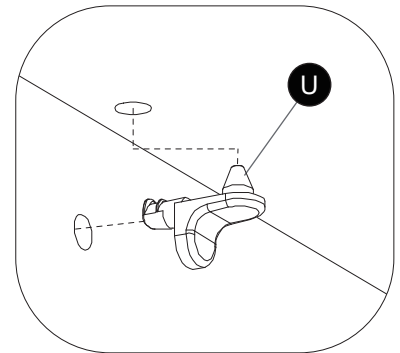




Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
 Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
 Serrez toutes les vis à 60% d'abord puis serrez à 100%.
 Primero apriete los tornillos al 60% y después al 100%.
 Stringere le viti dapprima al 60% e successivamente completamente al 100%.

9

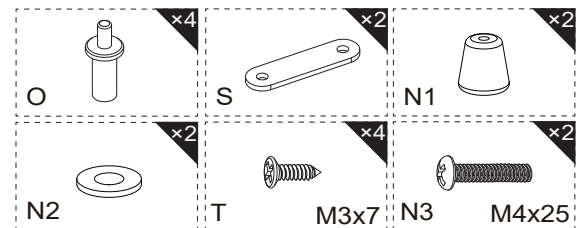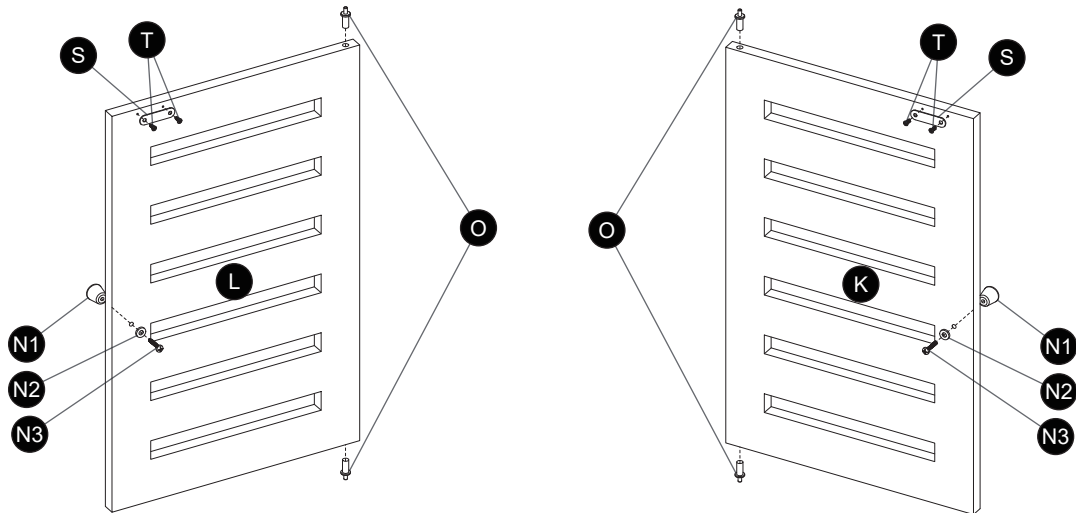

10

