

## **Assembly Instruction**

SKU: WF319424/WF319425/WF319426/WF319427

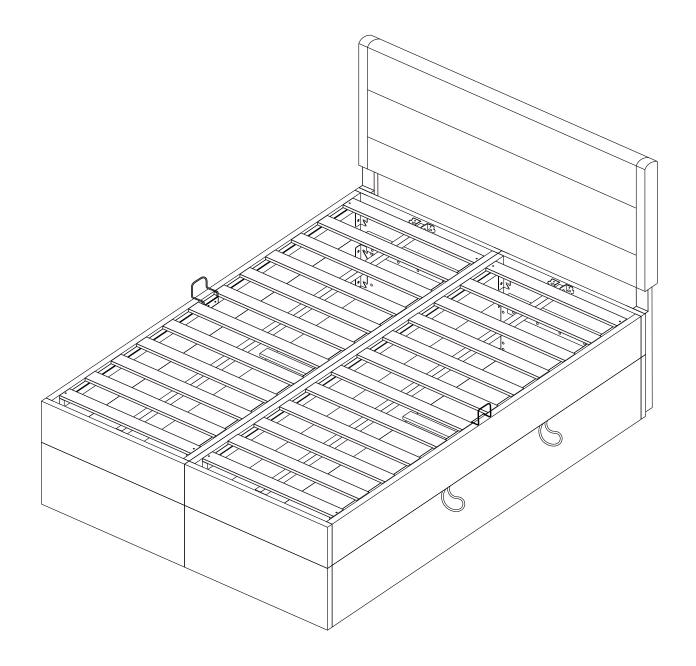



BED FRAME (Double)

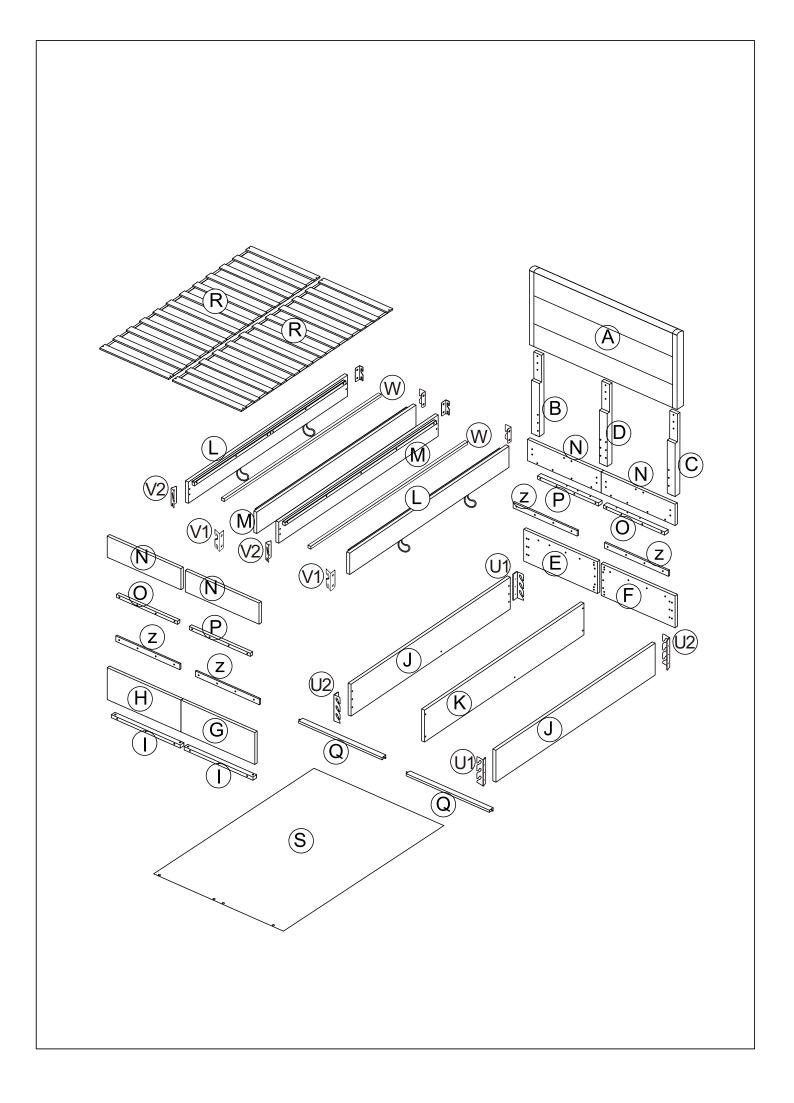

	Parts L	ist fo	r WF	319424	
A		1PC	В		1PC
С		1PC	D		1PC
R		PCS	S		1PC
Т		7PCS	X1		2PCS
X2		2PCS	Y		4PCS
U1		2PCS	U2		2PCS
V1		4PCS	V2		4PCS

## Parts List for WF319425 F Ε 1PC 1PC G Н 1PC 1PC Ρ 0 2PCS 2PCS Q 2PCS 2PCS Ζ 4PCS

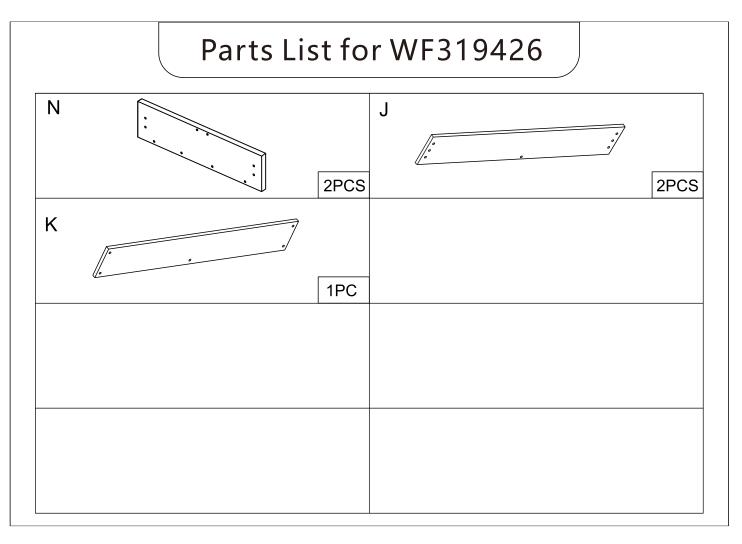

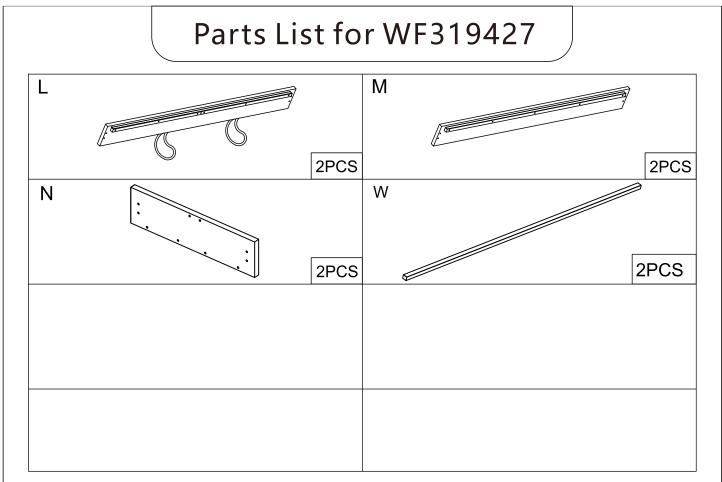


## Hardware List for WF319424

1	⑥))))))))))))) M8*50mm	21PCS	2	<a>\( \end{a}\) \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\</a>	56PCS
3	<pre></pre>	24PCS	4		32PCS
5	<a>®</a> <a>M6*15mm</a>	24PCS	6		16PCS
7	<b>M8</b>	77PCS	8	Ø19mm	77PCS
9	M5	1PC	10	M4	1PC
11)	<a>@</a> ) M6*20mm	4PCS	12		2PCS
13)		4PCS	22)	00	8PCS

## Installation Steps


Before your installation, please make sure that you have all the parts listes in the manual. If you find something missing please do not hesitate in contacting us.


TIP: please don't tighten the screws on step 1 until step 2 finished.

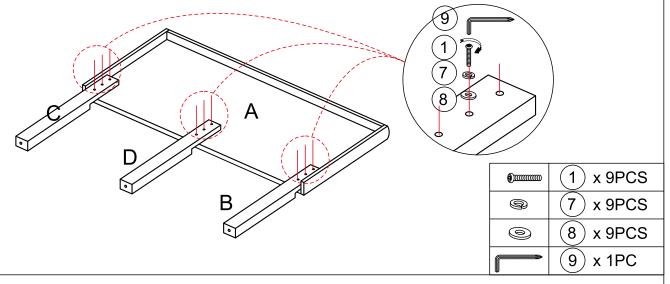

2 TIP:


when you assemble part B please screw the 3 holes on the right side, when you assemble part C please screw the 3 holes on the left side, when you assemble part D please screw the 6 holes as the picture shown.

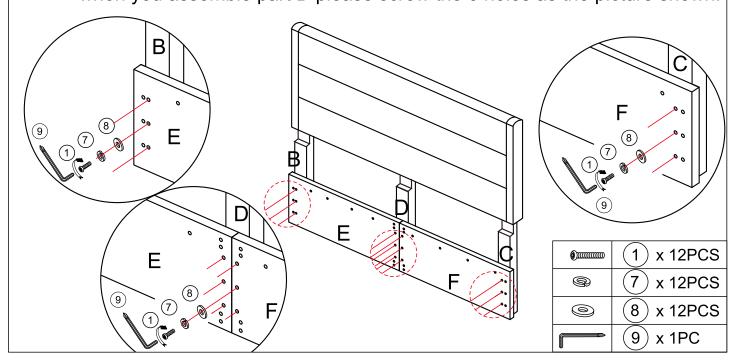

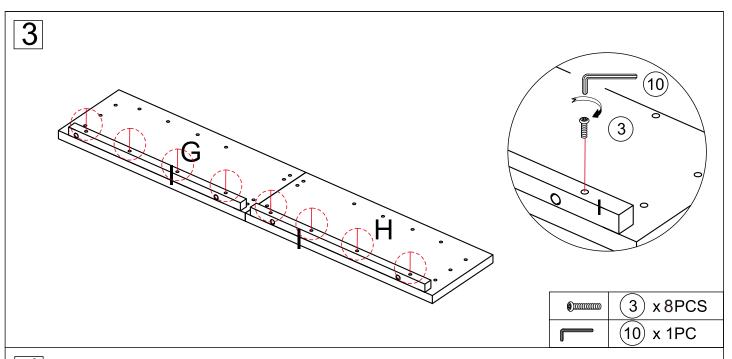


TIP:


please make sure the edge of part U1 and U2 was vertically with the edge of part J, as the picture shown.

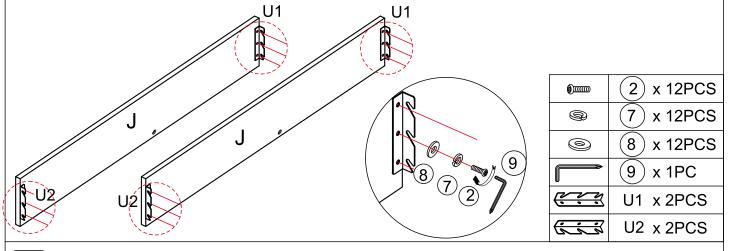



TIP:


please make sure the edge of part 22 was vertically with the edge of part K, as the picture shown.

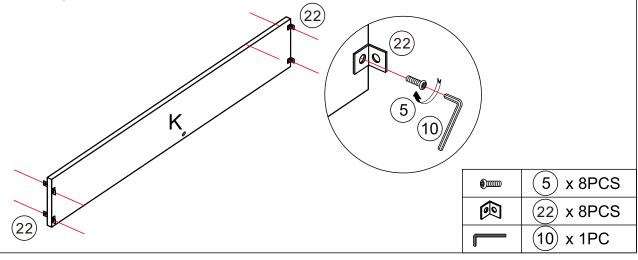


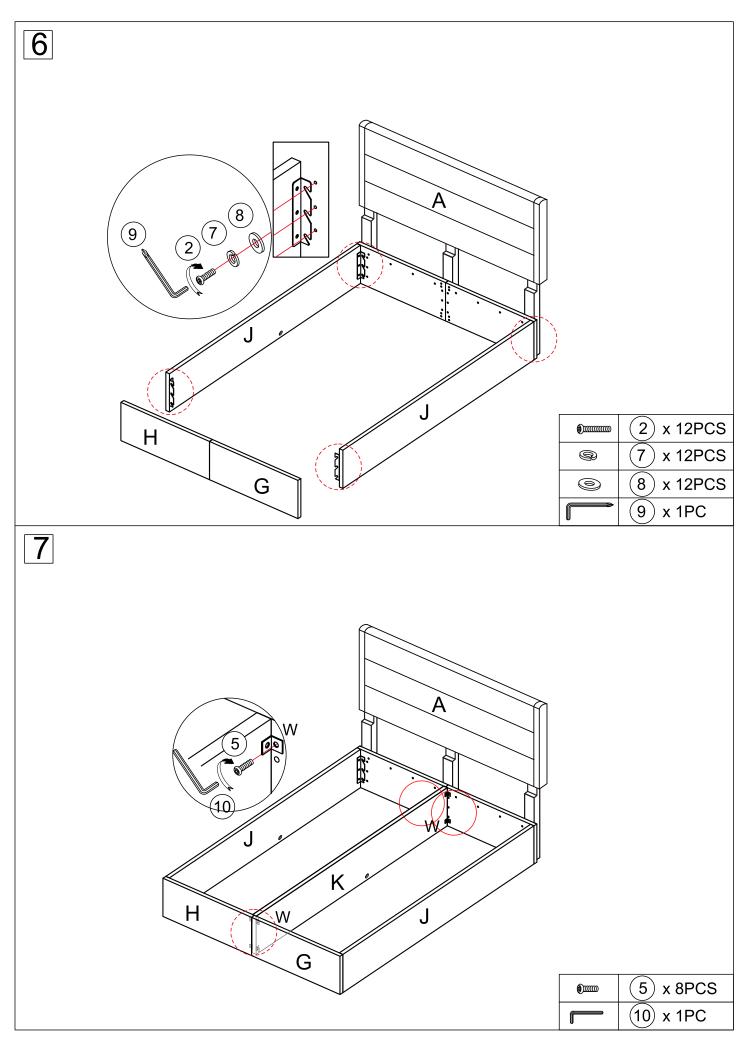


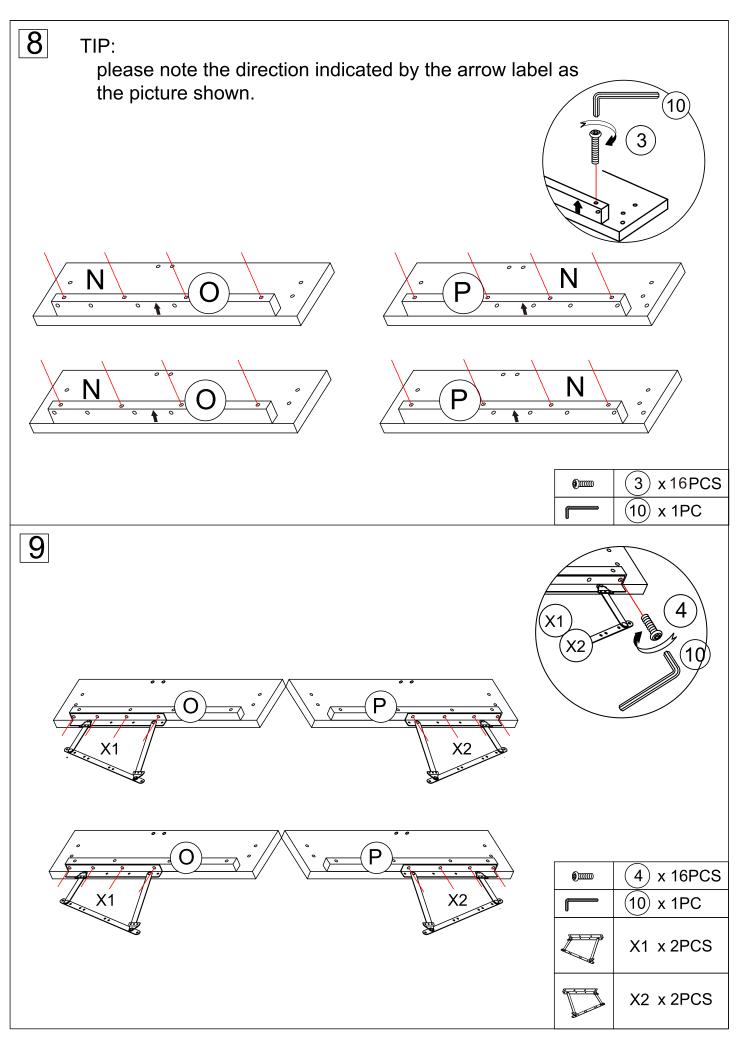


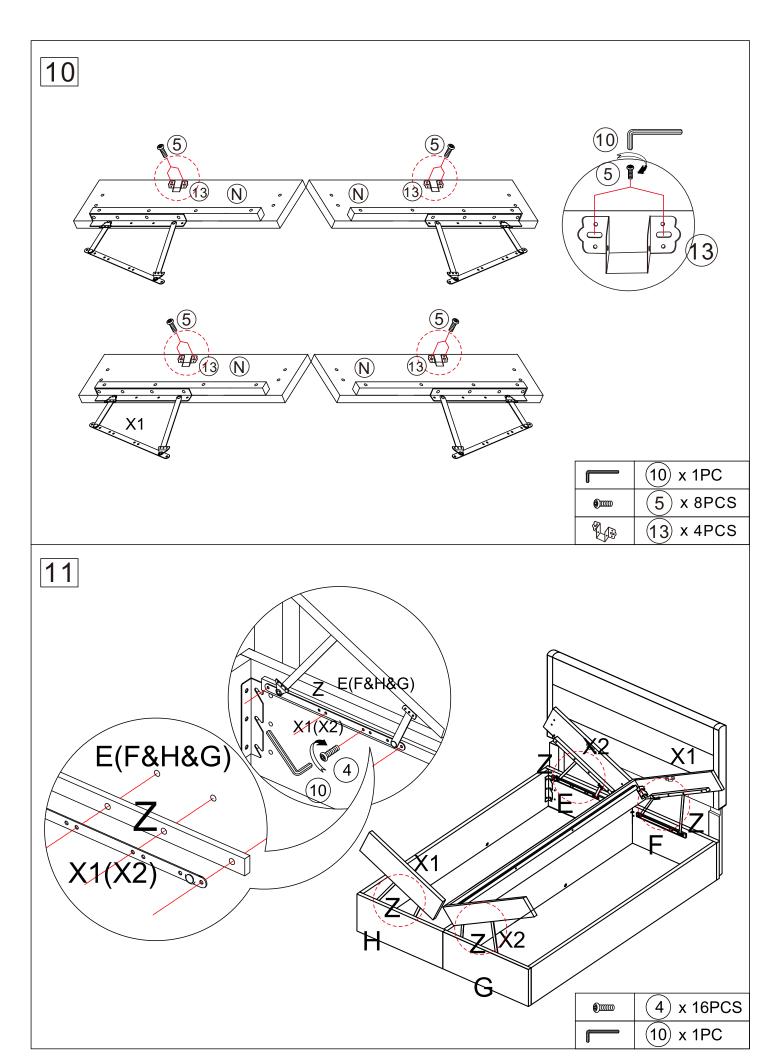

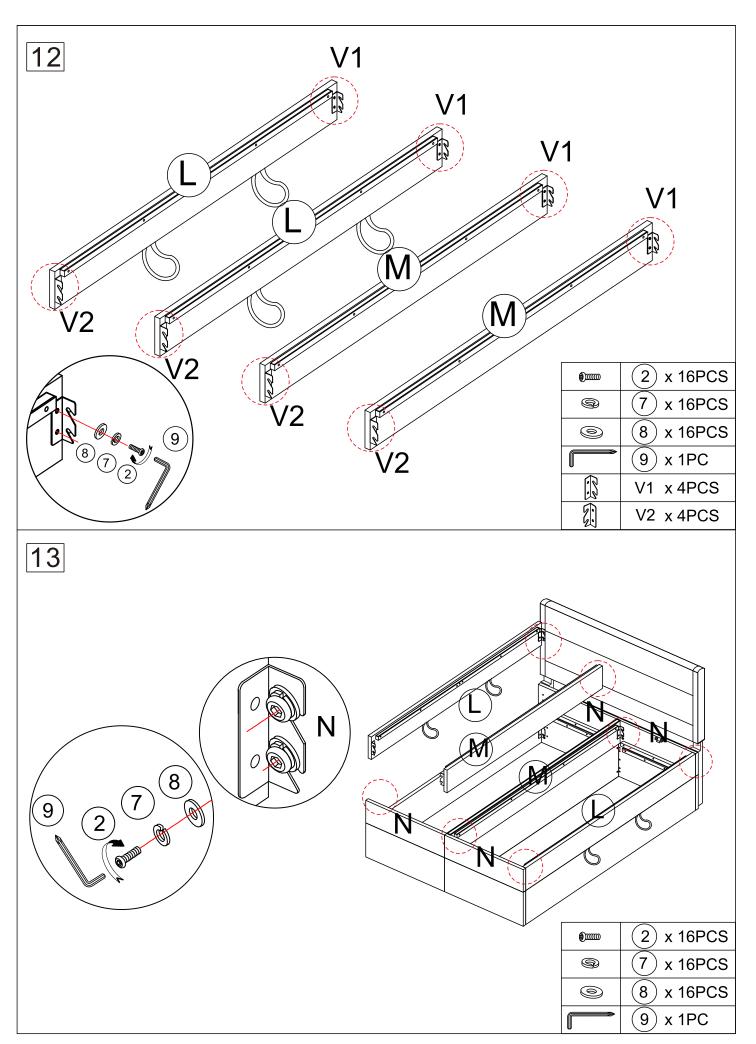


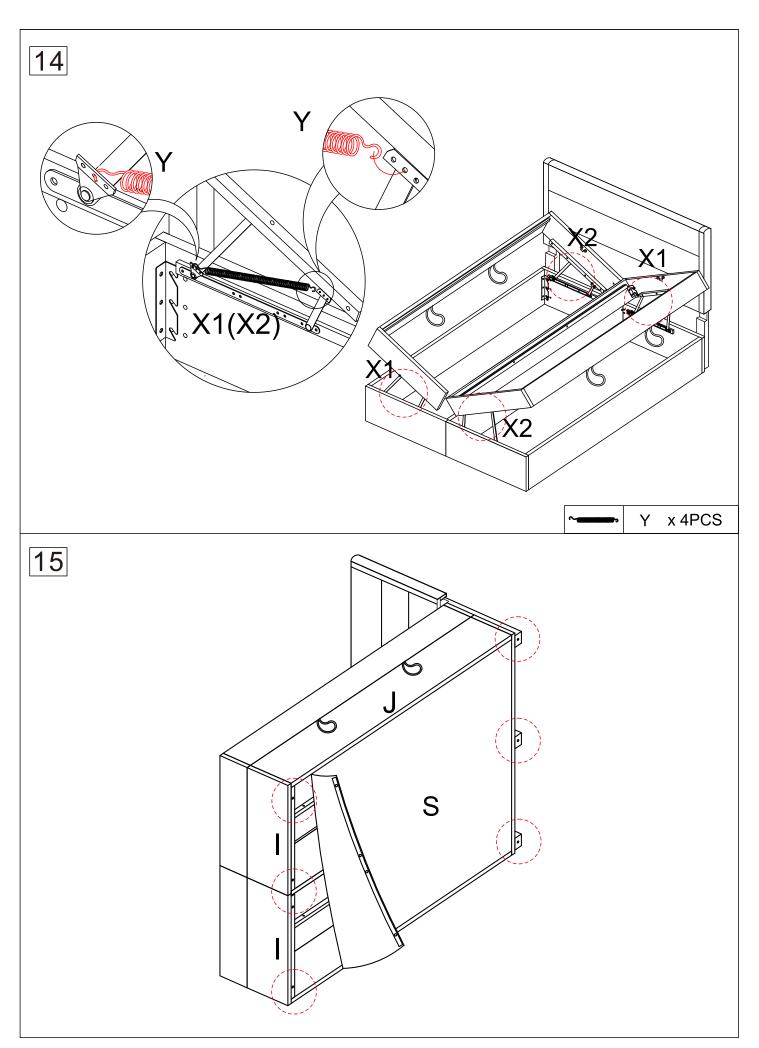

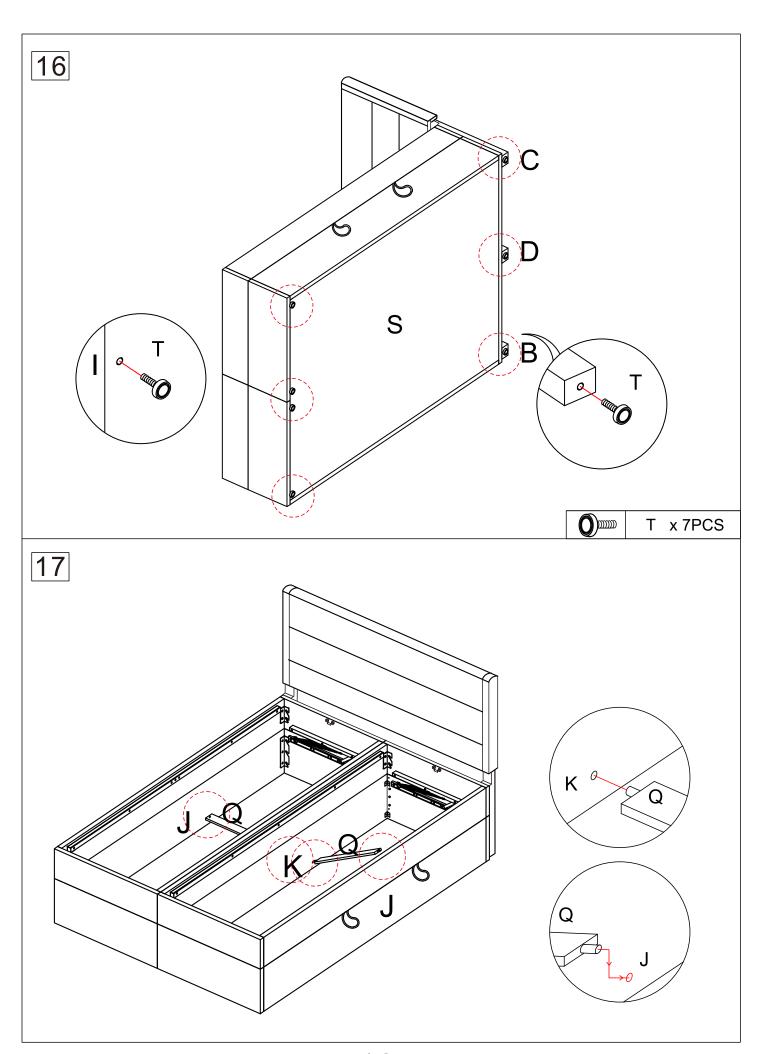

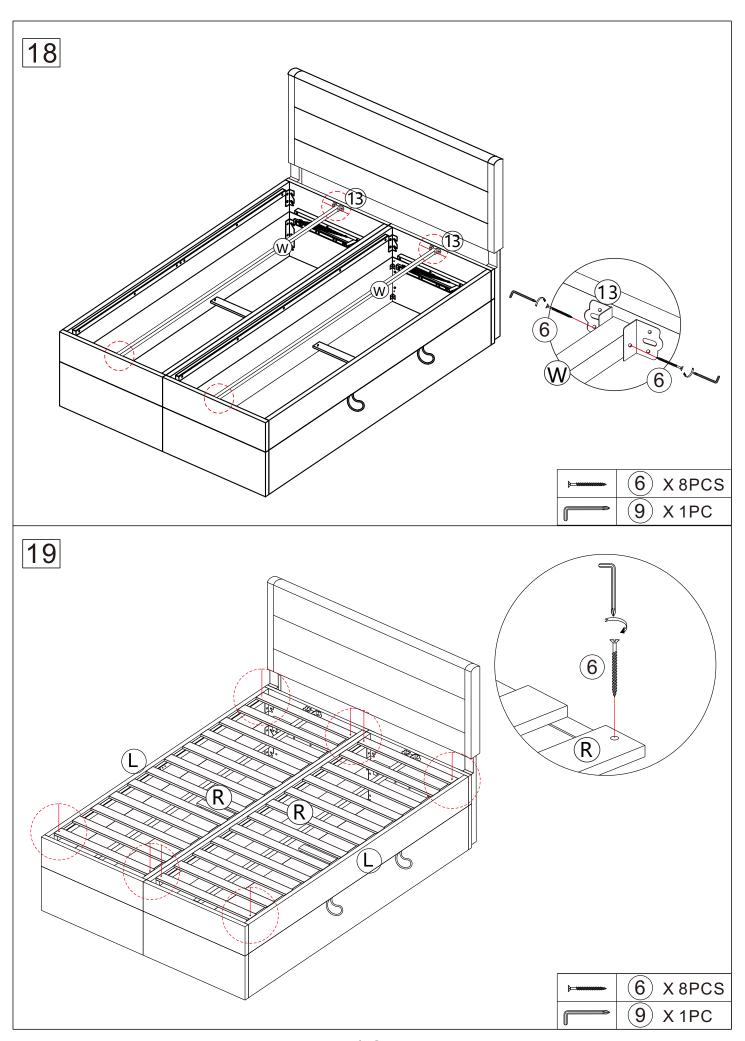

**—13** —

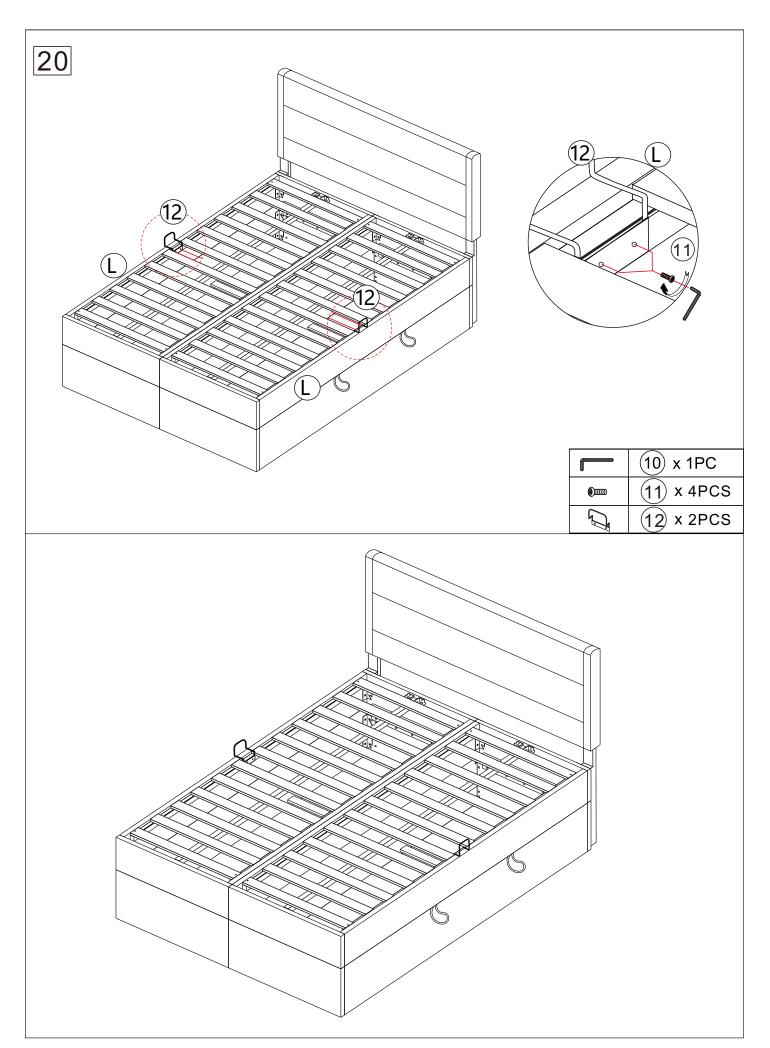

-14 -