

Ergon Handschuhe – Die richtige Größe

Ergon Handschuh-Messungen werden an der breitesten Stelle der Handfläche vorgenommen. Eine korrekte Messung setzt voraus, dass das Maßband, wie in der Abbildung gezeigt, über die vier Knöchel läuft. Der so


erhaltene Wert kann anschließend mit den Größen der untenstehenden Tabellen für das entsprechende Handschuh-Modell abglichen werden.

Handschuhe Größentabelle: HM2

Handschuhgröße	Handumfang	
	cm	inch
XS	20	7"
S	21	7.5"
M	22	8"
L	23	8.5"
XL	24	9"
XXL	25	9.5"

Handschuhe Größentabelle: HE2 Evo

Handschuhgröße	Handumfang	
	cm	inch
XS	20	7"
S	21	7.5"
M	22	8"
L	23	8.5"
XL	24	9"
XXL	25	9.5"

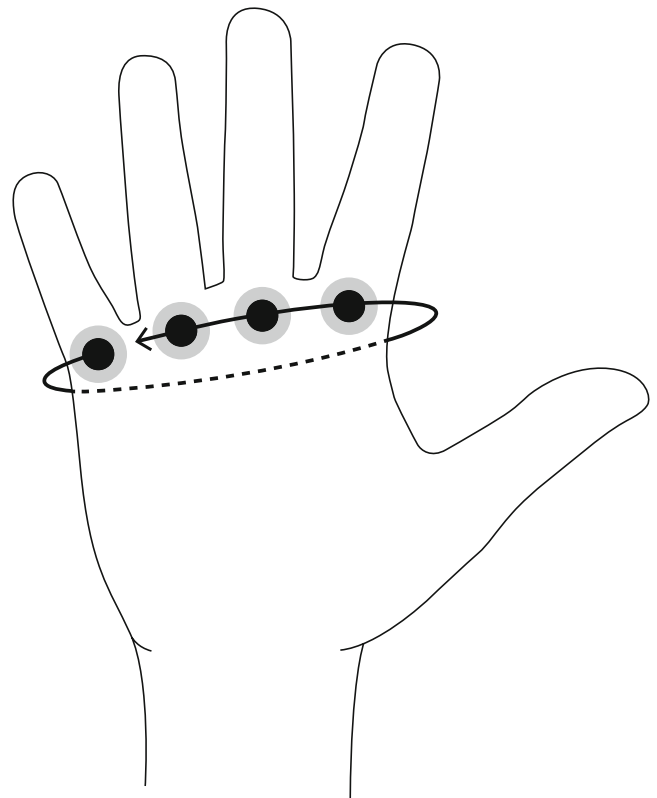

Ergon Gloves – Find your Fit

Ergon glove measurements are taken from the widest section of the palm. This is your hand width measurement. To measure correctly for Ergon glove models, take a tape measure and wrap it all 4 knuckles

as indicated by the black line in the illustration. Take the full circumference measurement and match it with the corresponding glove model you are interested in purchasing.

Glove Size Chart: HM2

Glove Size	Hand Circumference	
	cm	inch
XS	20	7"
S	21	7.5"
M	22	8"
L	23	8.5"
XL	24	9"
XXL	25	9.5"

Glove Size Chart: HE2 Evo

Glove Size	Hand Circumference	
	cm	inch
XS	20	7"
S	21	7.5"
M	22	8"
L	23	8.5"
XL	24	9"
XXL	25	9.5"

