


INSTRUCTIONS

Accessories list

A

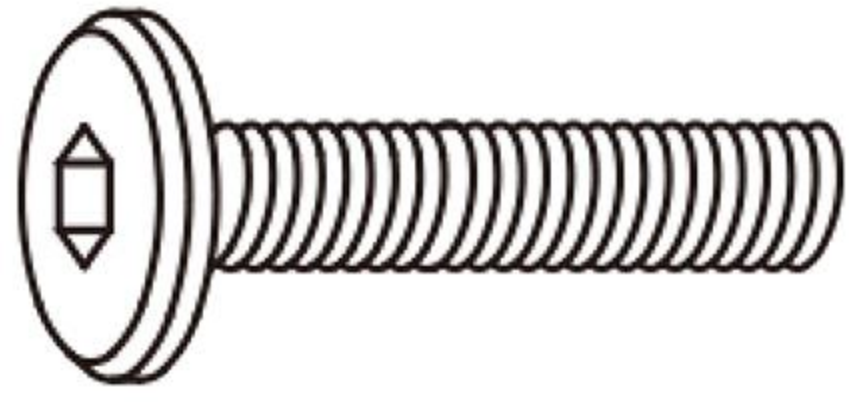

M6×35mm


8pcs

C




M6

1pcs

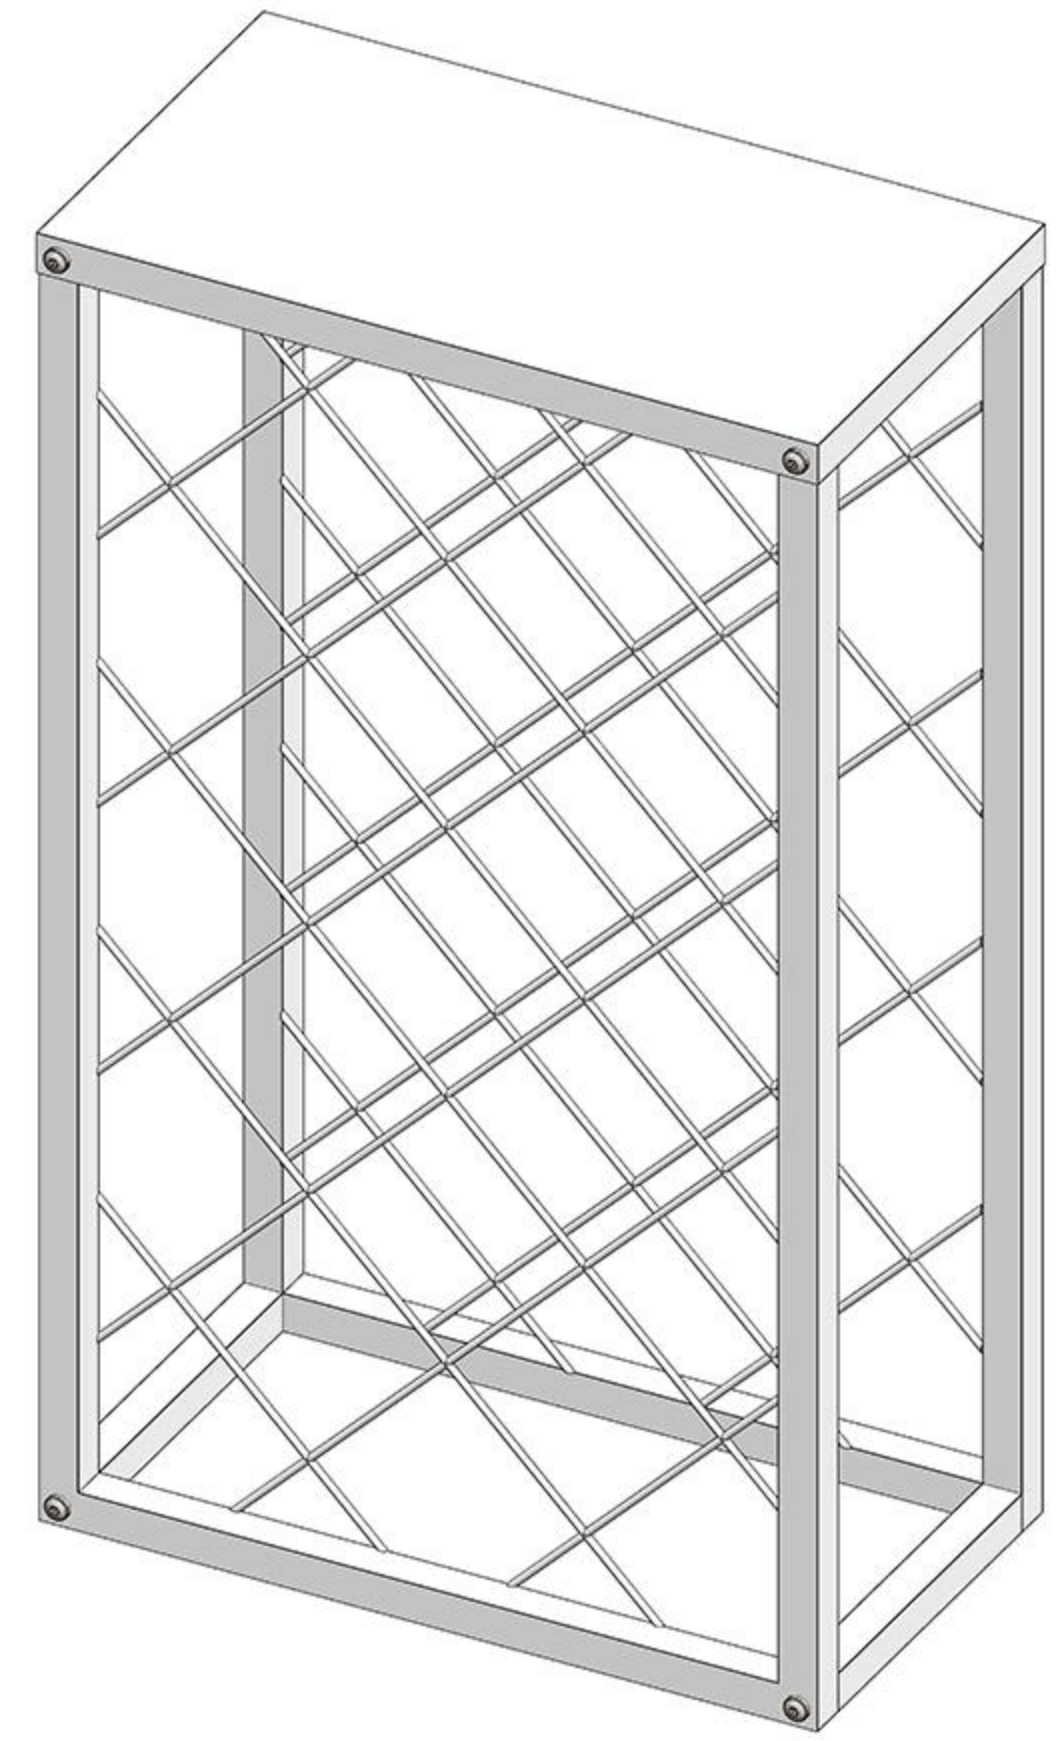


Installation process

1

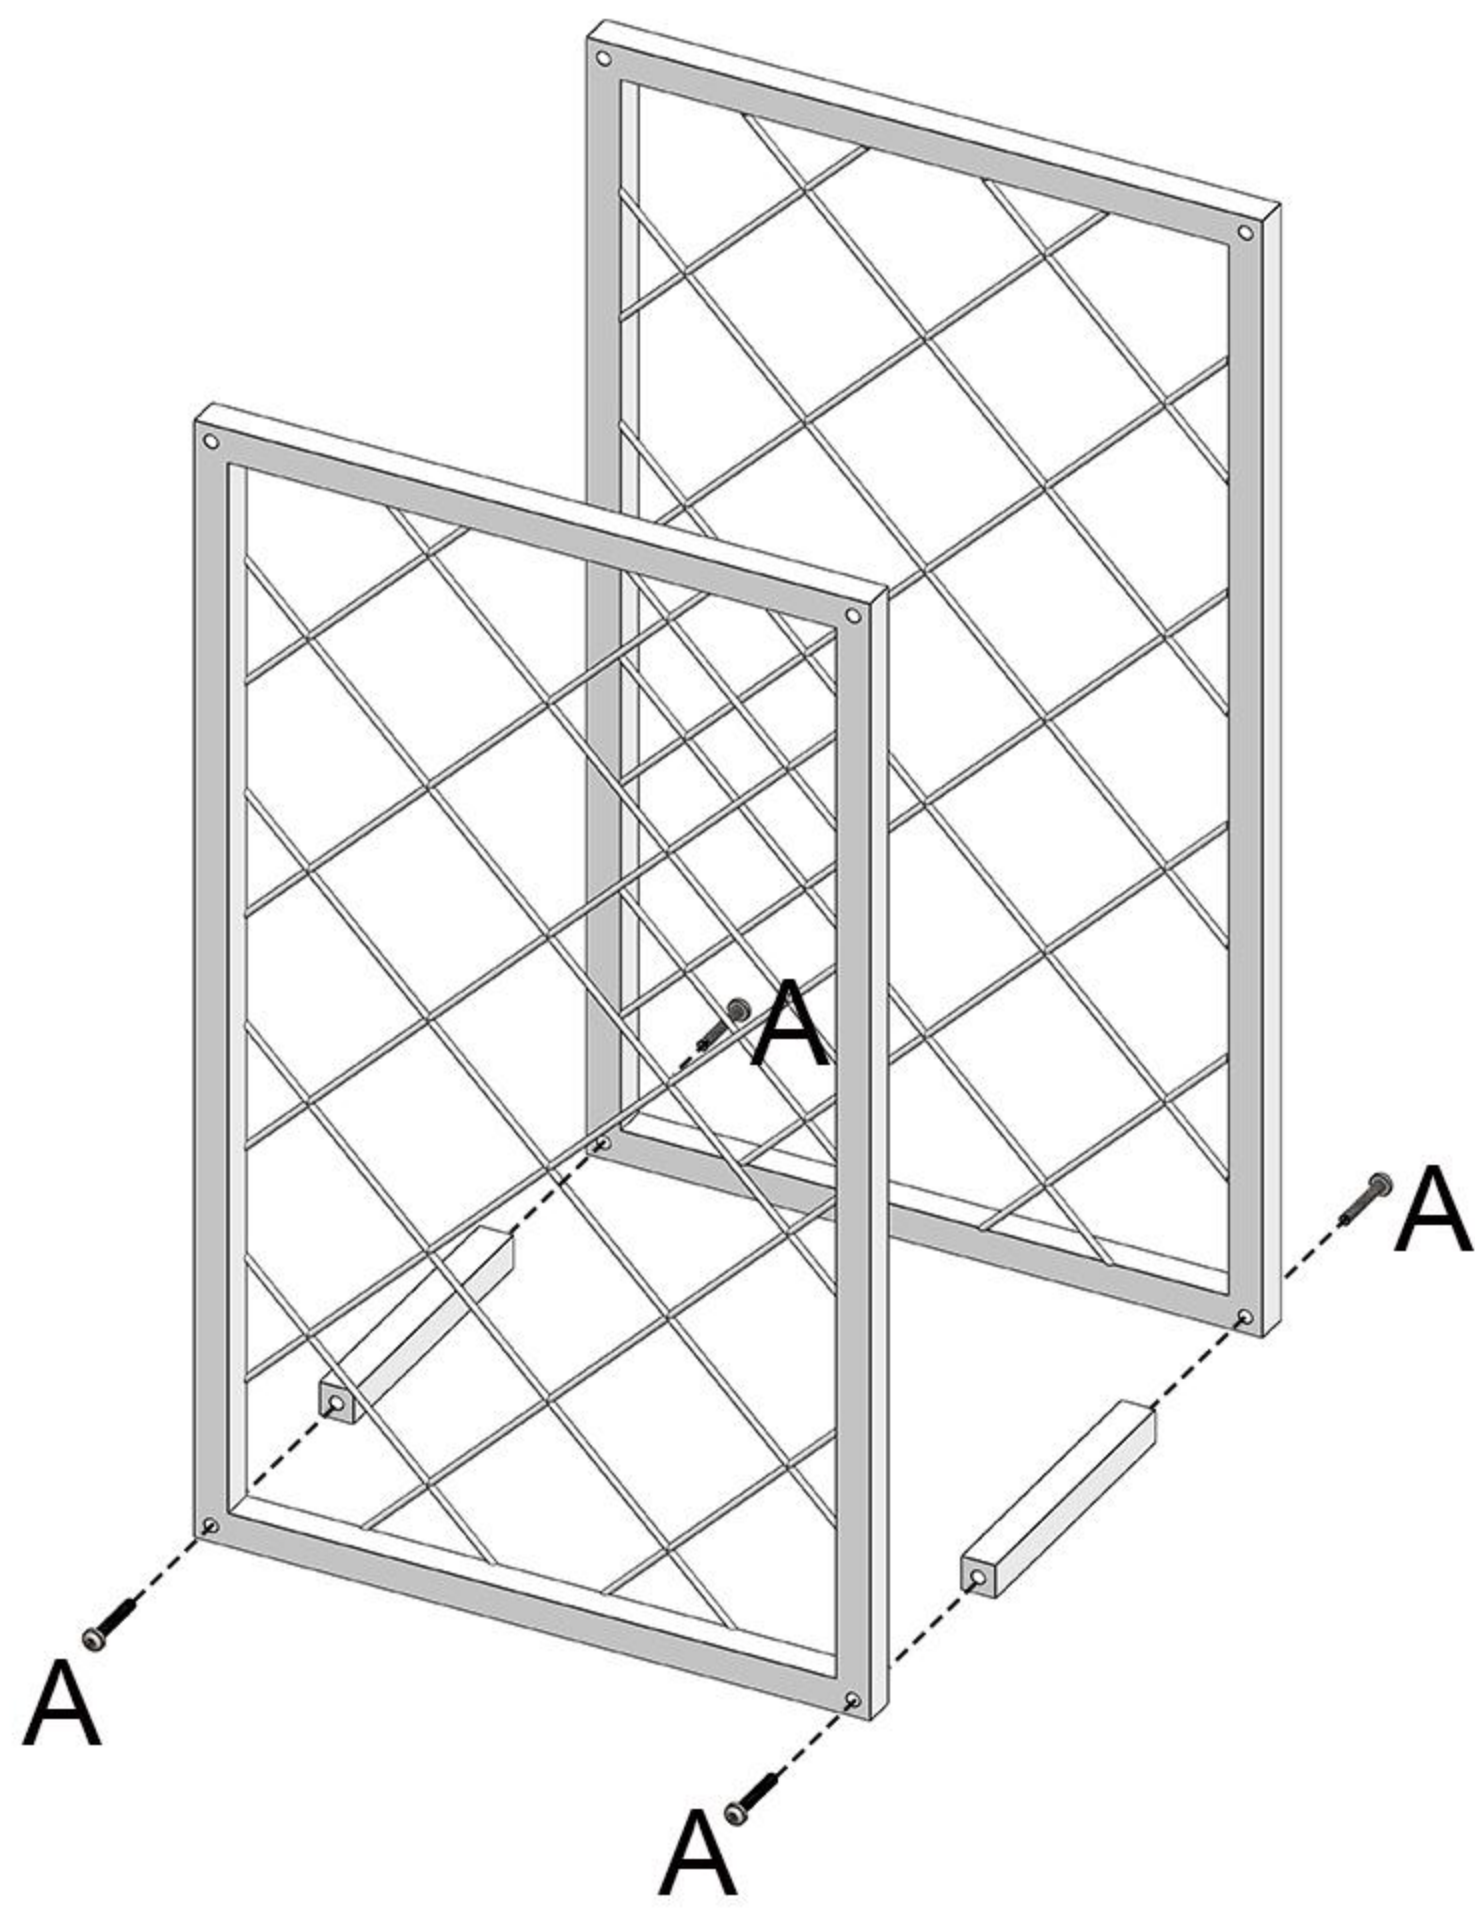


2

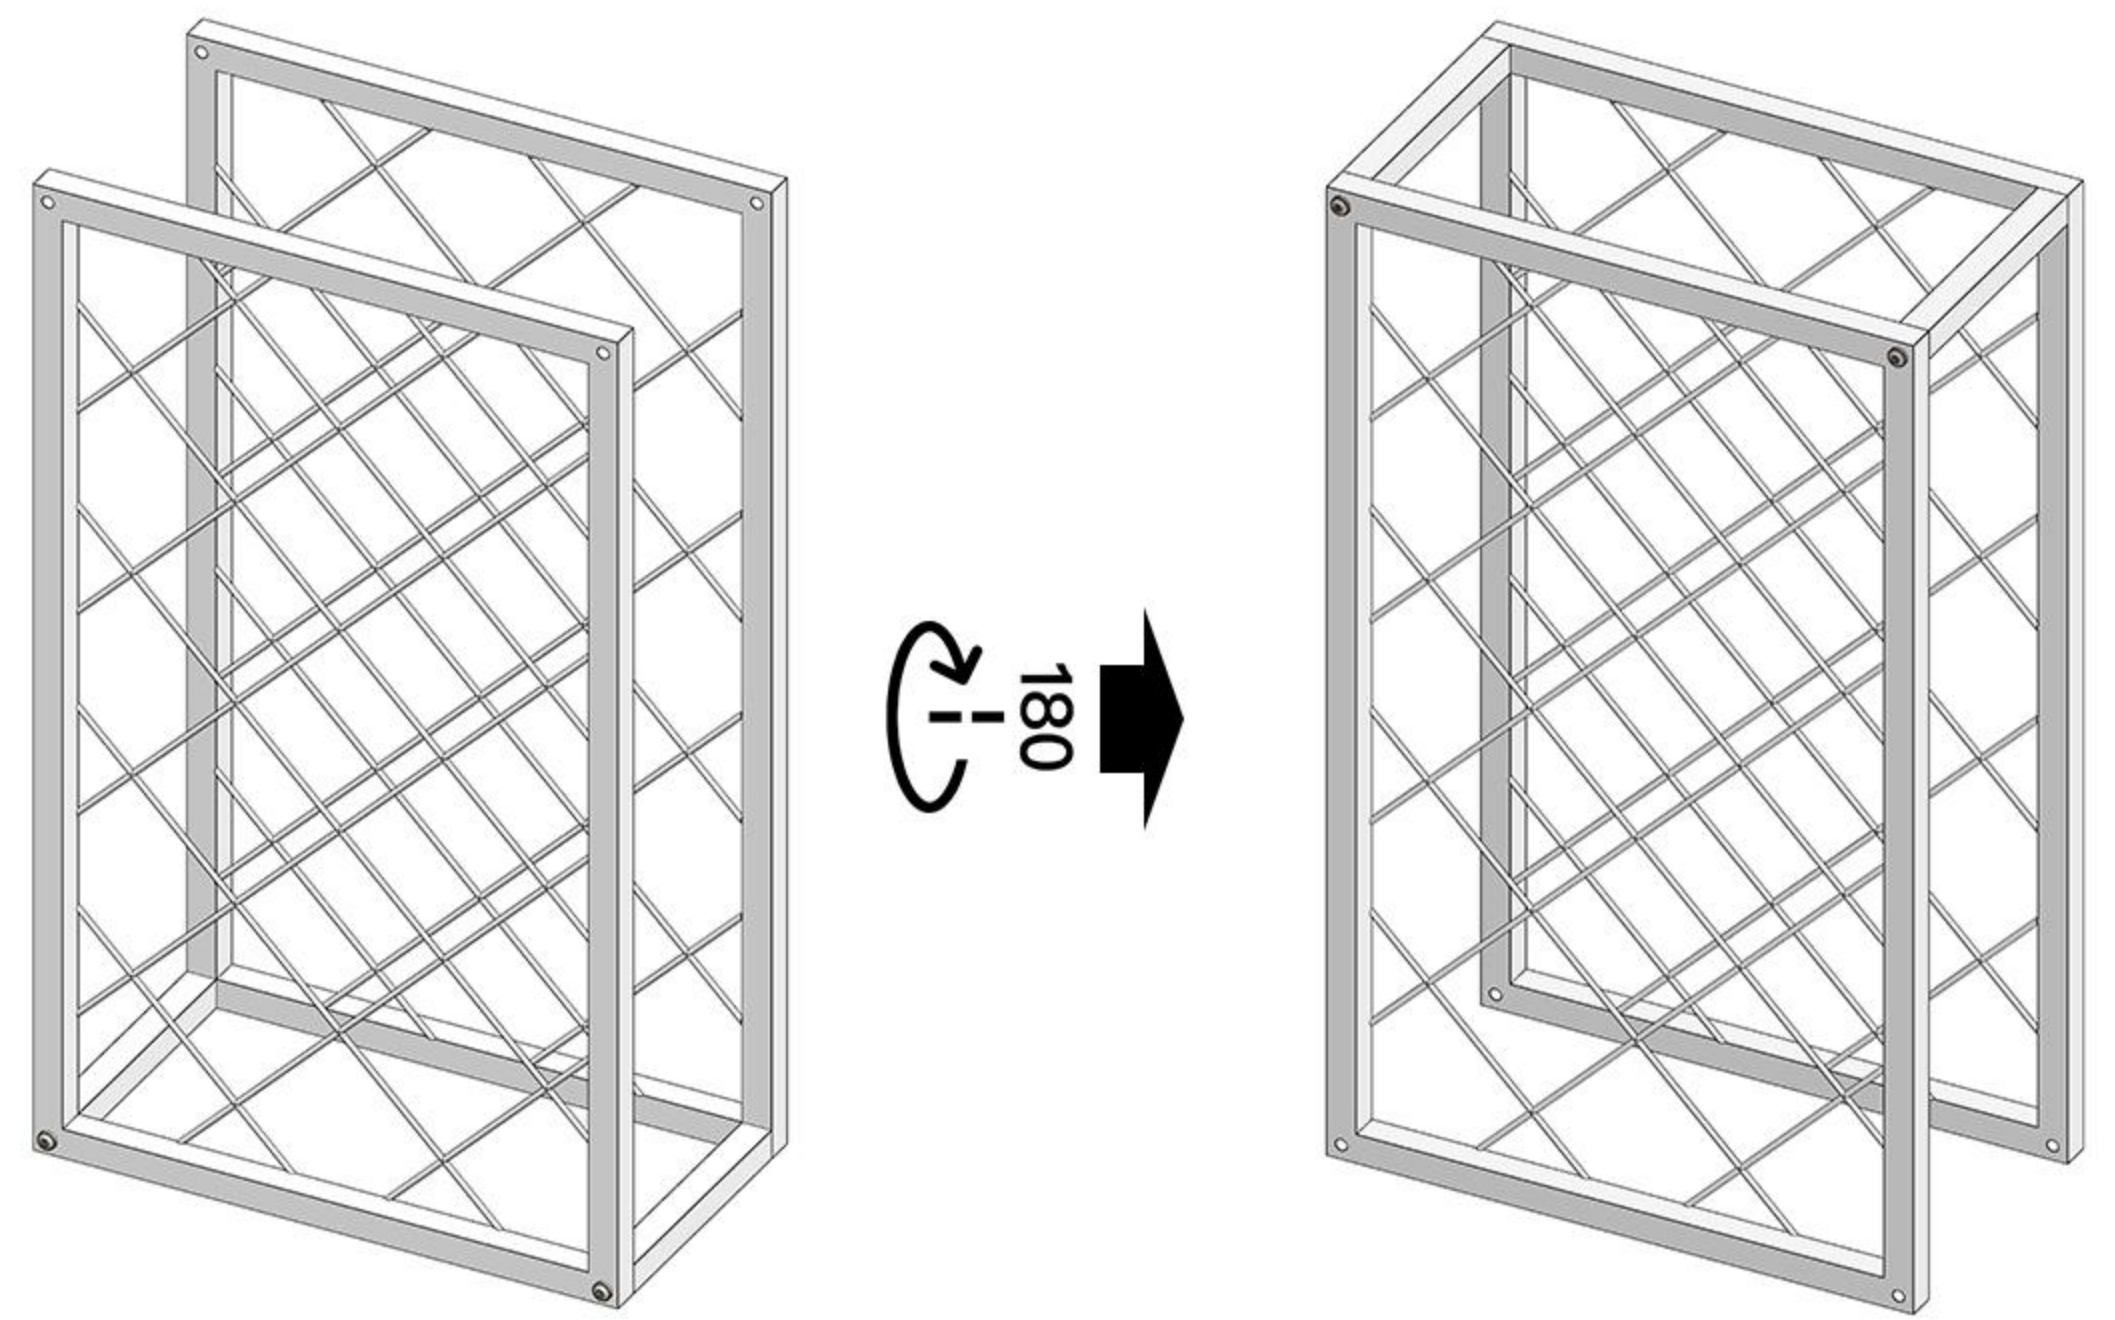

※ The bottom is installed after the overall flip up and down 180°

3

※ Install the whole frame and the small crossbar on the cover plate together

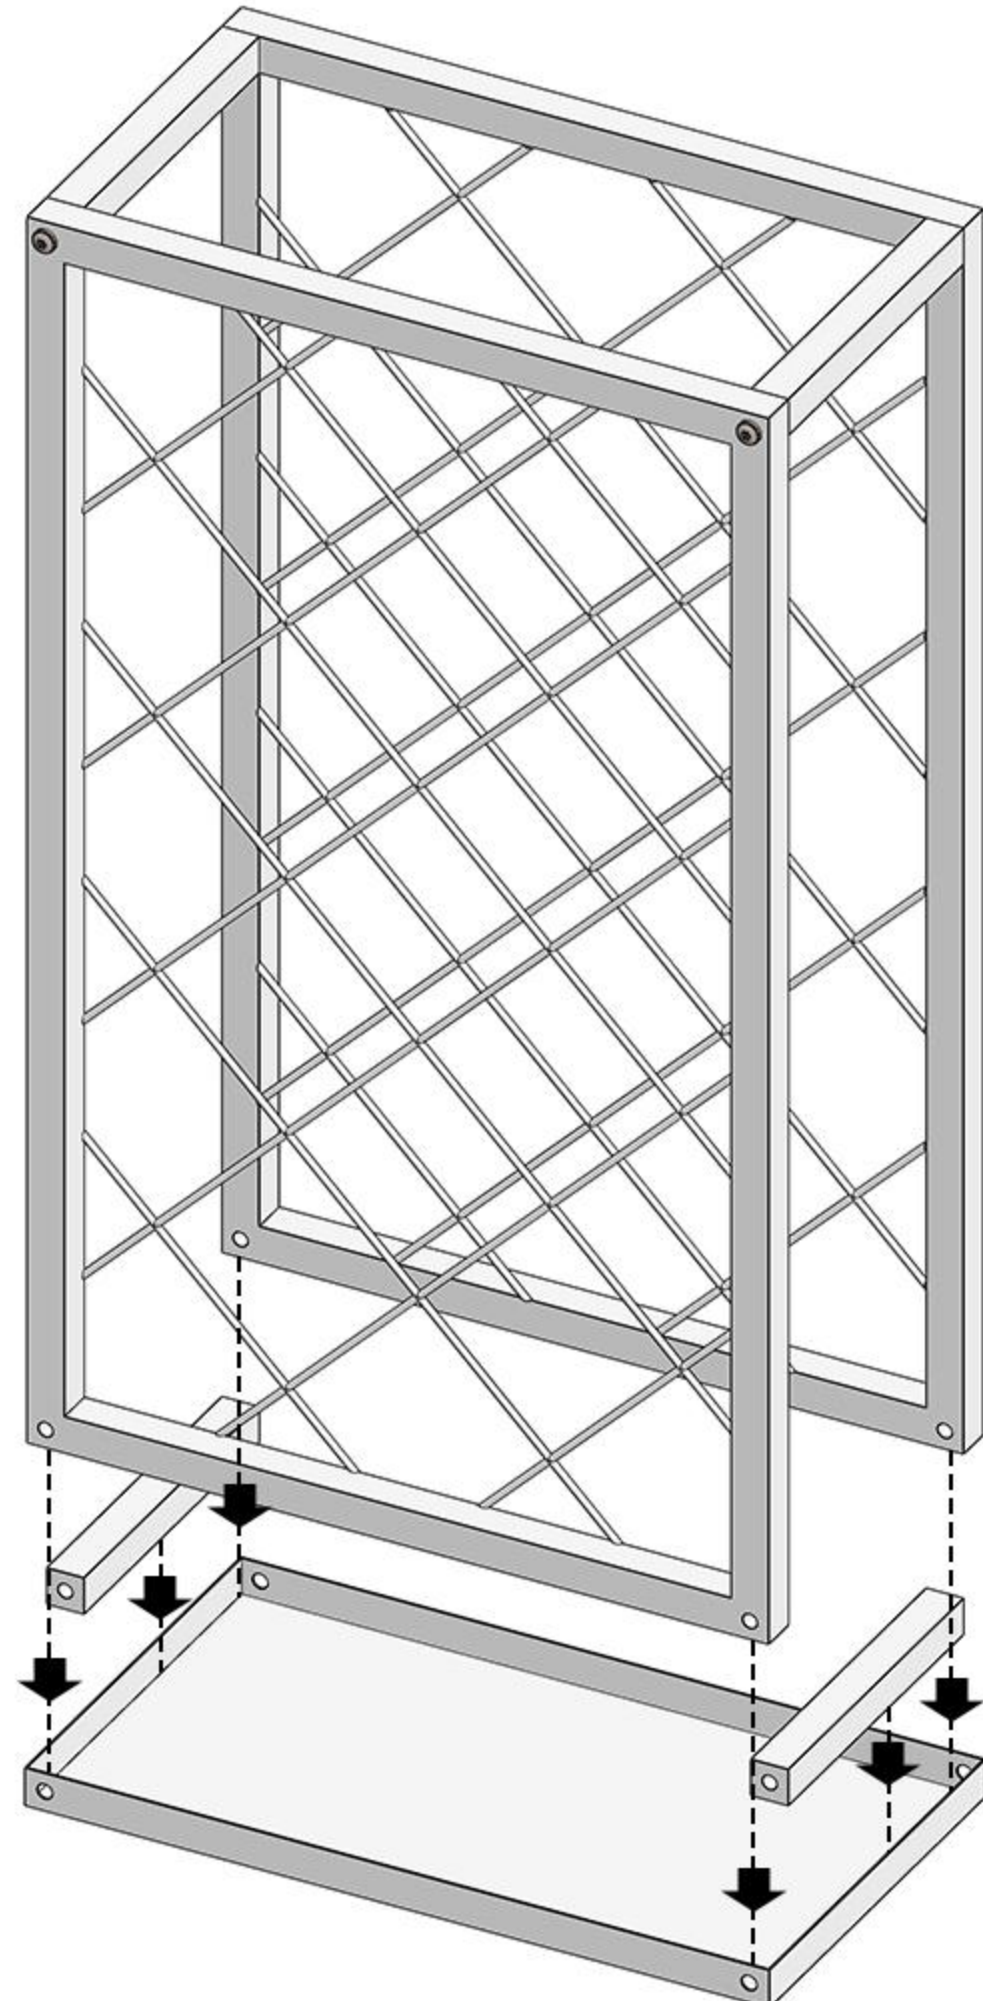

4

