



Parma



- (DE) Montageanleitung

(PL) Instrukcja montażu

(NL) Handleiding voor de montage

(GB) Assembly instructions

(TR) Montaj talimatı

(RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio

(FR) Notice de montage

(RO) Instrucțiuni de asamblare








(SK) Montážny návod

(CZ) Montážní návod

(HU) Szerelési útmutató



2 x (M8x60) a	5 x (M8x90) k	12 x j	9 x Ø8 b	9 x r	9 x M8 c	9 x (4x16) d	4 x s
6 x (5x50) t	2 x (M6x35) g	8 x y	2 x (M8x70) e		1 x 3	1 x 2	5 x 1

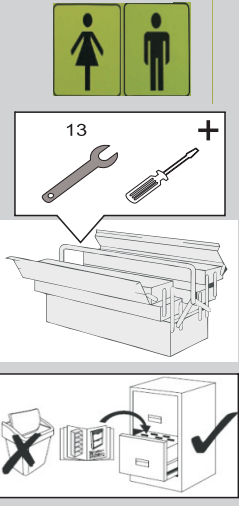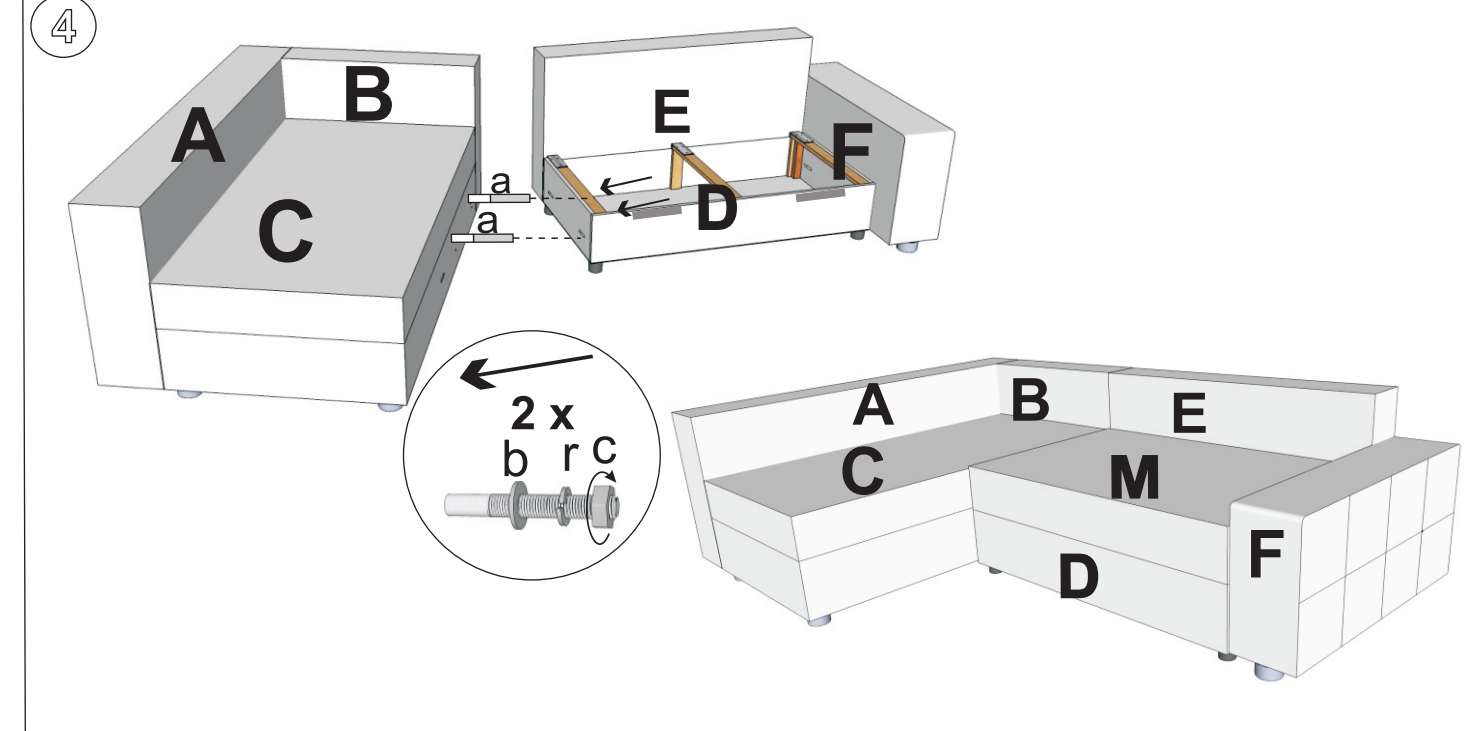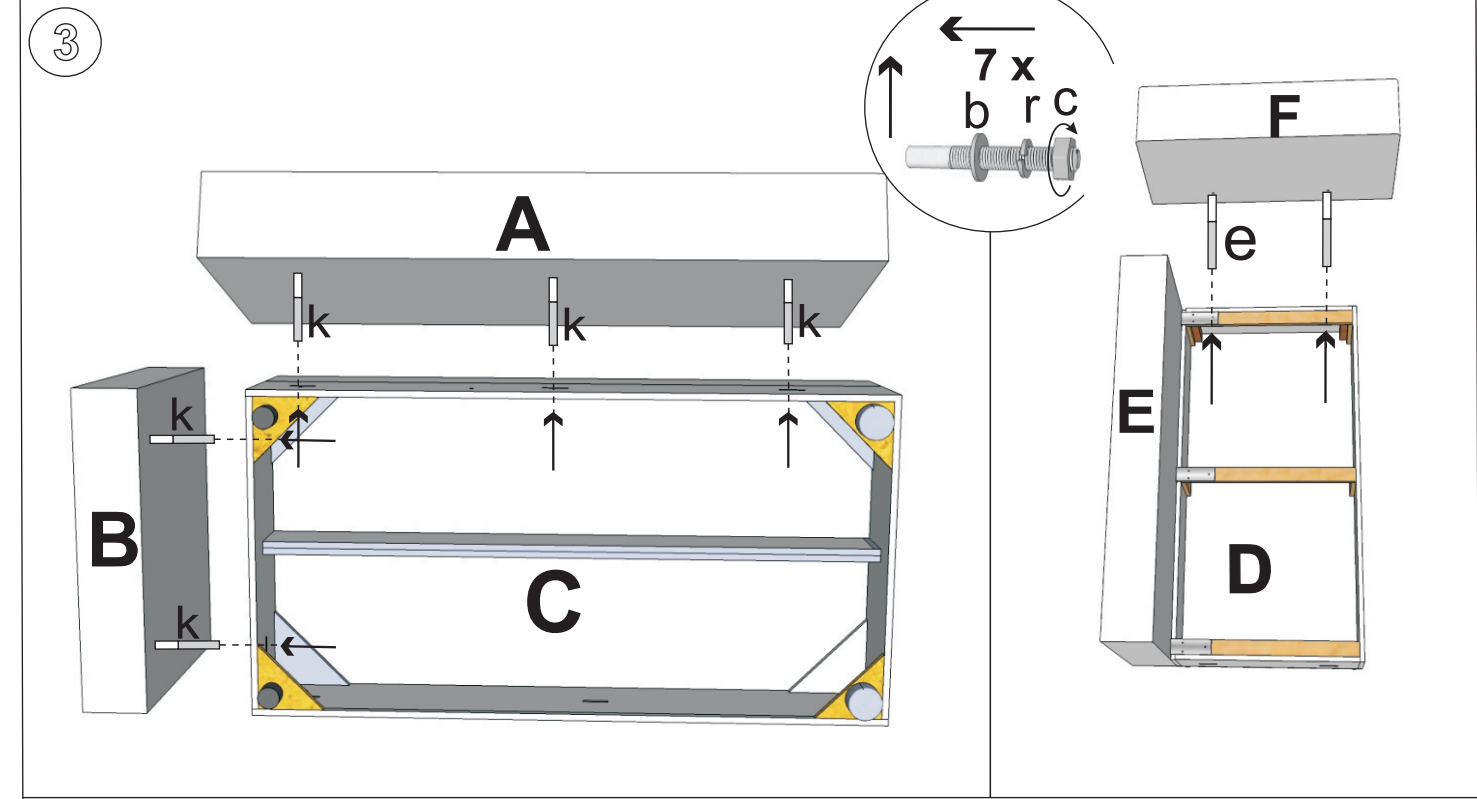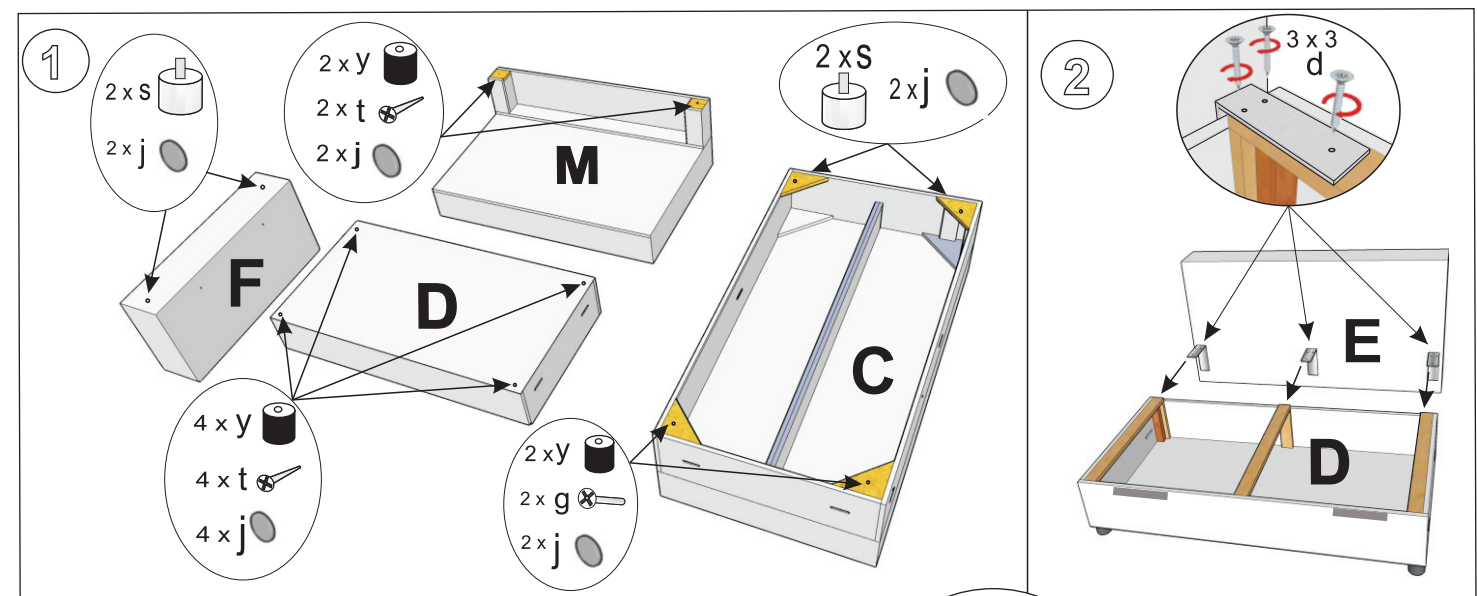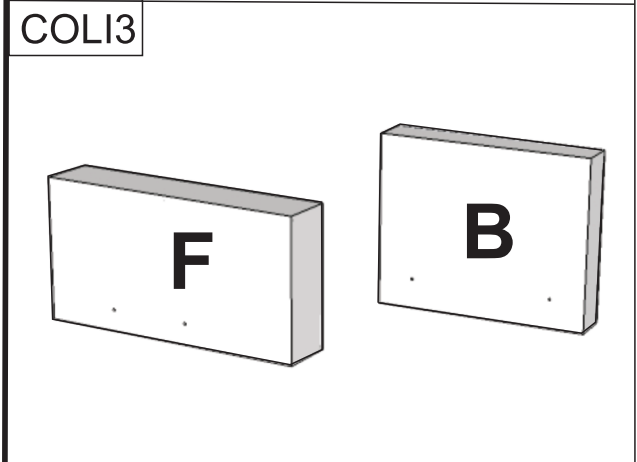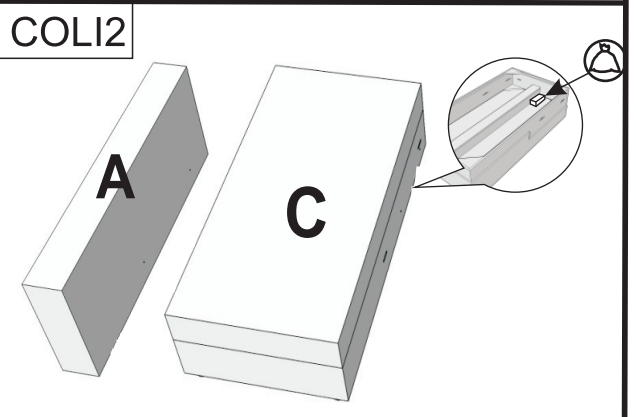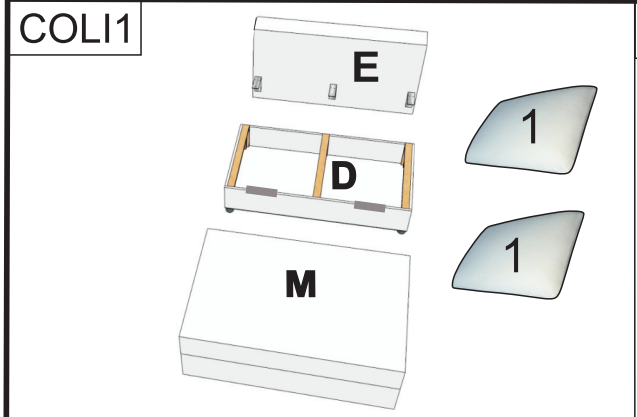


Parma



(DE) Montageanleitung
(PL) Instrukcja montażu
(NL) Handleiding voor de montage
(GB) Assembly instructions
(TR) Montaj talimatı
(RU) Инструкция по монтажу


(IT) Istruzioni di montaggio
(FR) Notice de montage
(RO) Instrucțiuni de asamblare
(SK) Montážny návod
(CZ) Montážní návod
(HU) Szerelési útmutató

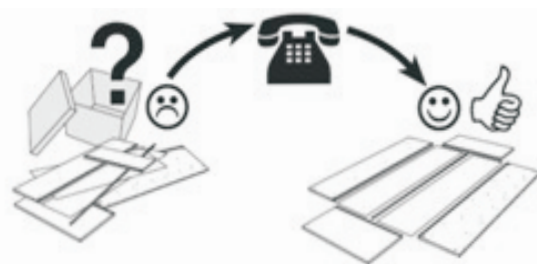


2:R

2x (M8x60) a	5x (M8x90) k	12x j	9x Ø8 b	9x r	9x M8 c	9x (4x16) d	4x s 50mm 70mm
6x (5x50) t	2x (M6x35) g	8x y 50mm	2x (M8x70) e		1x 3 35 cm 50 cm	1x 2 45cm	5x 1 45cm 65cm






COLI1

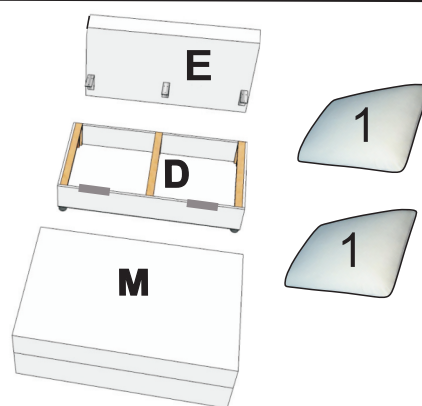

COLI2

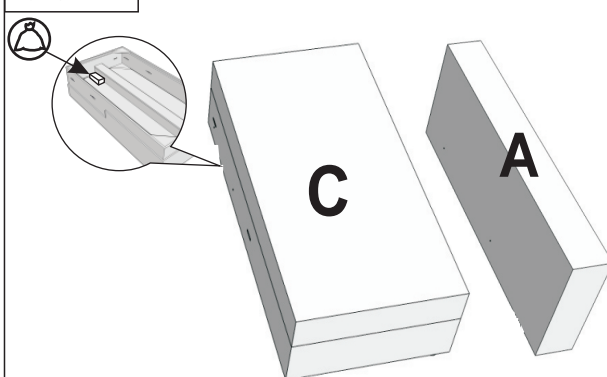

COLI3

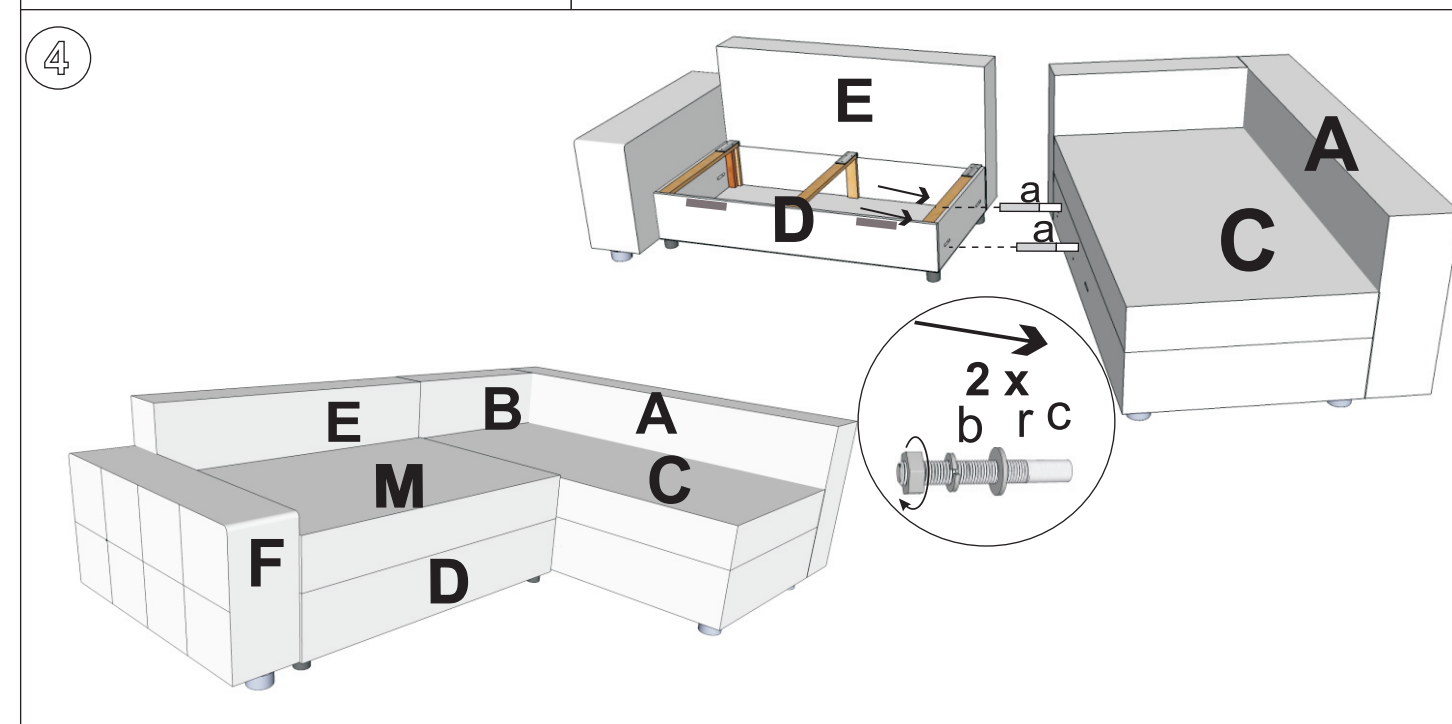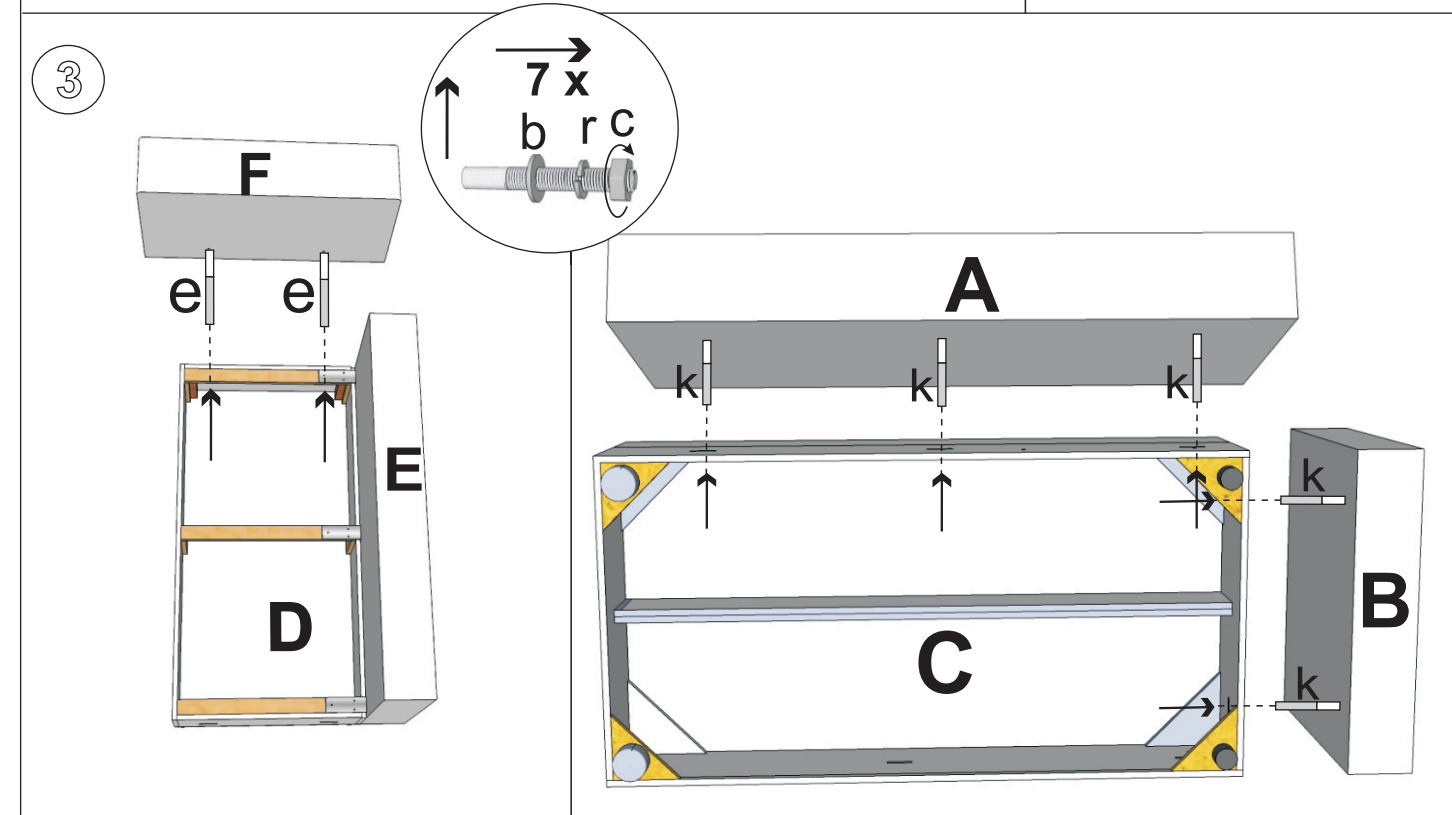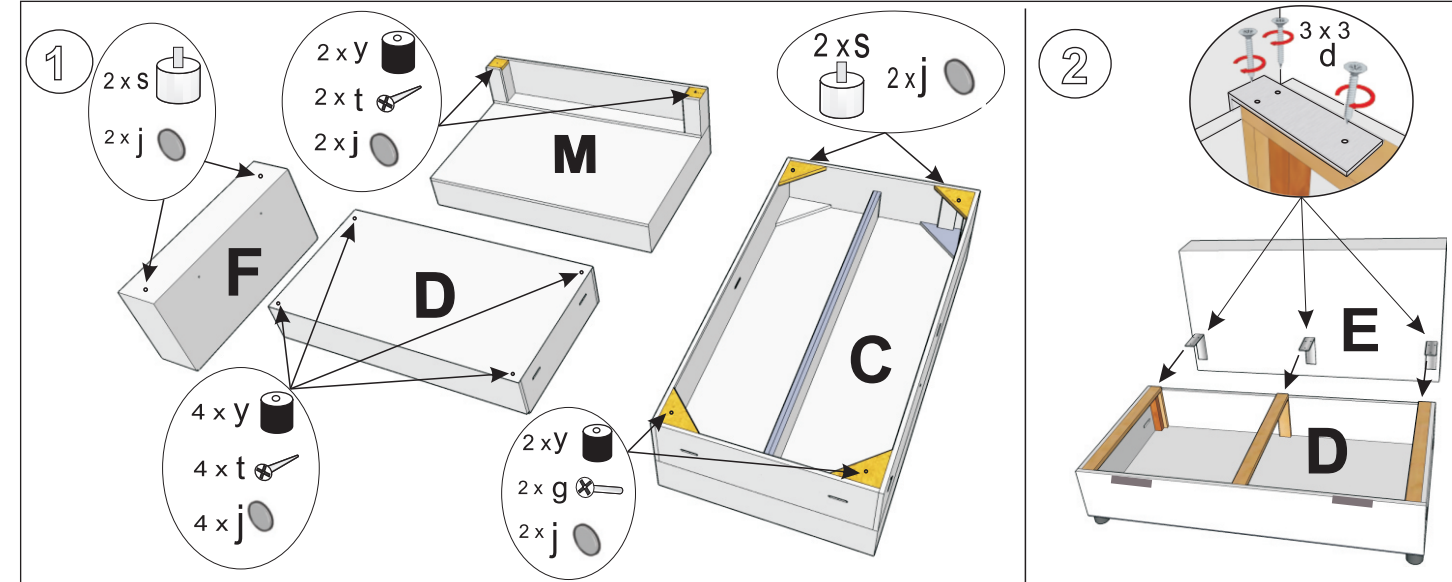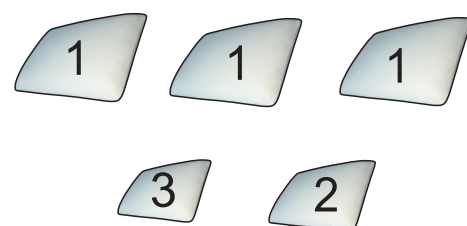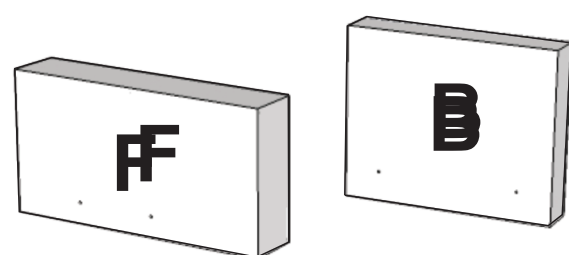

Ver: 29.05.2025

Service page2 - Parma - R

Service page1 - Parma - R