



Box-1/2	WF306440
Box-2/2	WF306441

CE


Deutsch: Dieses Produkt besteht aus 2 Logistikpaketen, bitte überprüfen Sie die Anzahl Ihrer Pakete, falls eines fehlt, wenden Sie sich bitte an die Logistik.

English: This product consists of 2 packages. Please check the number of your packages. If one is missing, please contact the logistics department.

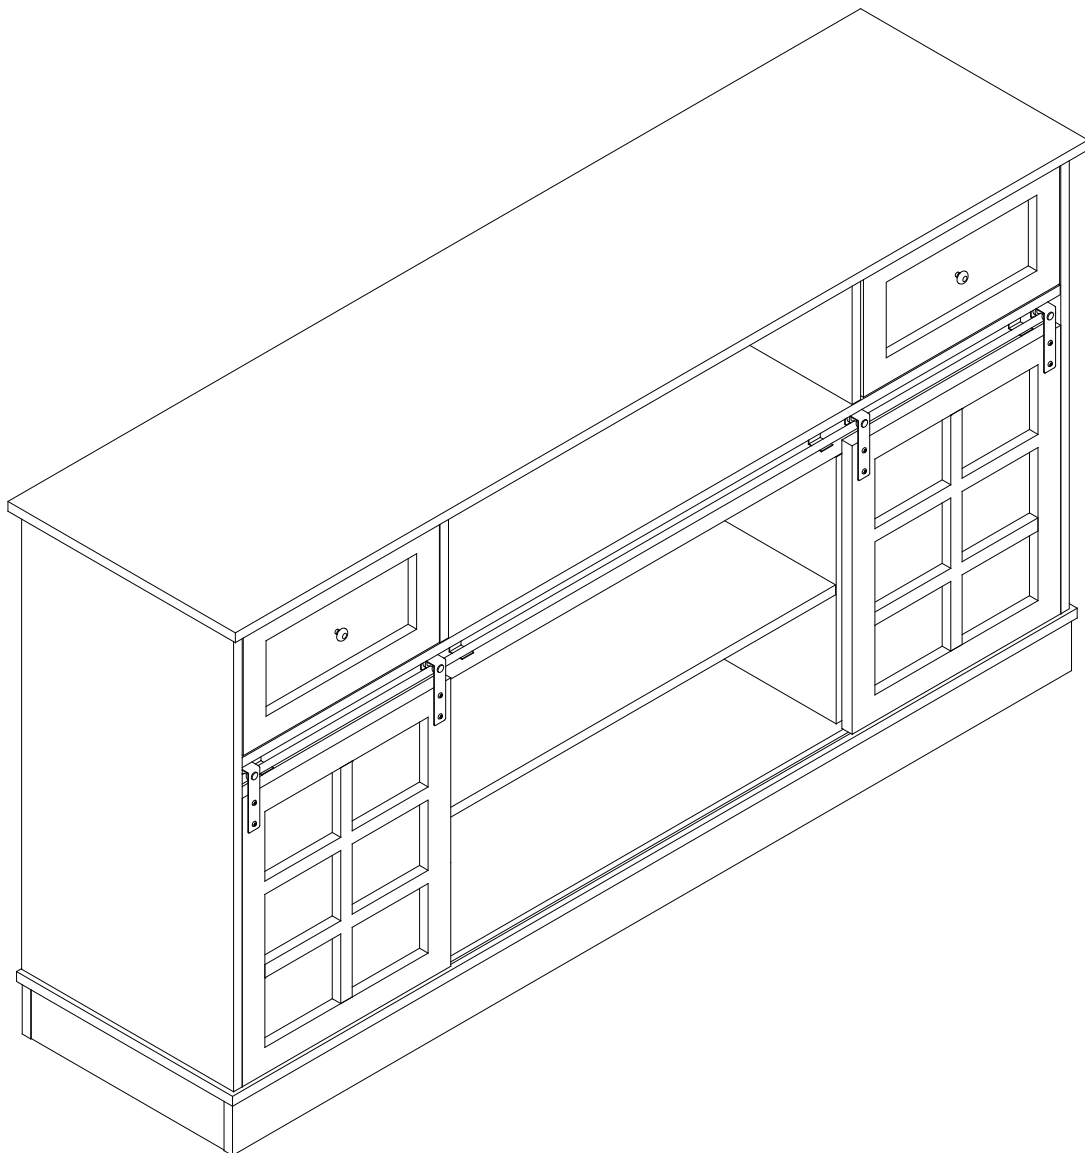


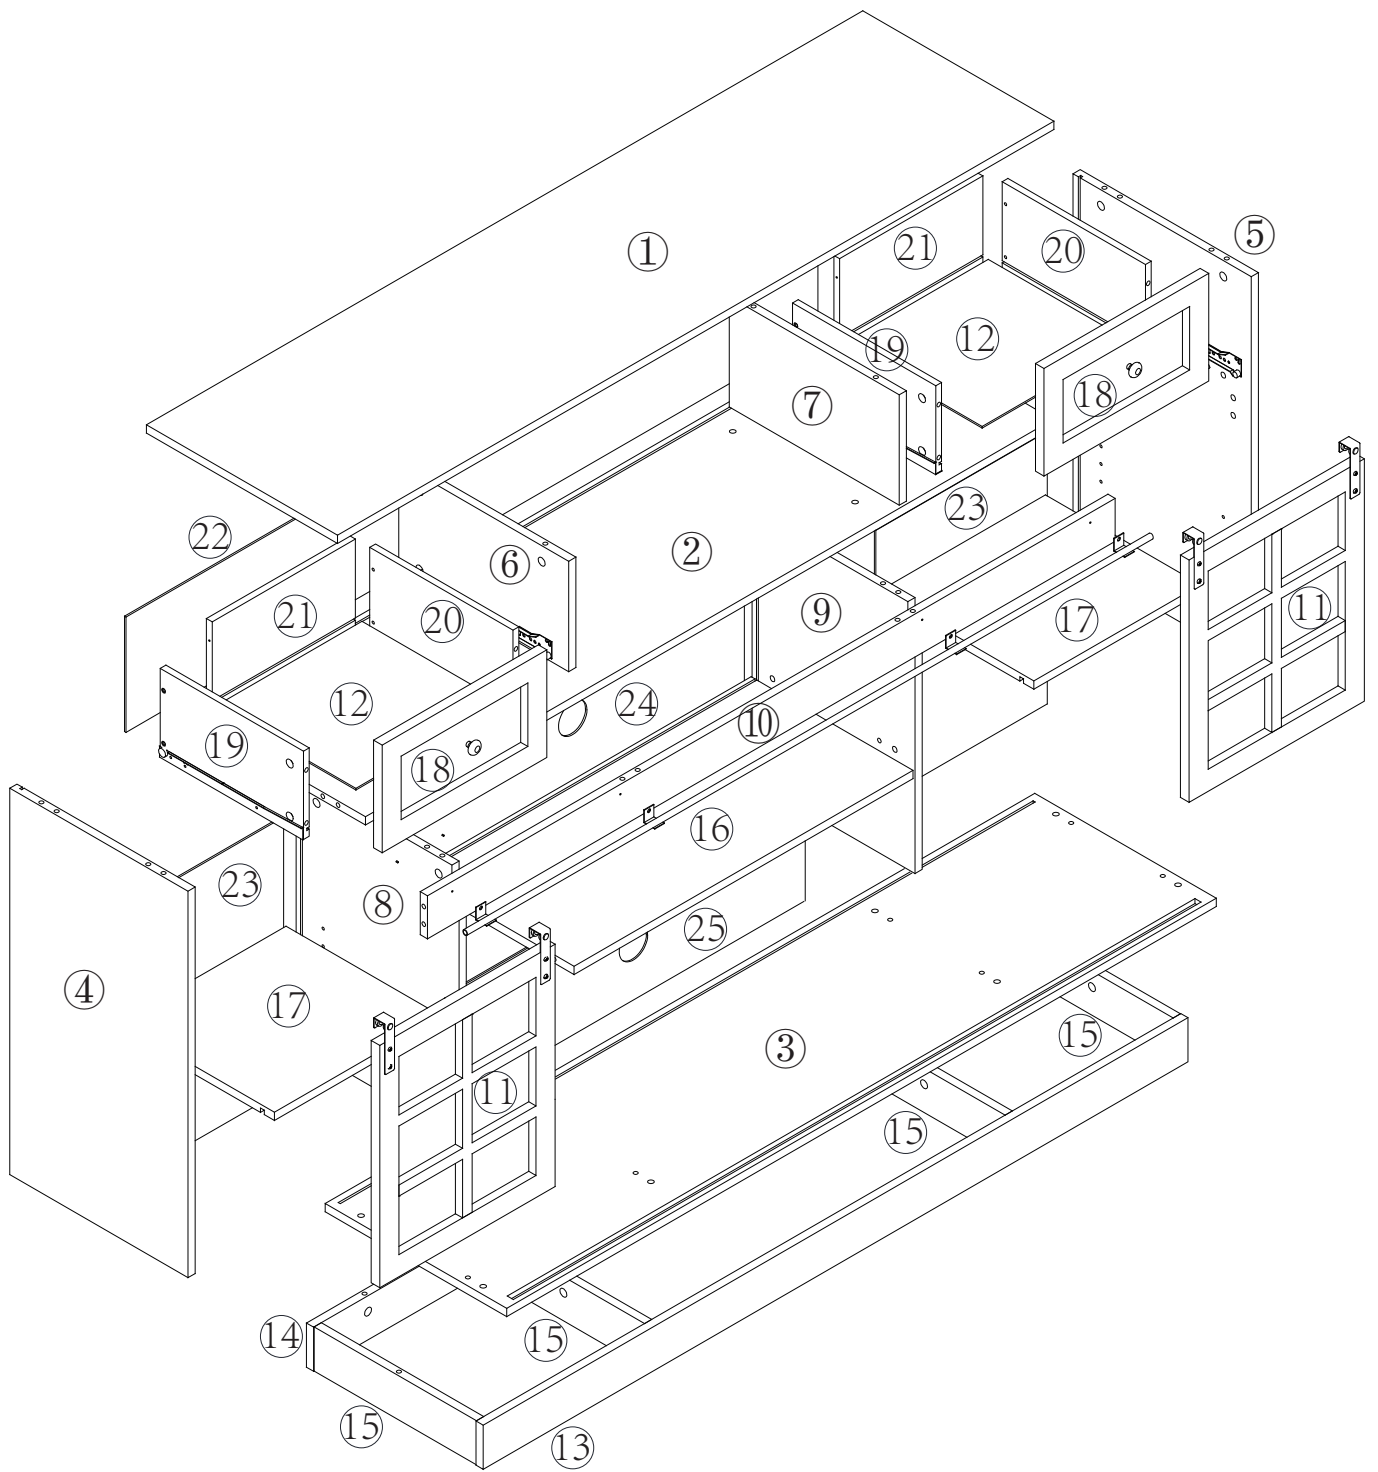


① x 1

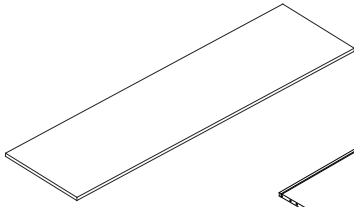


② x 1

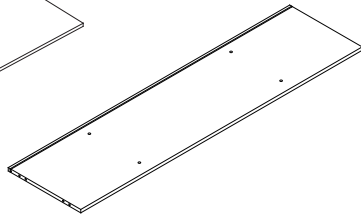


③ x 1

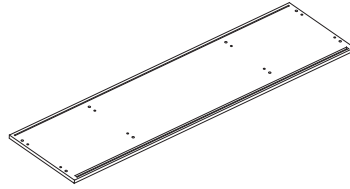


④ x 1

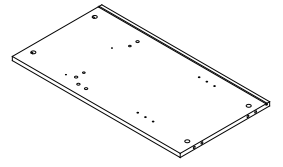


⑤ x 1

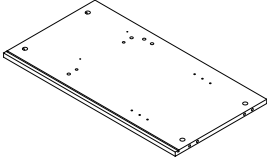


⑥ x 1

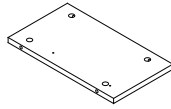


⑦ x 1

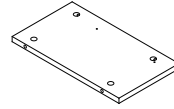


⑧ x 1

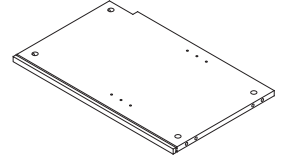


⑨ x 1

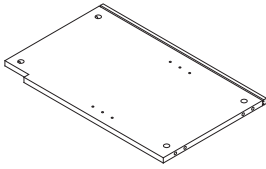


⑩ x 1

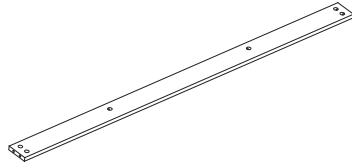


⑪ x 2

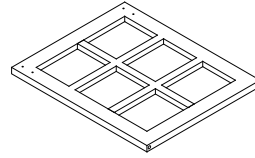


⑫ x 2

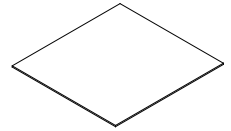


⑬ x 1

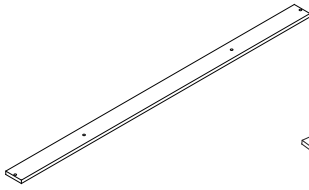


⑭ x 1

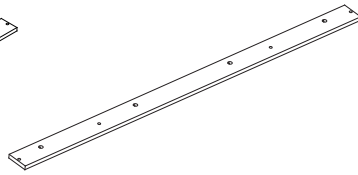


⑮ x 4

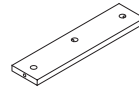


⑯ x 1

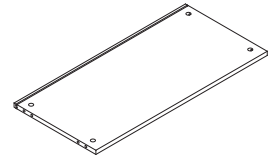


⑰ x 2

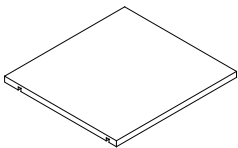


⑱ x 2

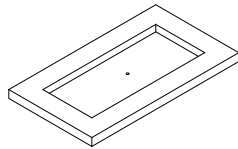


⑲ x 2

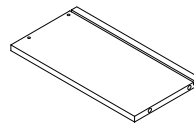


⑳ x 2

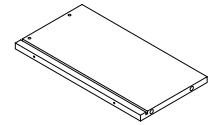


㉑ x 2

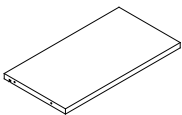


㉒ x 1

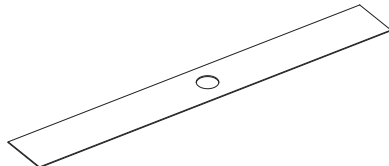


㉓ x 2

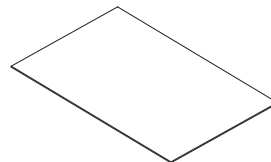

㉔ x 1

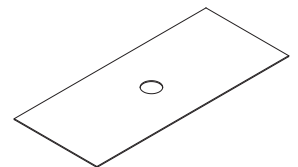

㉕ x 1

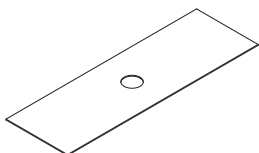

Hardwareliste

Größe




$\phi 15 \times 9.5 \text{mm}$

A X 62




B X 62

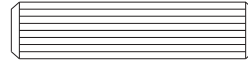


$\phi 8 \times 30 \text{mm}$


C X 28

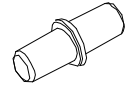

DX 8

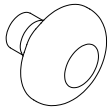


EX 2

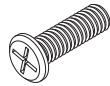


M4x8mm

FX 2

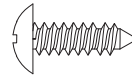


$\phi 4 \times 14 \text{mm}$


G X 12

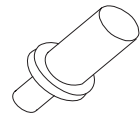


H X 4

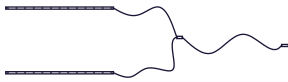


I X 1

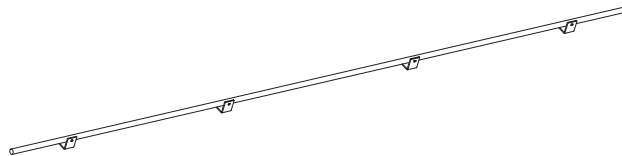


J X 1

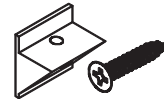


K X 4

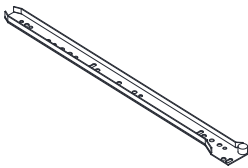


L X 2

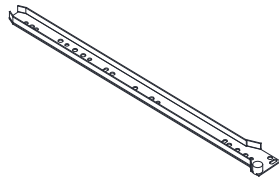


MX 2

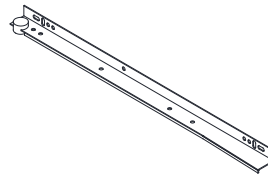

N X 2

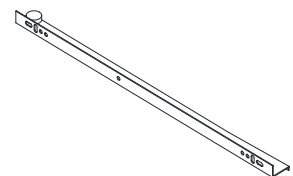


OX 2

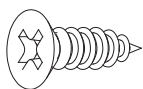


3.5x12mm

P X 16

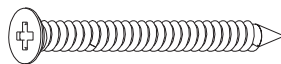




3.5x35mm

Q X 8

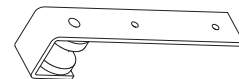


R X 4


Schritt 1

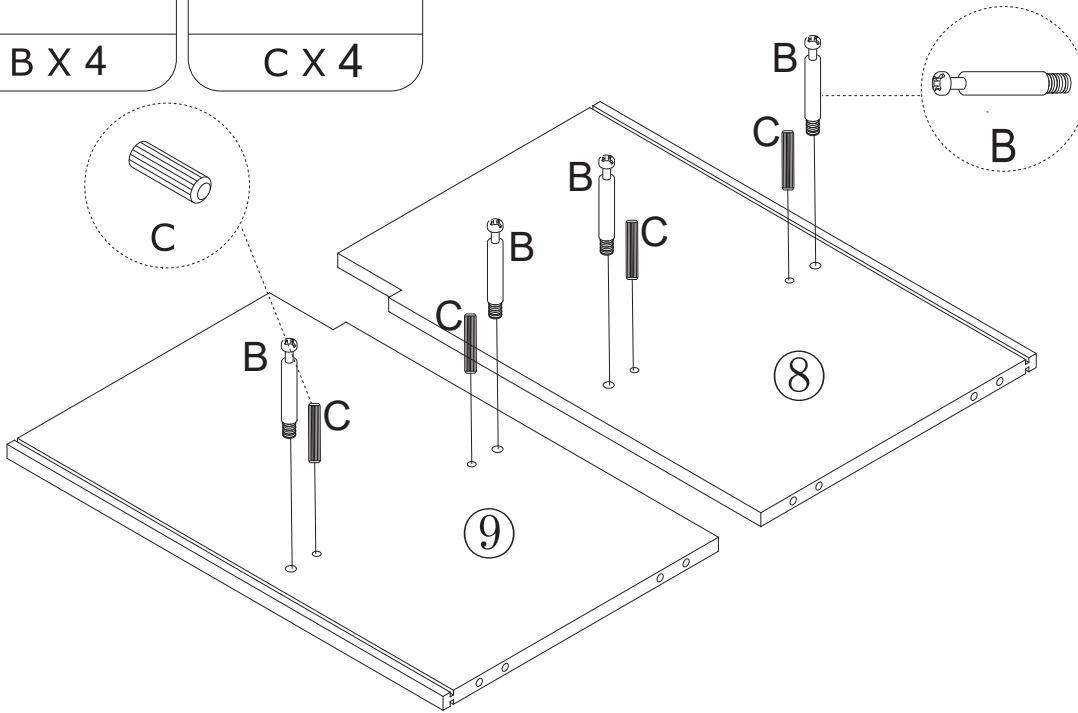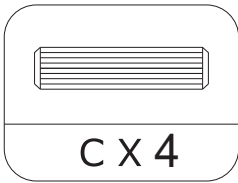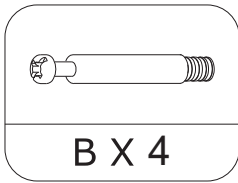




Schritt 2

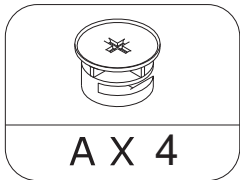


<p>B</p>		<p>Arrow must face hole</p> <p>⊕ A</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

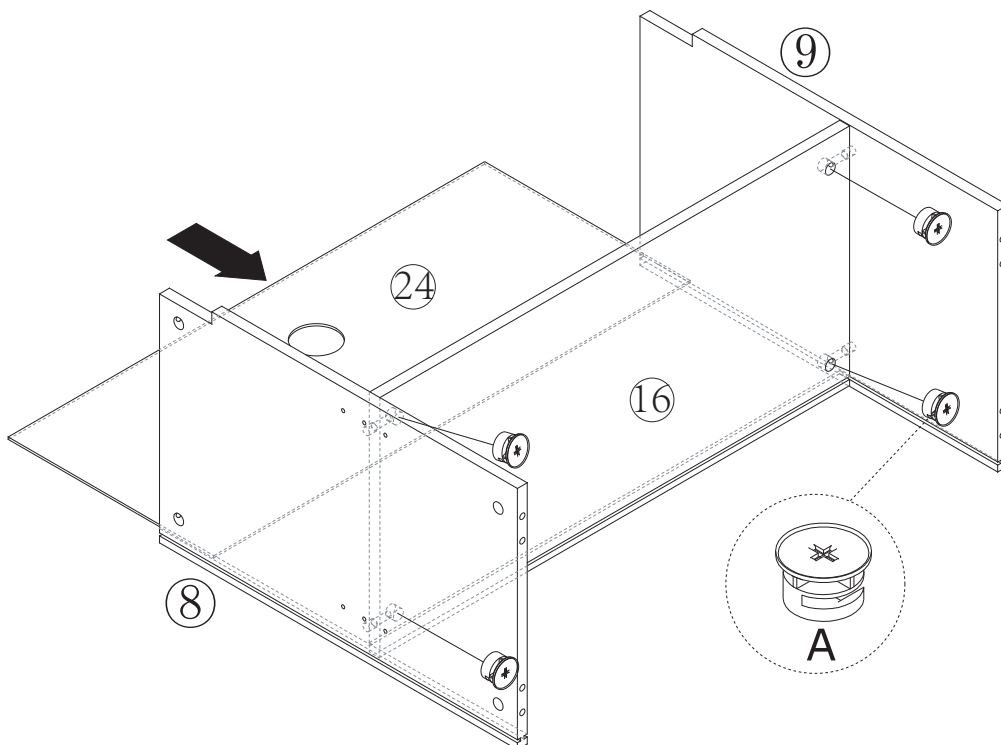


Schritt 3

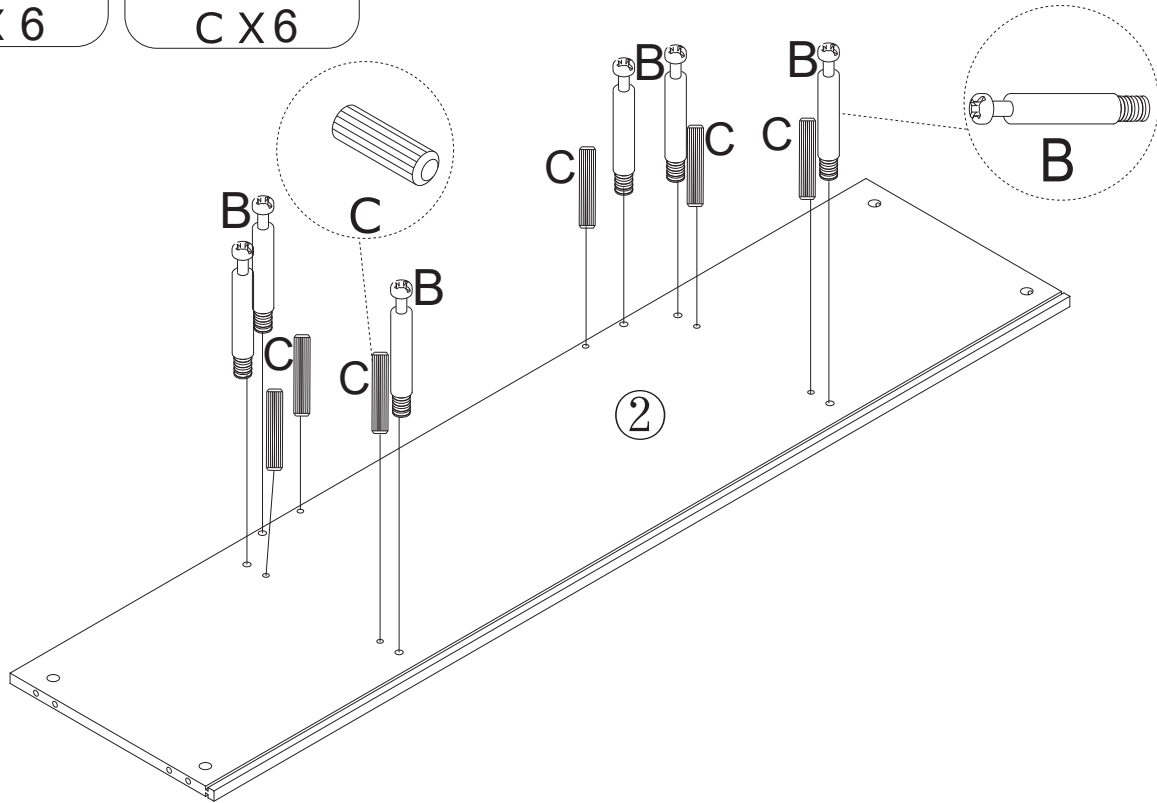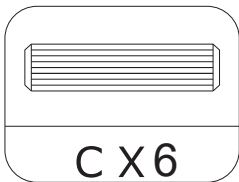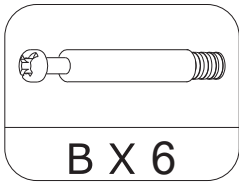


Schritt 4

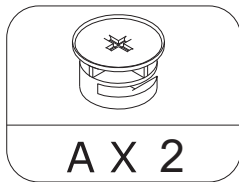


<p>B</p>		<p>Arrow must face hole</p> <p>A</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

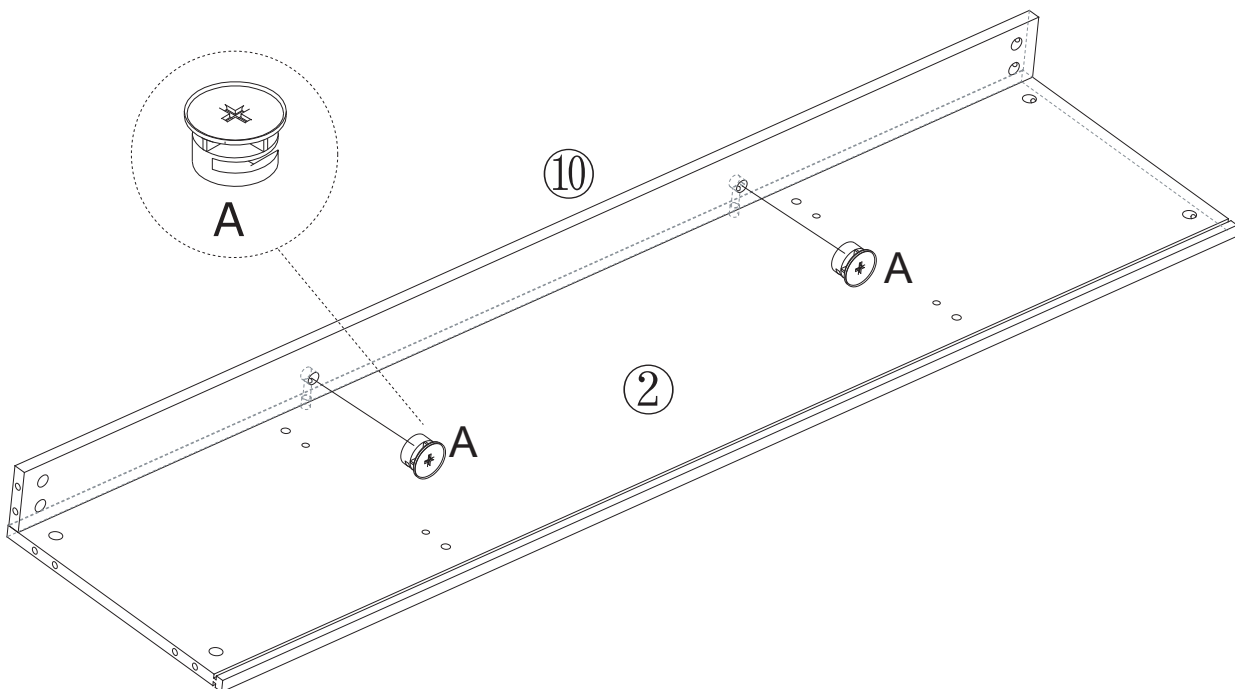

Schritt 5




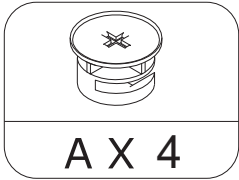


A X 4

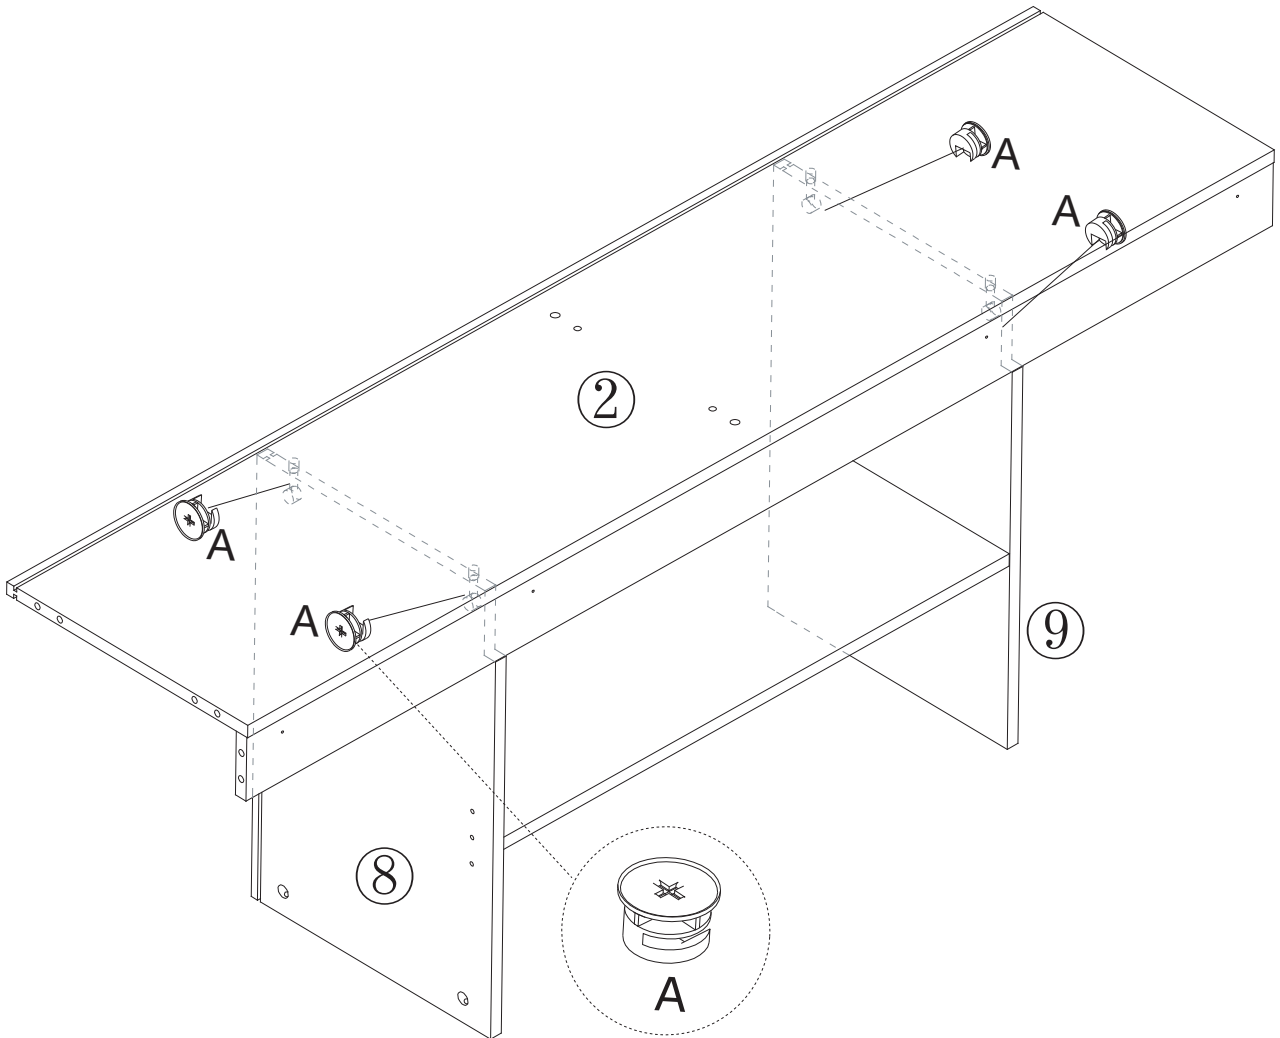


		<p>Arrow must face hole</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>




Schritt 6

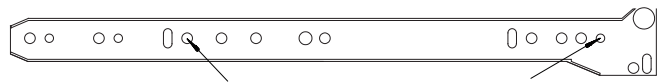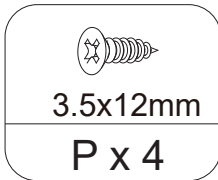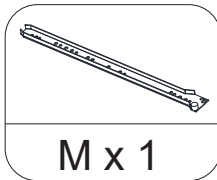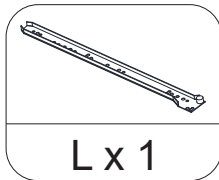

Assemble the screw into the hole
Mark with arrows


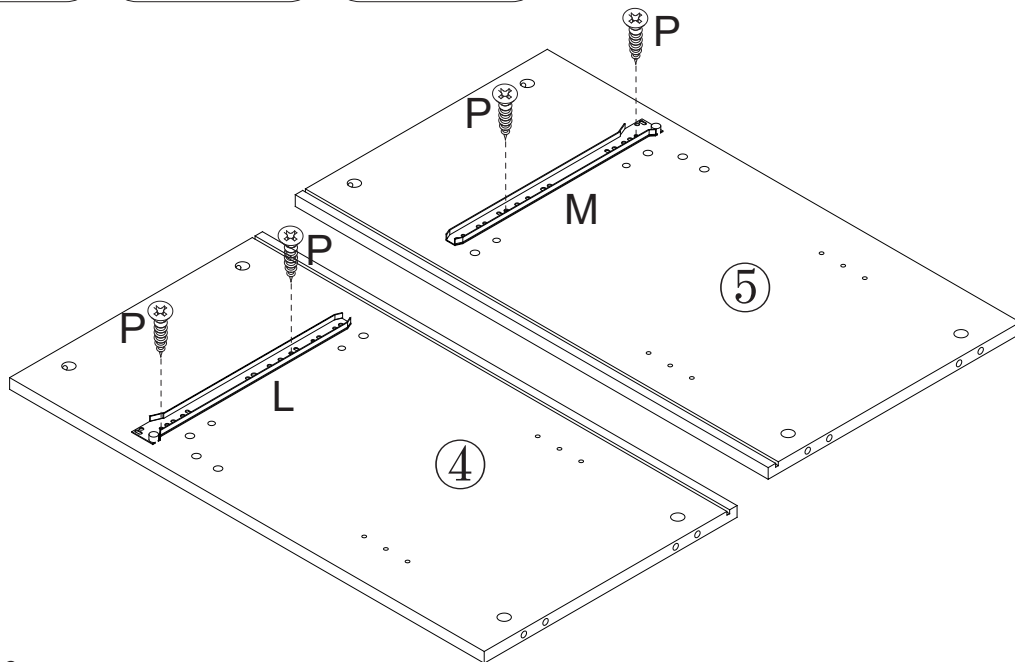


Schritt 7

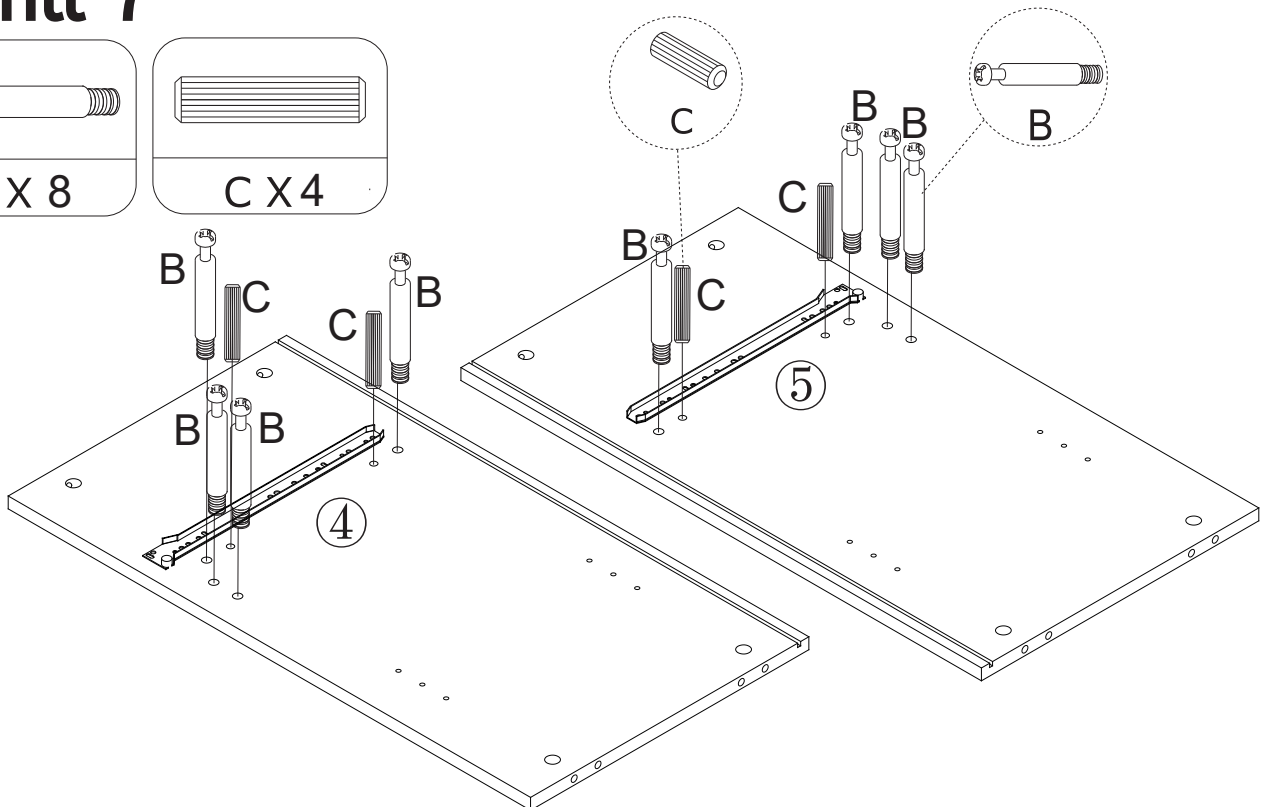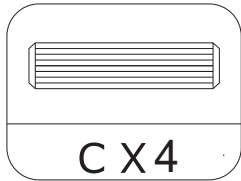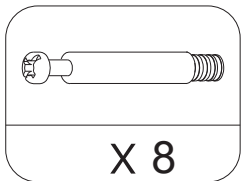


		<p>Arrow must face hole</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Schritt 8


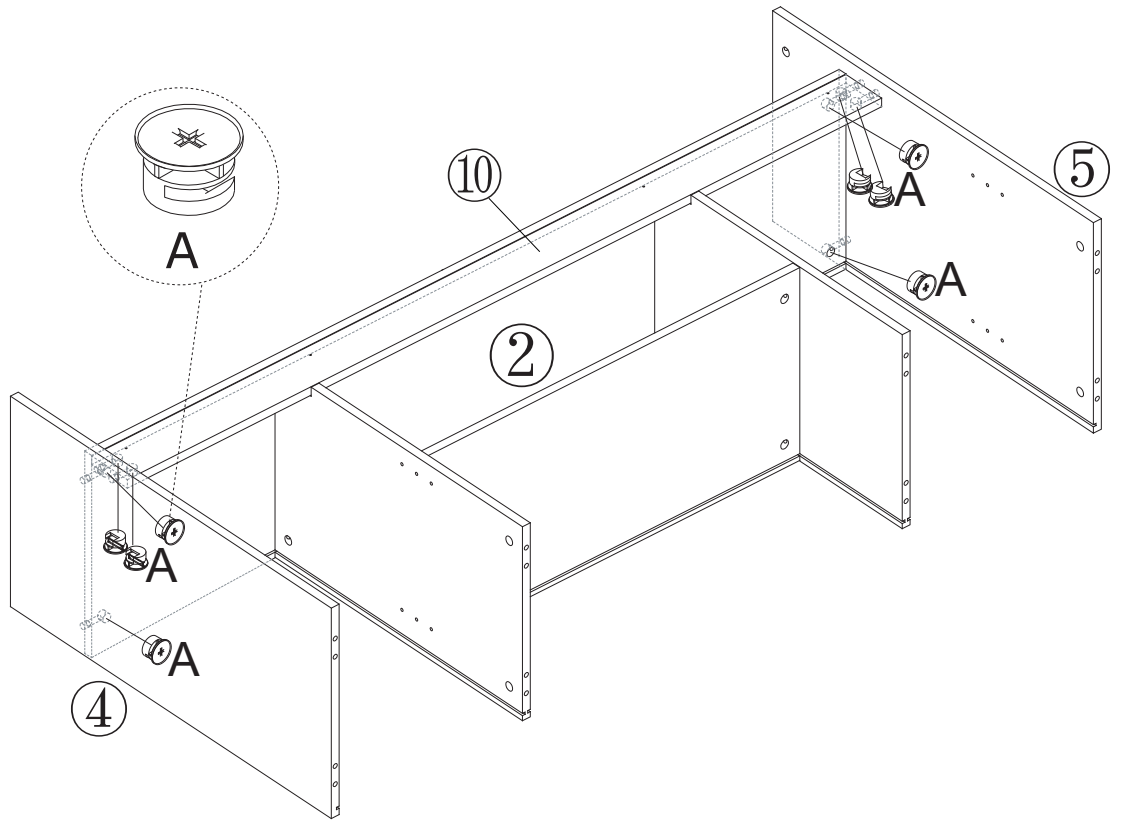
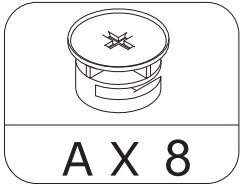


<p>B</p>		<p>Arrow must face hole</p> <p>A</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Schritt 9


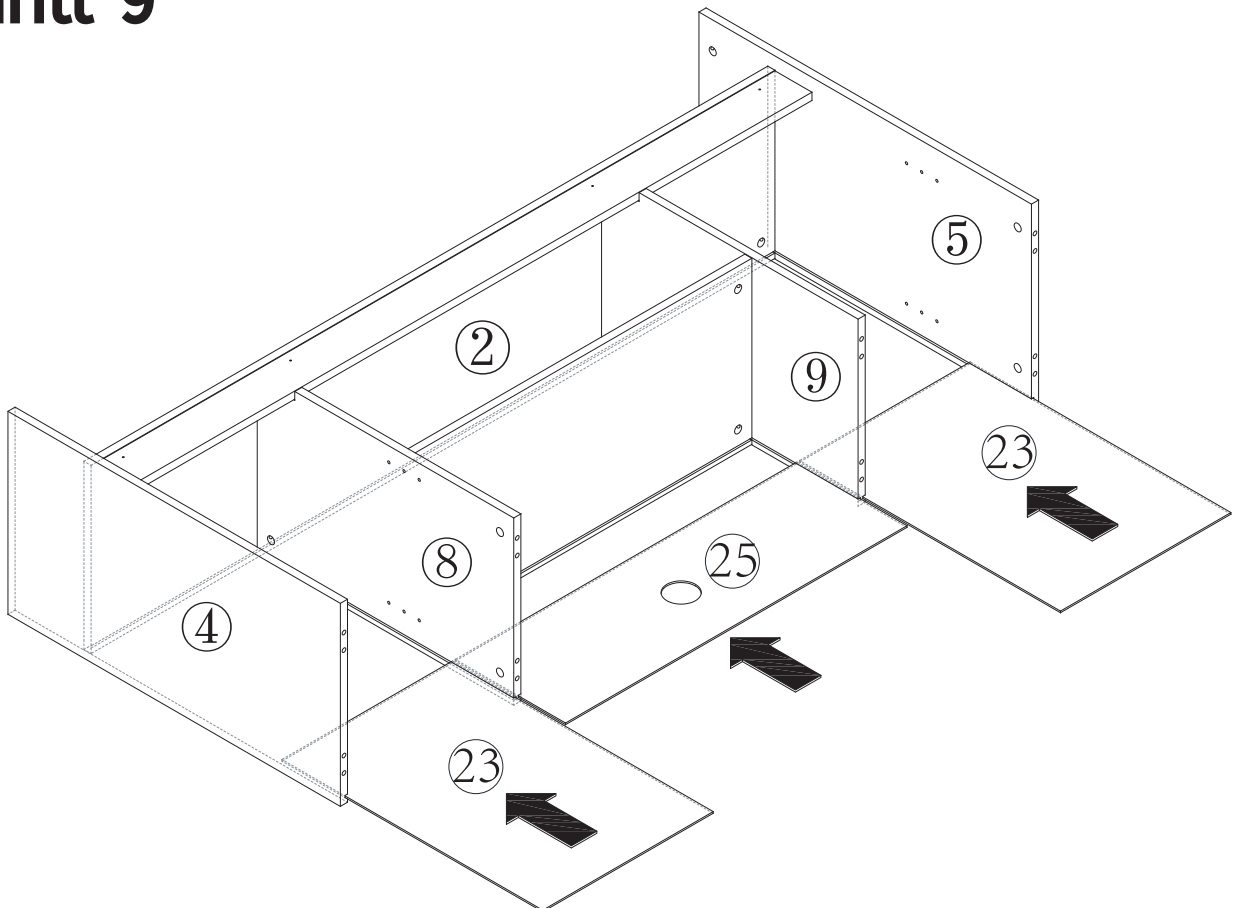


Schritt 10

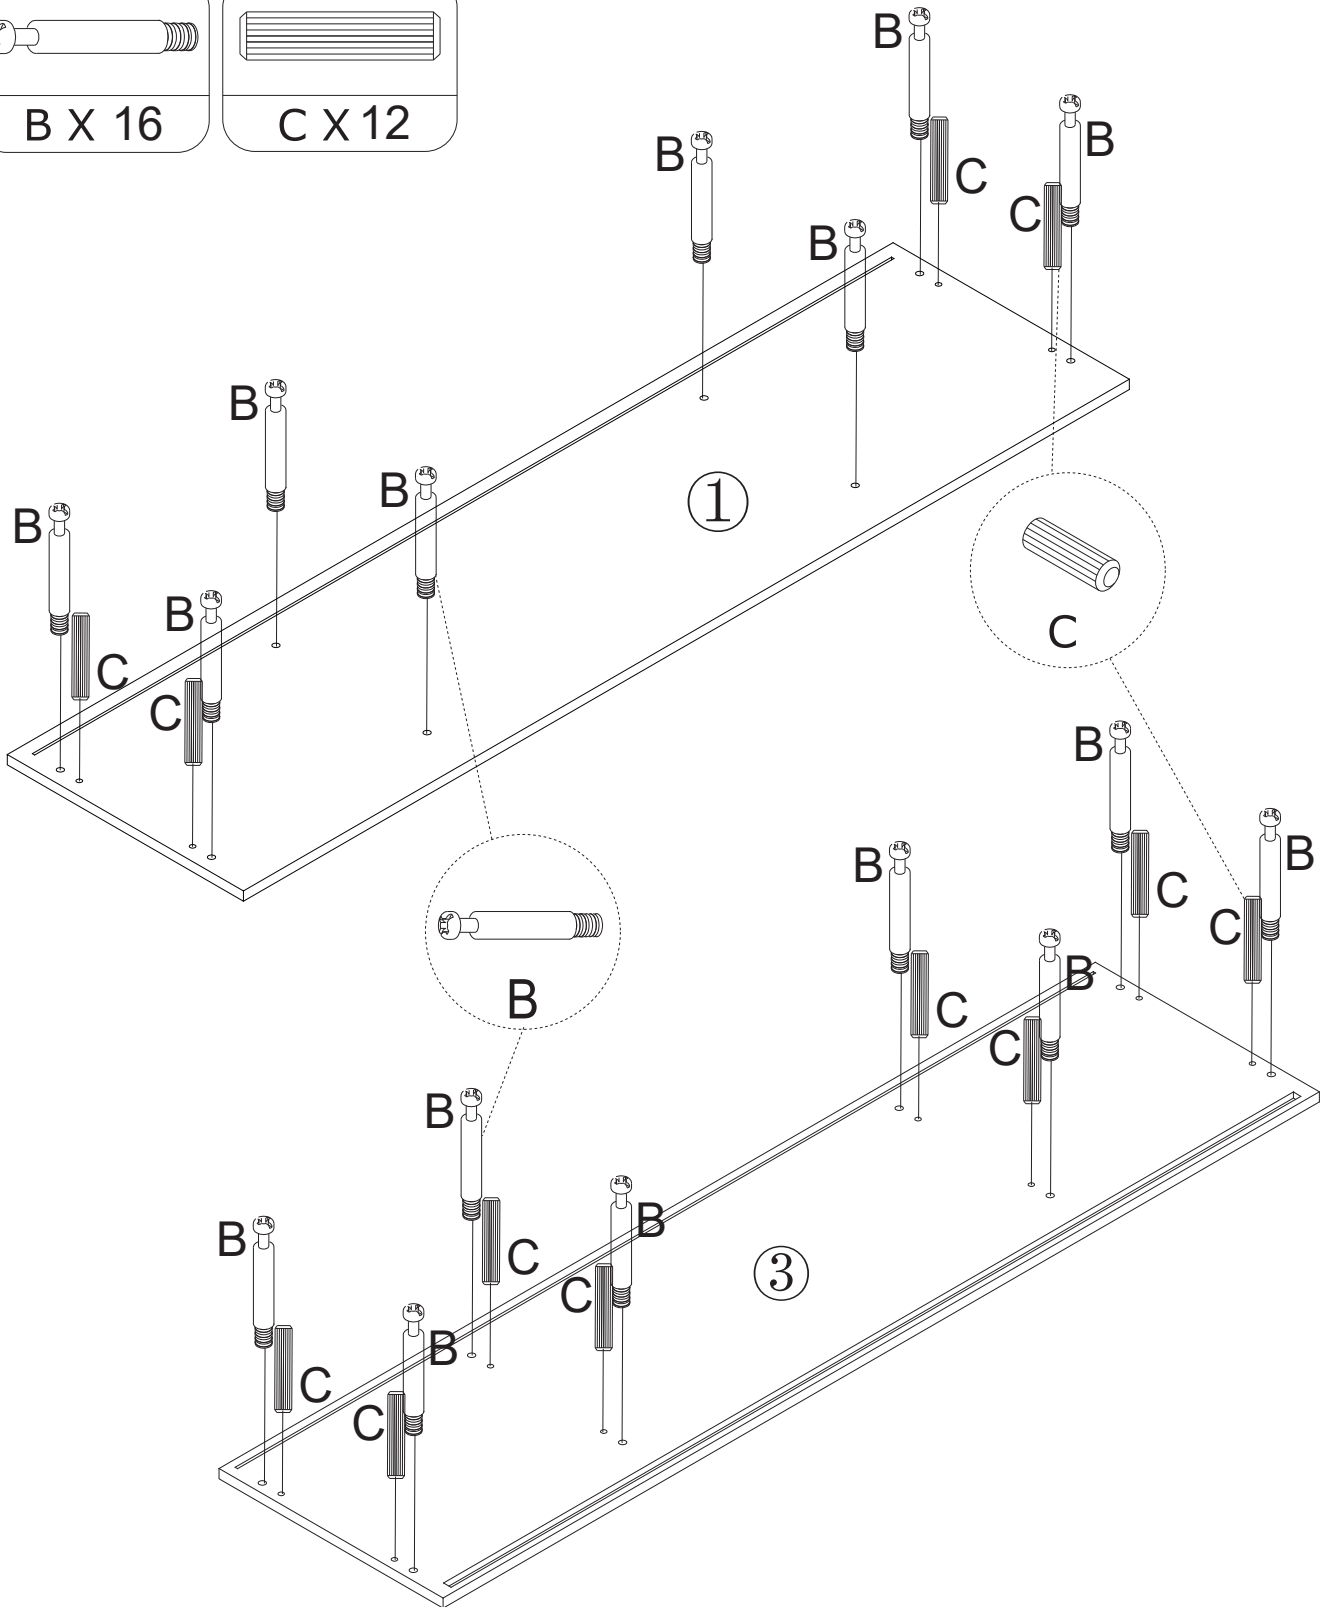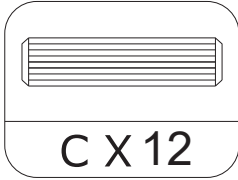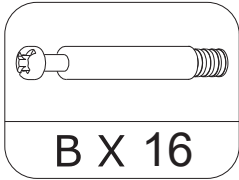




		<p>Arrow must face hole</p> <p>⊕ A</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Schritt 11

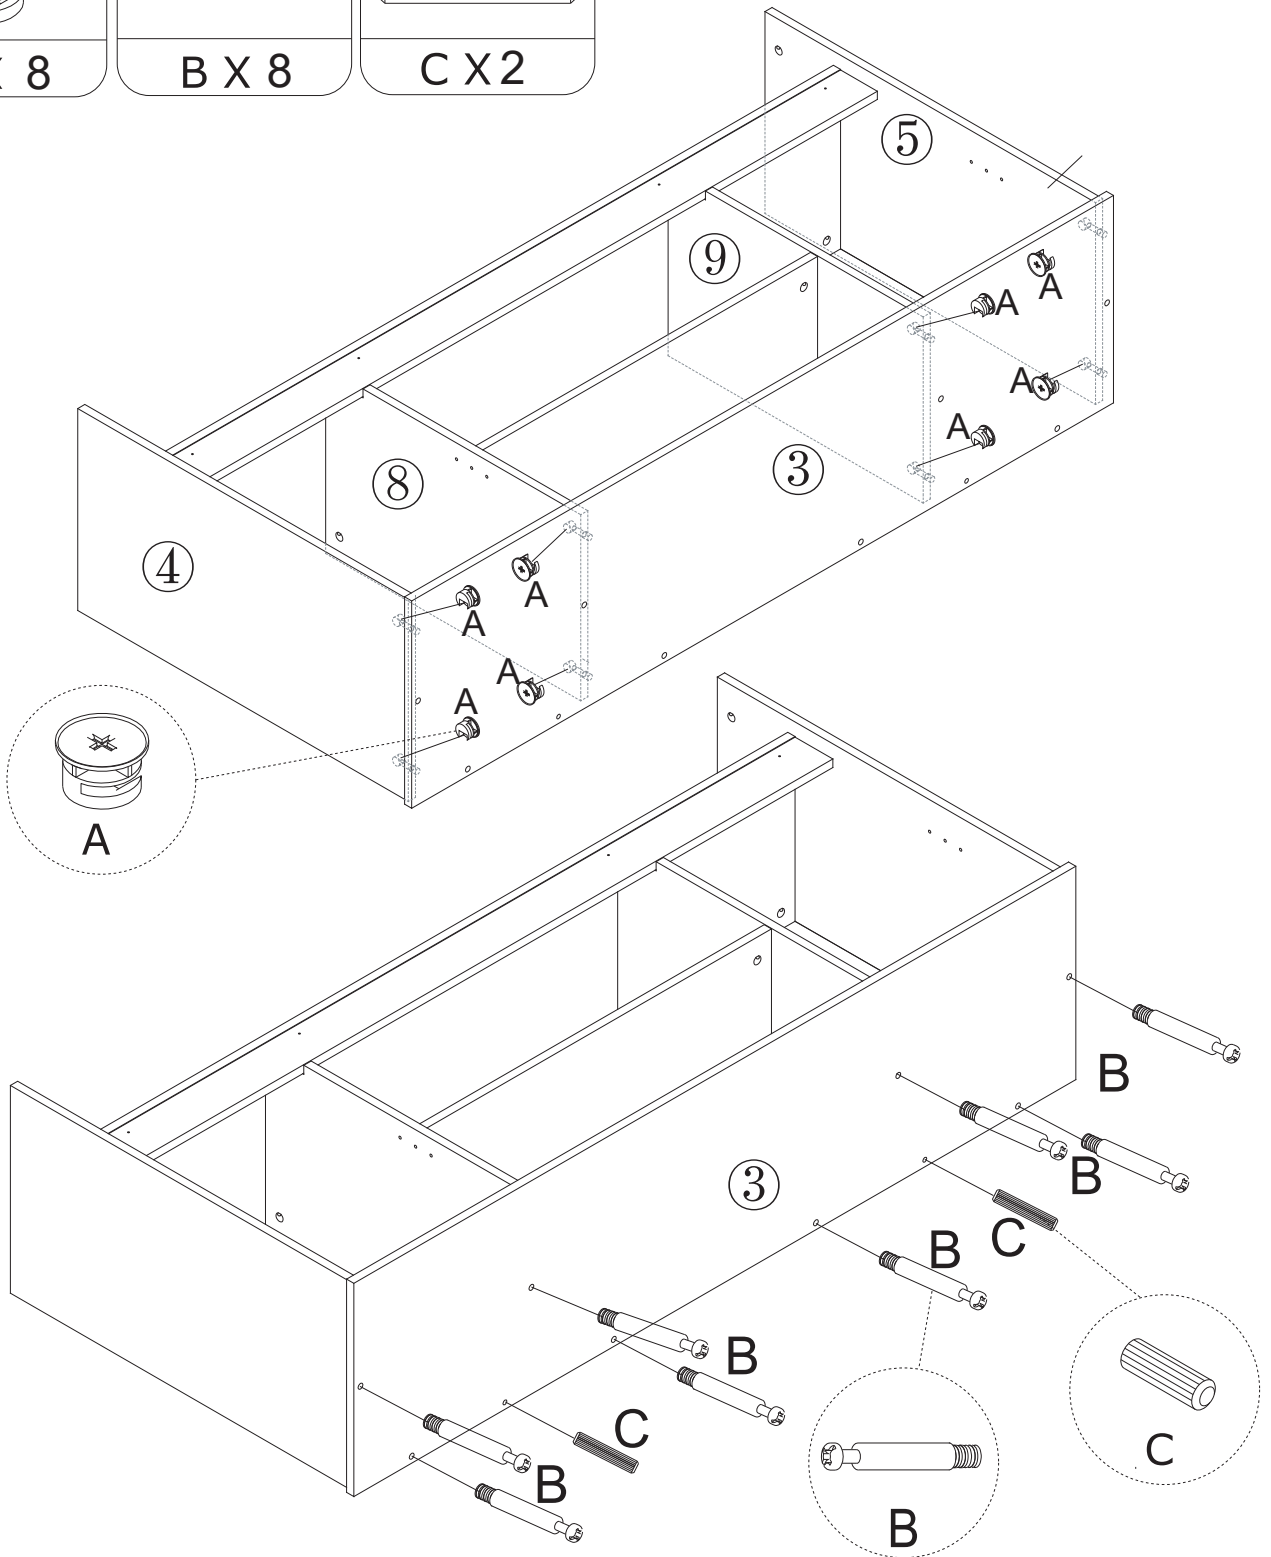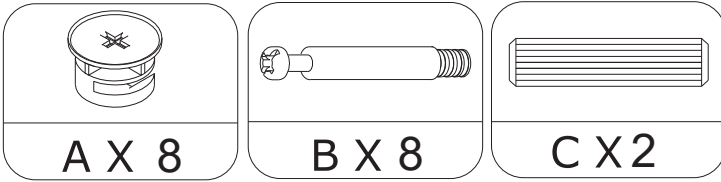



		<p>Arrow must face hole</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Schritt 12

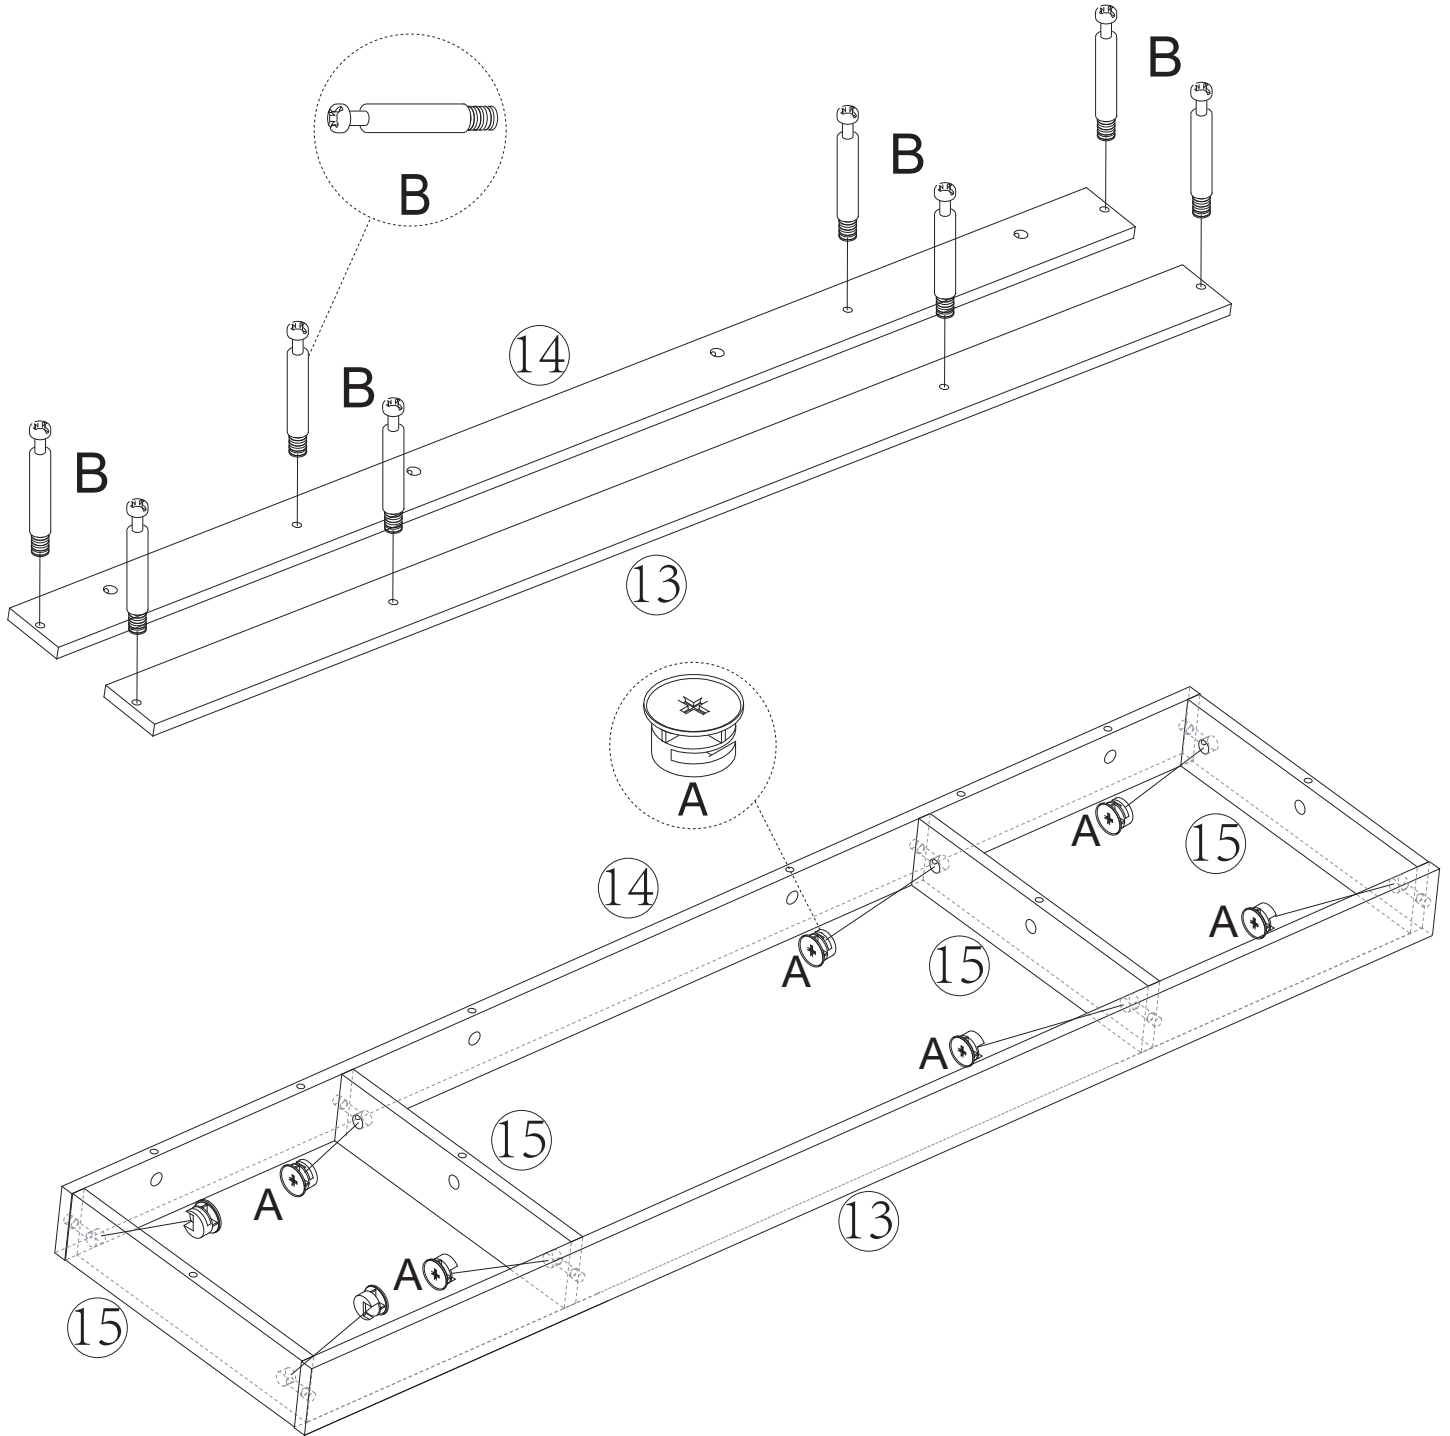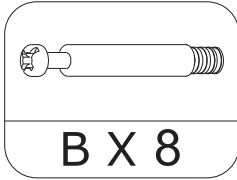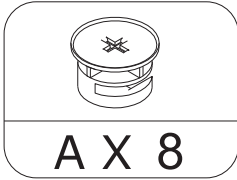




<p>B</p>		<p>Arrow must face hole</p> <p>A</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Schritt 13

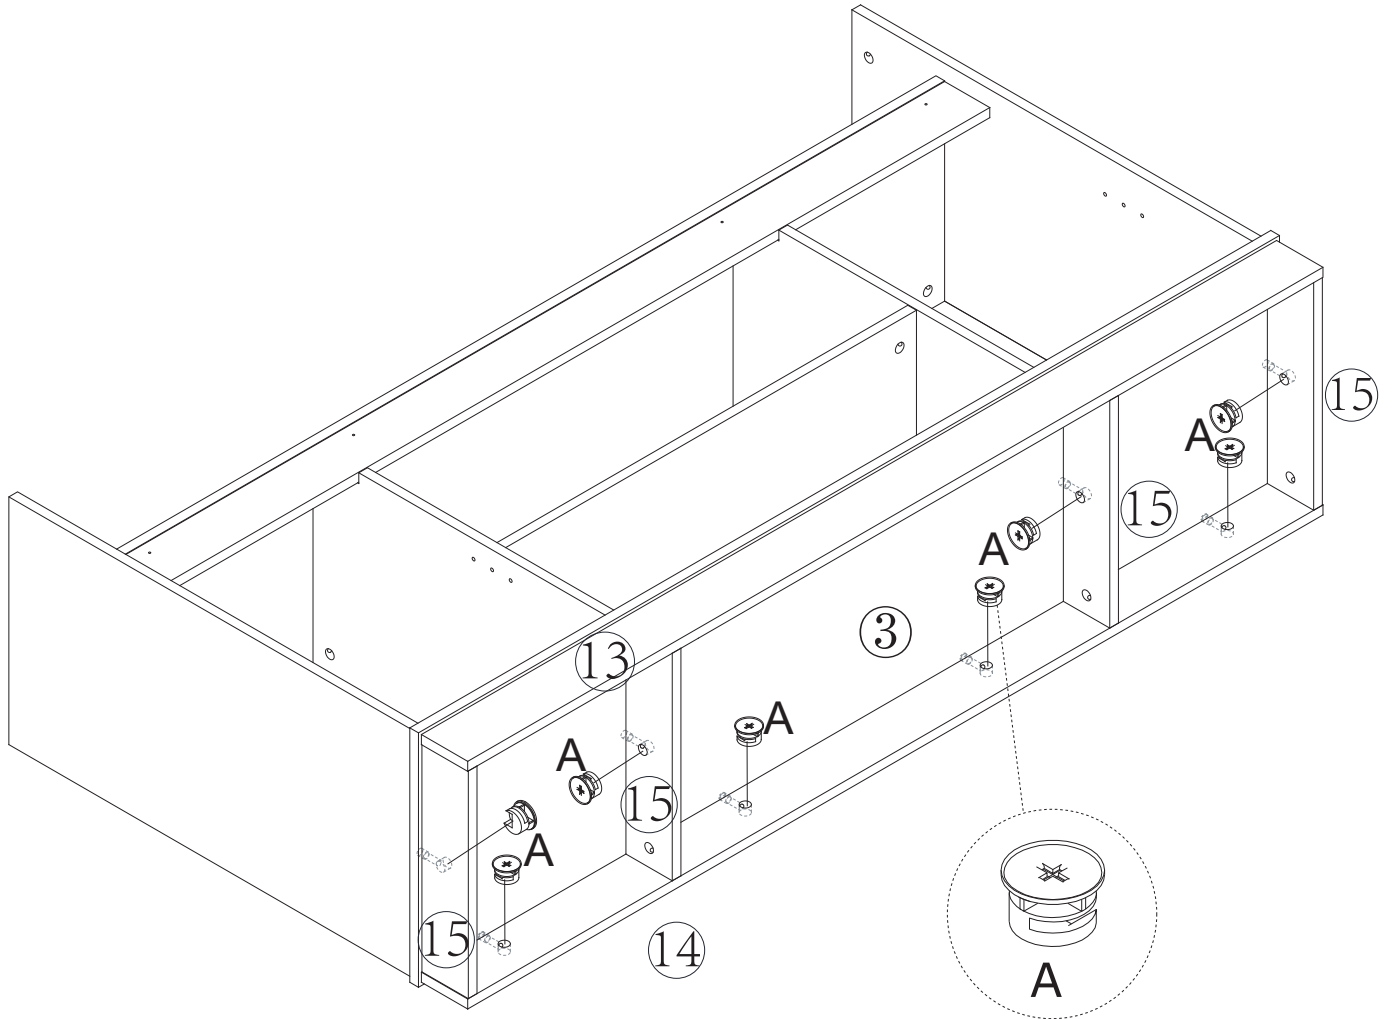
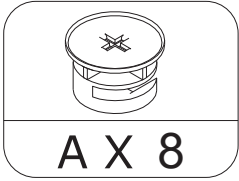


		<p>Arrow must face hole</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>


Schritt 14

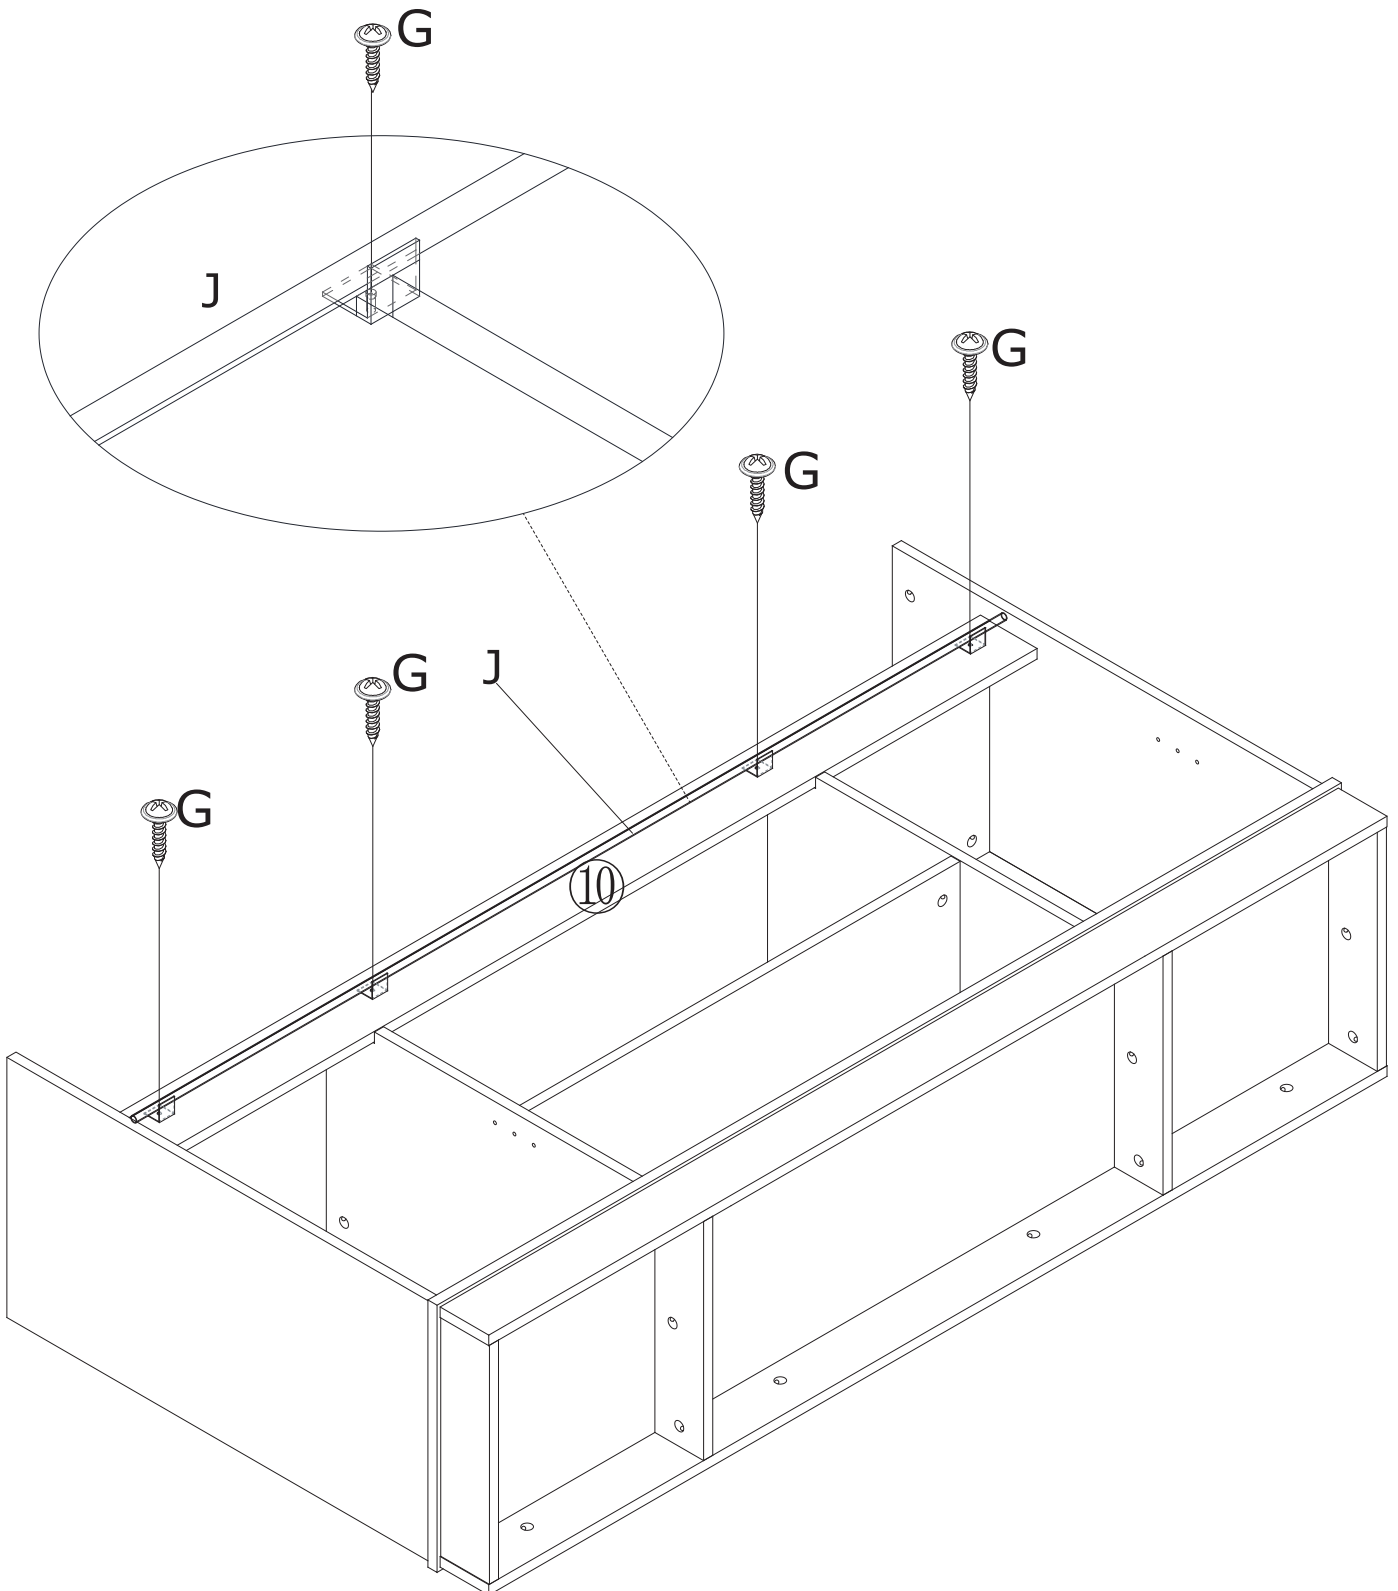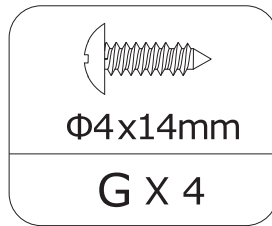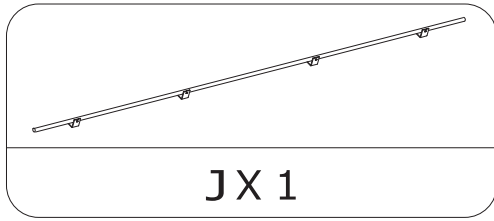

Schritt 15



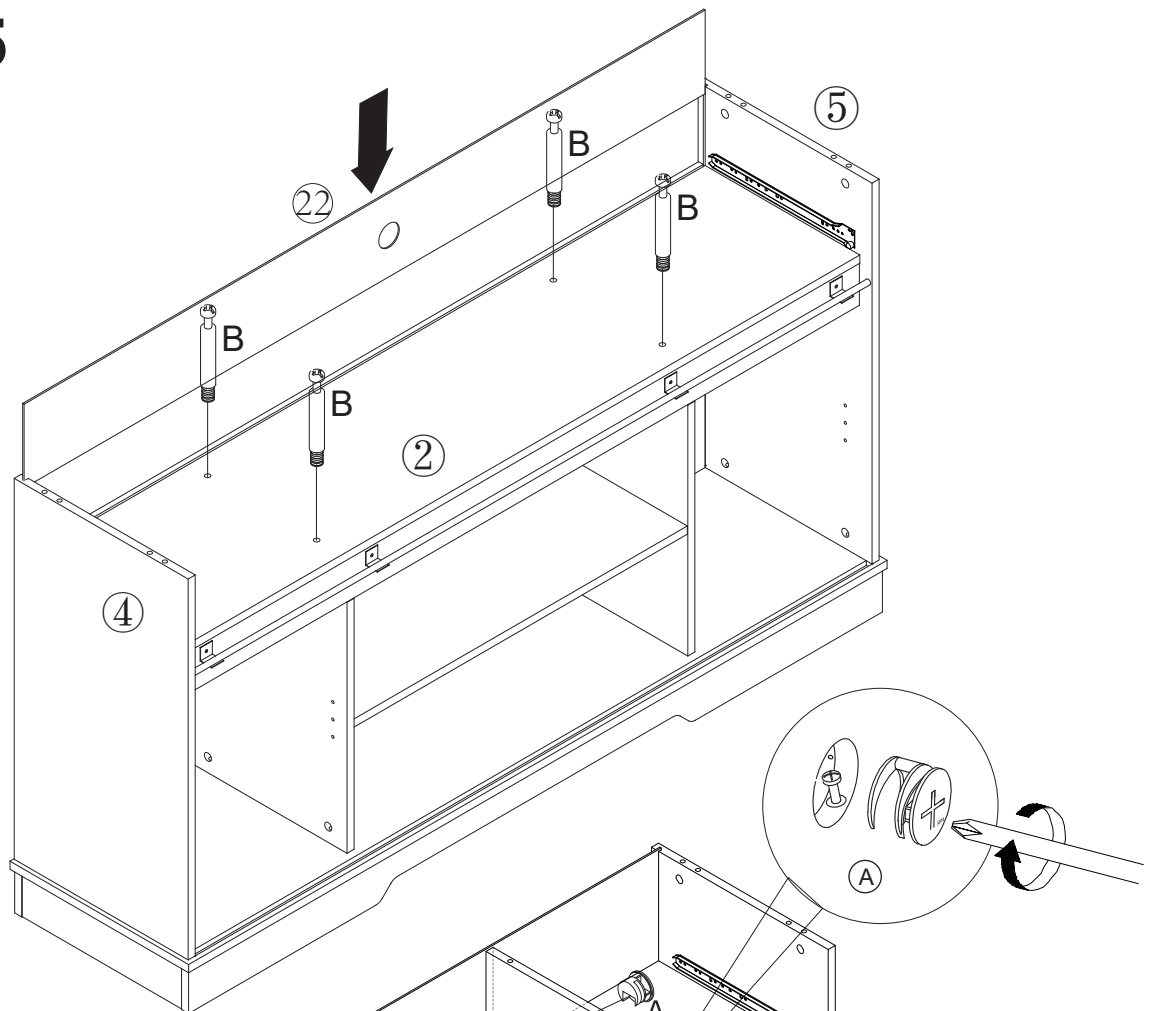
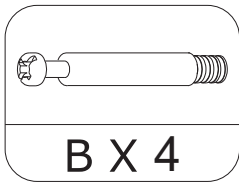


Schritt 16

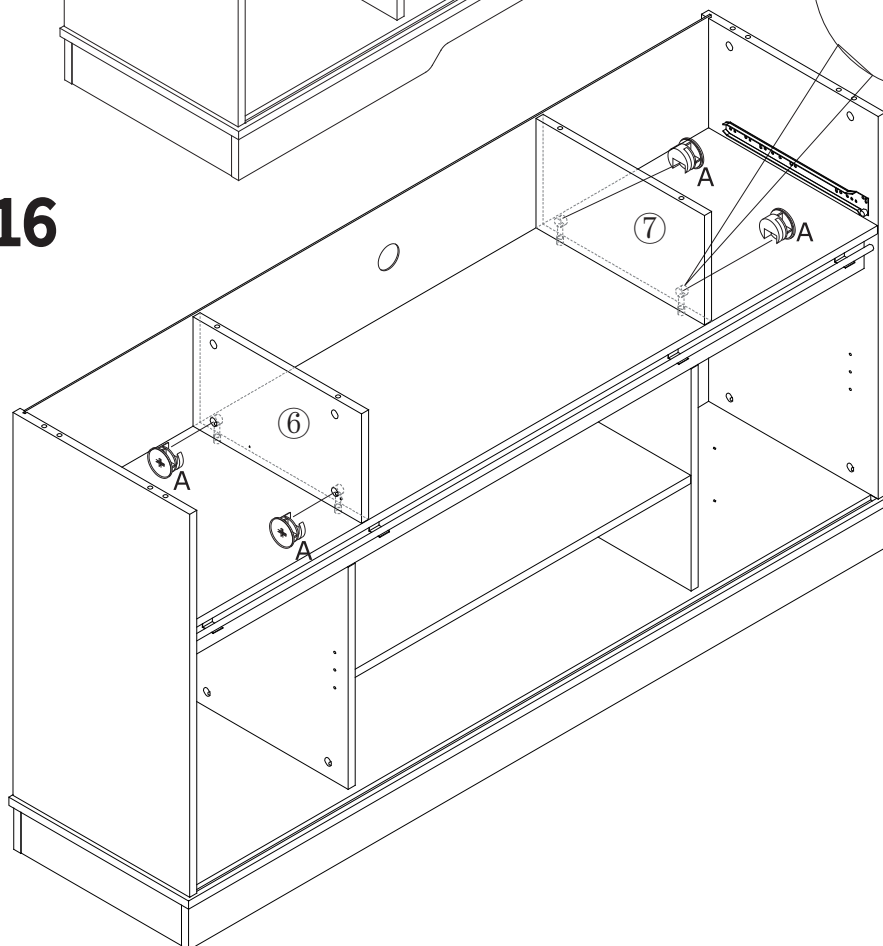


		<p>Arrow must face hole</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>




Schritt 17

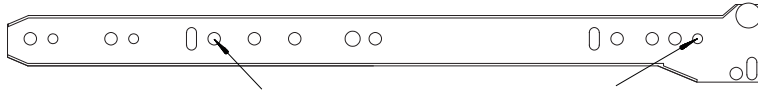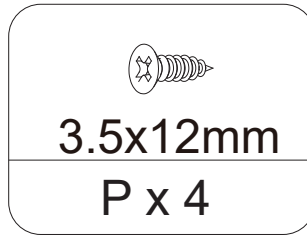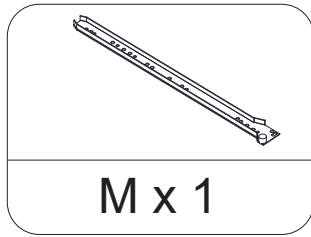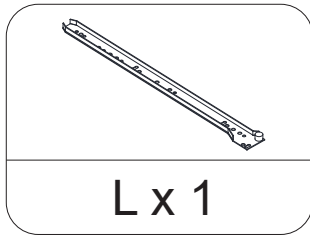

Assemble the screw into the hole
Mark with arrows

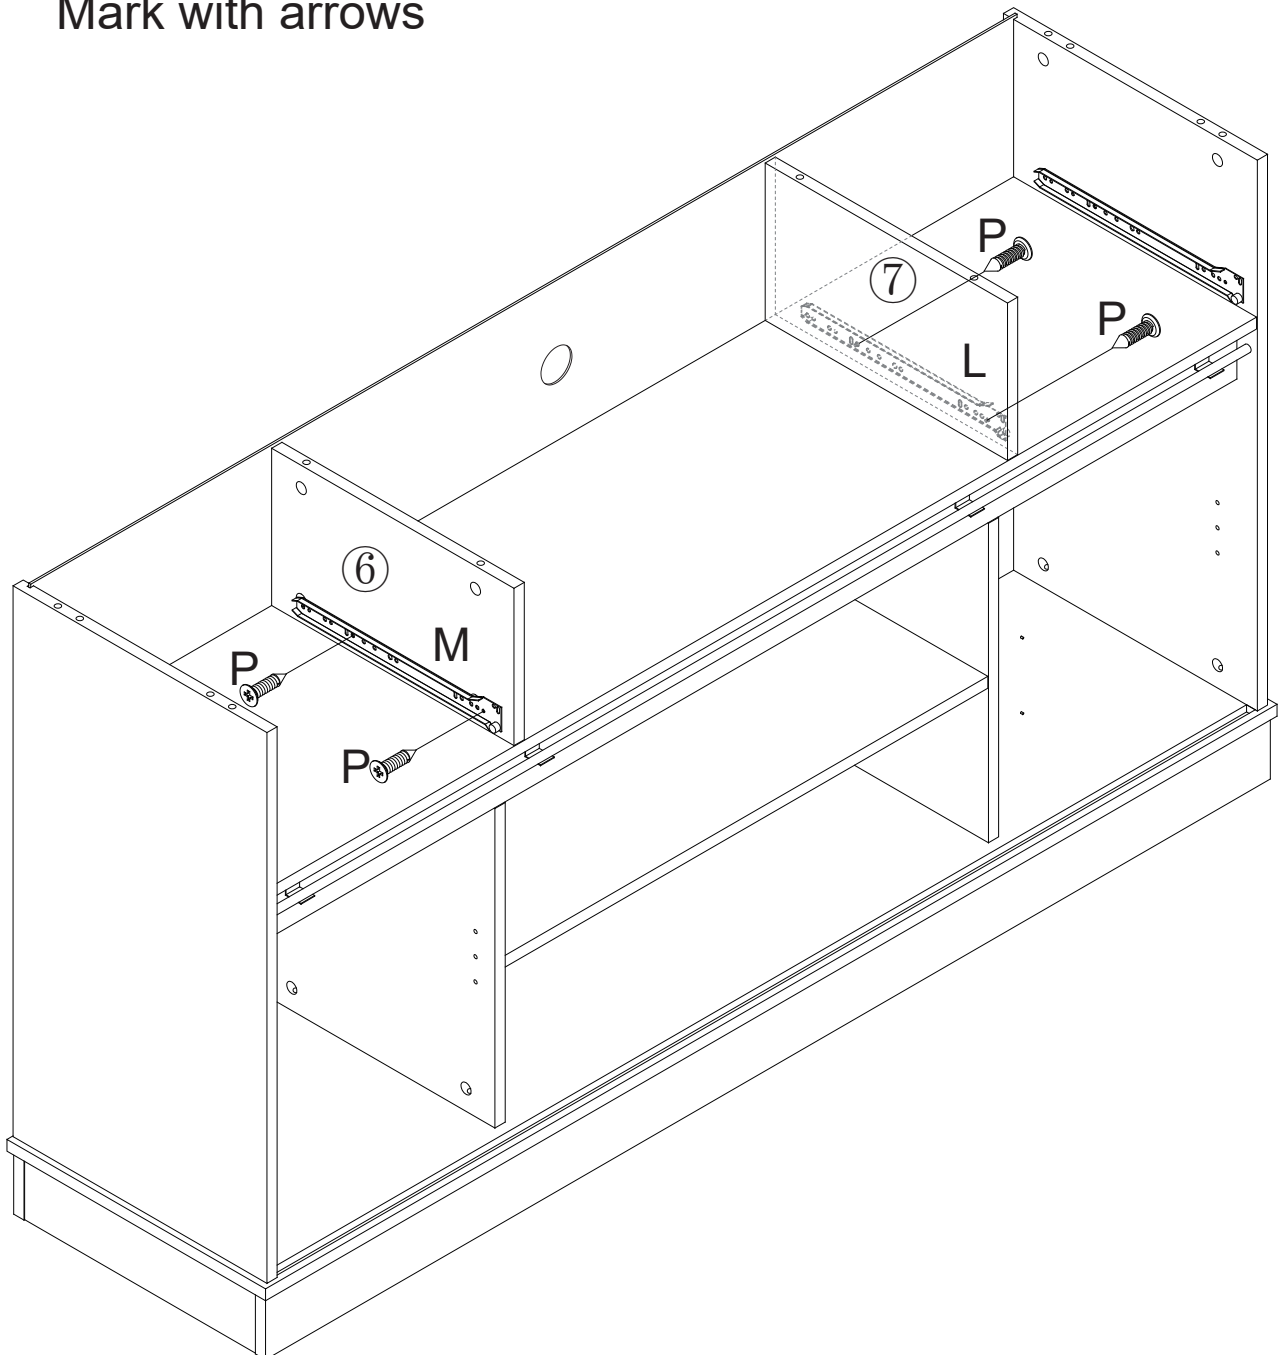


Schritt 18


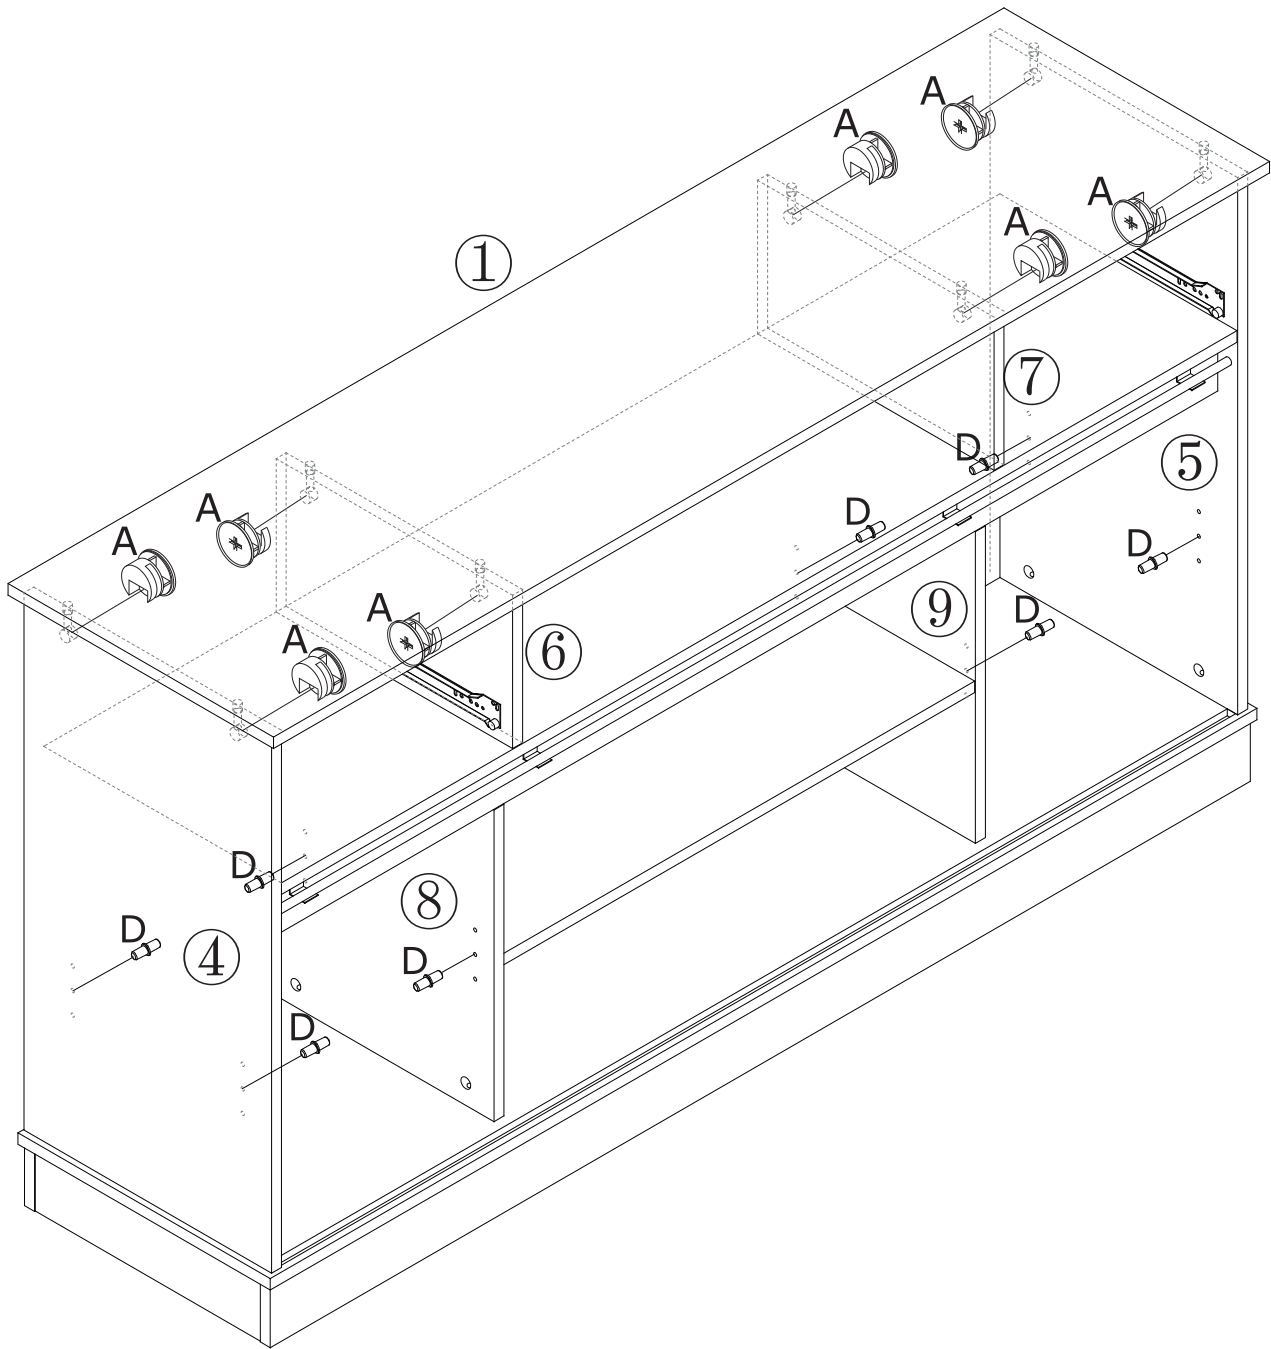
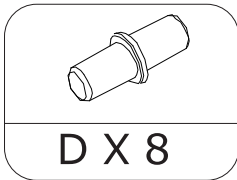
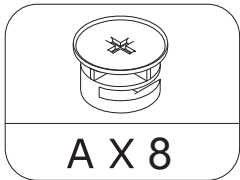


<p>B</p>		<p>Arrow must face hole</p> <p>A</p>	
<p>Gently screw cam bolt into the threaded anchor.</p>		<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>


Schritt 19

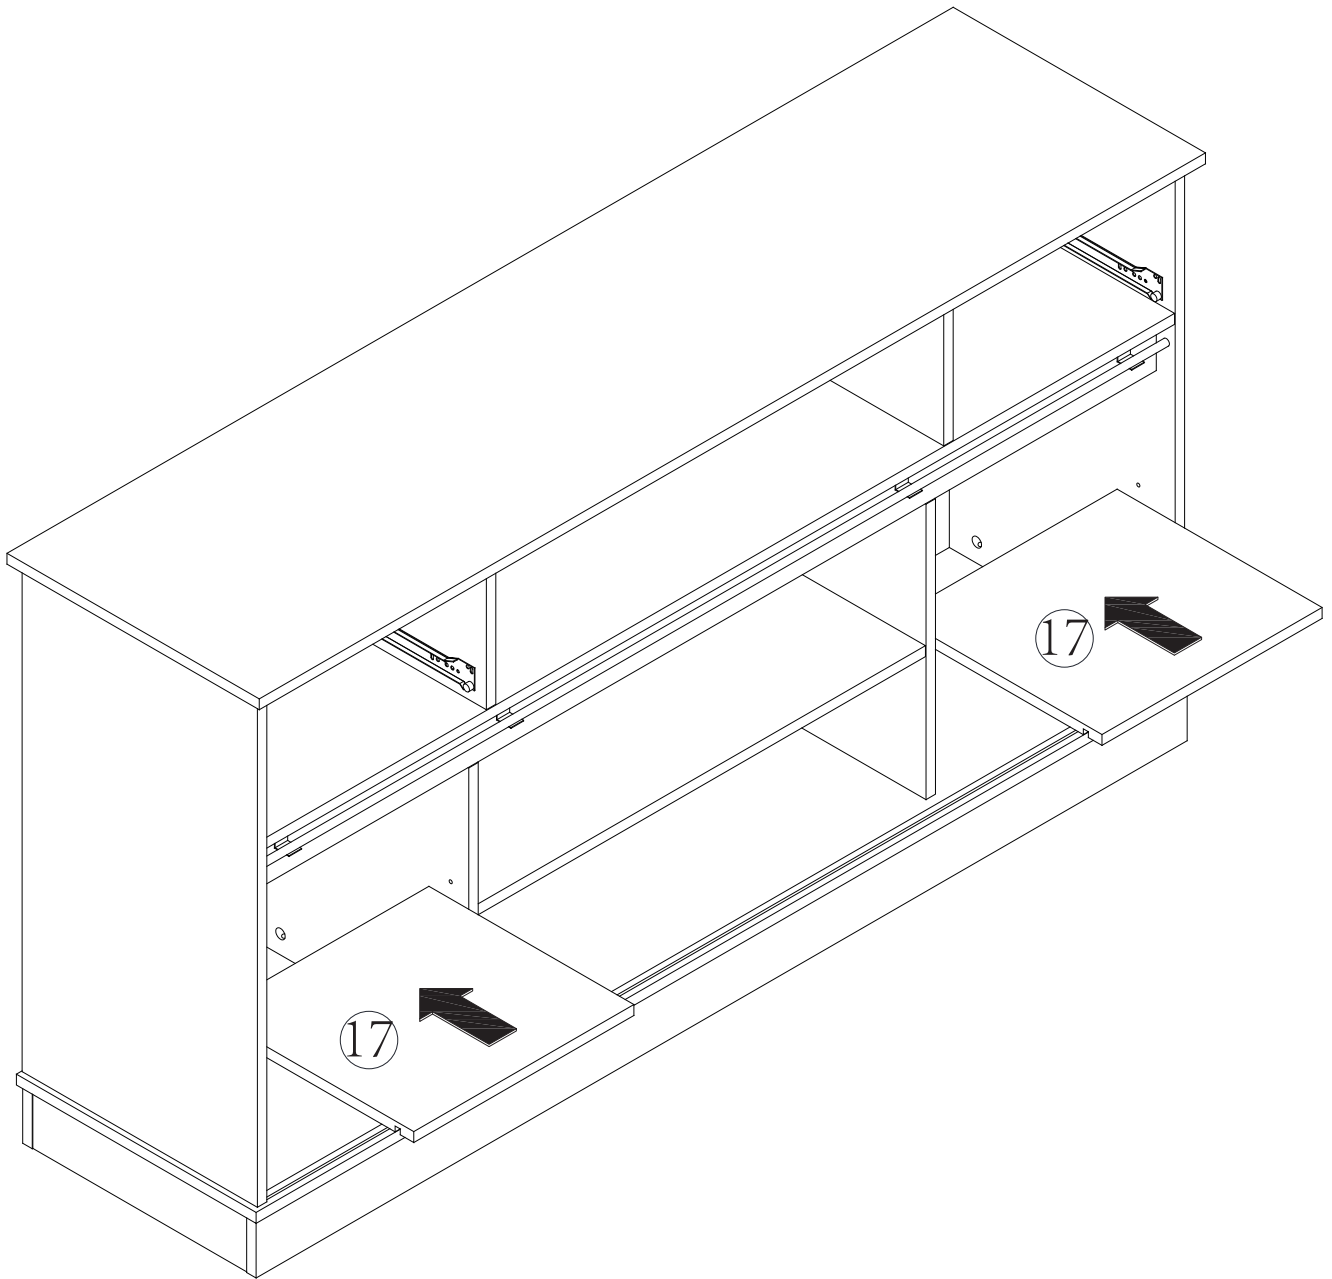




Schritt 20

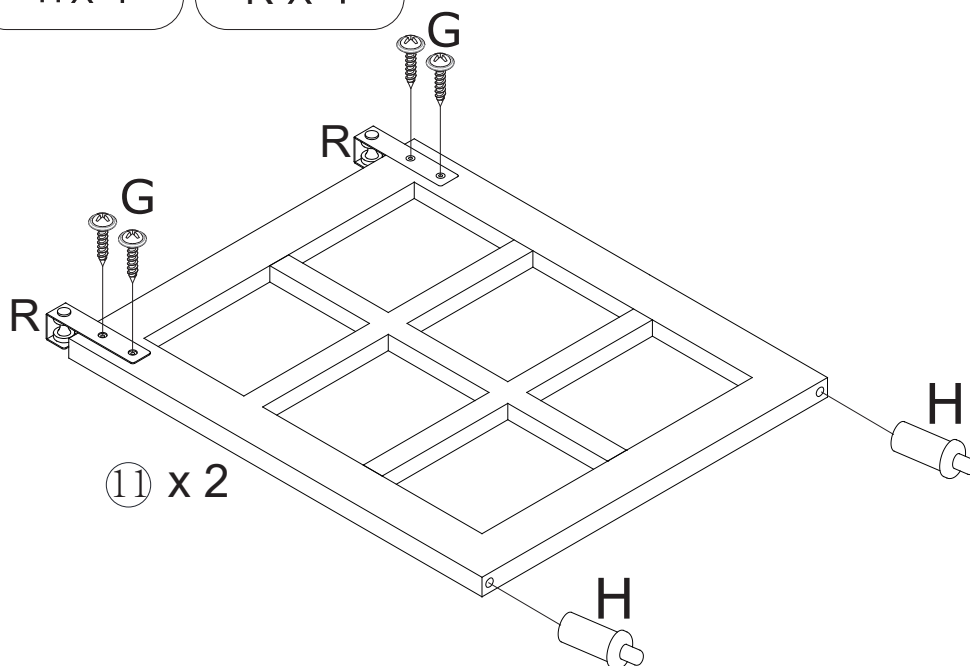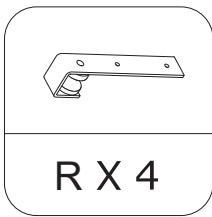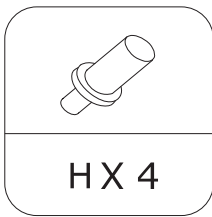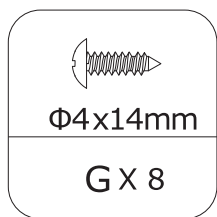







Schritt 21

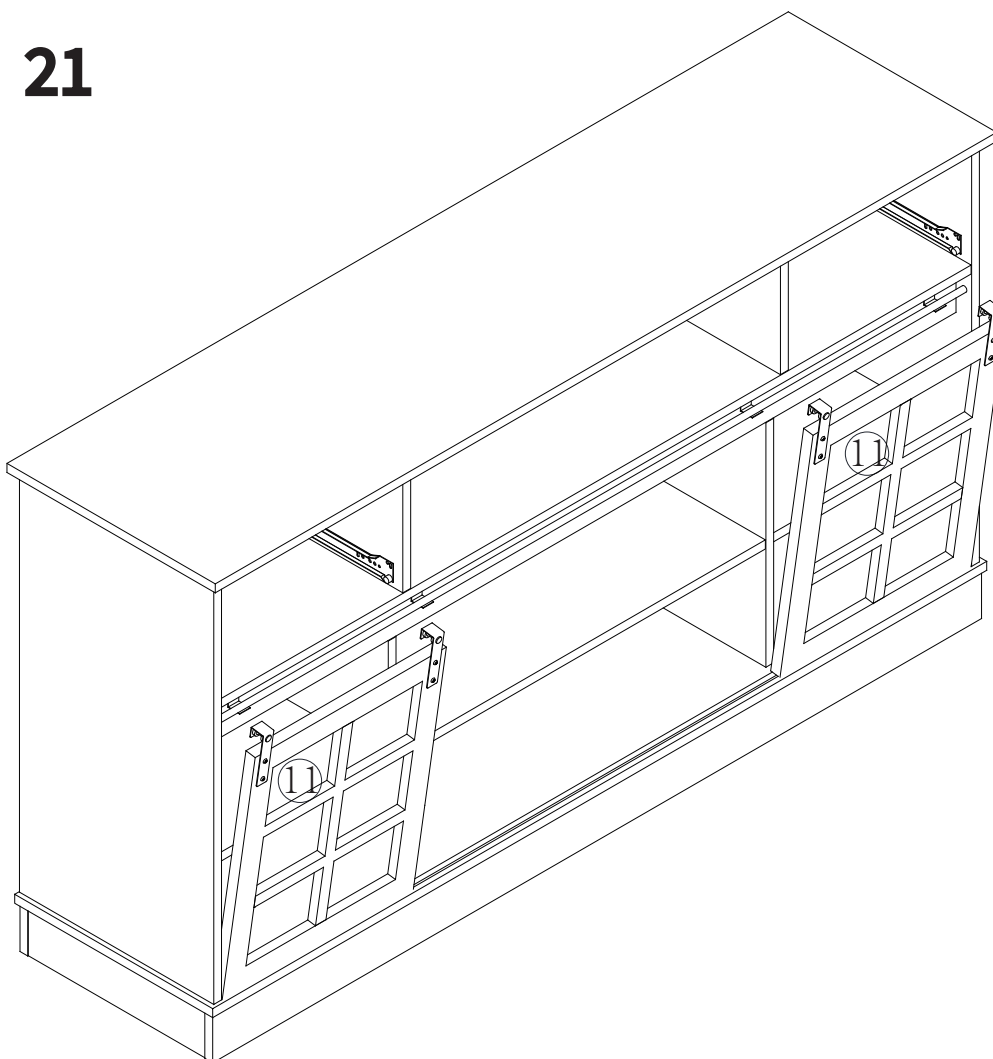





Schritt 22 x2

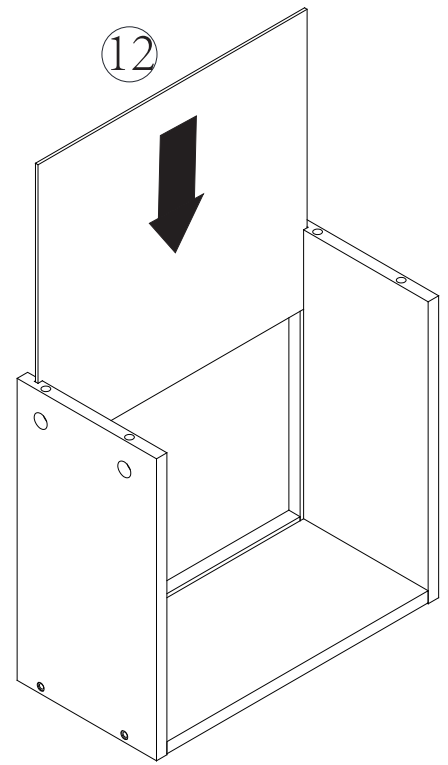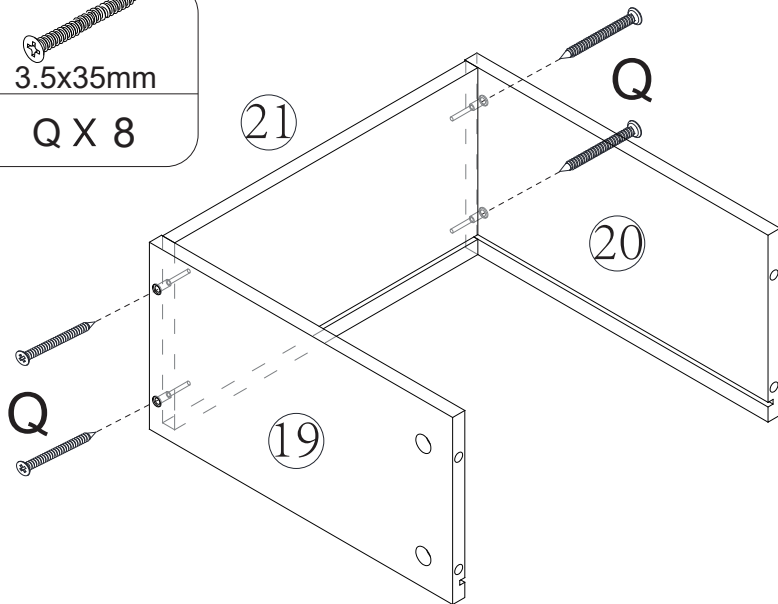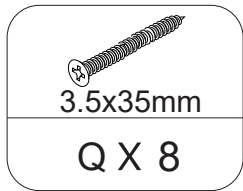


Schritt 23 x2

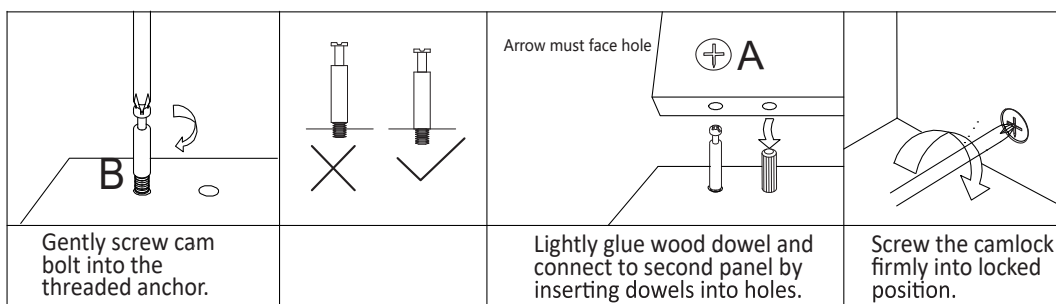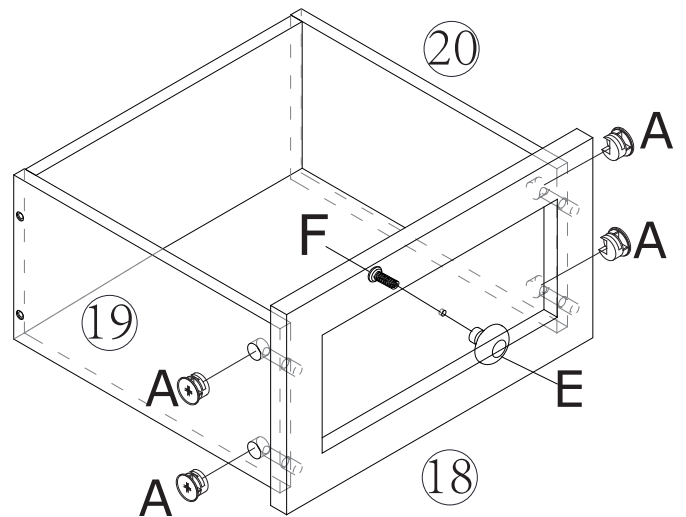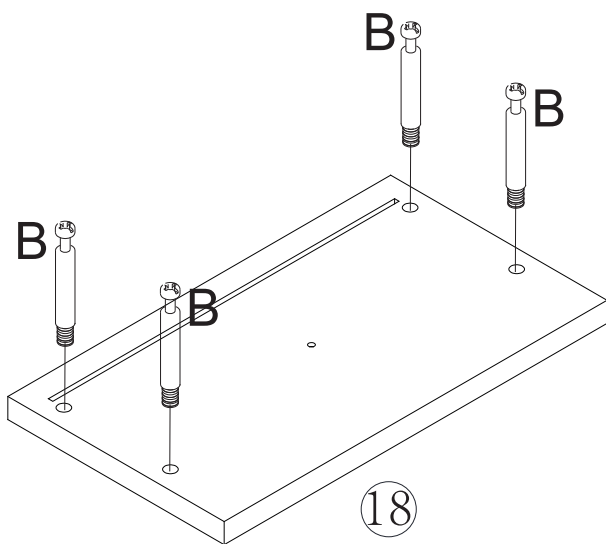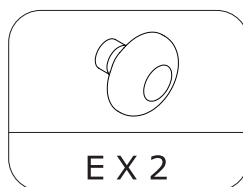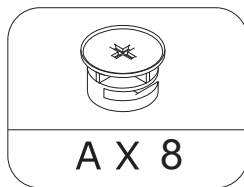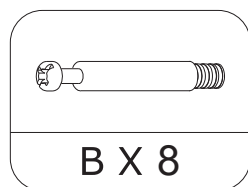



Schritt 24 x2

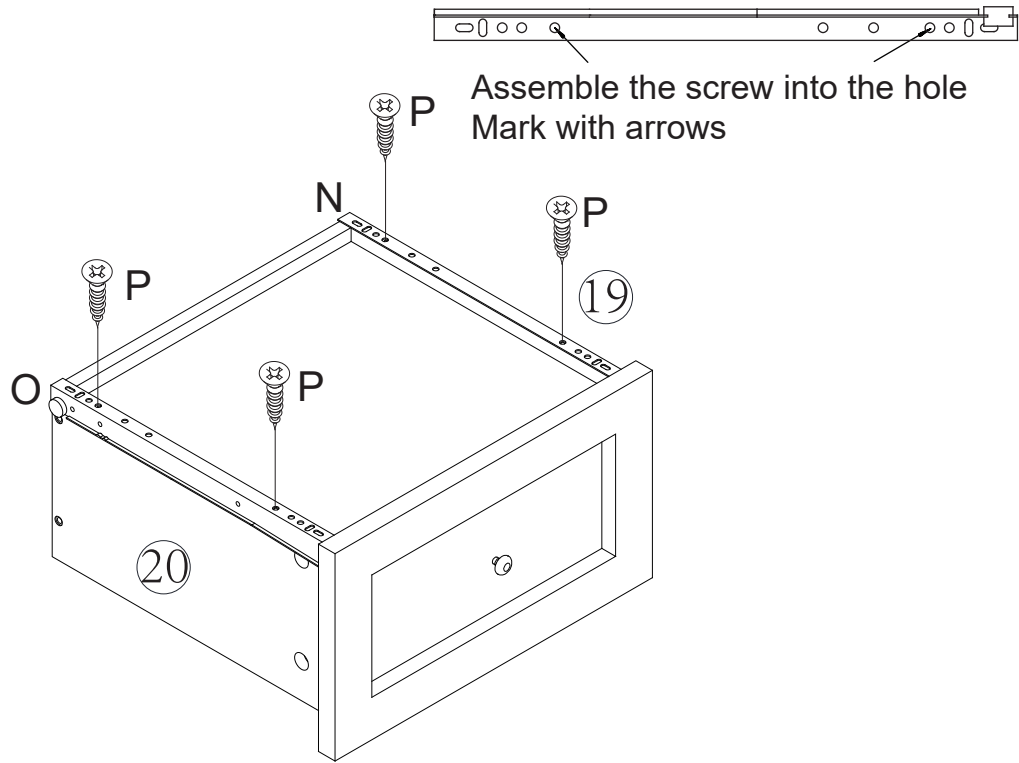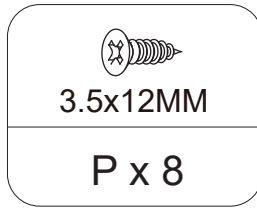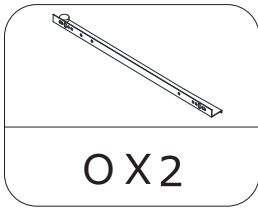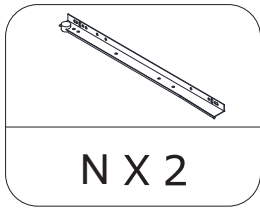



Schritt 25

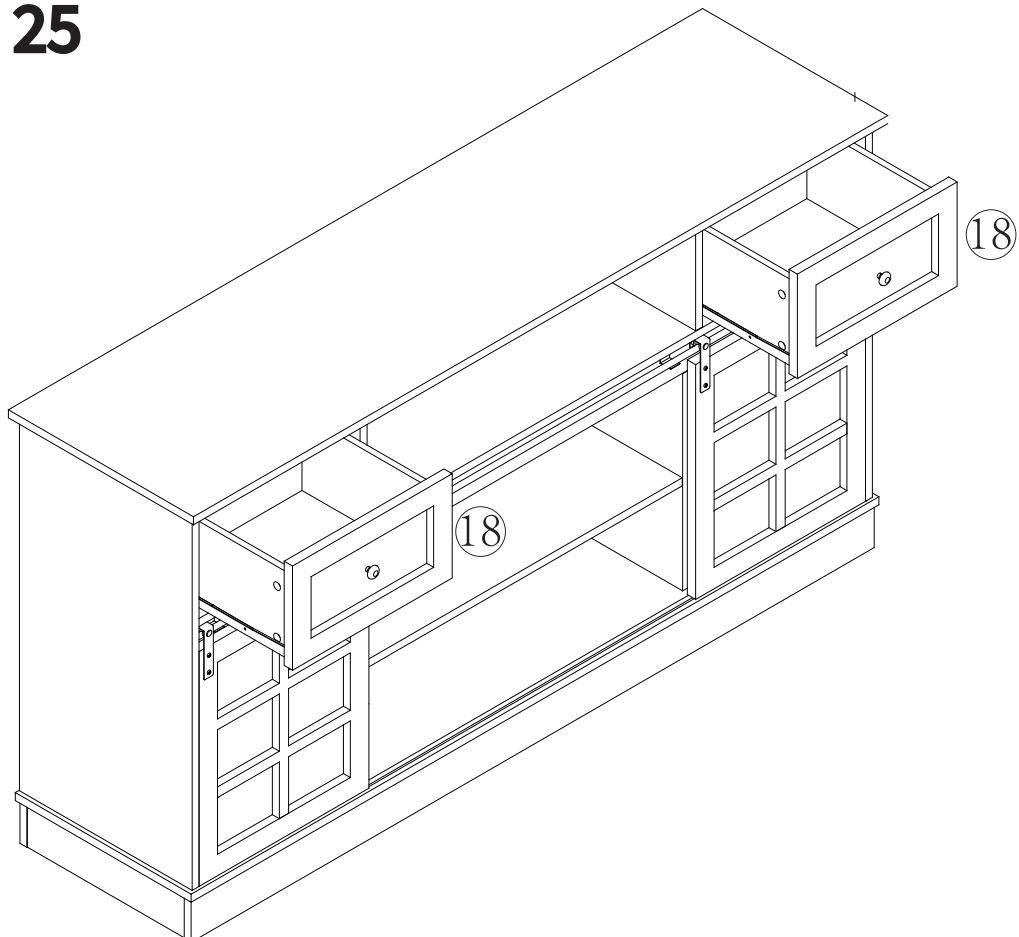



Schritt 26

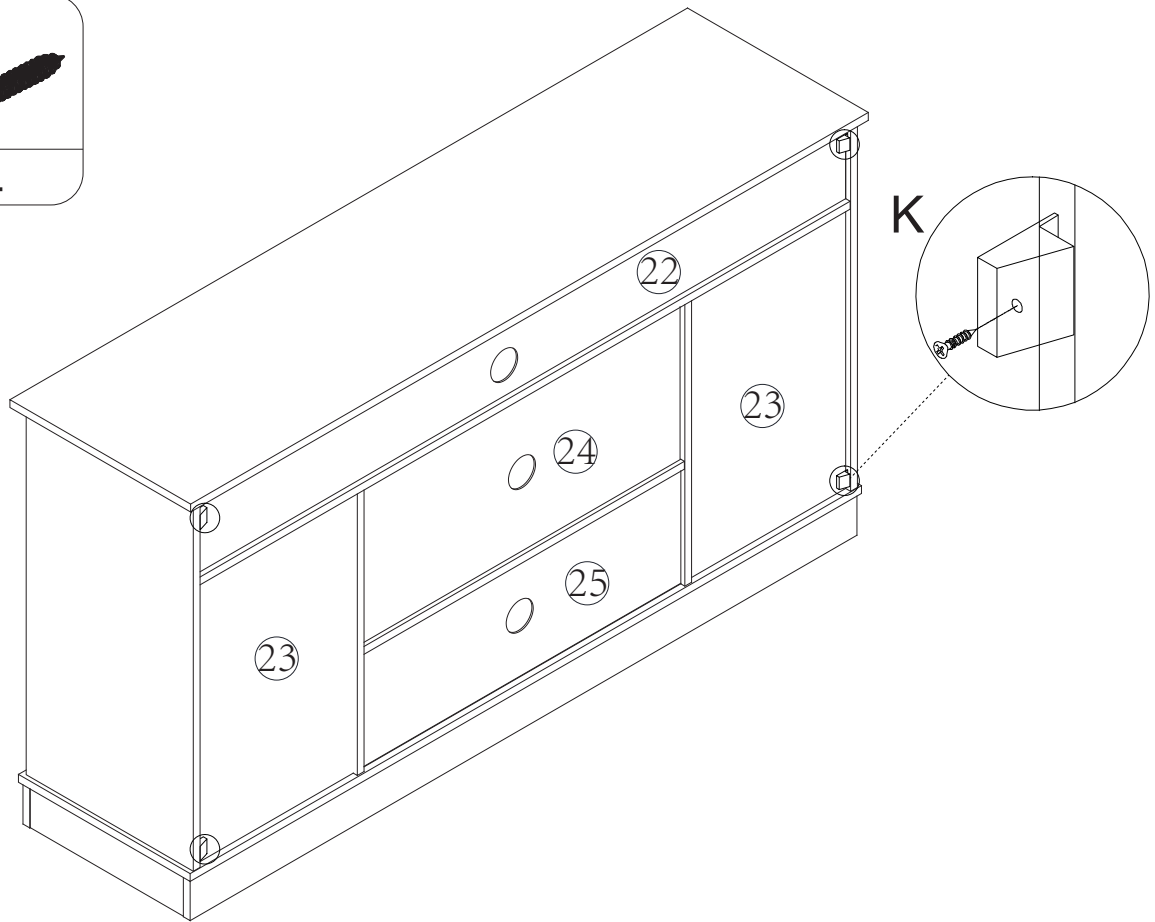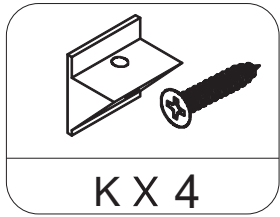

Schritt 27

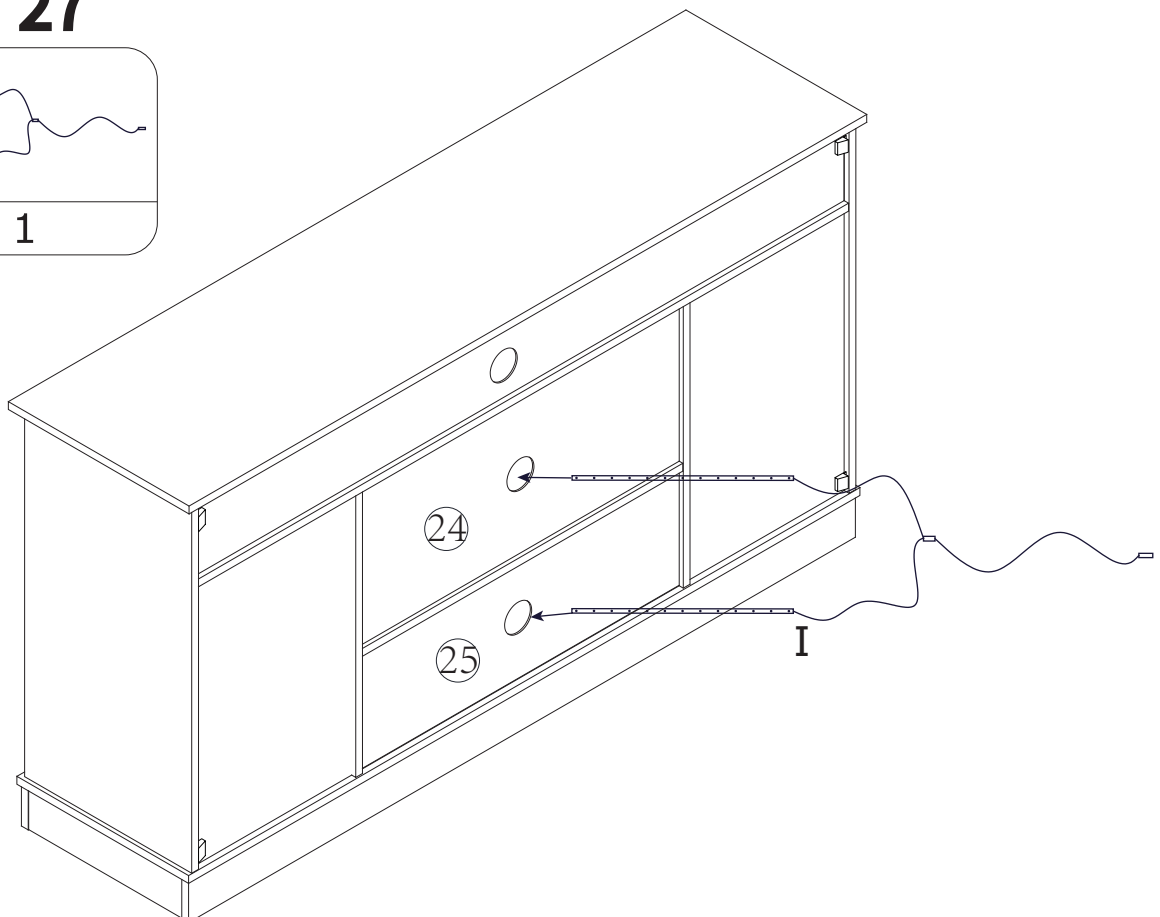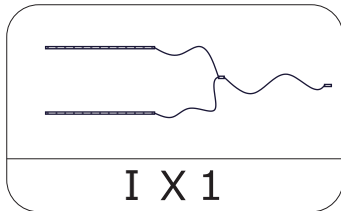

Schritt 28

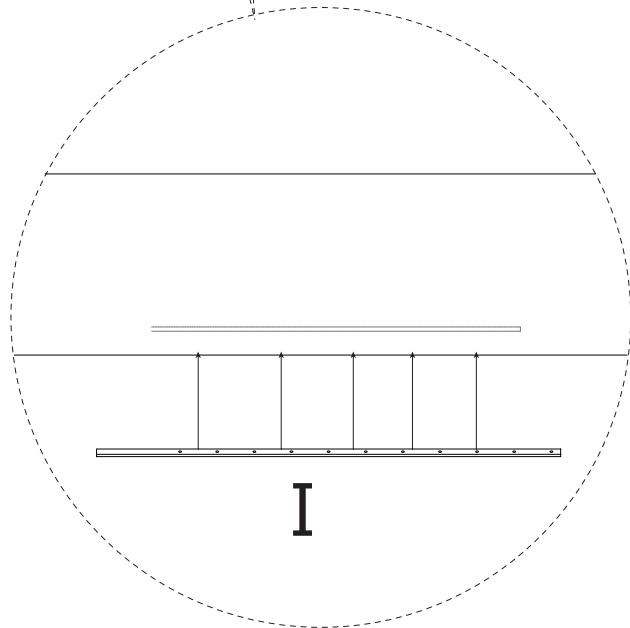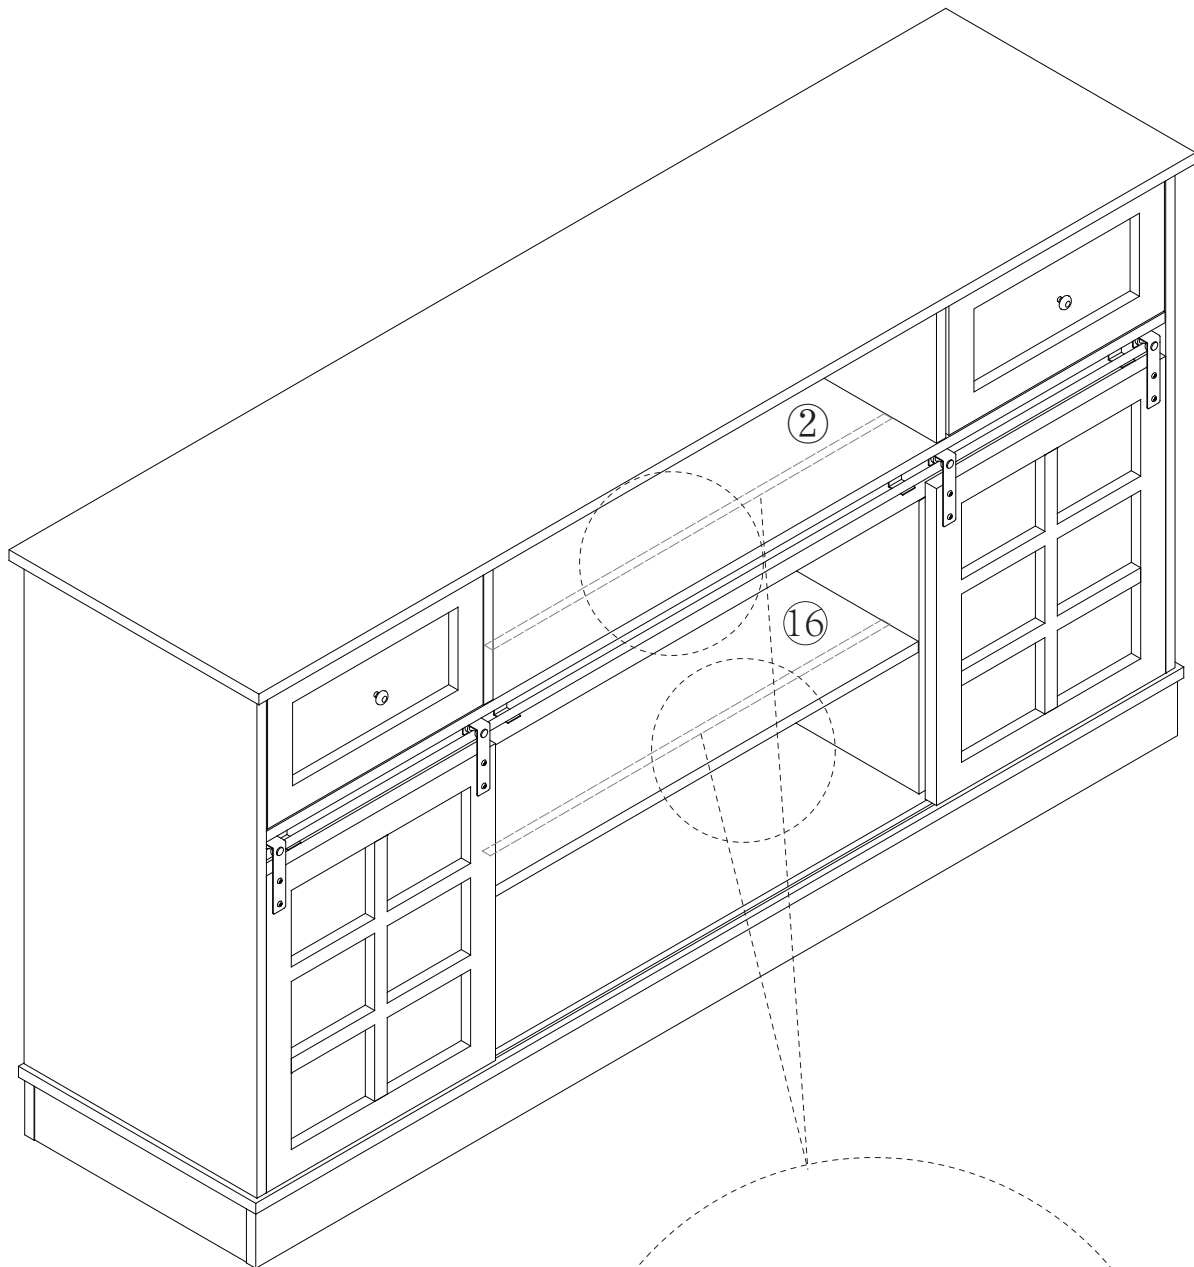

FINISH

