



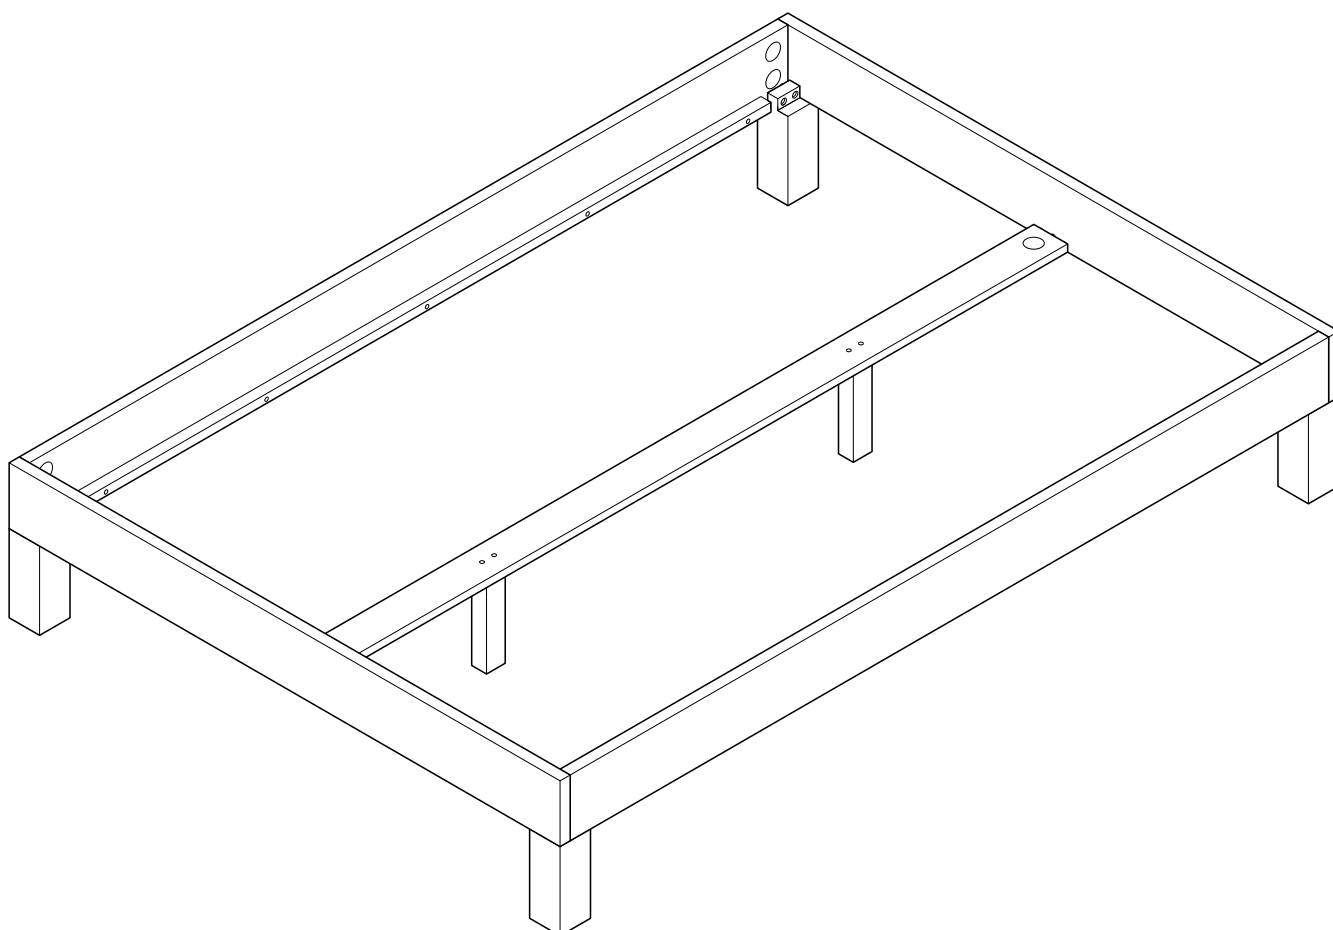


JANA

BEDFRAME




ASSEMBLY INSTRUCTIONS

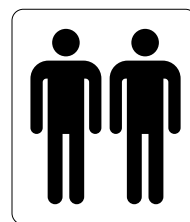

PLAN

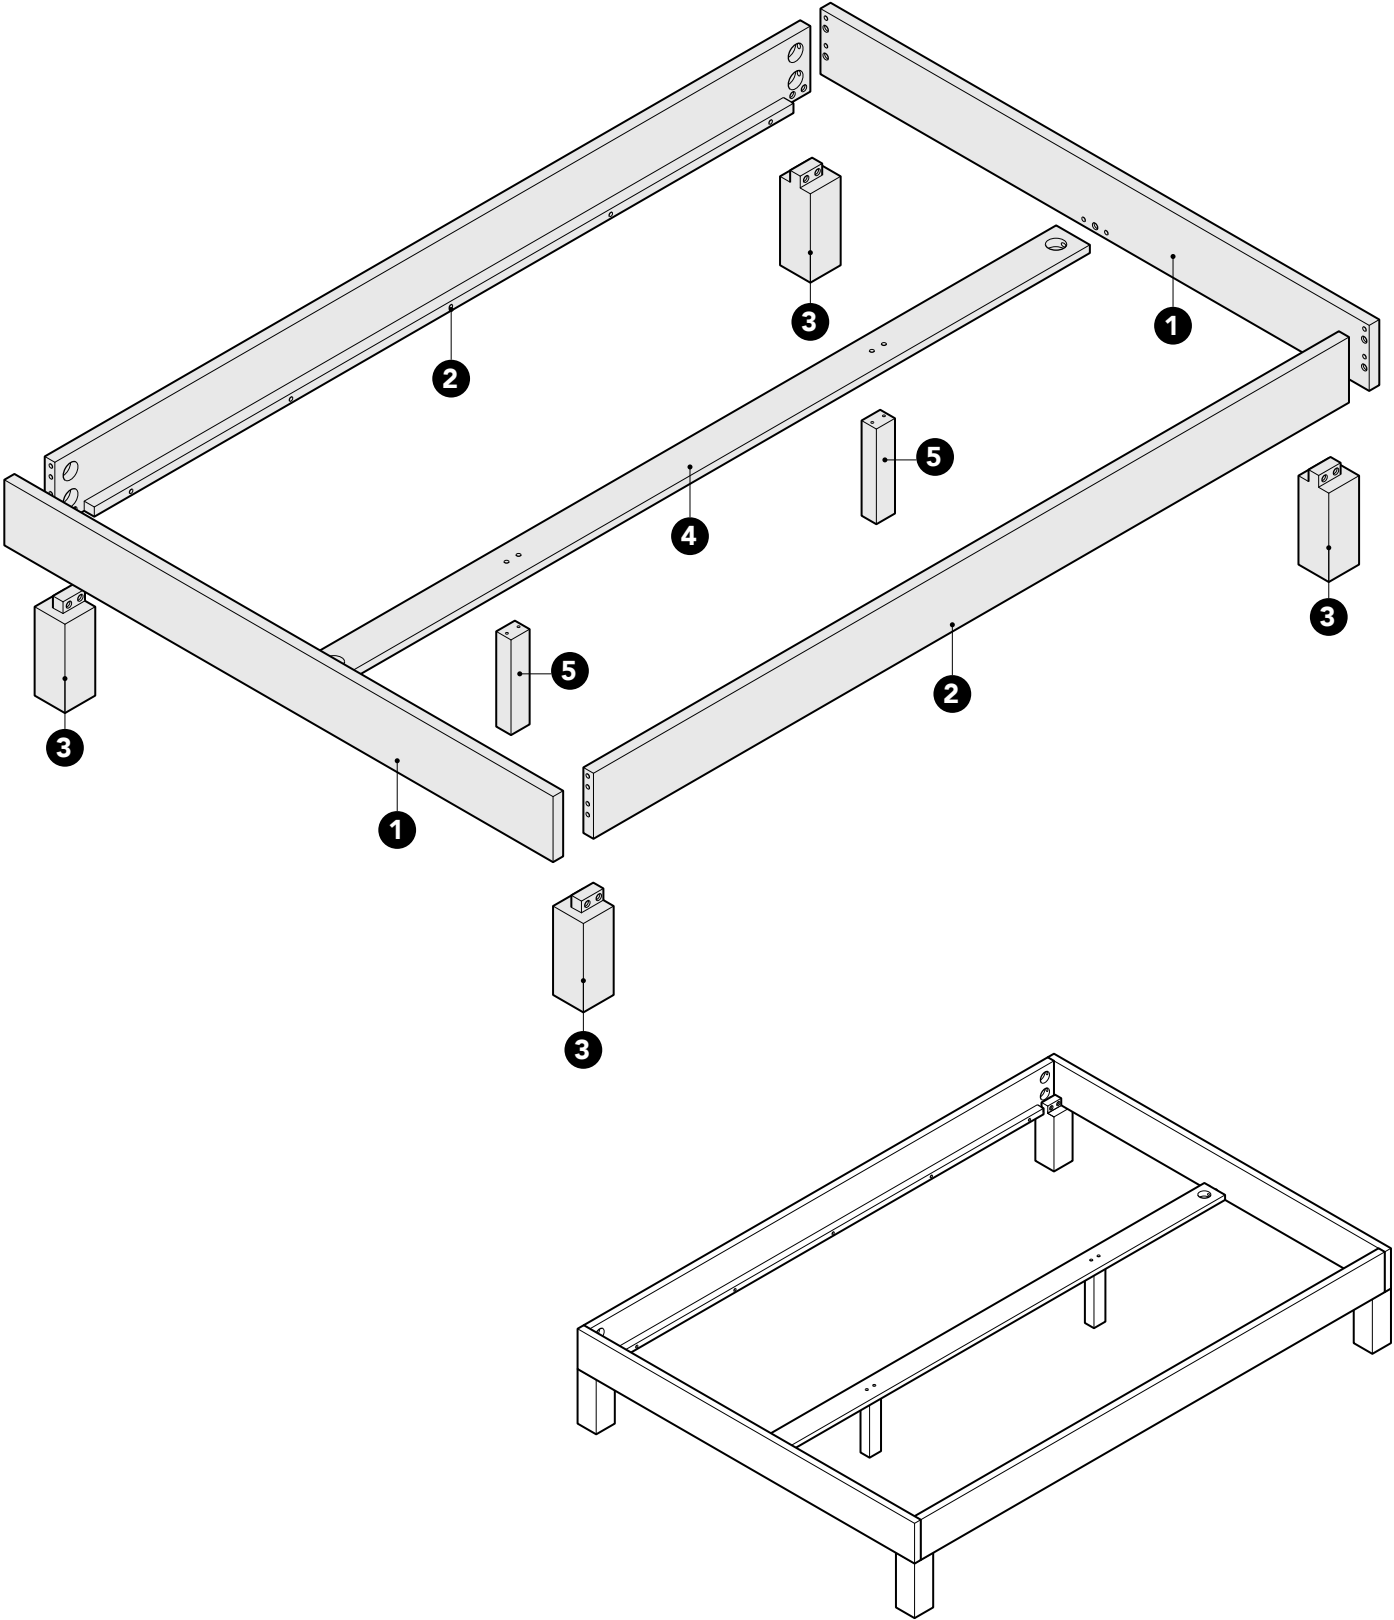


INCLUDED

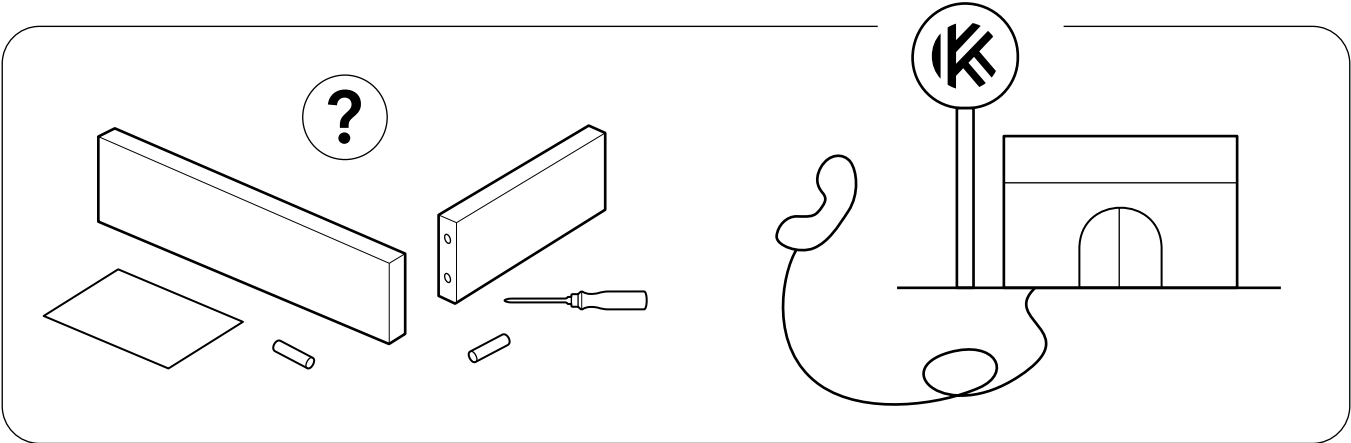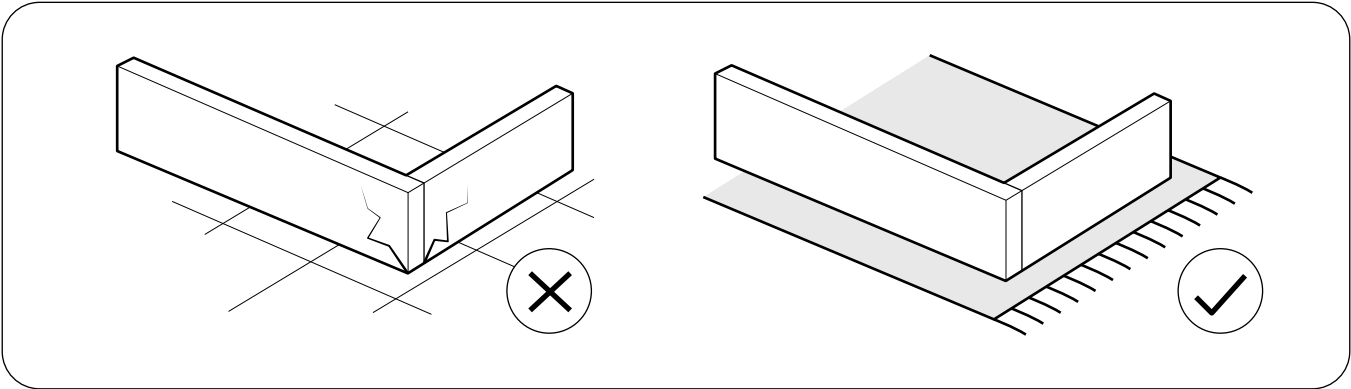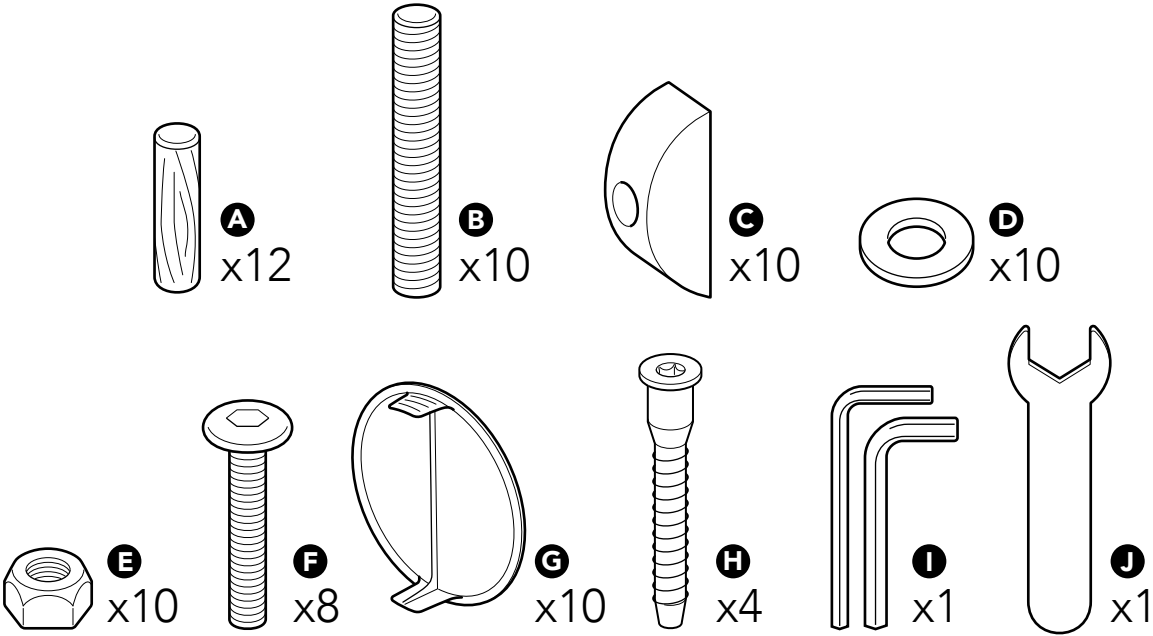


ASSEMBLY


1

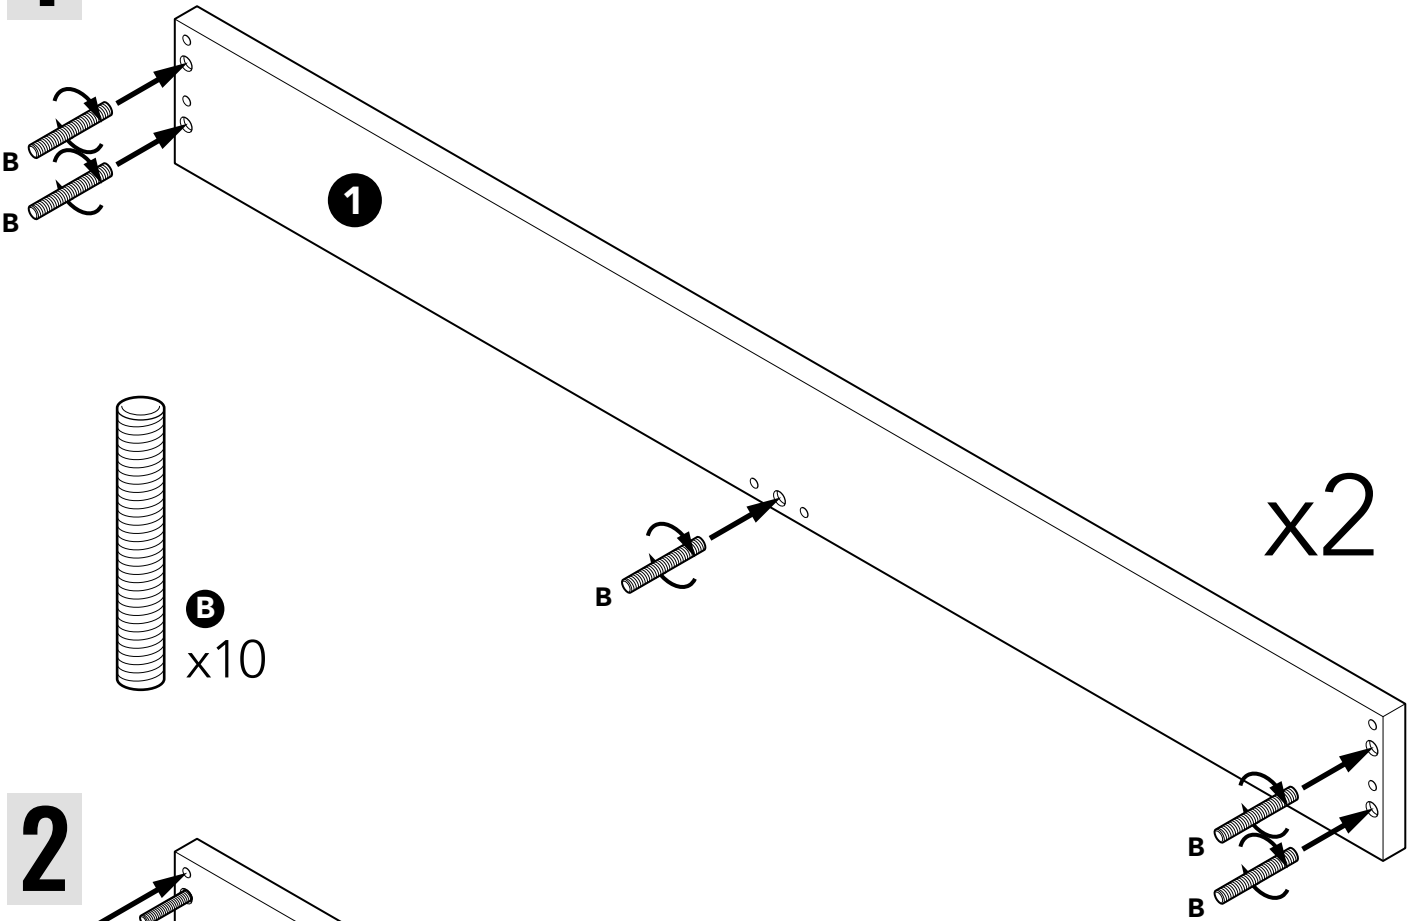




2

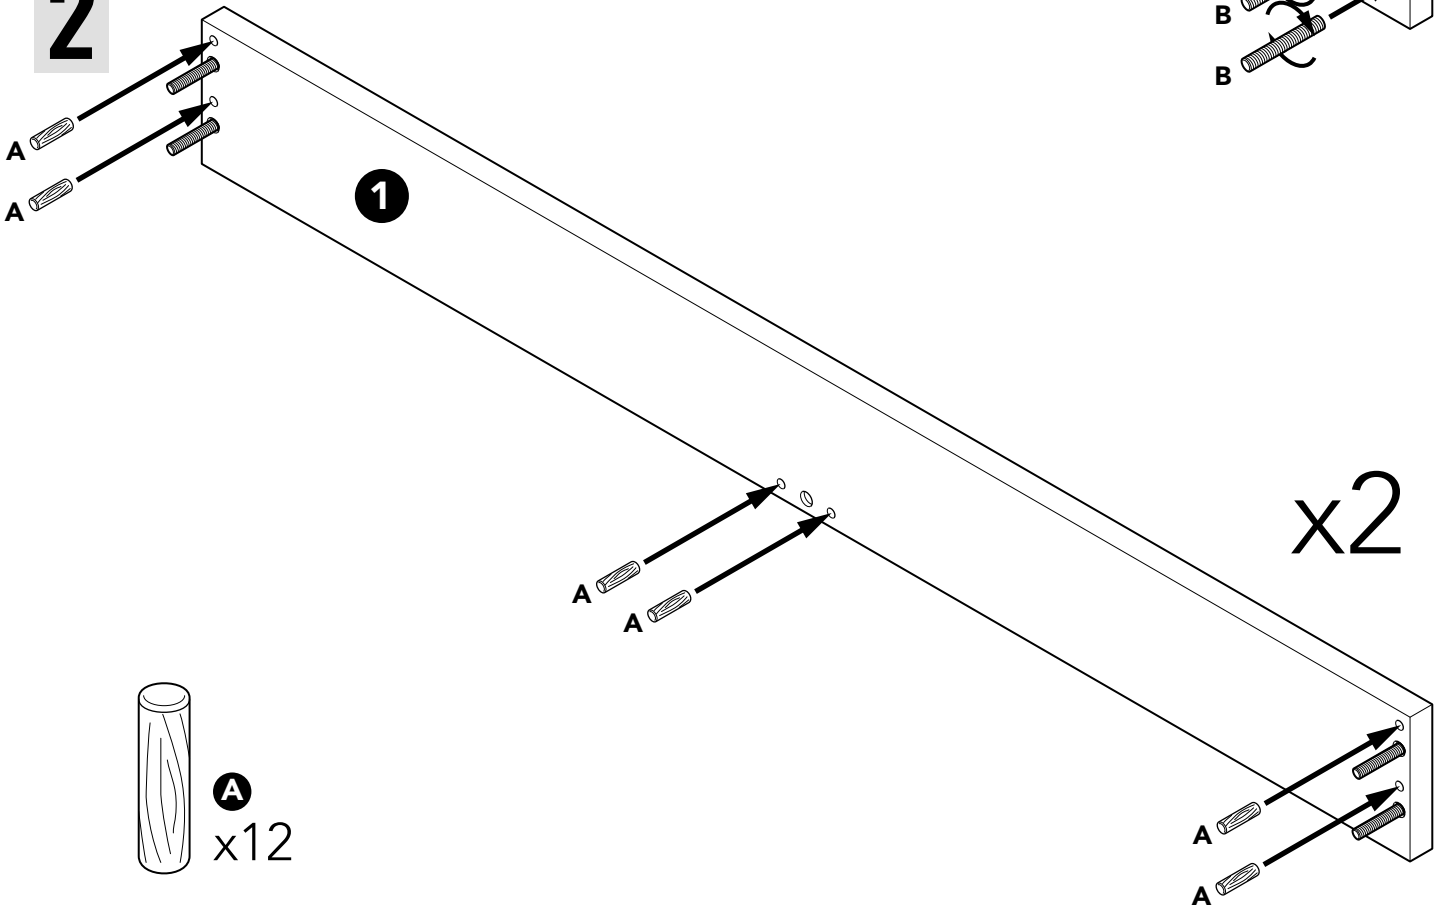


3

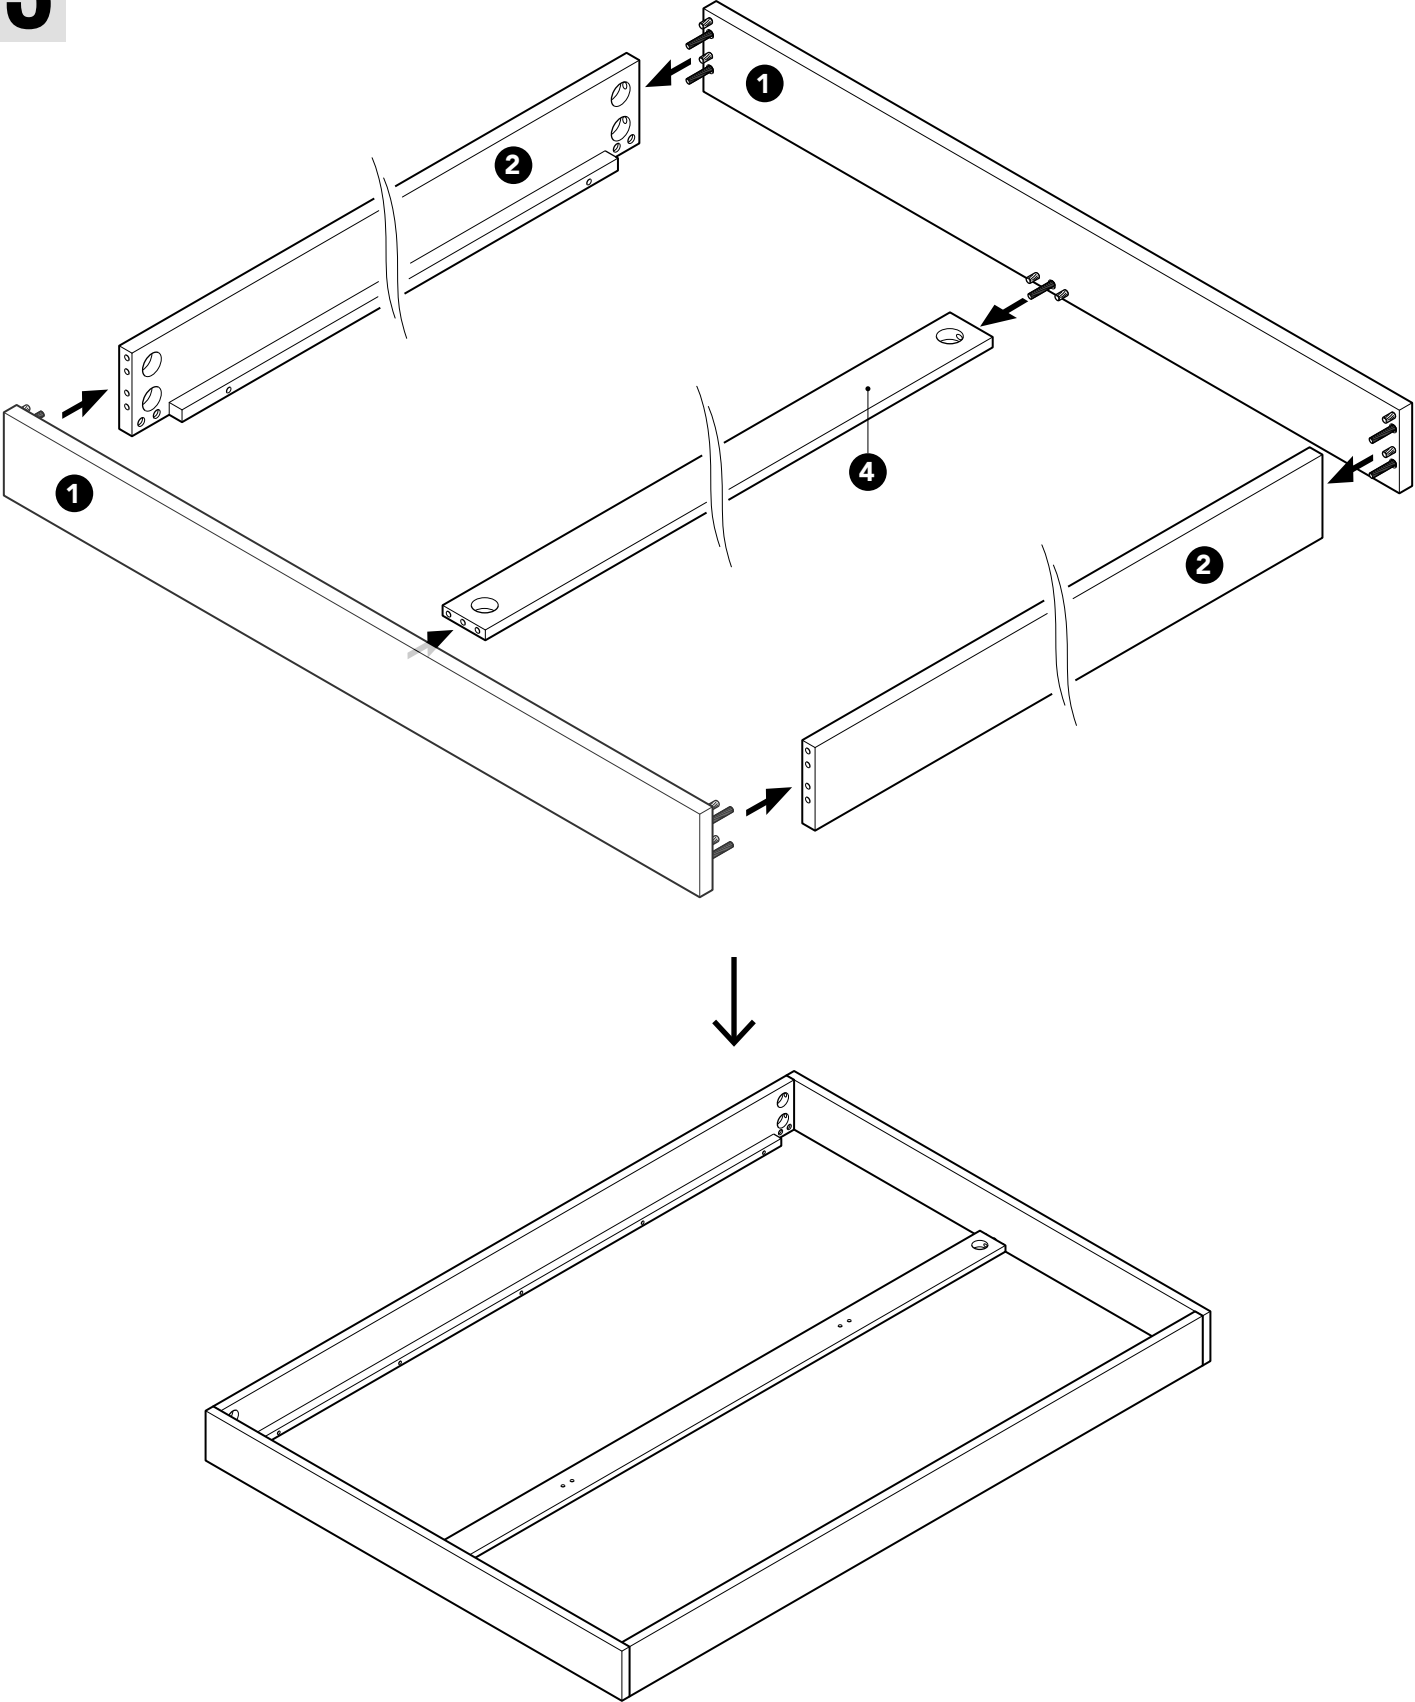



4

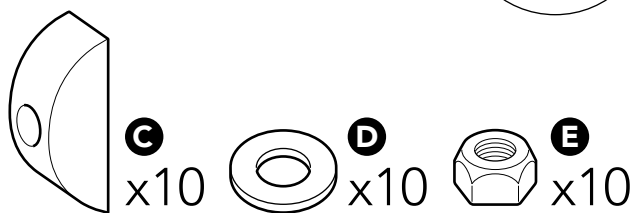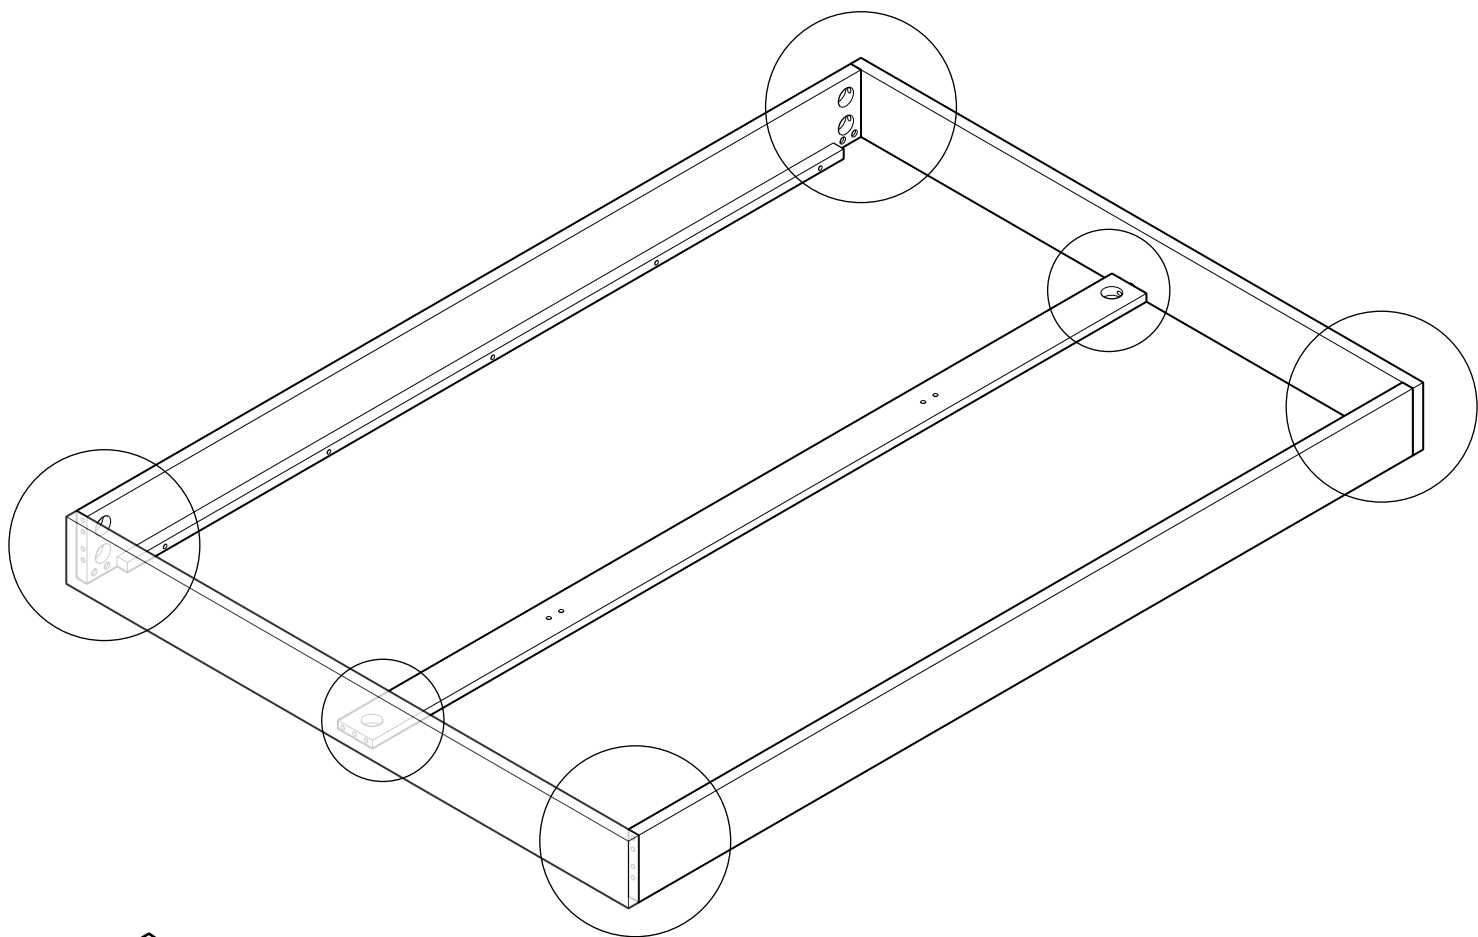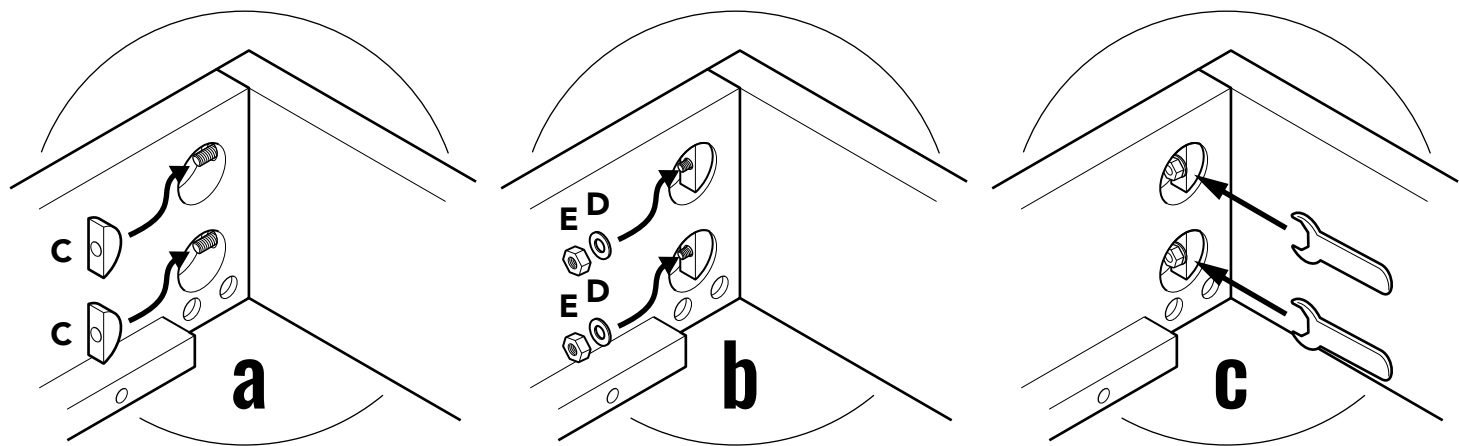



5

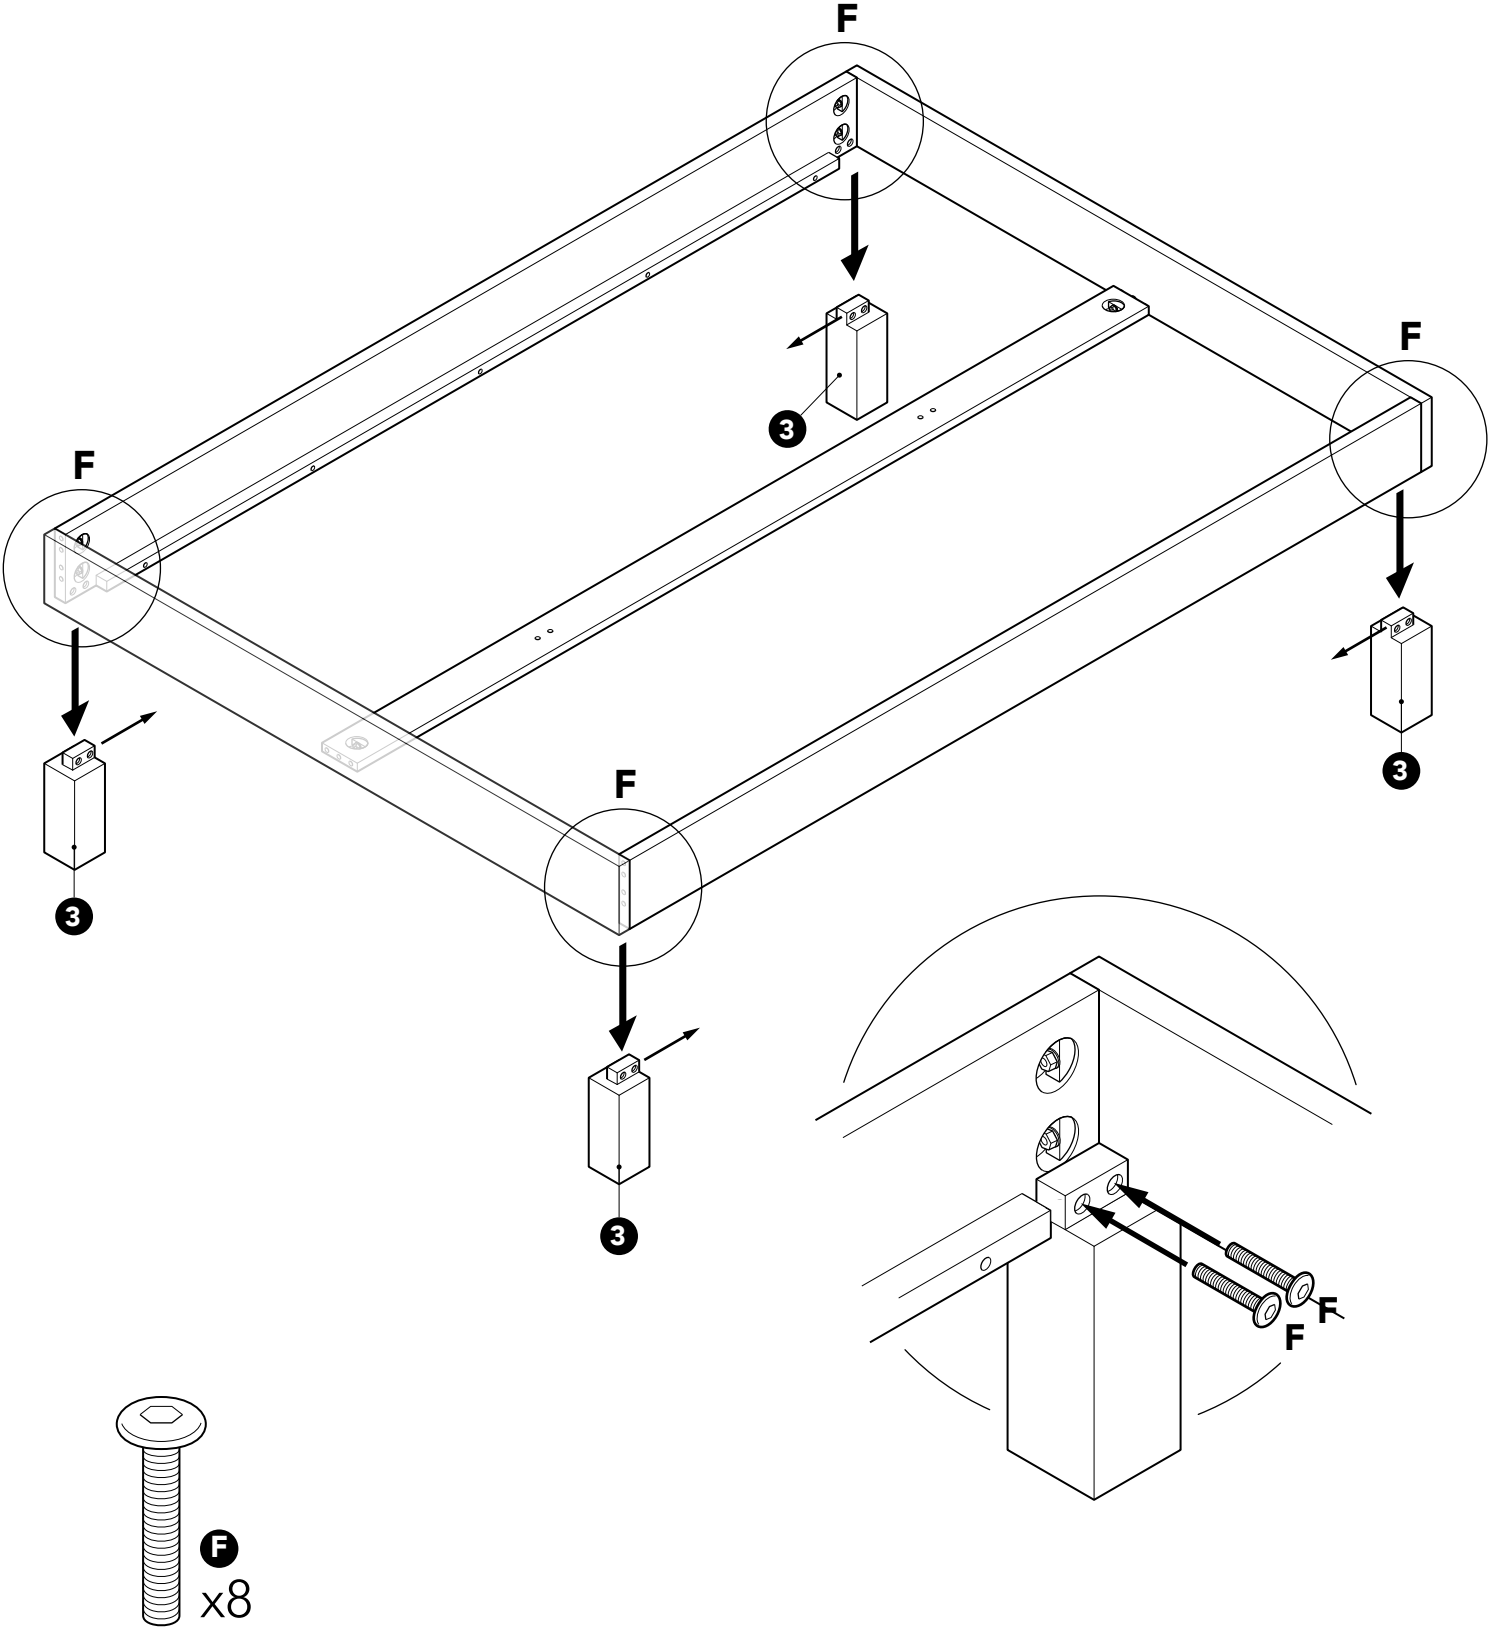


6

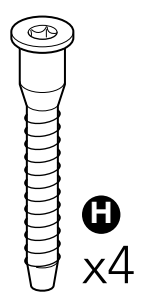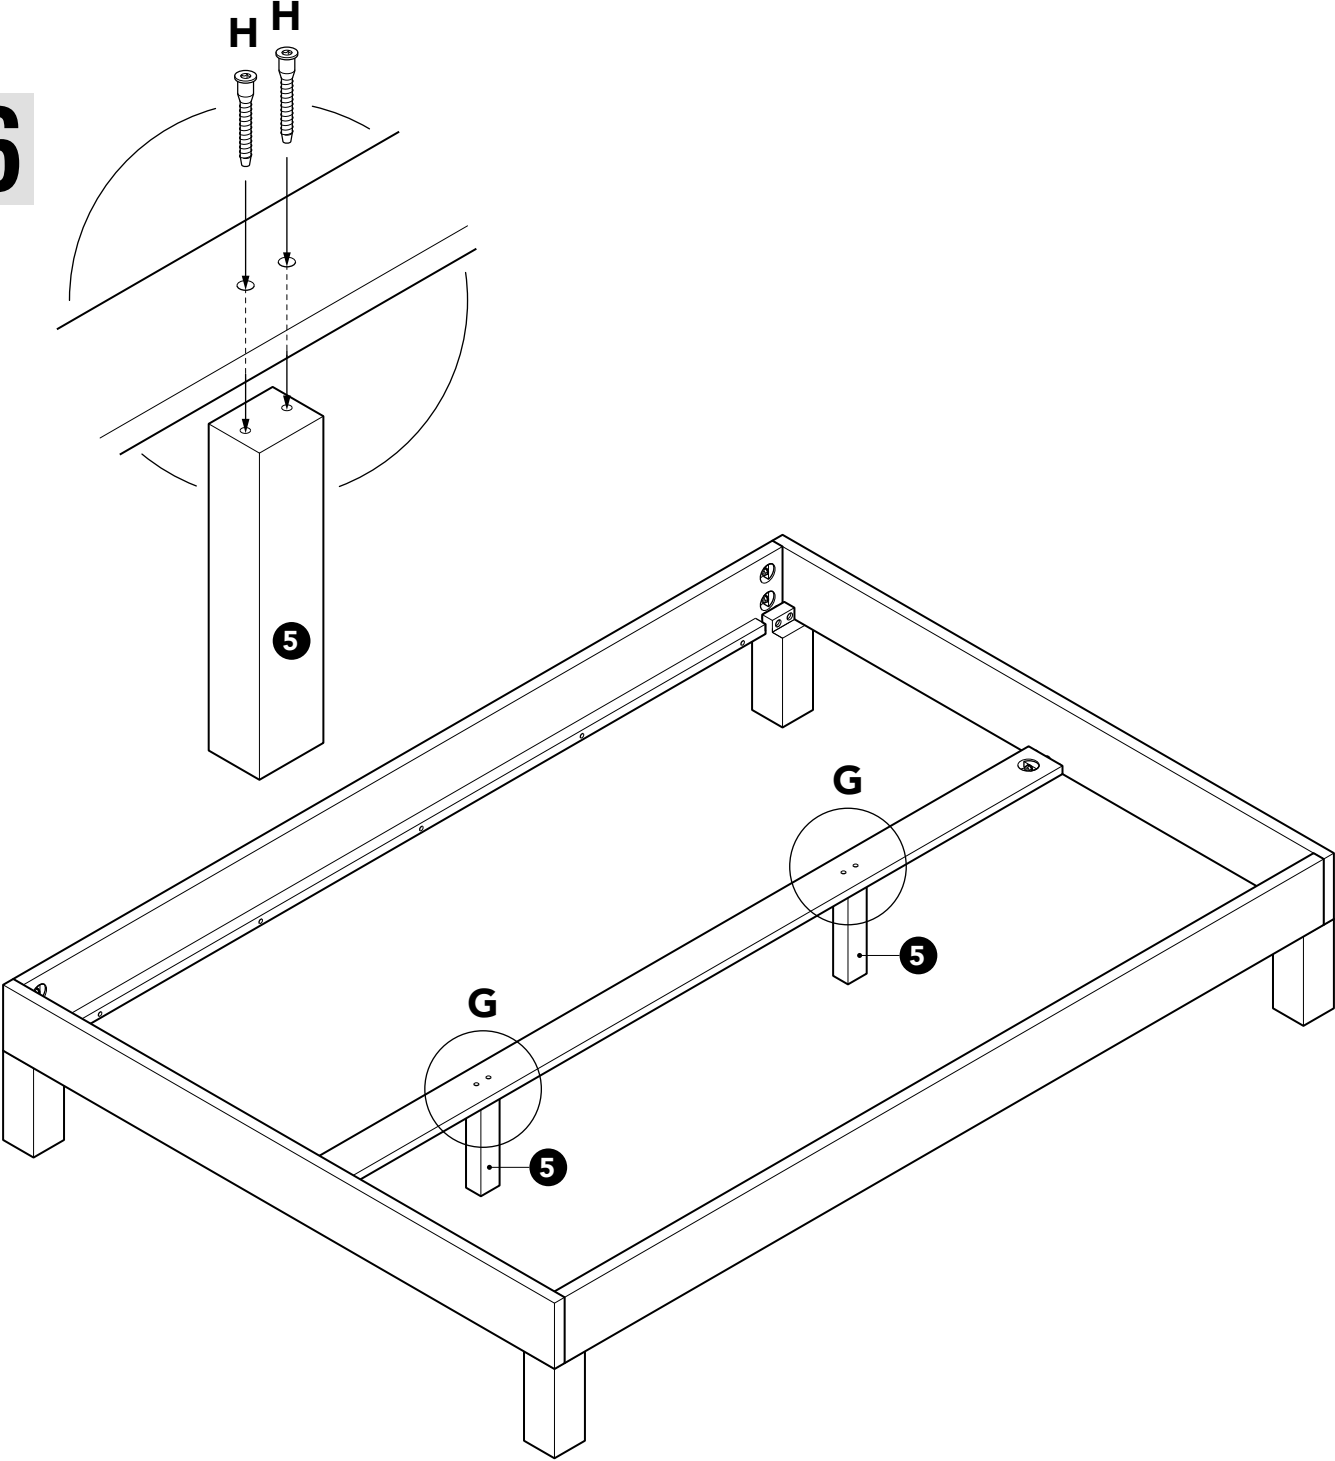

7

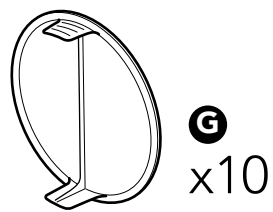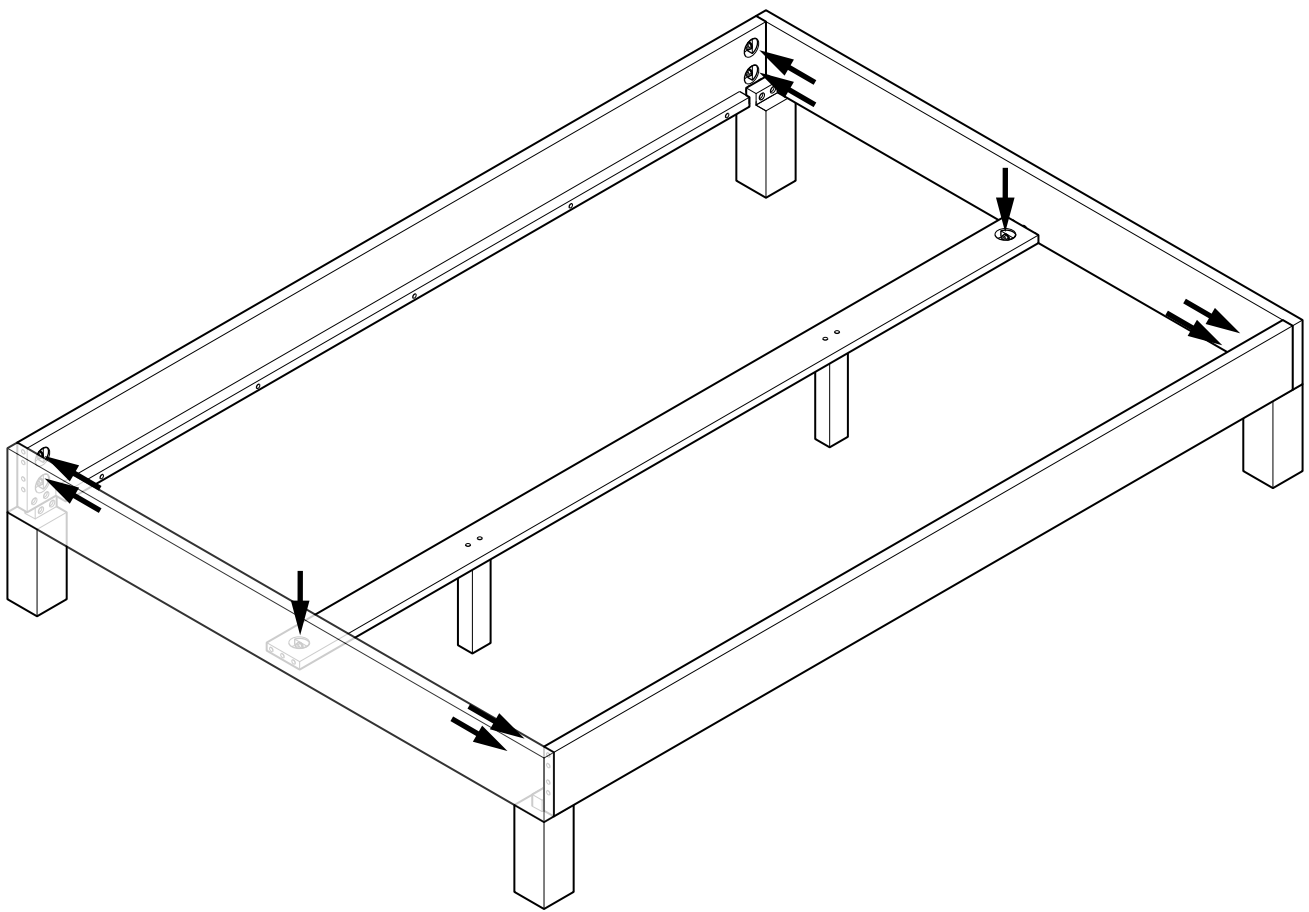

8


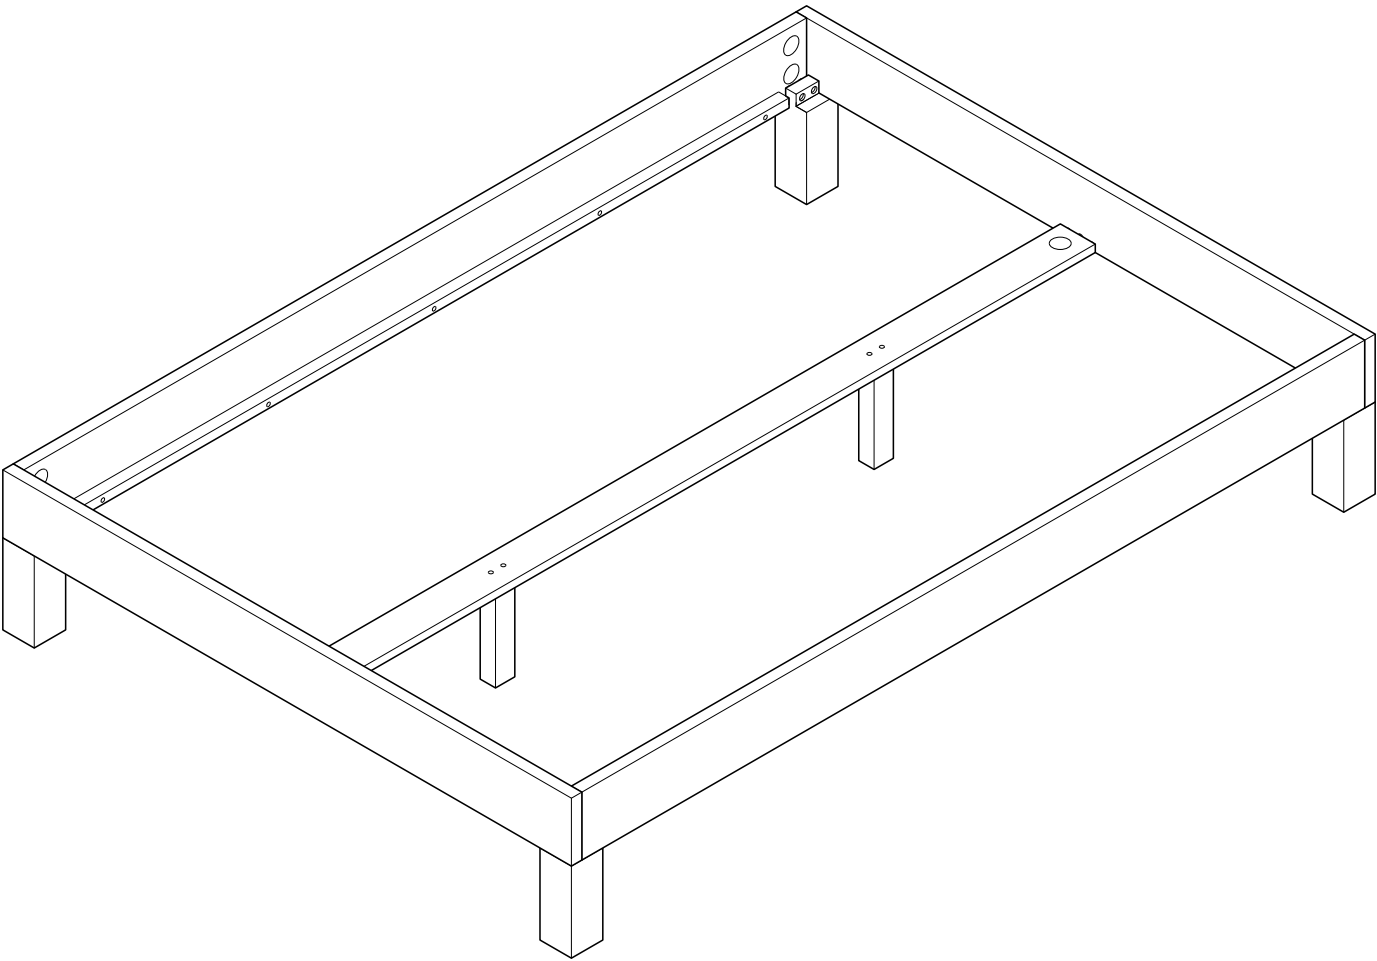





JANA

BEDFRAME




ASSEMBLY INSTRUCTIONS

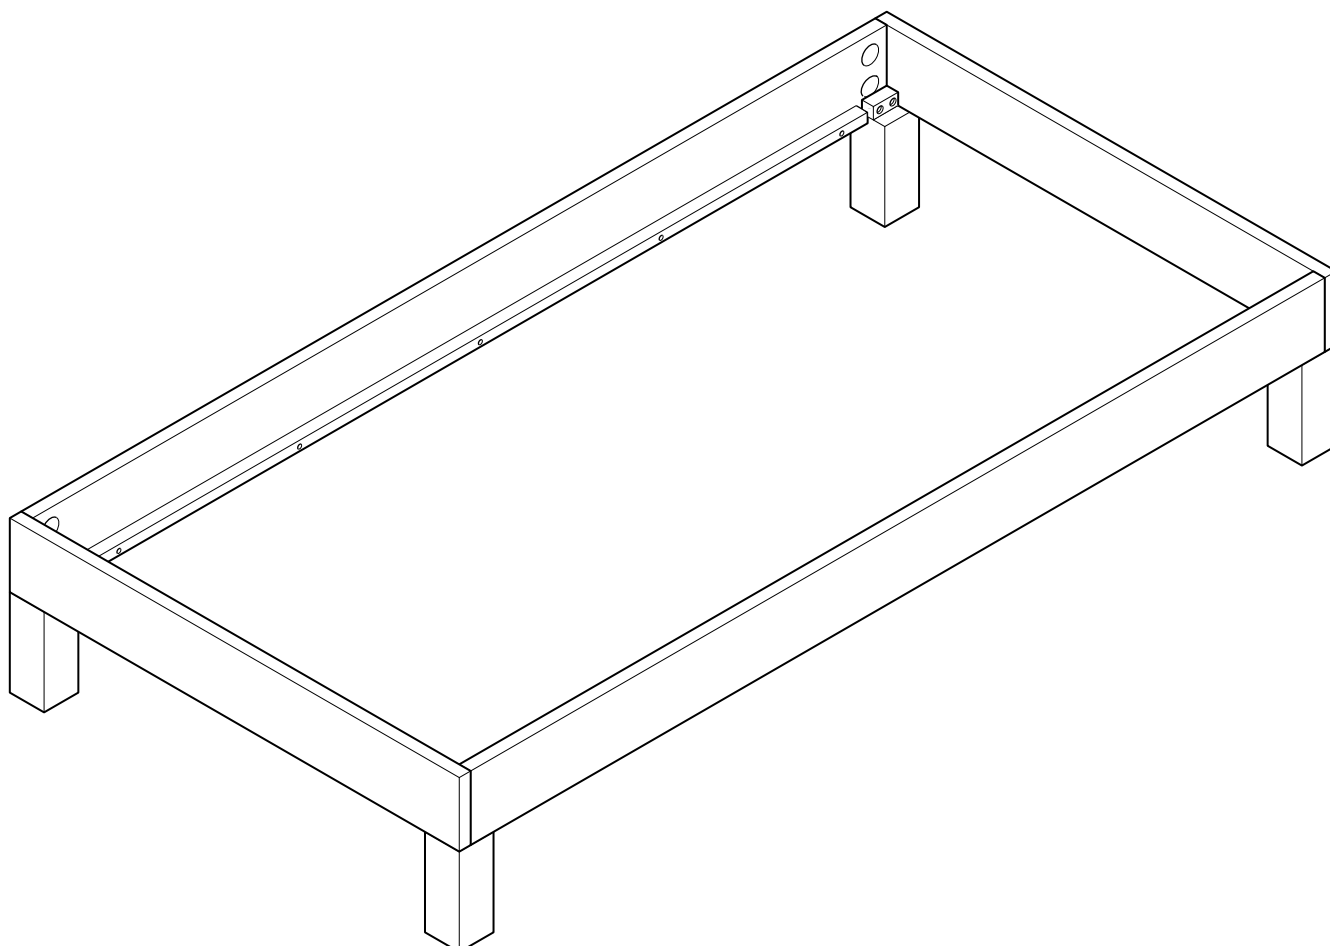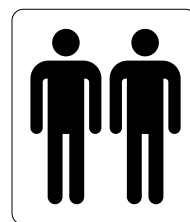

PLAN

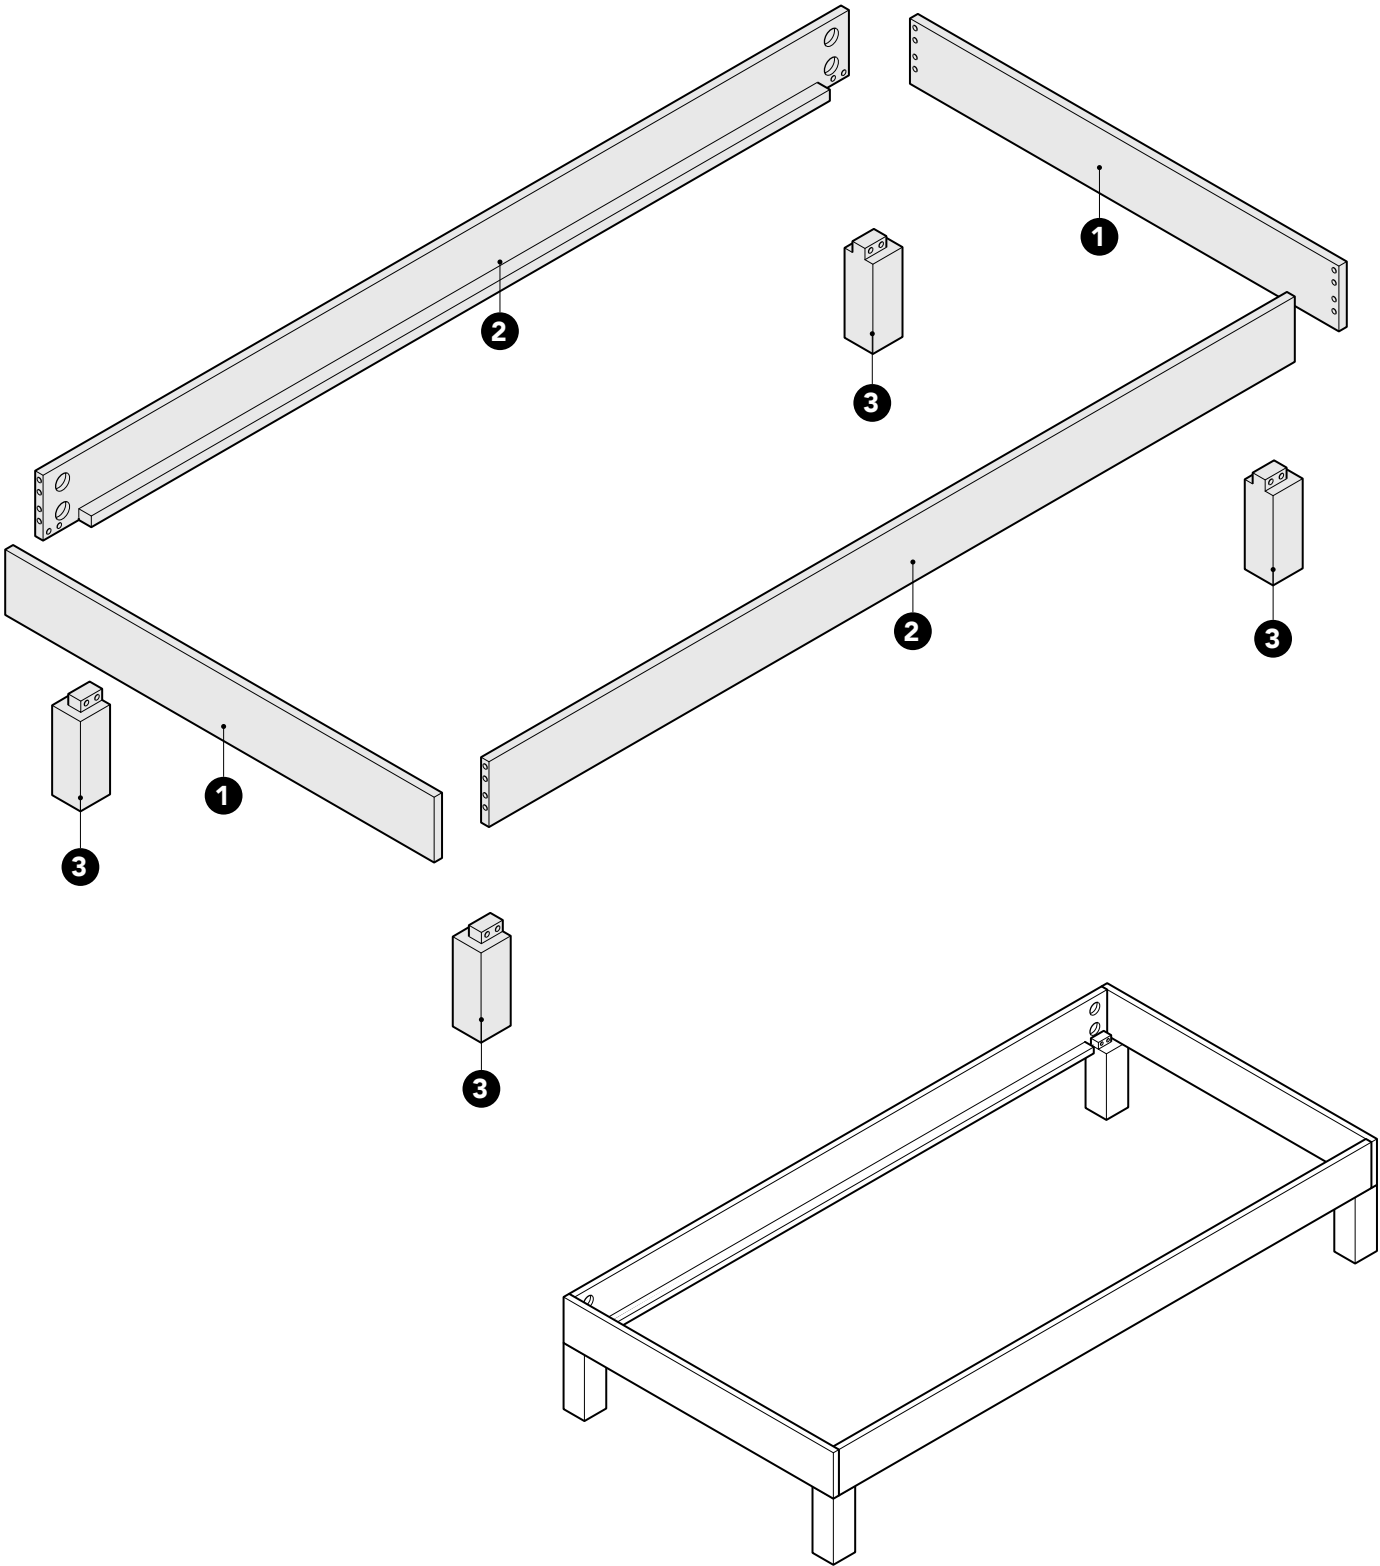


INCLUDED

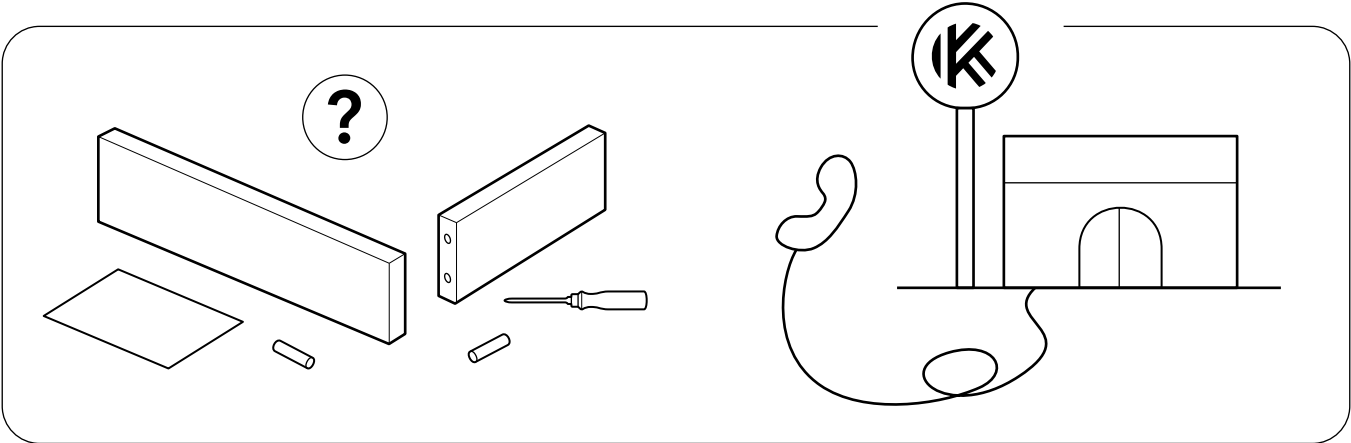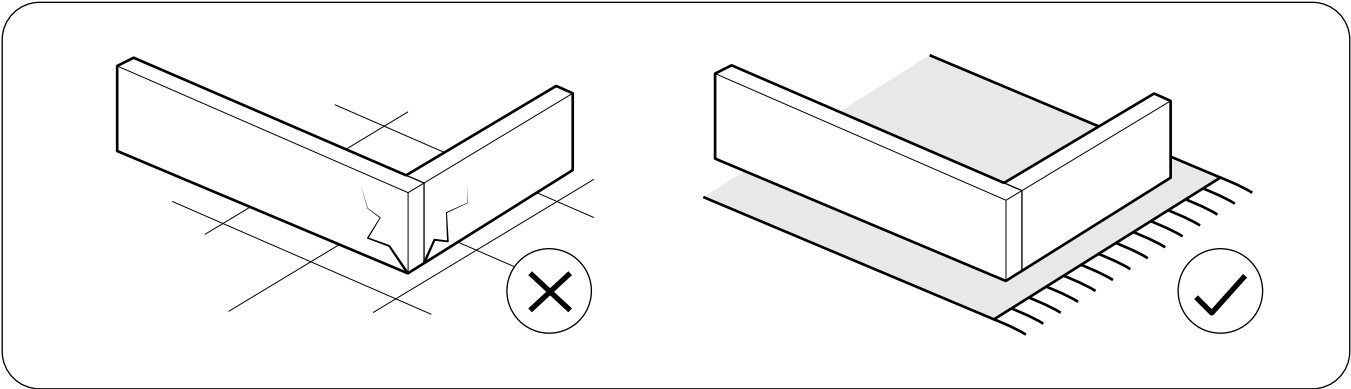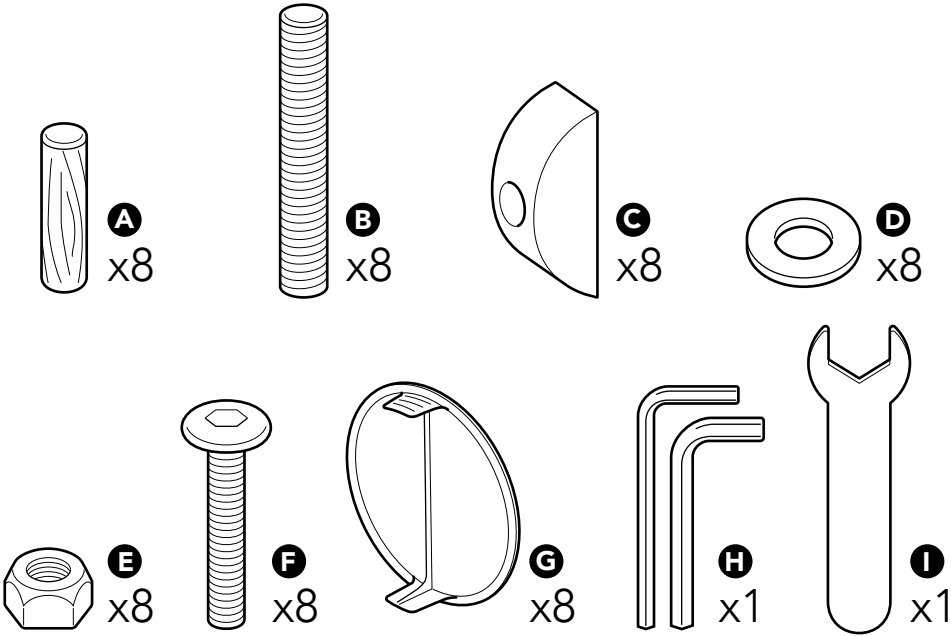


ASSEMBLY


1

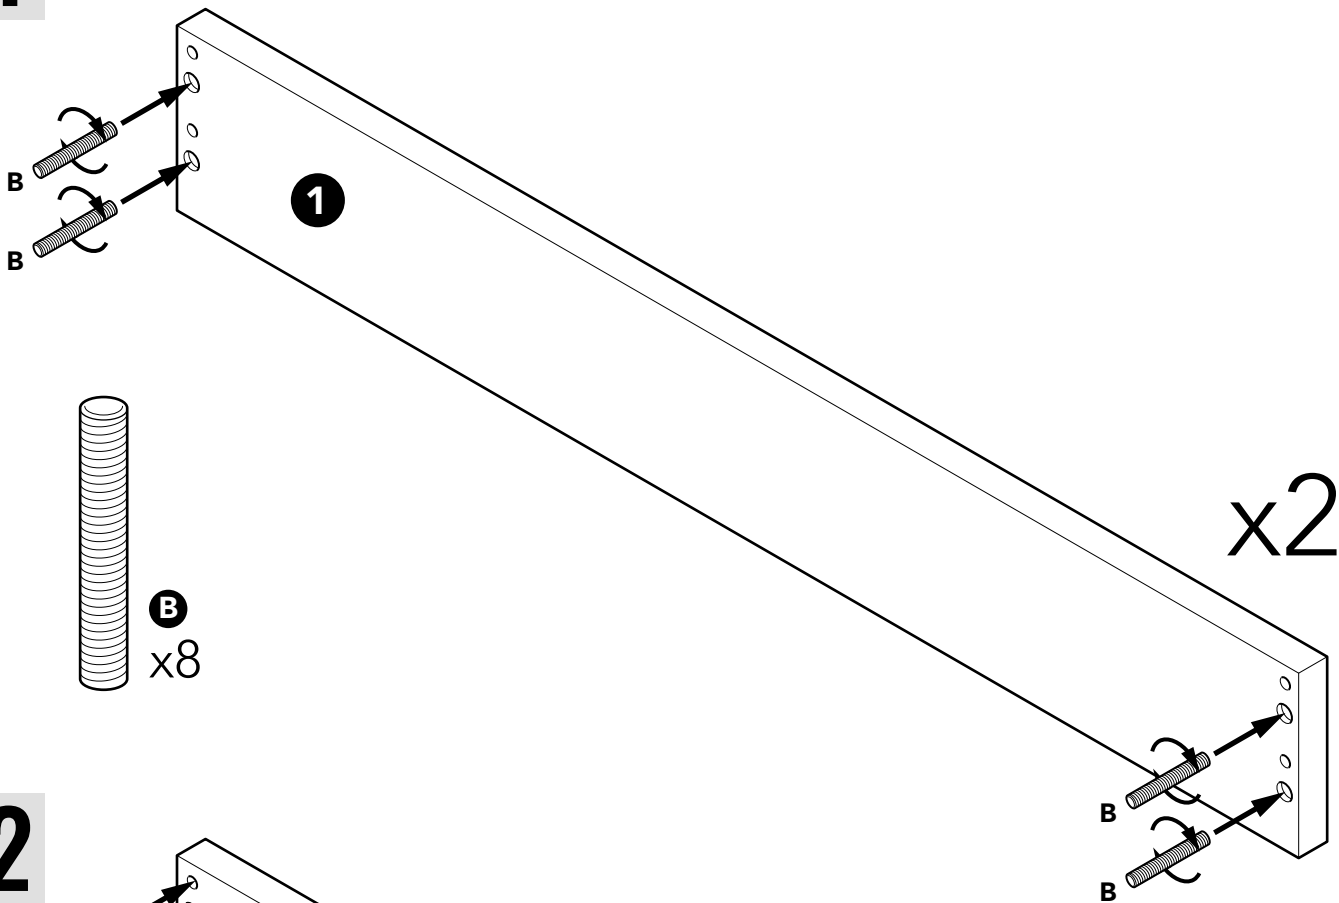


2

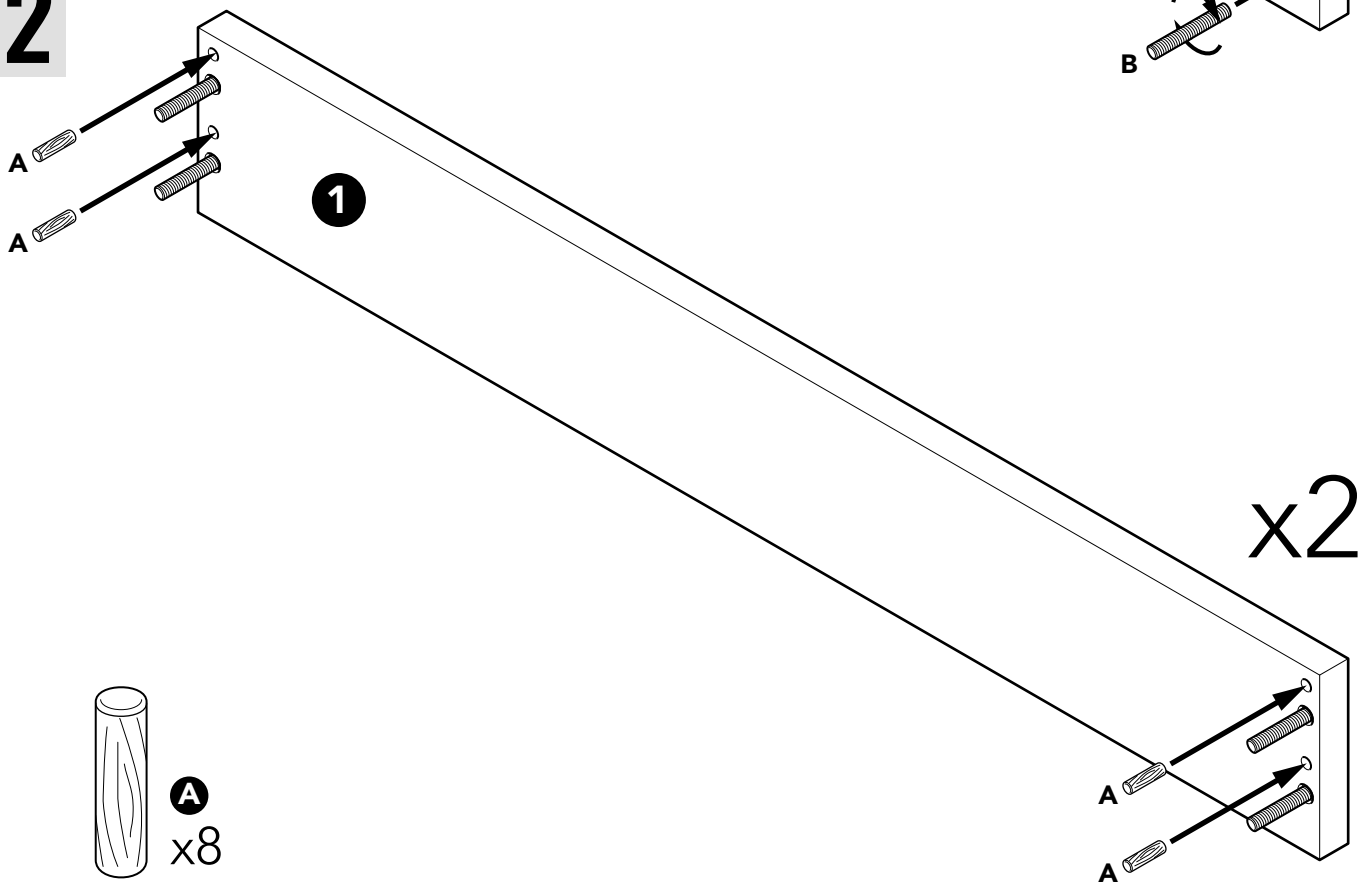


3

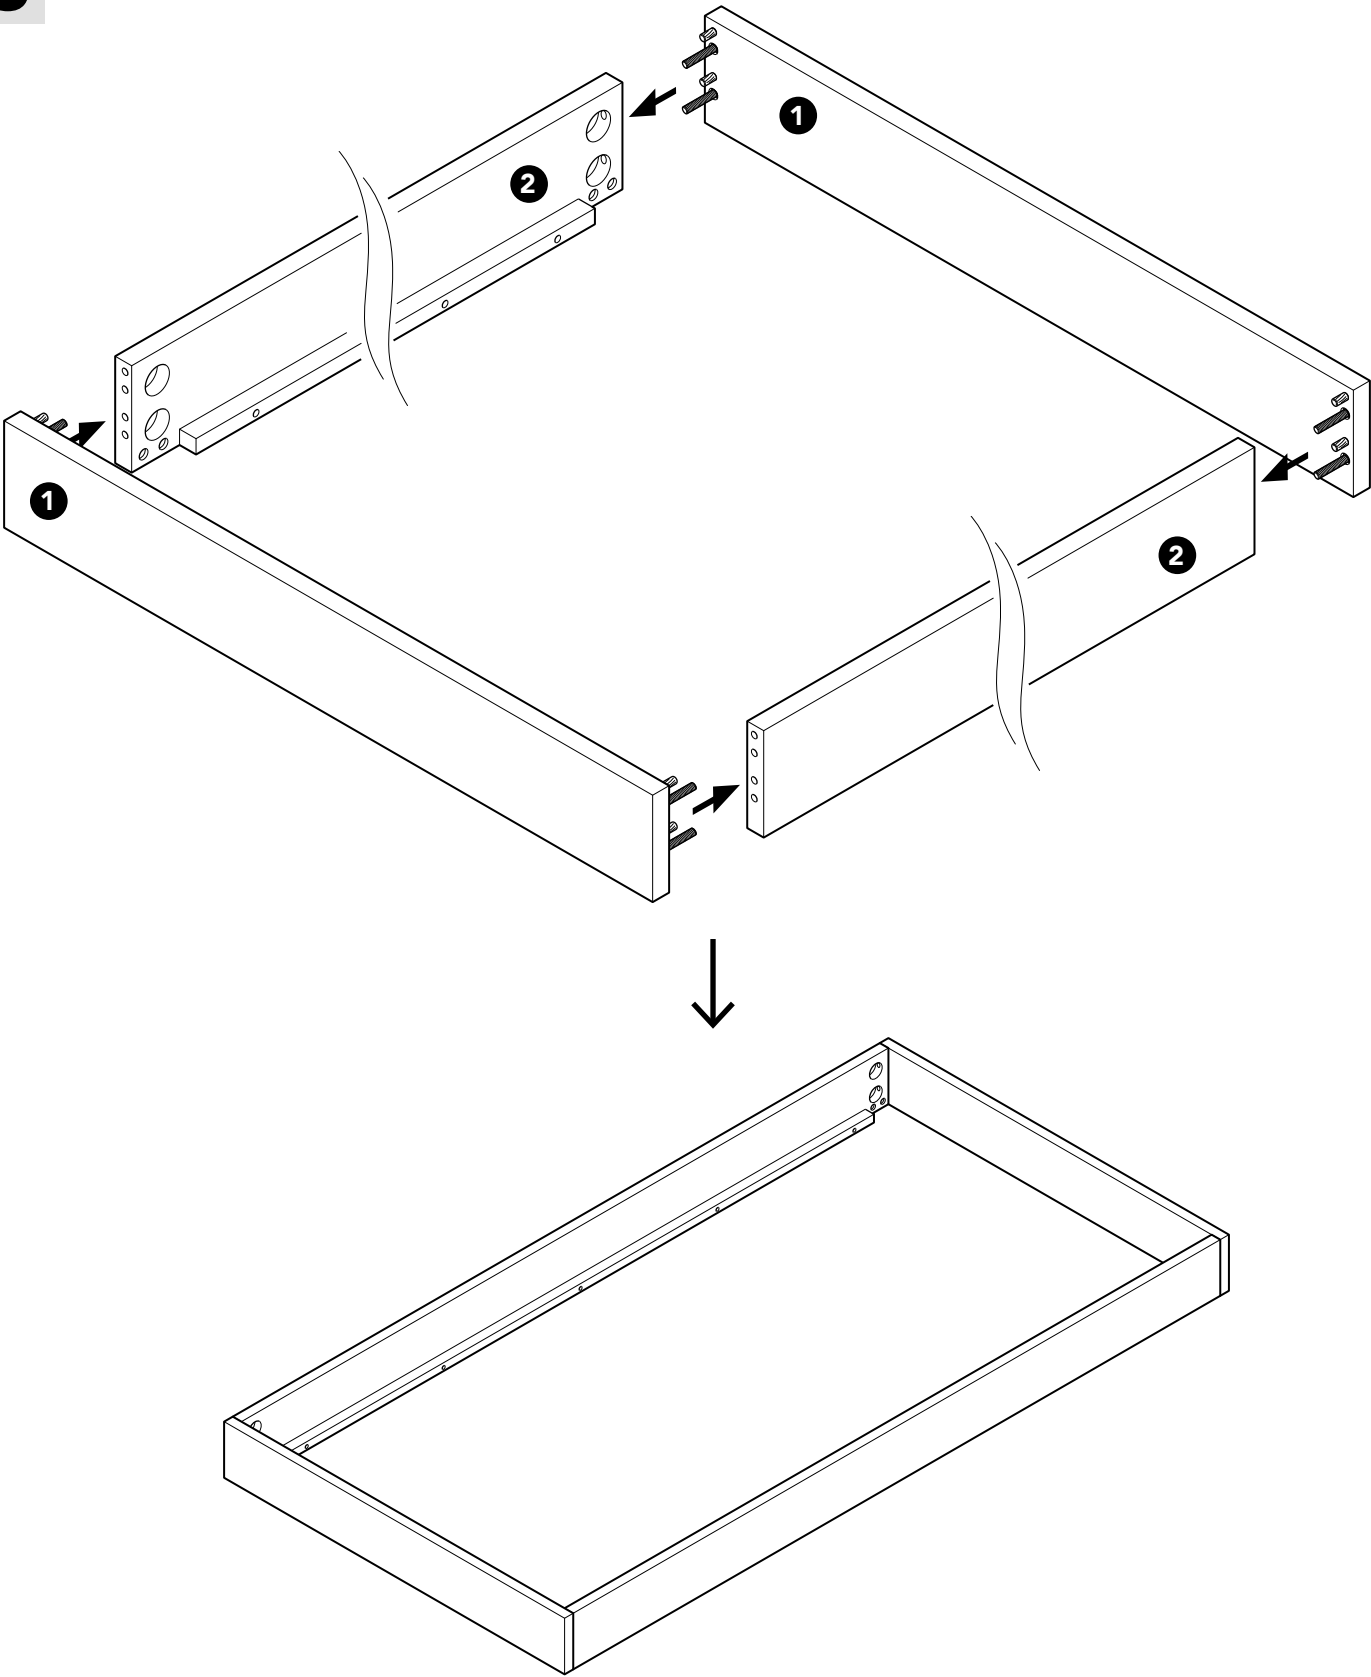



4

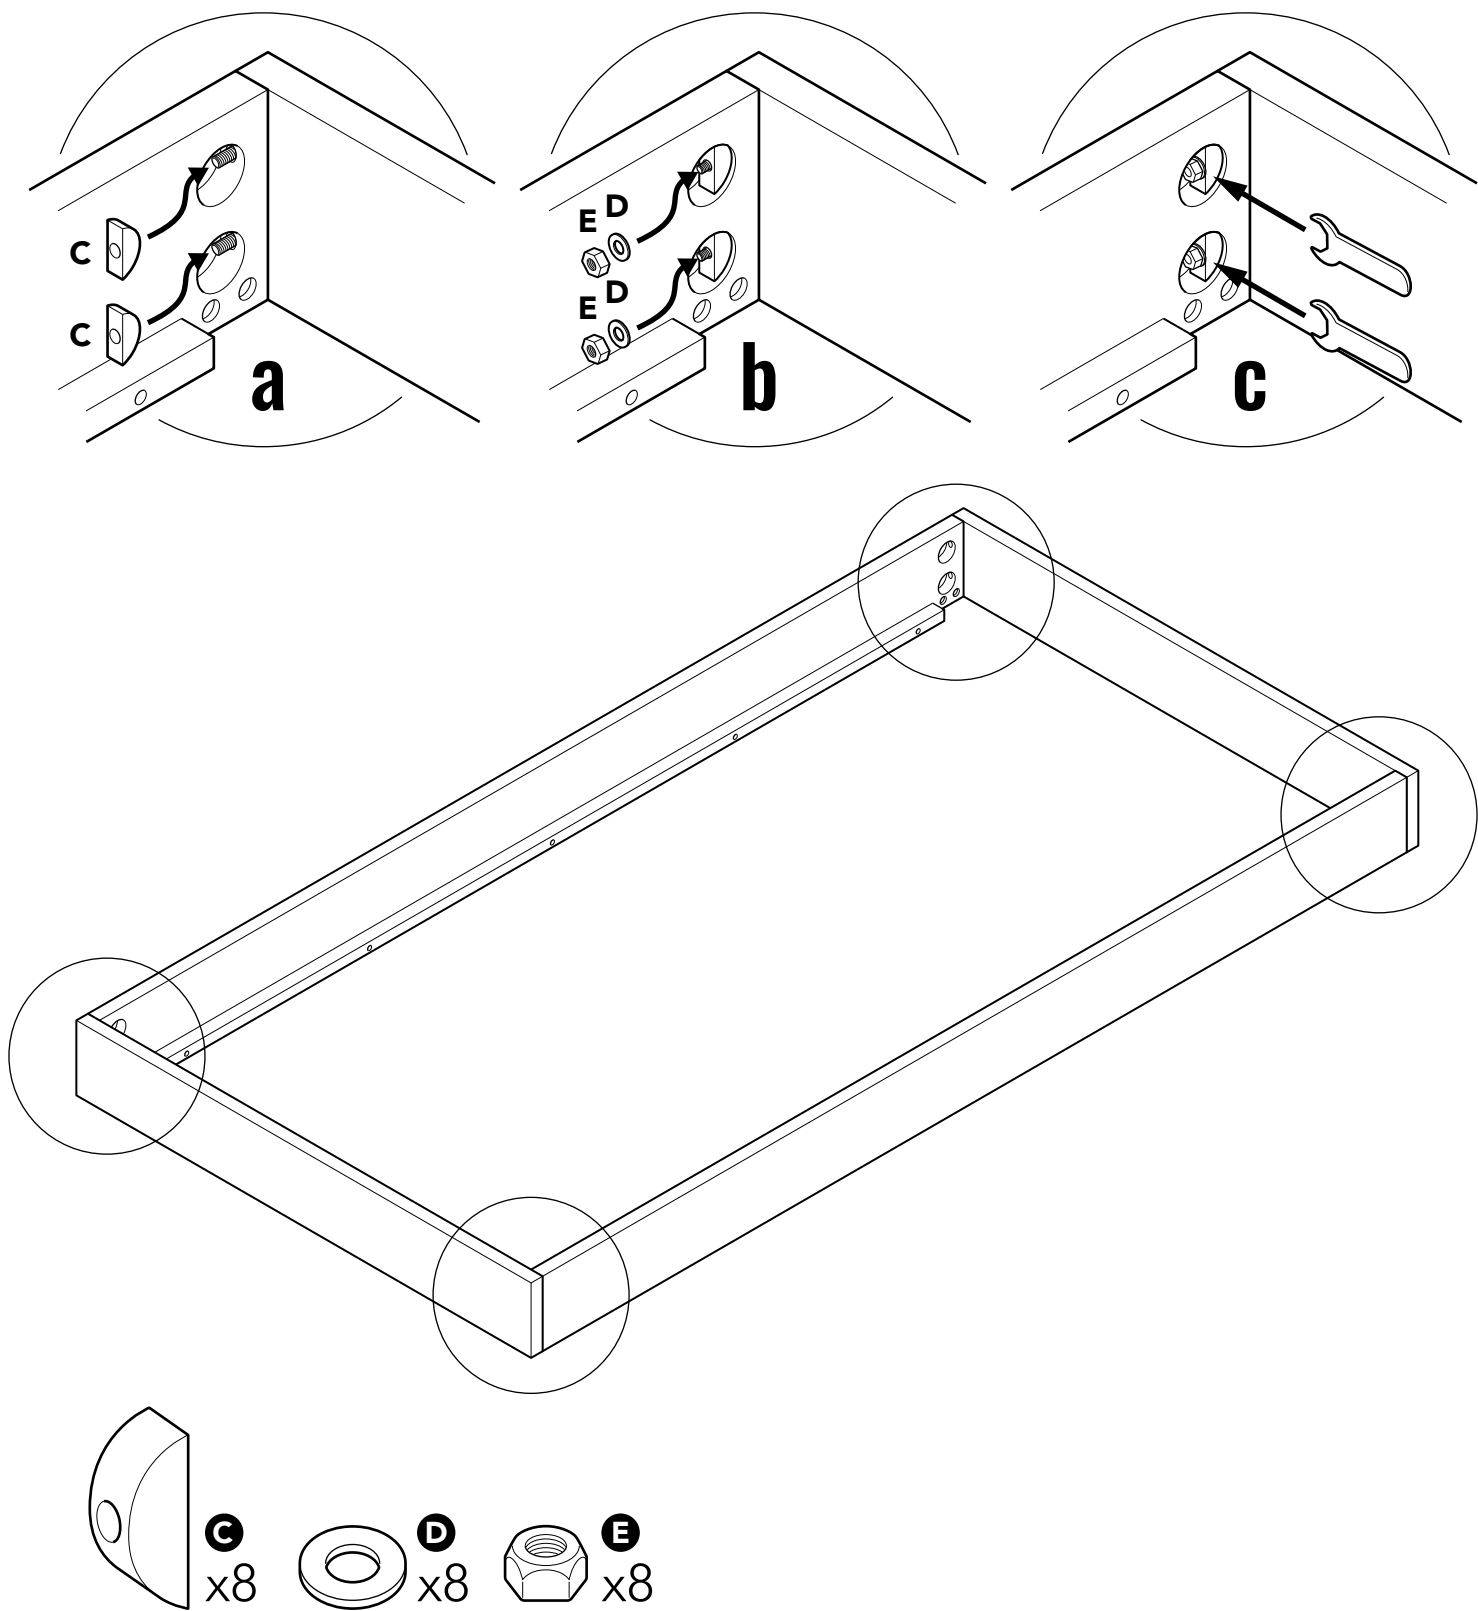


5

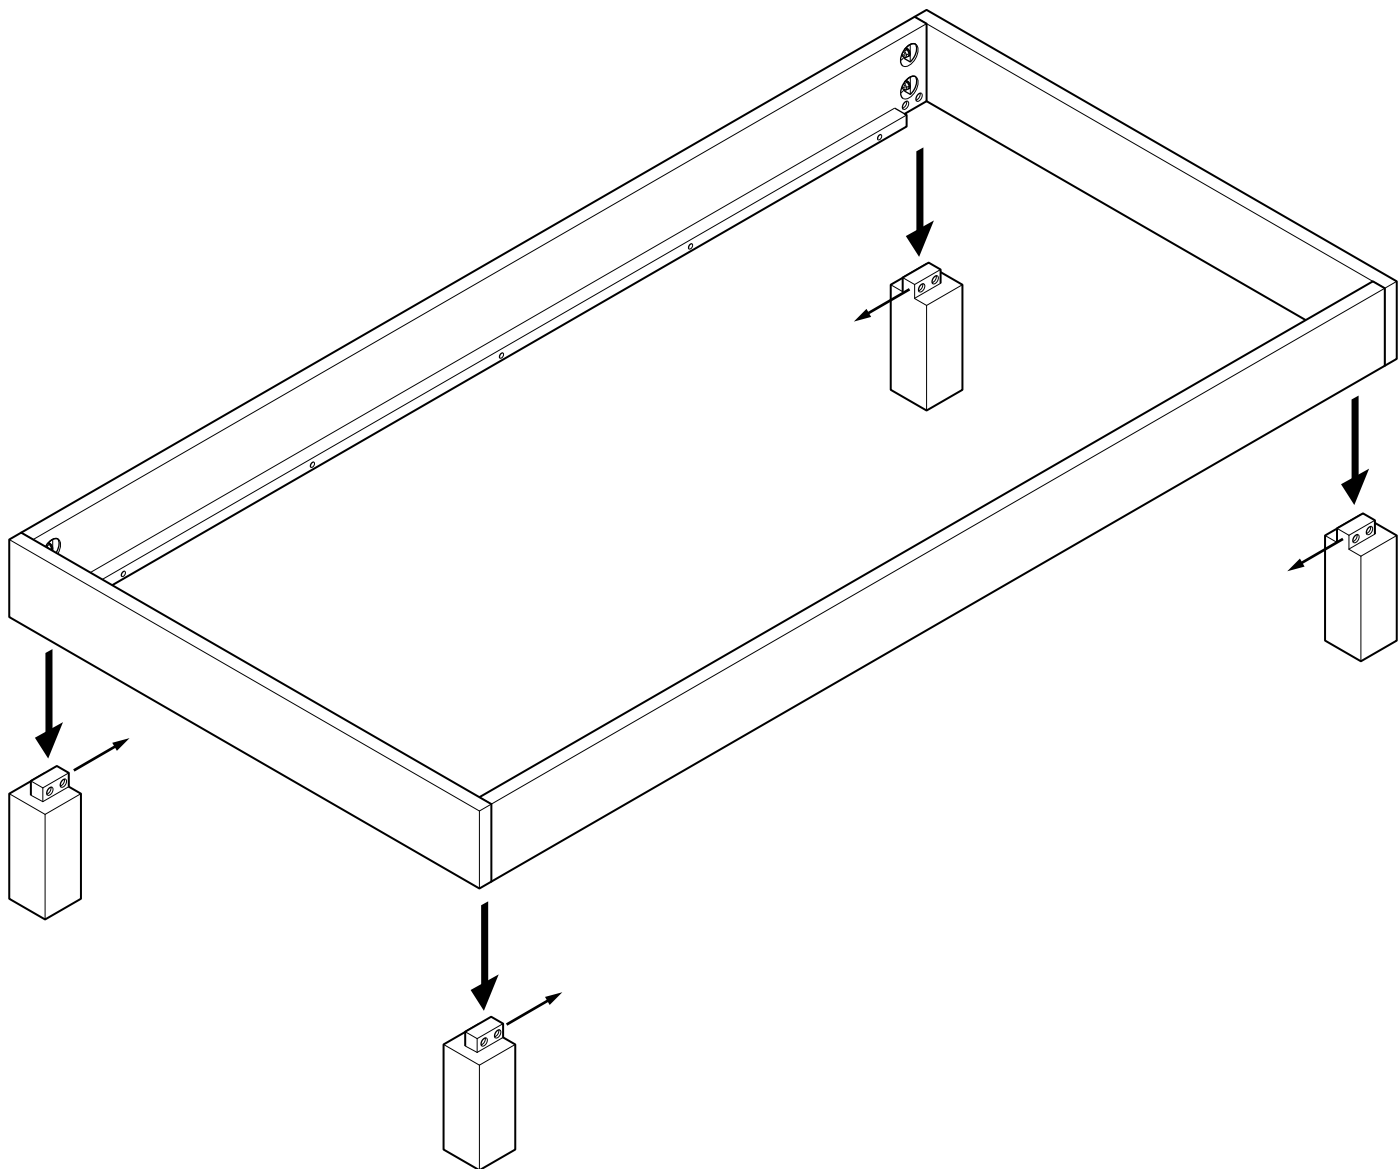

6

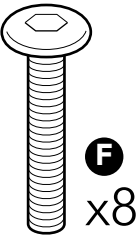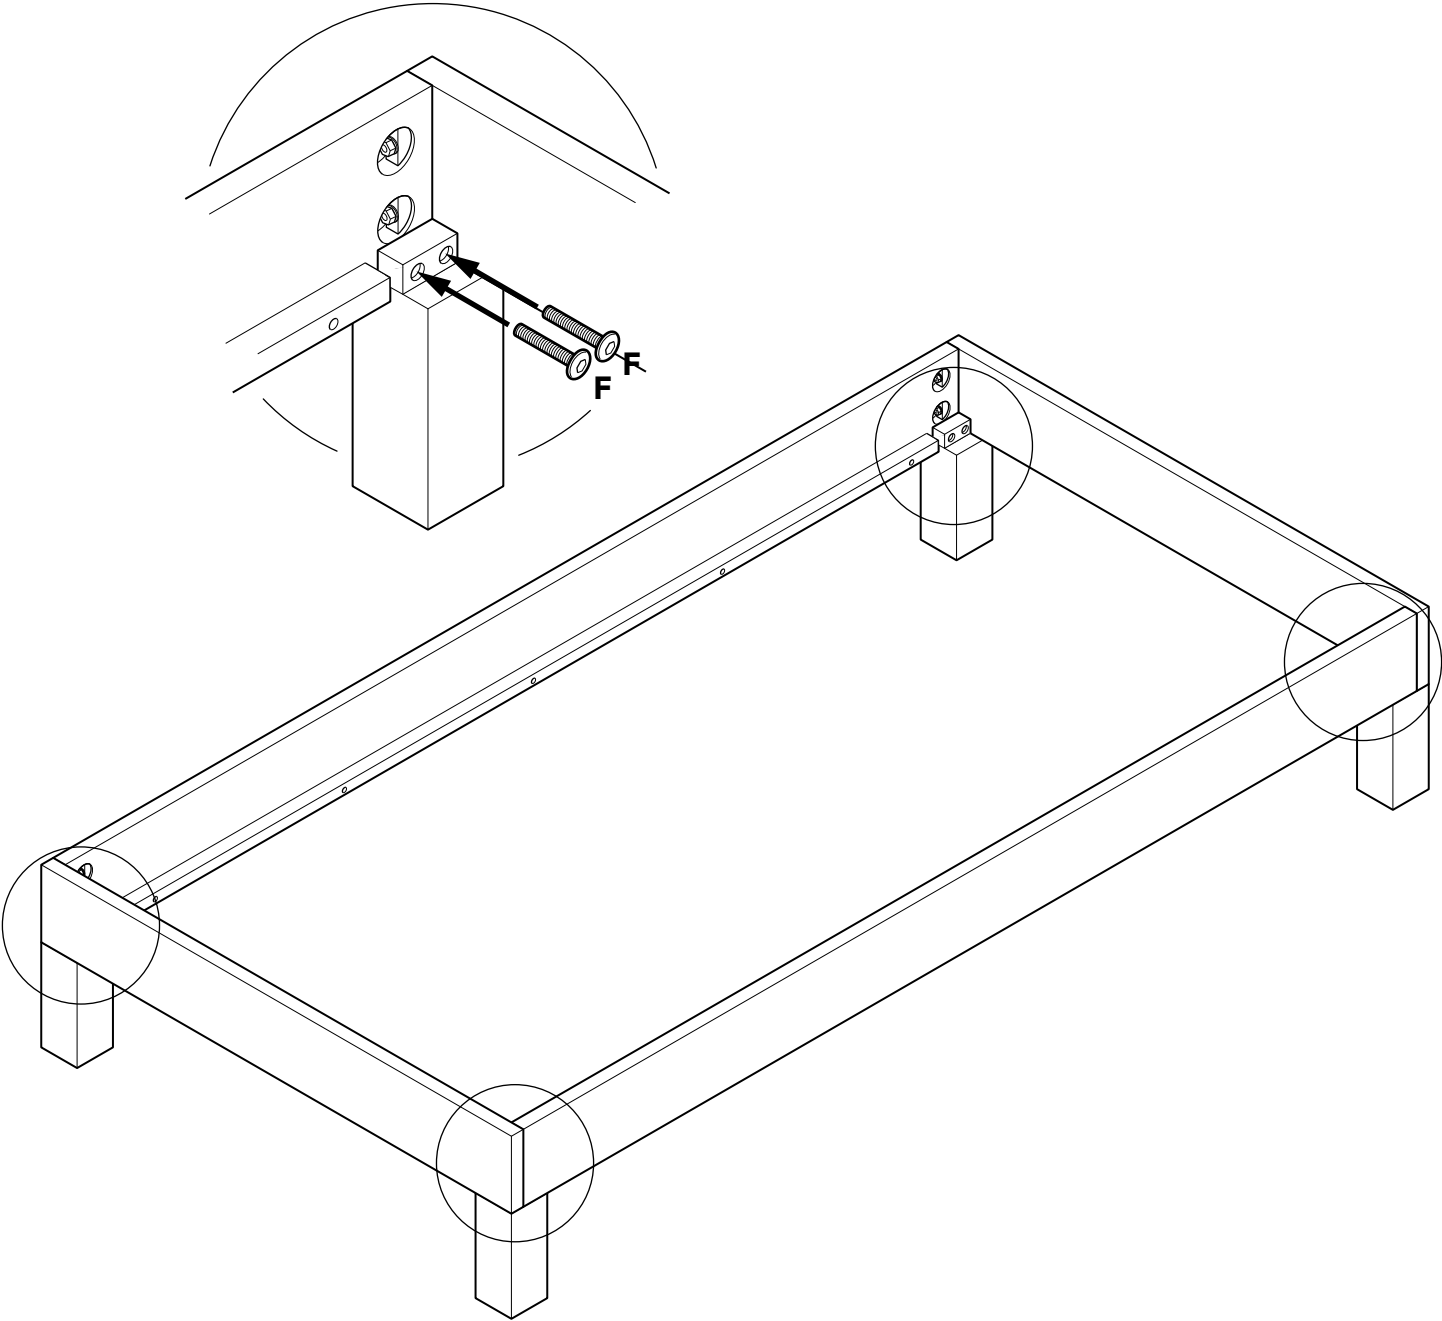

7

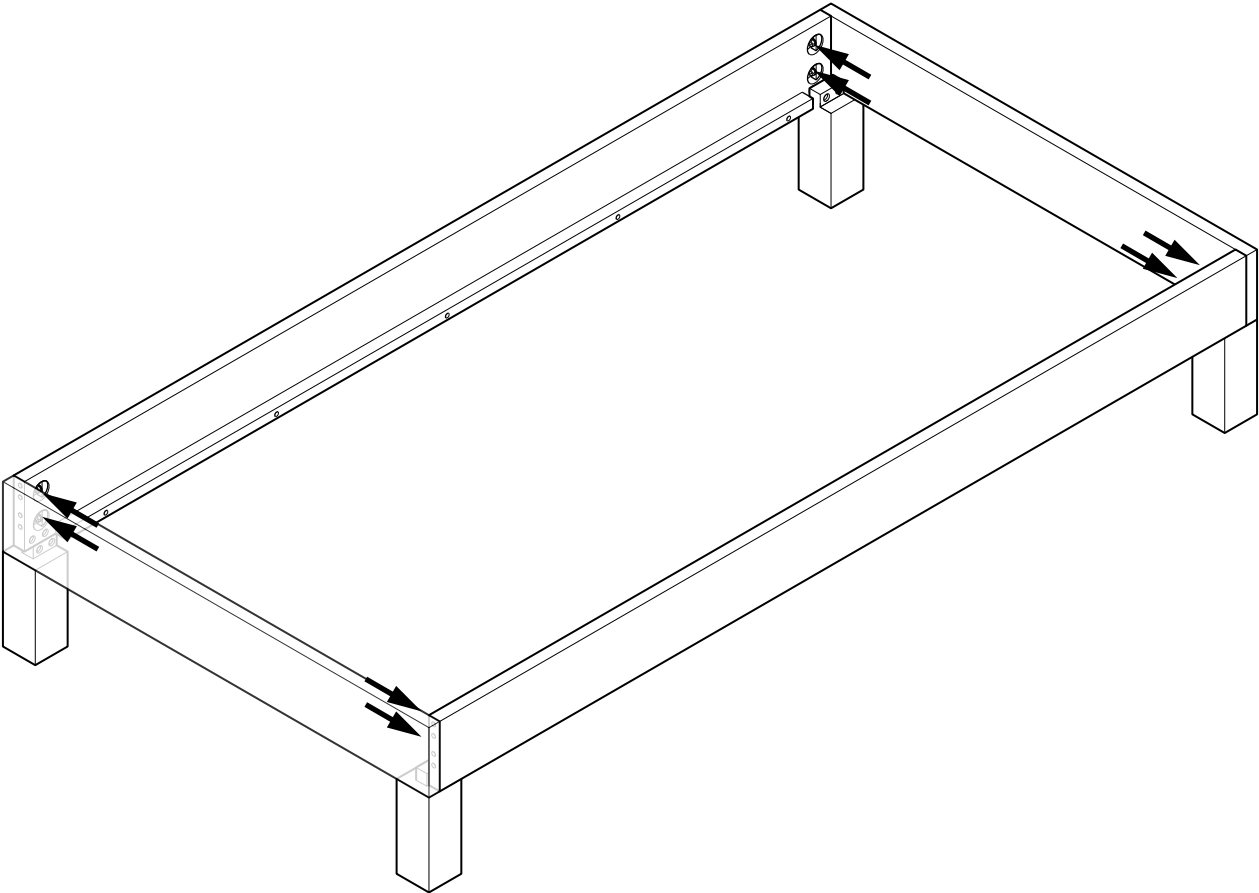

8

