

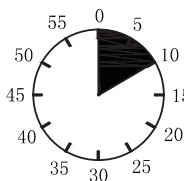
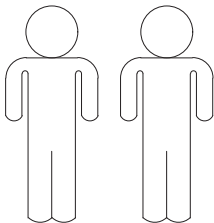



JONAS 1

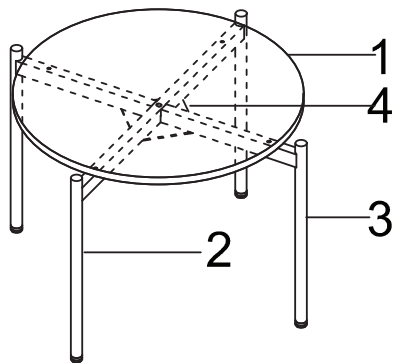


1

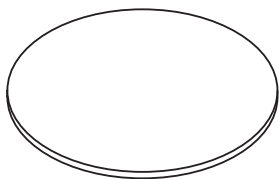


2

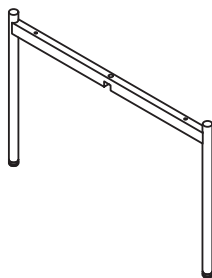


3

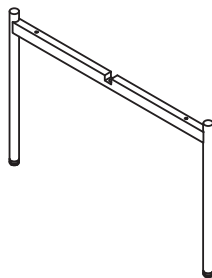

4



1	1x	1/2
2	1x	2/2
3	1x	2/2
4	1x	2/2




1/2

E

4*45



4X



2/2

A


M6*12



4X

B

M6*35



1X

C

Ø18*Ø6.5*1.5



4X

D

Ø22*M6*15



4X

F


4mm



1X


I.

1.

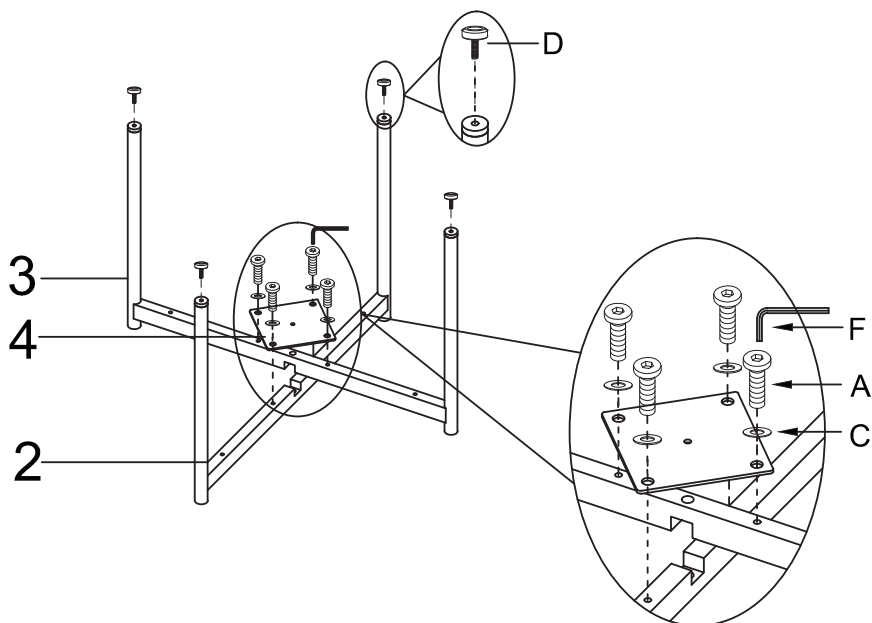


A	M6*12		4X
C	Ø18*Ø6.5*1.5		4X
D	Ø22**M6*15		4X
F	4mm		1X
			

2.

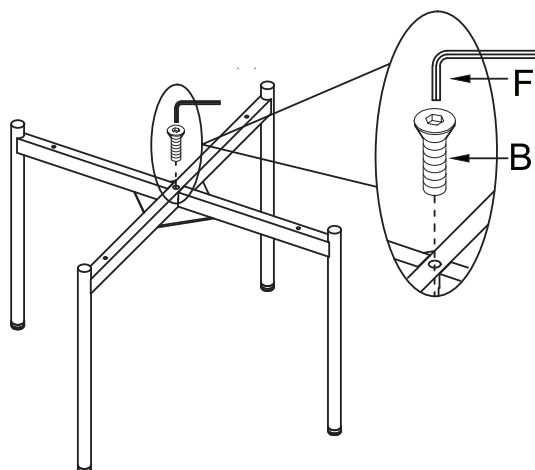

B	M6*35		1X
F	4mm		1X
			

3.

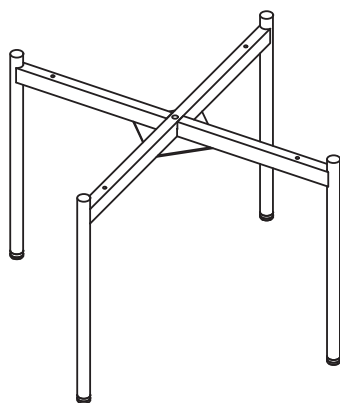


F	4mm		
			




II.

E 4*45
4X

4.

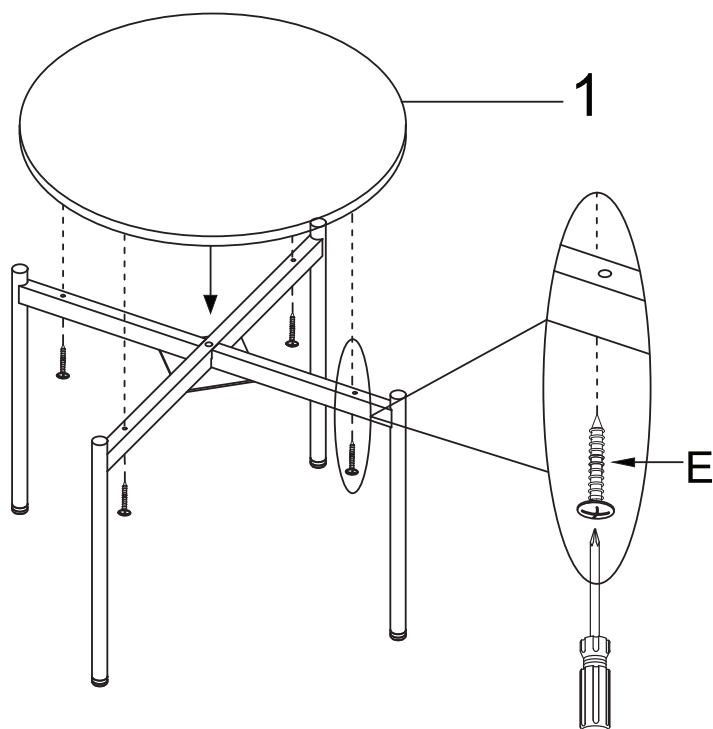

5.

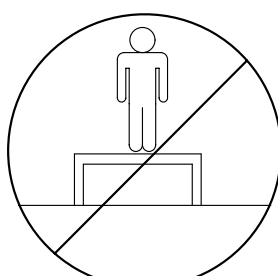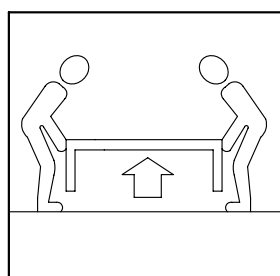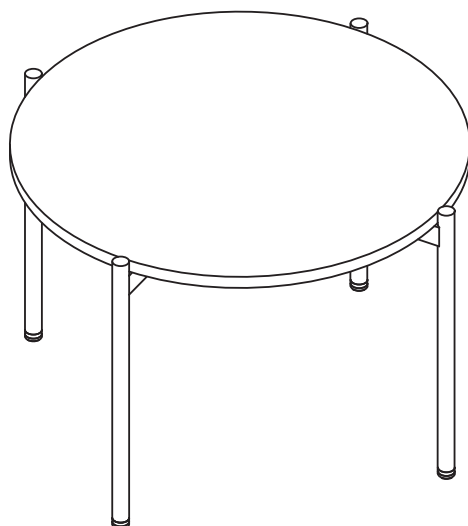

Séparez les éléments avant de trier