
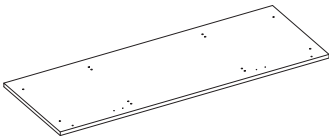
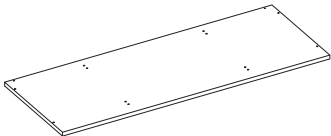
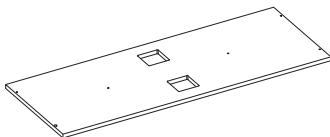









**INSTRUCTION MANUAL/BEDIENUNGSANLEITUNG/NOTICE D'UTILISATION/
MANUAL DE INSTRUCCIONES DE USO/MANUALE DI ISTRUZIONI**
PARTS LIST/STÜCKLISTE/PARTS LIST/LISTA DE PIEZAS/LISTA DEI PEZZI





A  1100x400mm1pc	B  1040x390mm1pc	C  1040x385mm1pc	D  1040mm2pcs		
E  2pcs	F  385x3751pc	G  385x3752pcs	H  385x3751pc	I  448x3751pc	
J1  382x2601pc	J2  382x2601pc	K  2pcs	L  2pcs	M  4pcs	N  M4x252pcs
O  22pcs	P  22pcs	Q  8pcs	R  2pcs	S  M3x104pcs	T  2pcs
U  M3x74pcs	V  M6x3012pcs	X  4pcs	Y  4pcs	Z  1pc	

ASSEMBLY/MONTAGE/ASSEMBLAGE/MONTAJE/ASSEMBLAGGIO



Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
 Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
 Serrez toutes les vis à 60% d'abord puis serrez à 100%.
 Primero apriete los tornillos al 60% y después al 100%.
 Stringere le viti dapprima al 60% e successivamente completamente al 100%.

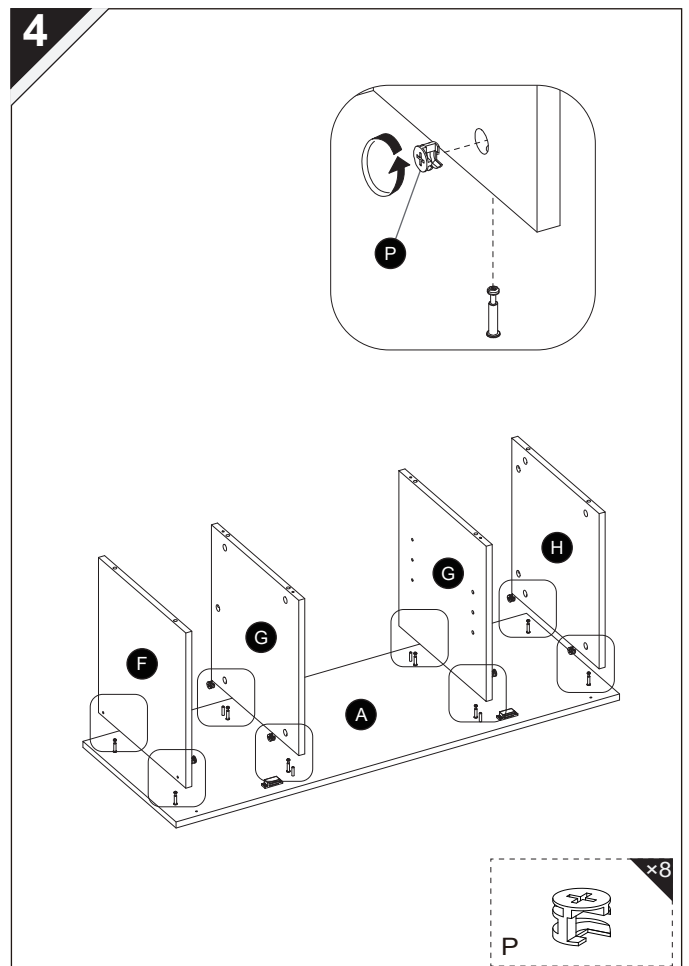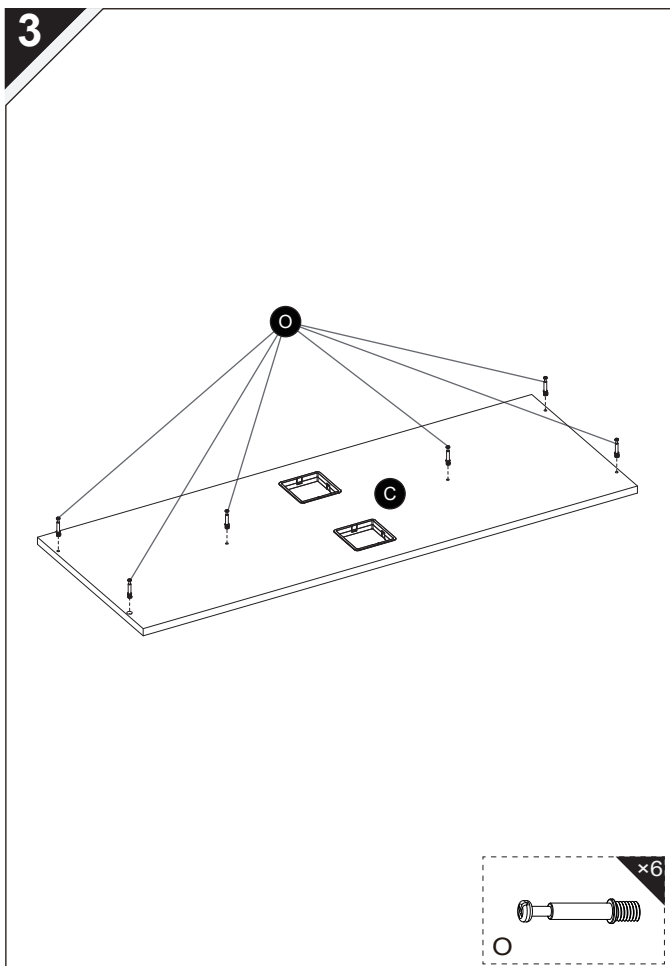
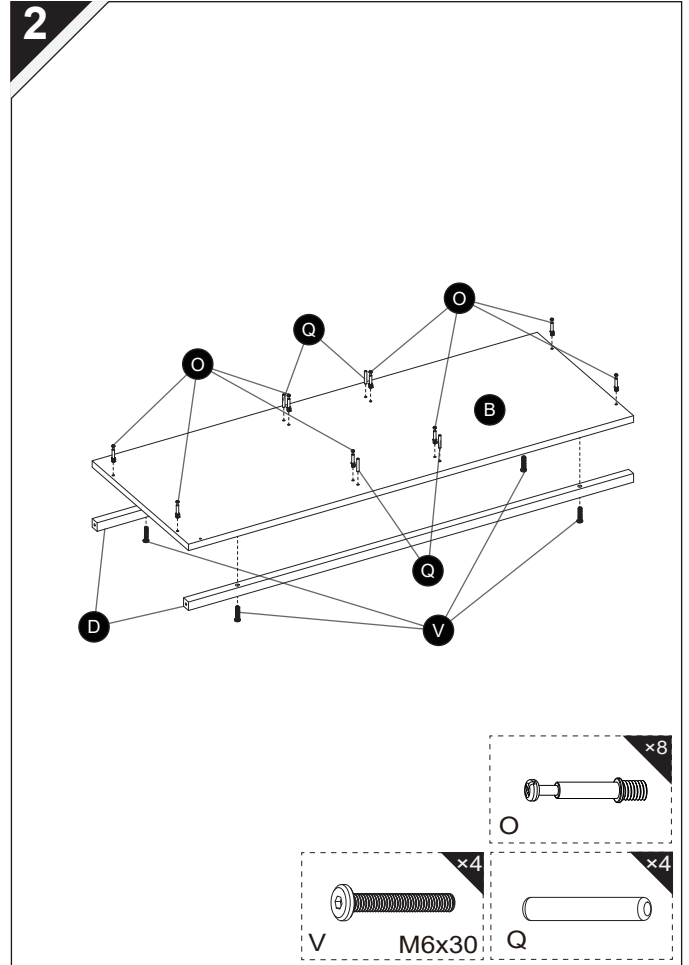
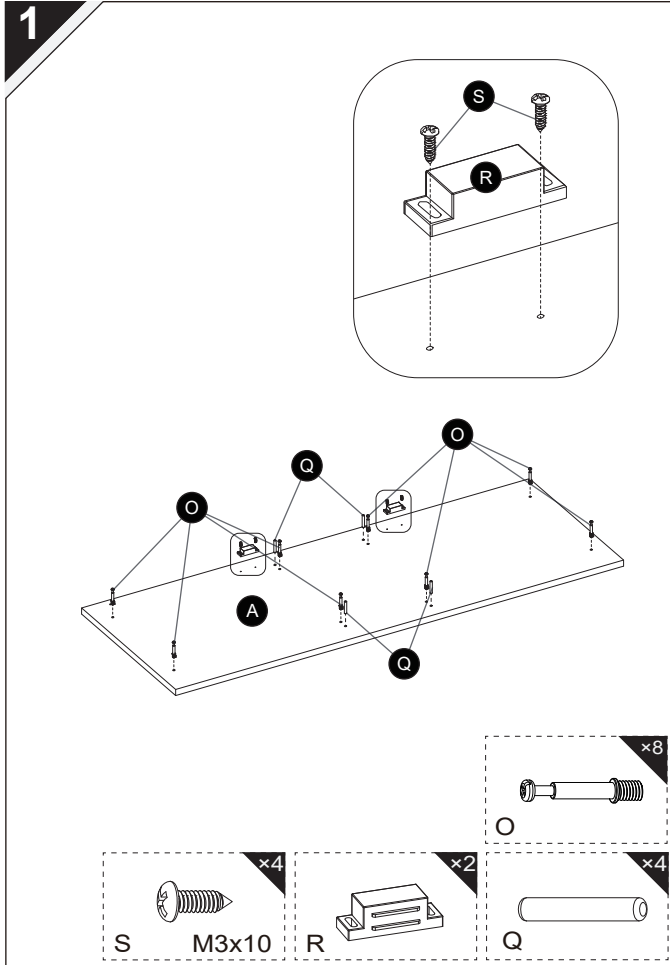




Warning!
Warnung!
Attention !
Atención!
Avvertimento!



Tight all the screws to 60% first then tight to 100%.
Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
Serrez toutes les vis à 60% d'abord puis serrez à 100%.
Primero apriete los tornillos al 60% y después al 100%.
Stringere le viti dapprima al 60% e successivamente completamente al 100%.

5

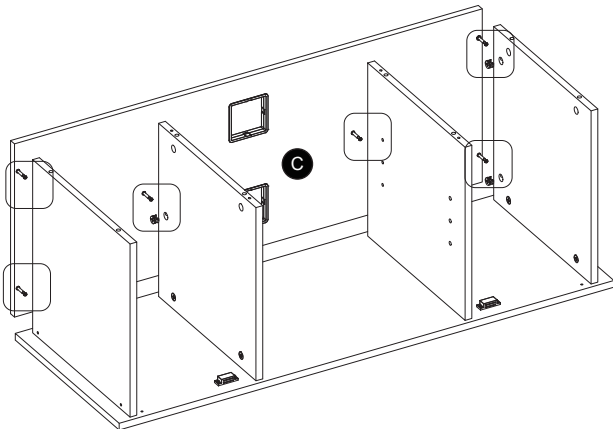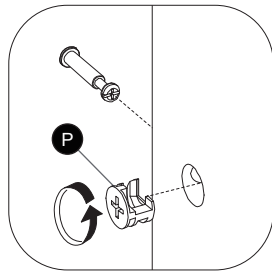



x6

6

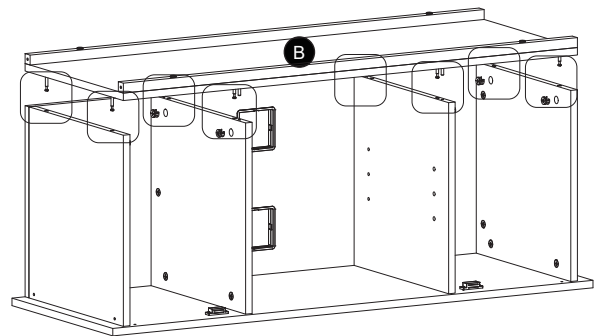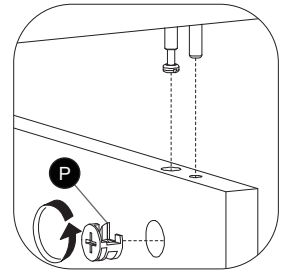

x8

7

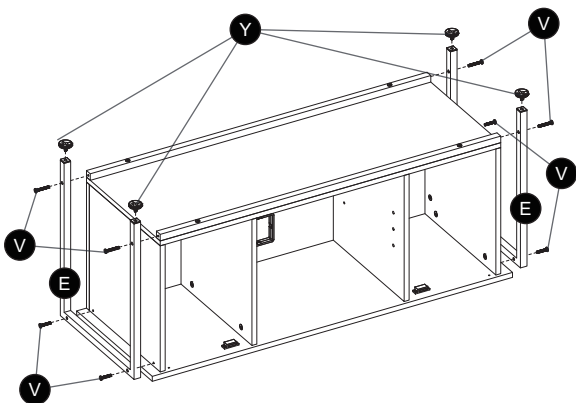

x4



Y

V

x8

M6x30

8

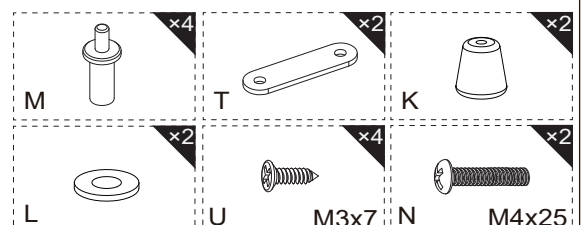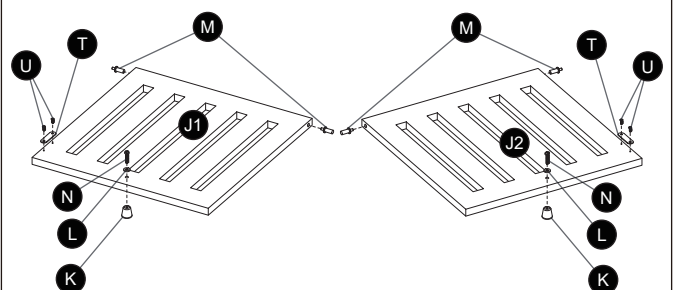

x4

M

T

K

x2

L

U

N

x2

M3x7

x2




M4x25



Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
Serrez toutes les vis à 60% d'abord puis serrez à 100%.
Primero apriete los tornillos al 60% y después al 100%.
Stringere le viti dapprima al 60% e successivamente completamente al 100%.

9

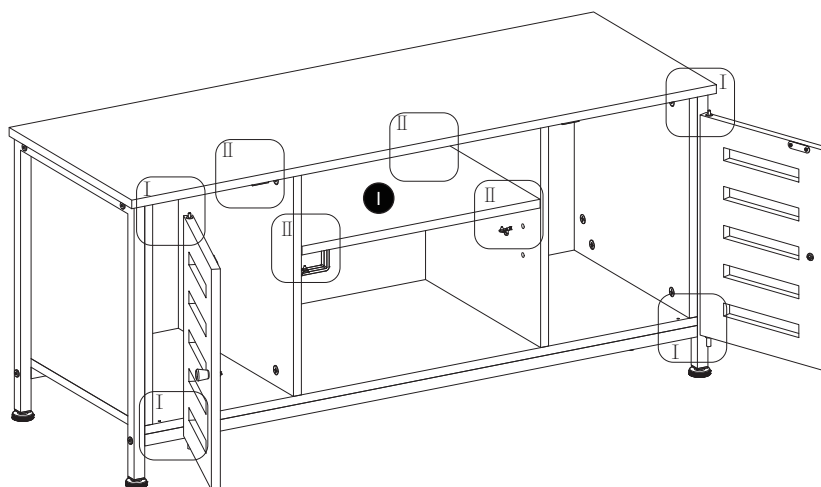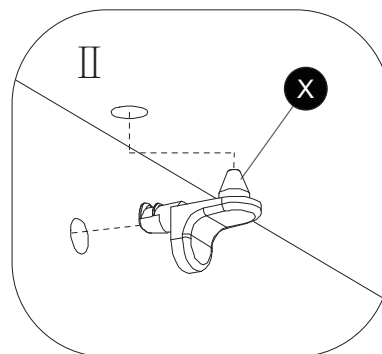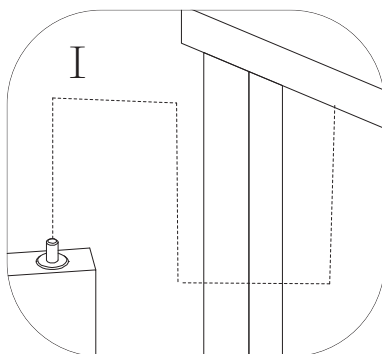

10

