
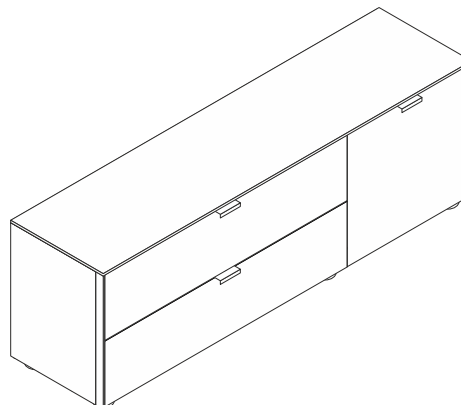


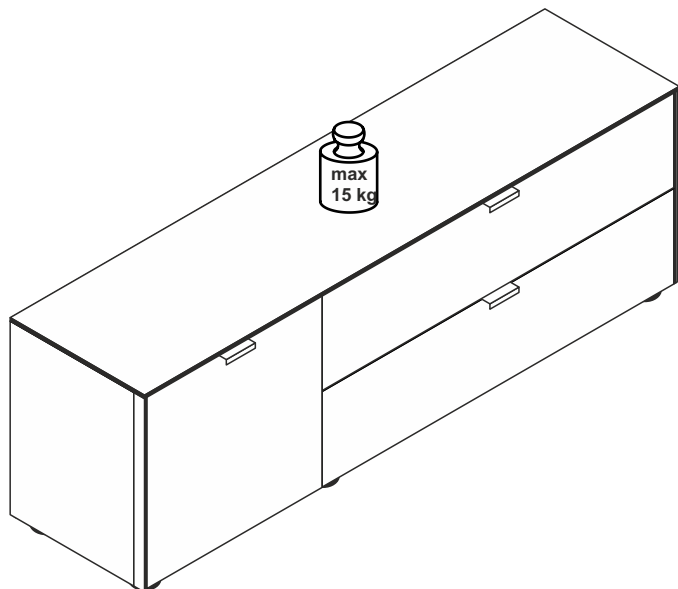

Das Lowboard kann spiegelbildlich montiert werden.
Diese Anleitung zeigt die Ausführung mit der Tür auf der
linken Seite.

Art.Nr. : **0772-LB_111**
Lowboard

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

			Colli 1/3 : (13) (14) (15) (16) (17) (18) (19) (20) (21) (22) (23) (24) Colli 2/3 : (1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11) (12) Beutel 1/5, 2/5, 3/5, 4/5, 5/5 Colli 3/3 : (25)	

Beutel 1/5

1-10		6,3x50	1-30		3x16	1-70		3x30	1-80		3,5x13	1-90		3,5x20	1-122		4x13
2x			45x			2x			12x			4x			2x		
1-190		M4x20	1-200		6,3x13	1-349		M4	2-08		h=10mm	2-10		h=12mm	2-20		
12x			12x			12x			4x			18x			22x		
2-160			 L = 20 mm														
4x																	

Beutel 2/5

Beutel 3/5

1-123		2-173	 	3-07		3-11		3-42	
12x	4x15	6x		2x		5x		5x	8er

Beutel 4/5

2-103		5-01		5-130		5-185	
12x	8x30	10x		2x		4x	
5-260		5-265		5-280		6-425	
1x		1x	Pflegeanweisung	1x		3x	


Beutel 5/5

1-36	
4x	


4x40




Colli 1/3




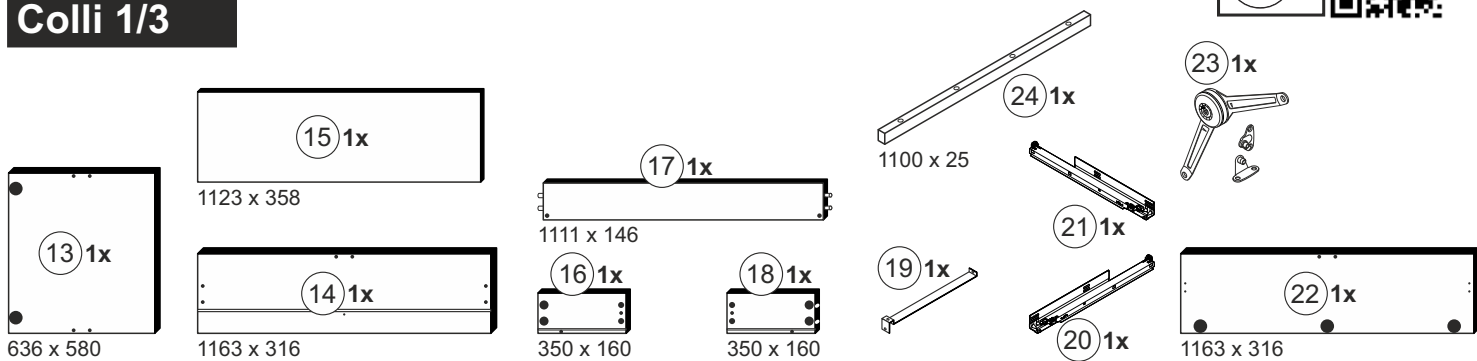


Colli 2/3

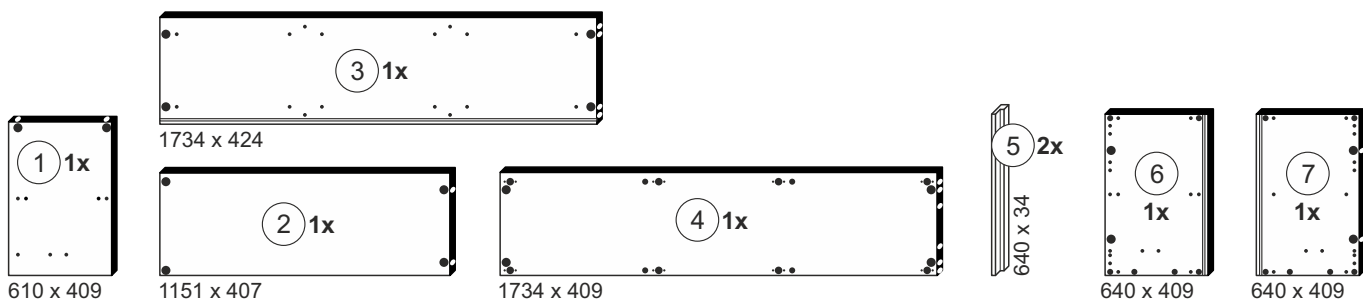

Colli 3/3

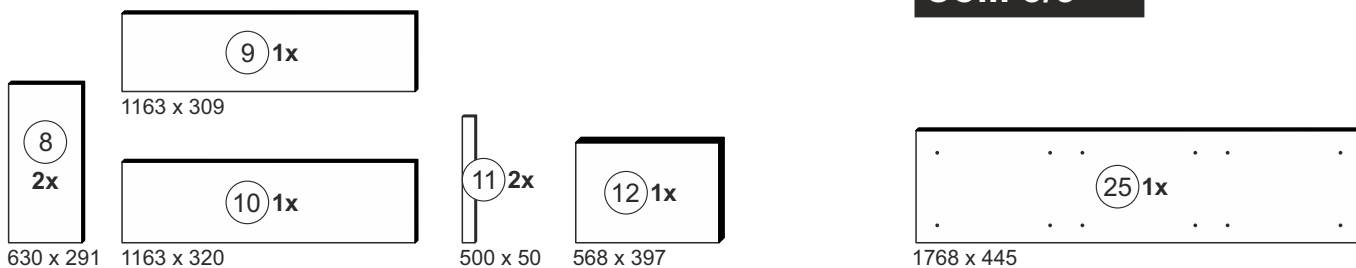

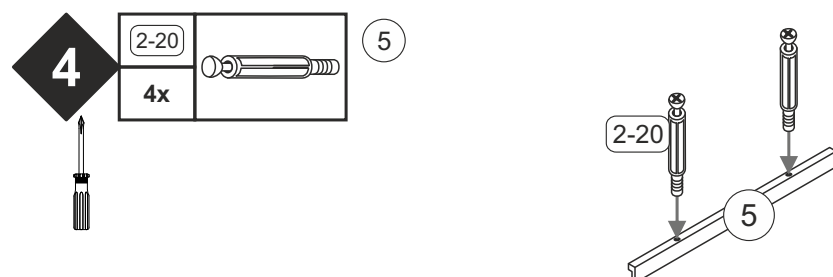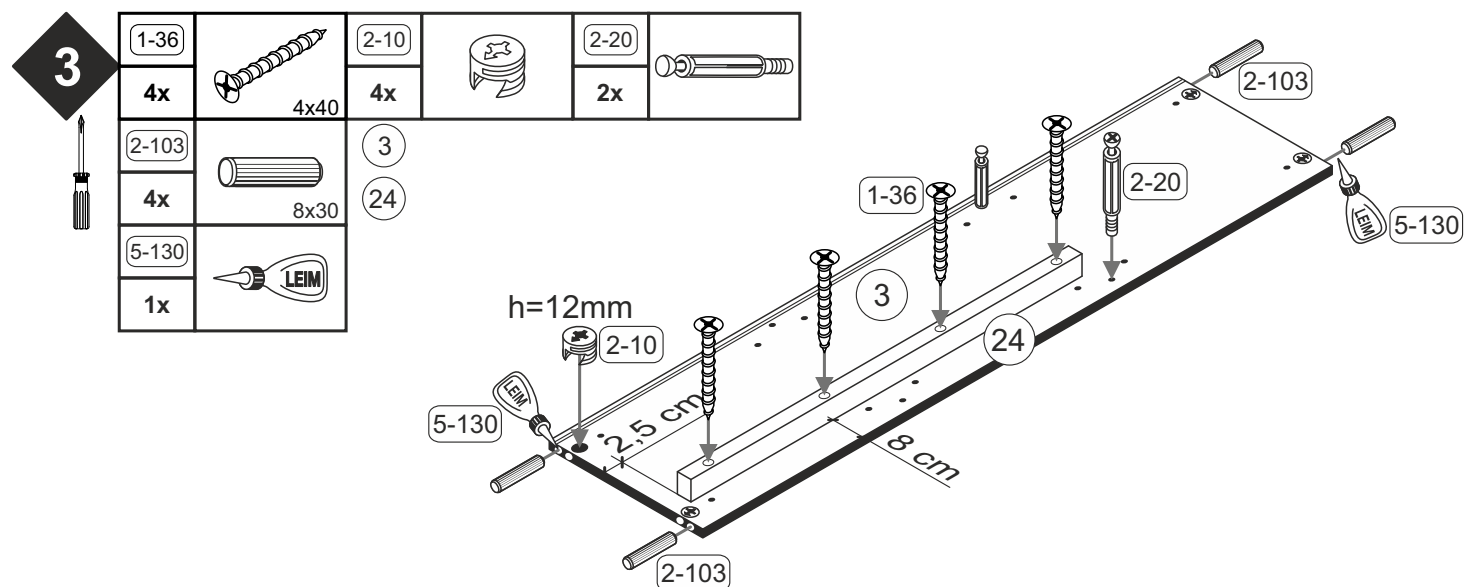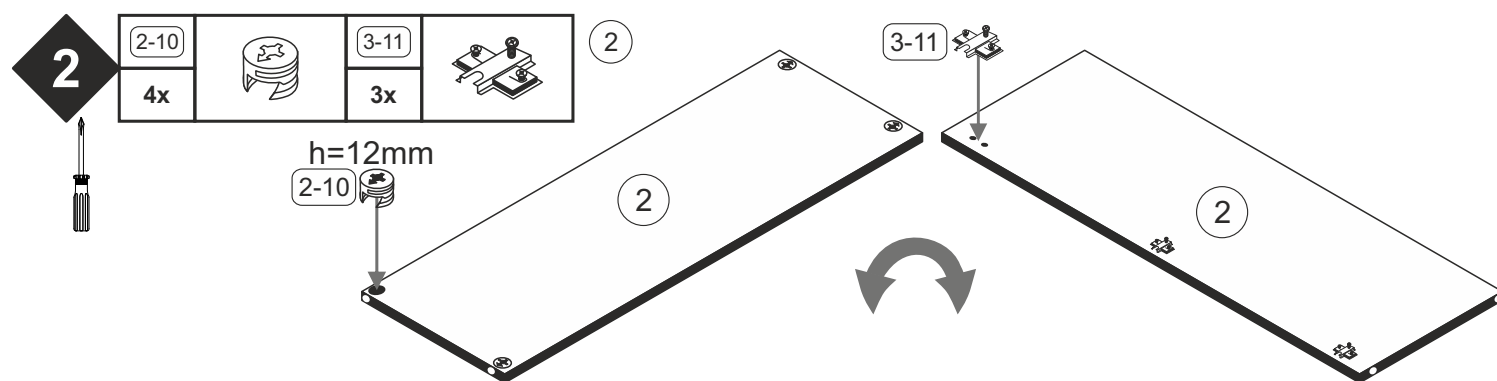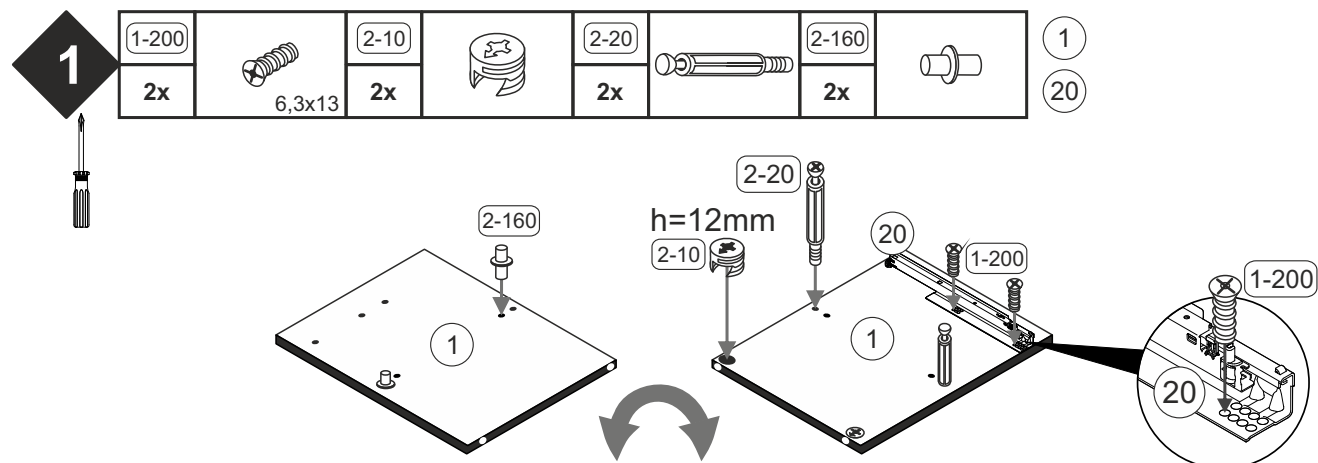

CHICAGO

5




2-10		2-103	
4x		8x	8x30
5-130		4	
1x			

6

2-10		2-20		3-11		2-160	
2x		4x		2x		2x	

7

1-200		2-10		2-20	
2x	6,3x13	2x		6x	

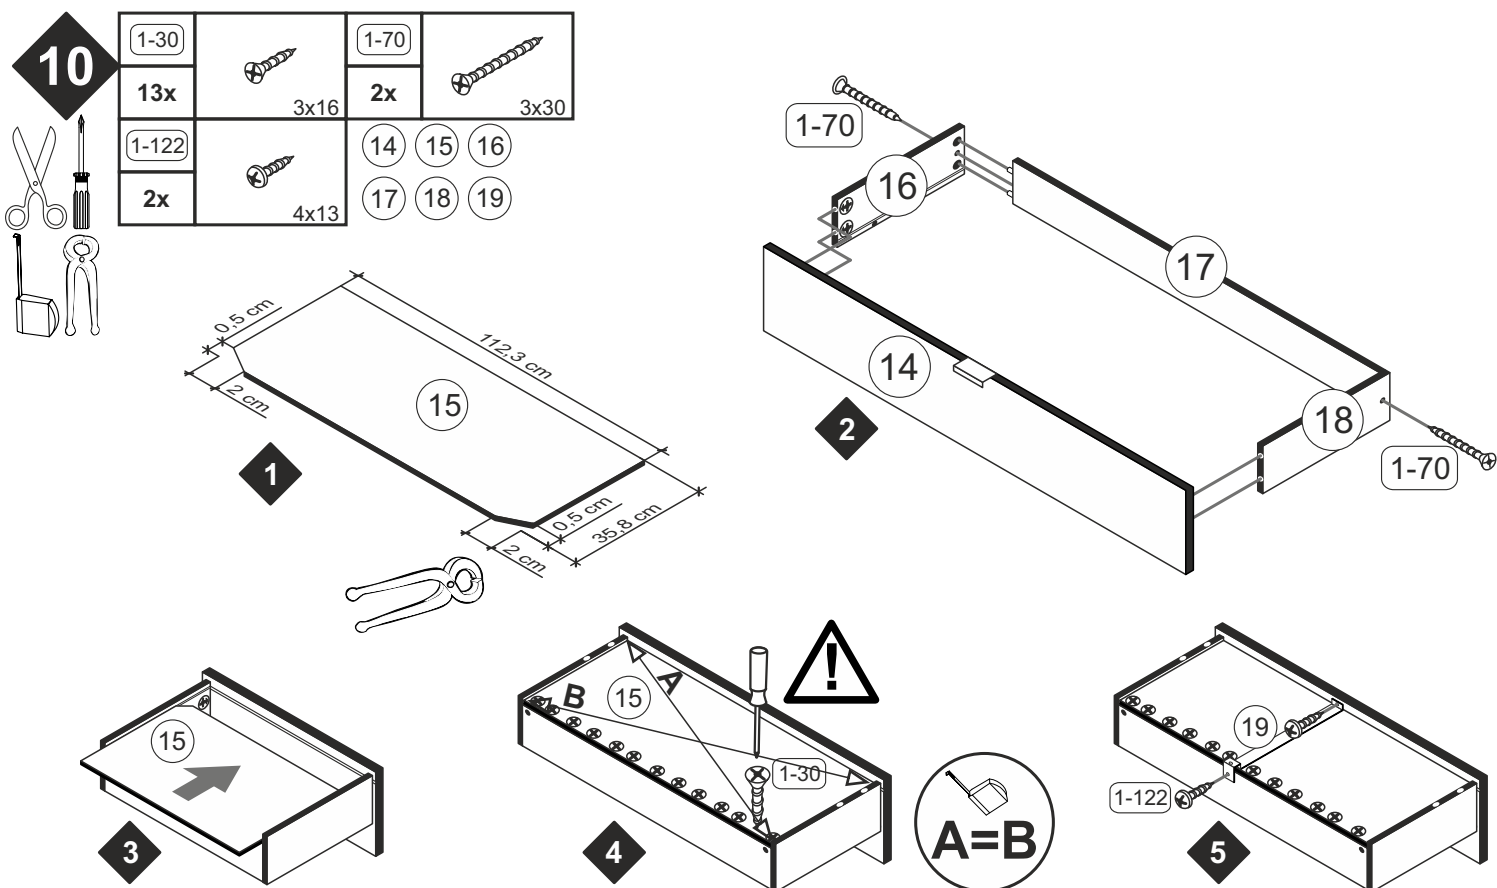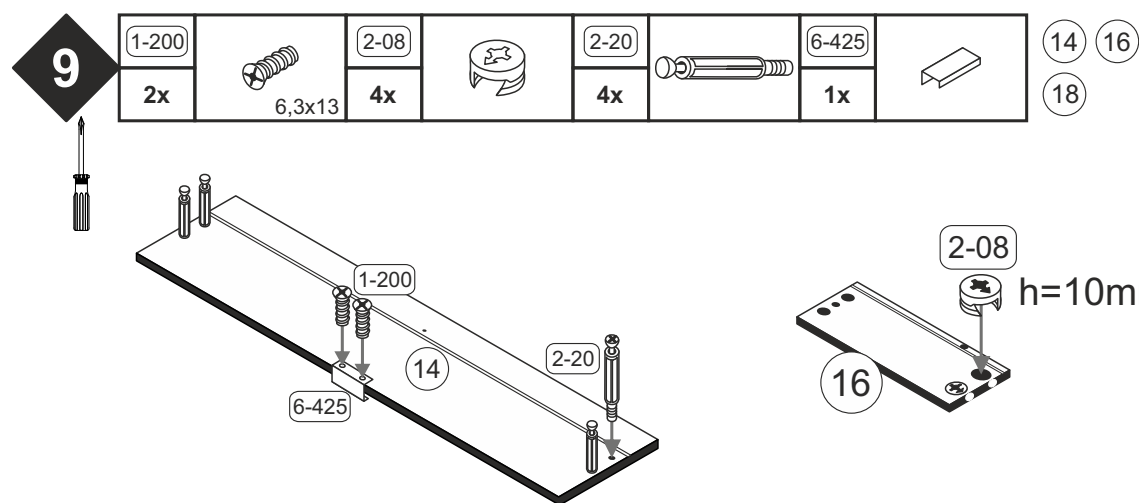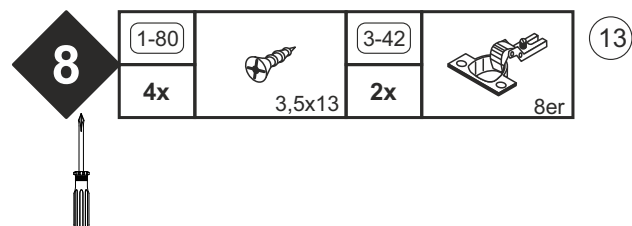


CHICAGO

11



1-80		1-200	
6x	3,5x13	2x	6,3x13
3-42		6-425	
3x	8er	1x	



22

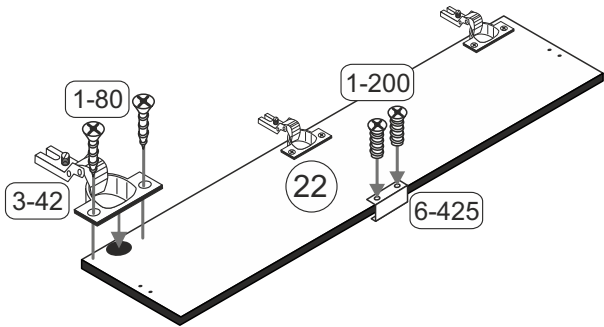




12






1-10		5-130	
2x	6,3x50	1x	LEIM

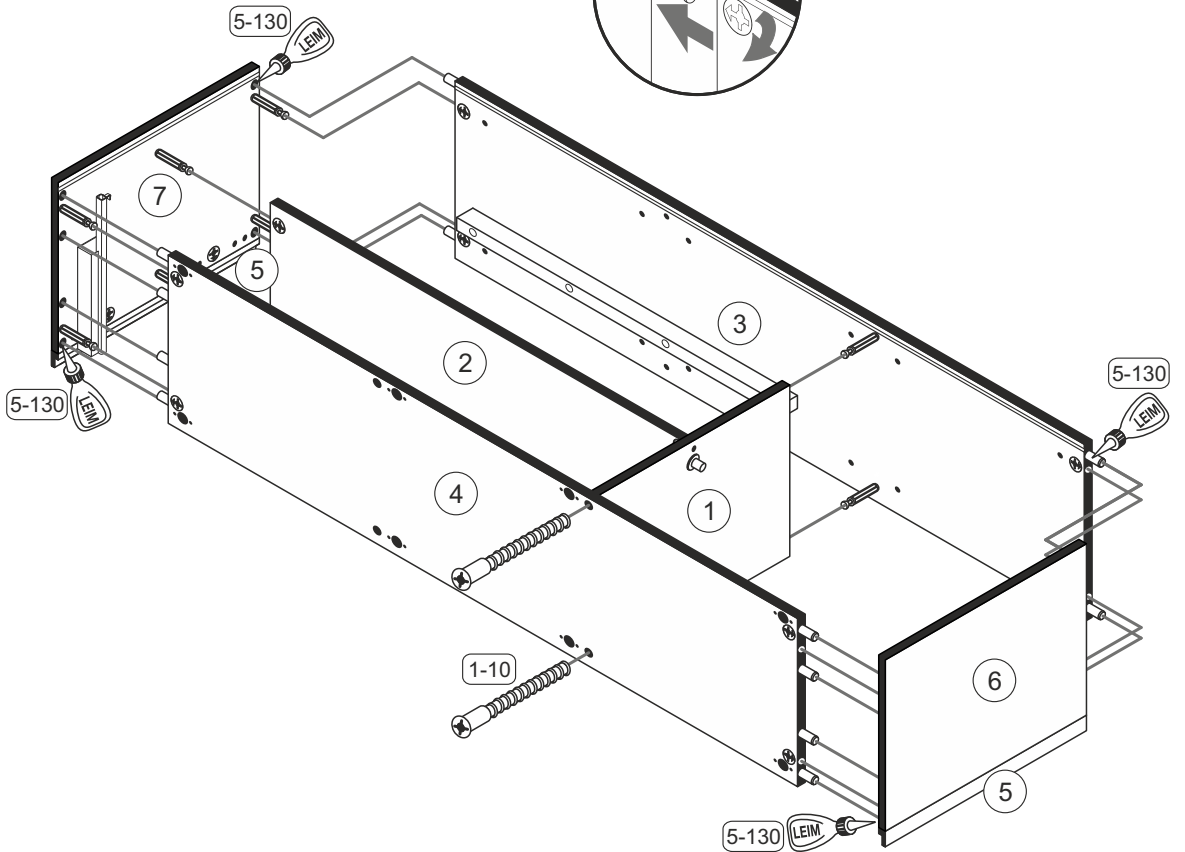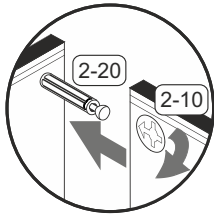

13	1-30		1-90	
	32x	3x16	4x	3,5x20
	1-123			
	12x	4x15		
	5-185			
	4x			
	2-173			
	6x			

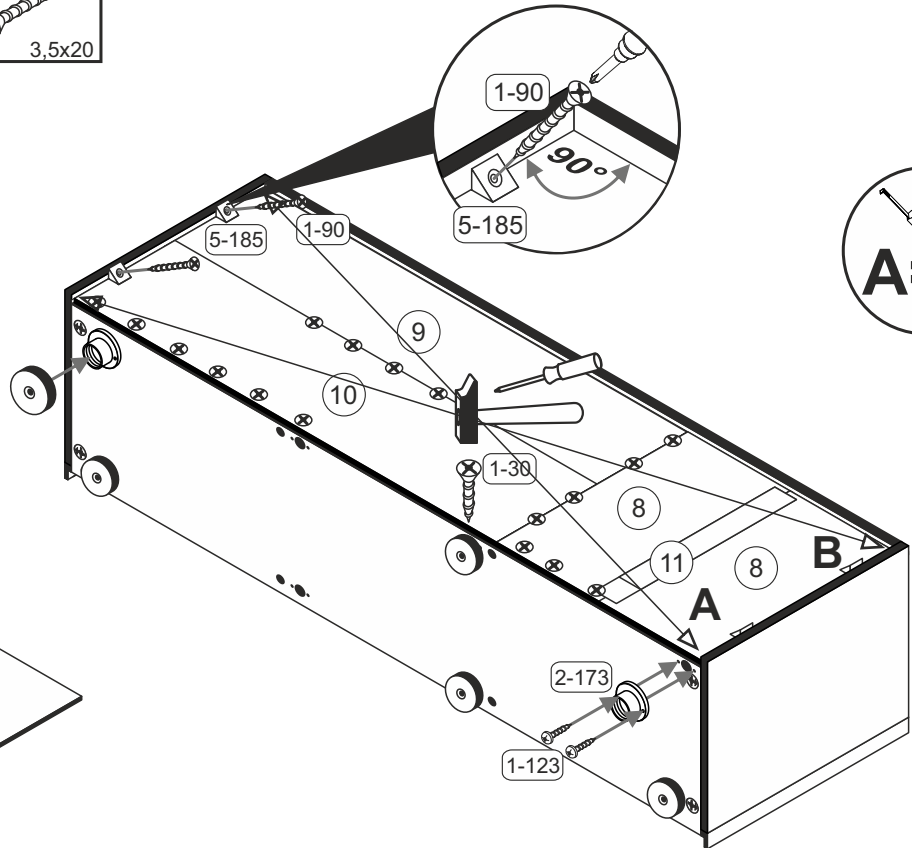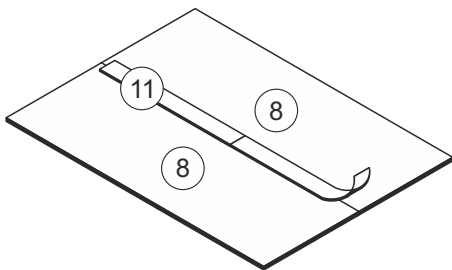


12	5-01		5-280	
	10x		1x	

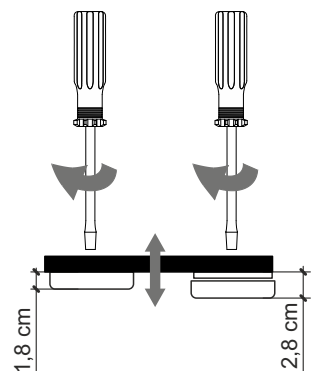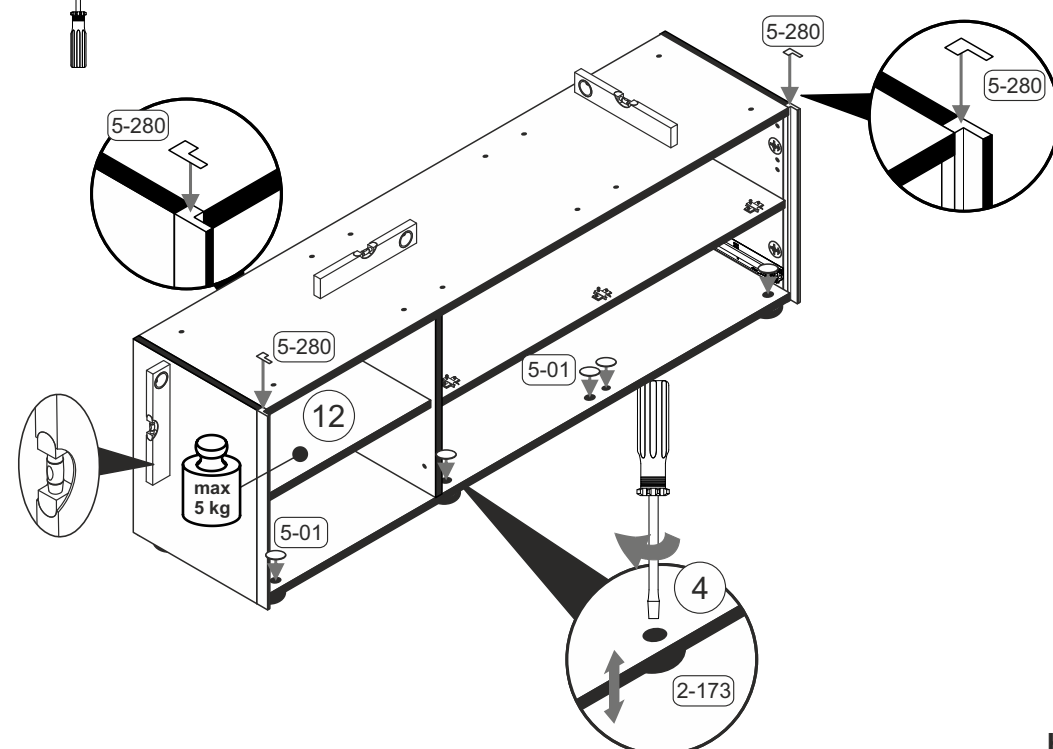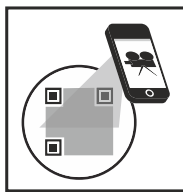


Höhenverstellung der Möbelfüße

13



Einbau des Schubkastens

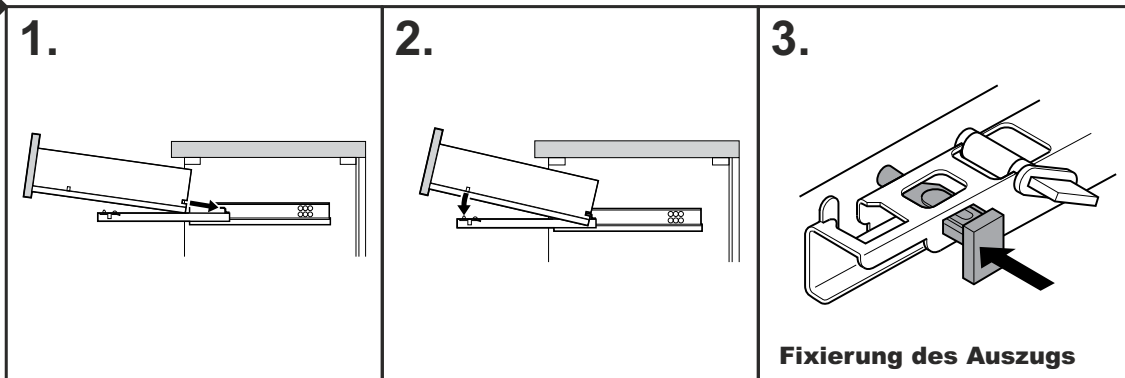


Ausbau des Schubkastens

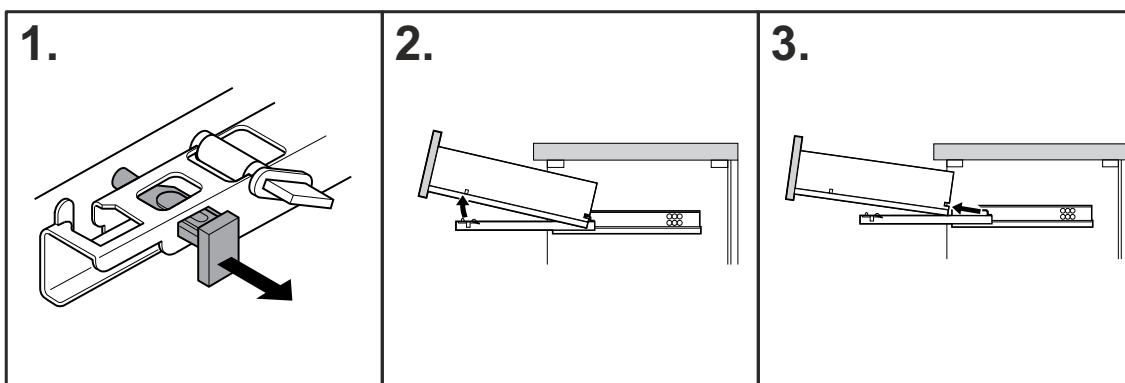


Höhenverstellung des Schubkastens

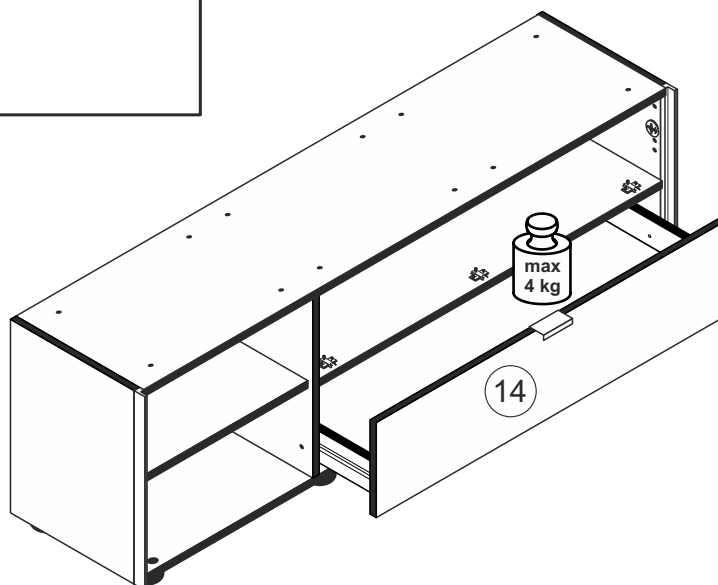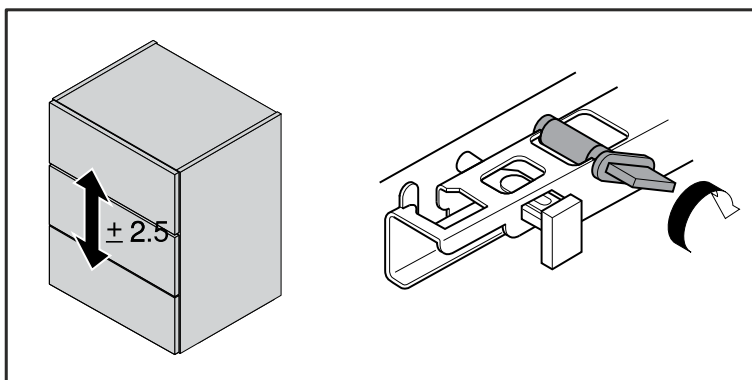


Montage der Holzoberplatte

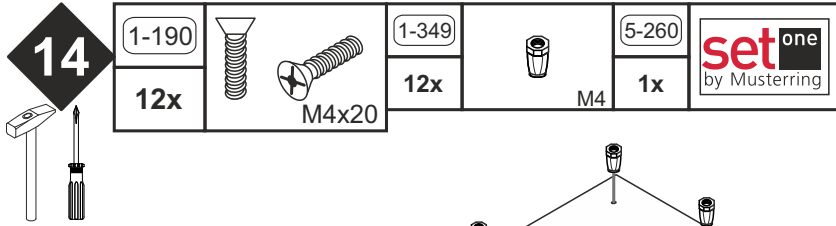

Die Schrauben M4x20 (1-190) müssen mit der Hand eingedreht werden.

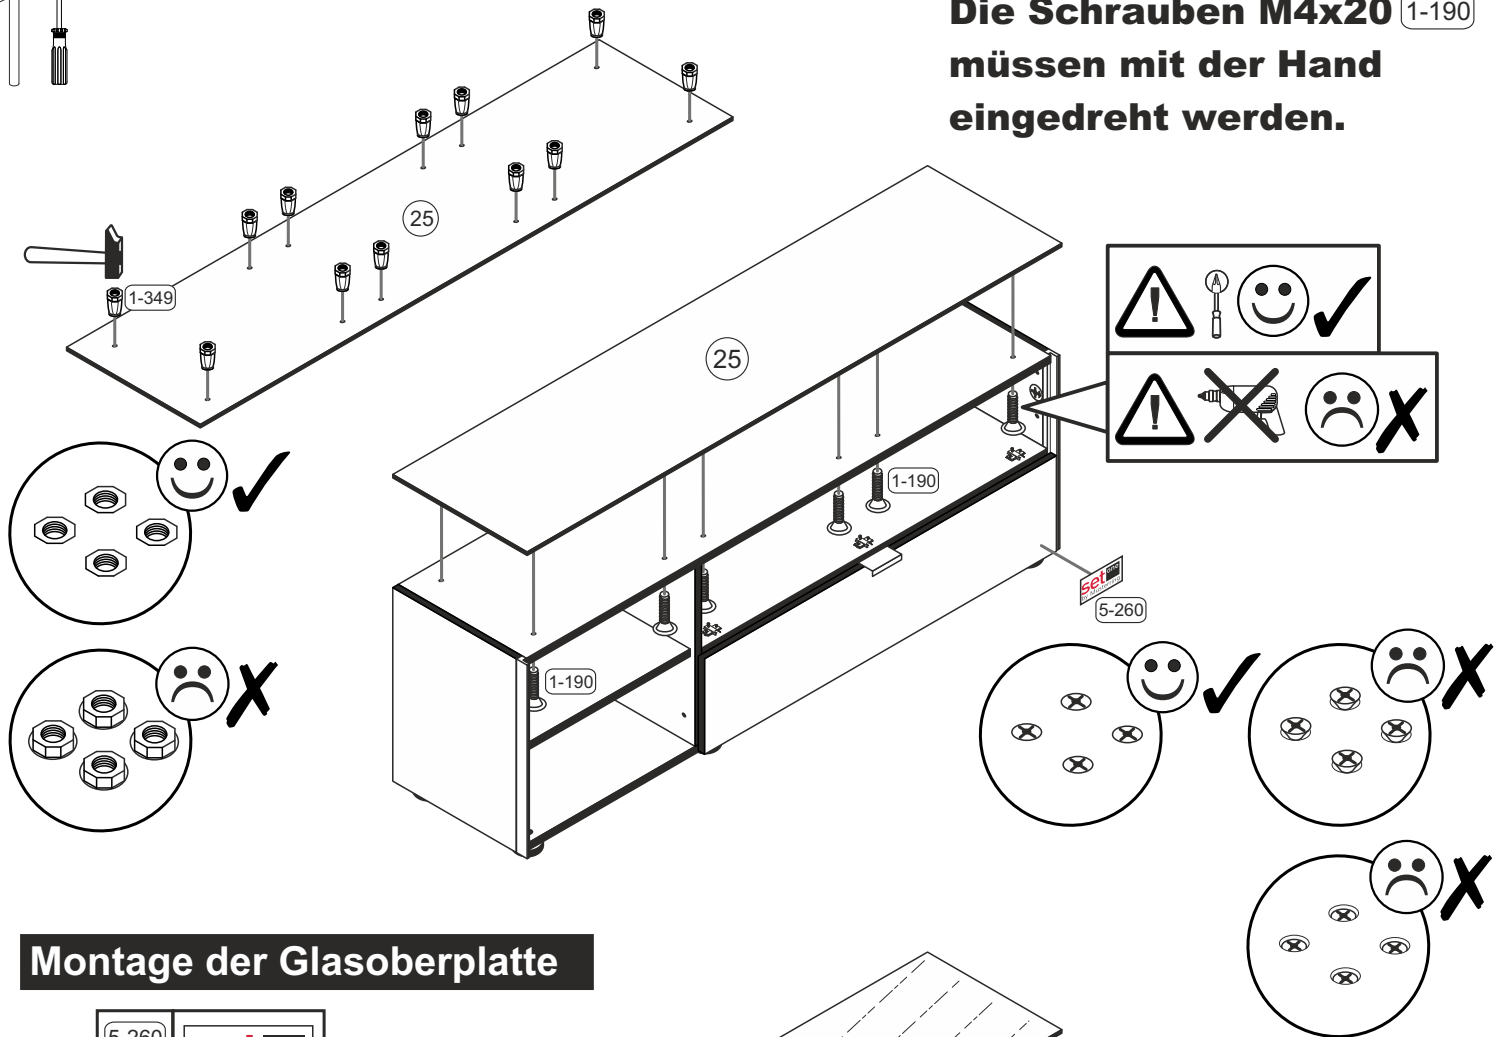


Montage der Glasoberplatte


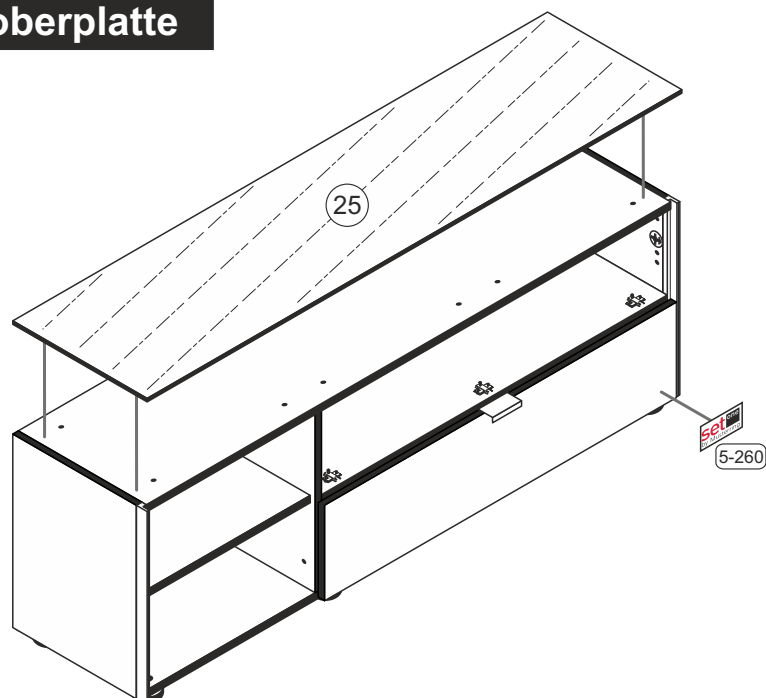






1-80	1-200	3-07	6-425
2x	4x	2x	1x
3,5x13	6,3x13		

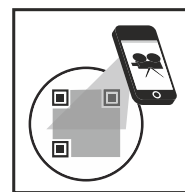

Montage der Türdämpfung

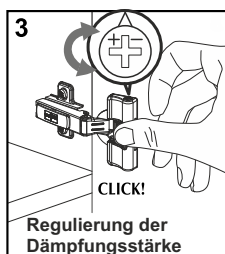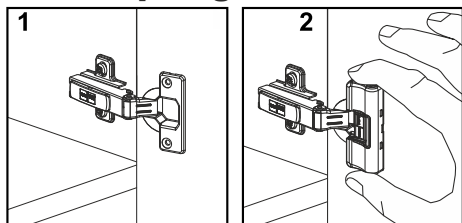

Stütze unten ⁽²³⁾ überdrehen

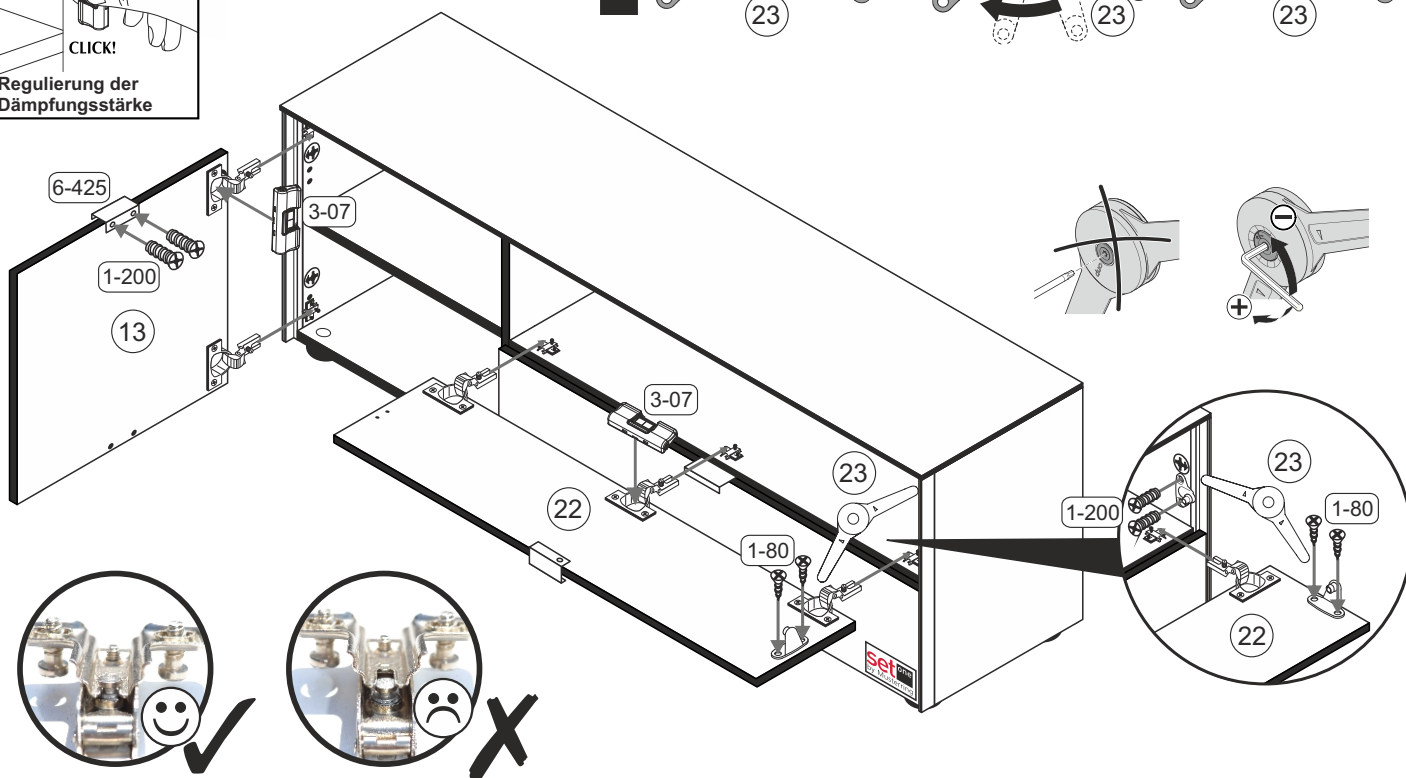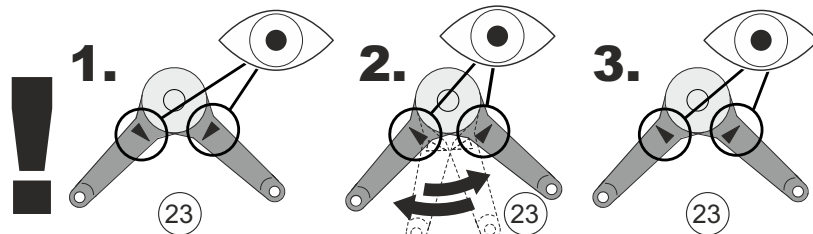

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Vyrovnajte dvířka (seřid'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

