

20 MIN



2 X



(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE


MODEL

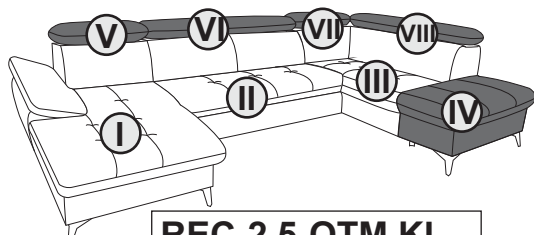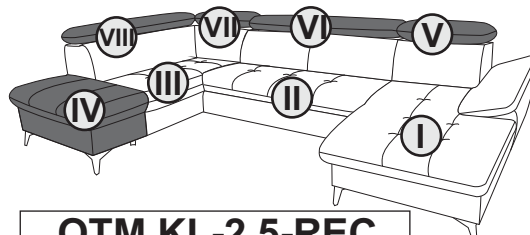"HUDSON"**REC-2.5-OTM KL****OTM KL-2.5-REC**


1/4

A SKILL H120 x7	C CILINDRIC H125 x4	D CILINDRIC H115 x2	H x1	I 6MM x1	B x21	E M8X60 x3	F x3
hardware bag/sachet materiel/zubehorbeutel/sachetti materiale/bolsa de materiales/worek materialowy	pre-assembled/ pre assemble/vormontiert/premontato/wstępnie/zamontowane						


1

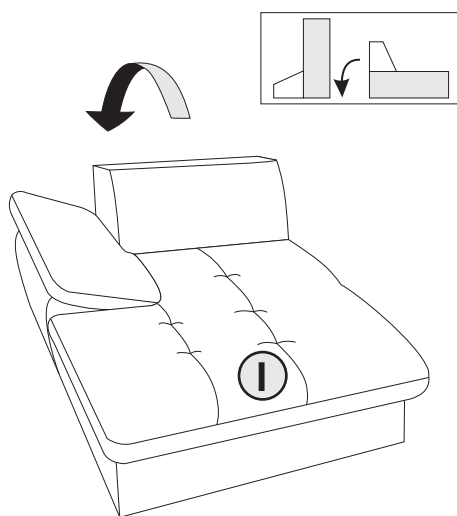

2

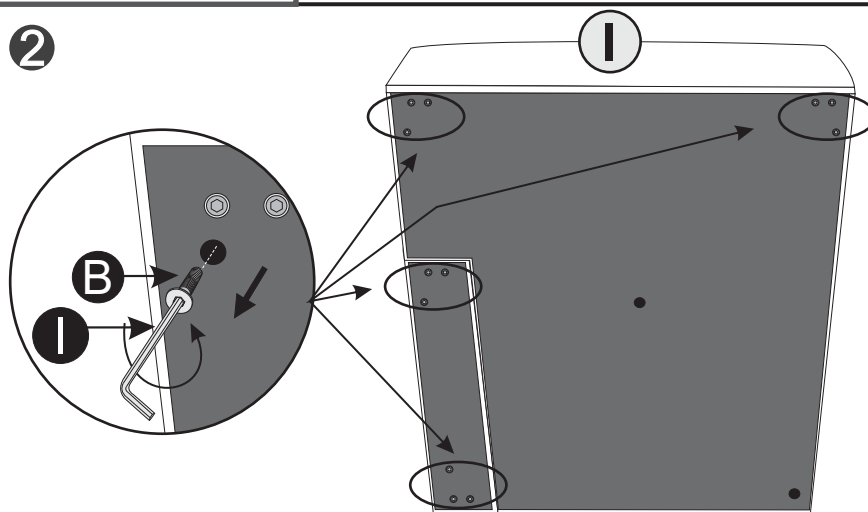

3

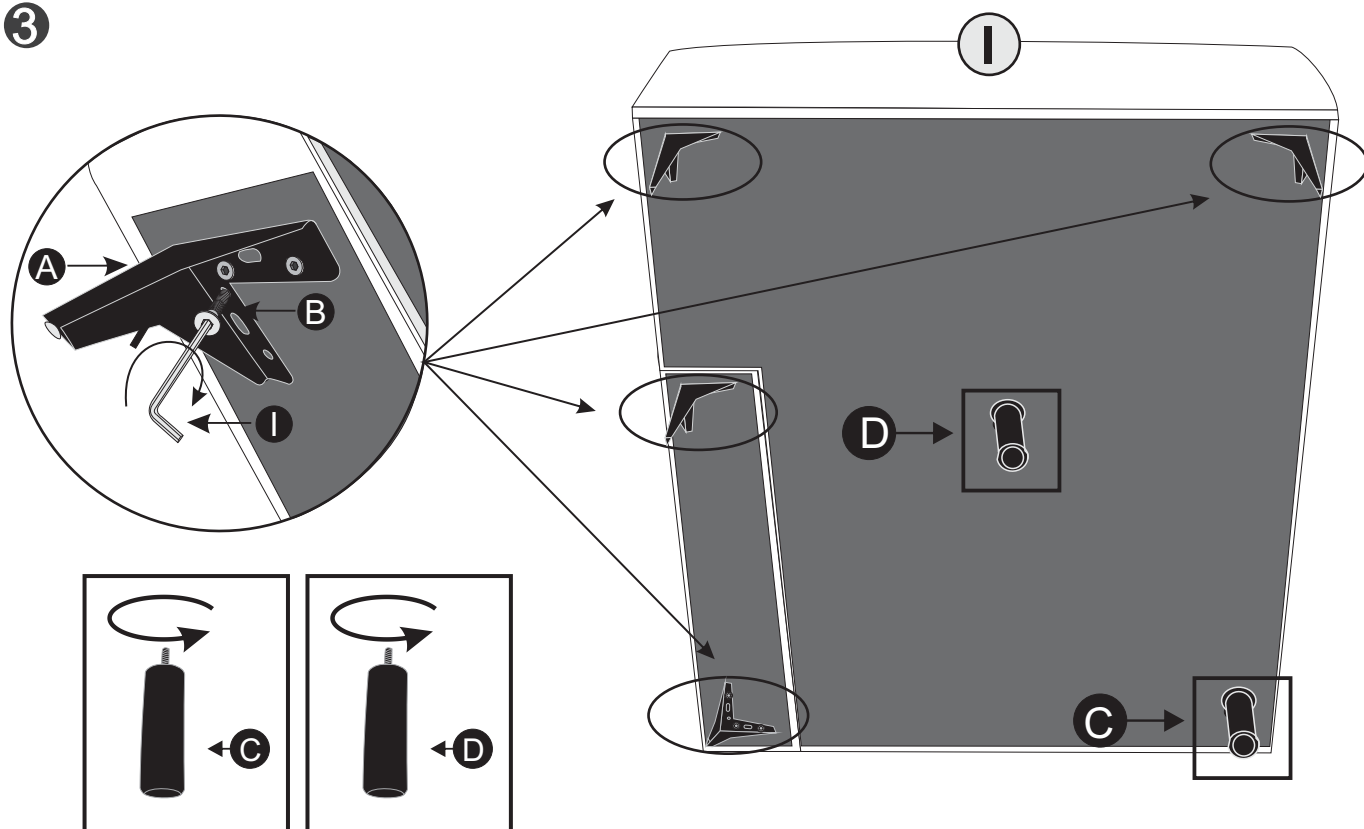

20 MIN


2 X




(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE

MODEL "HUDSON"

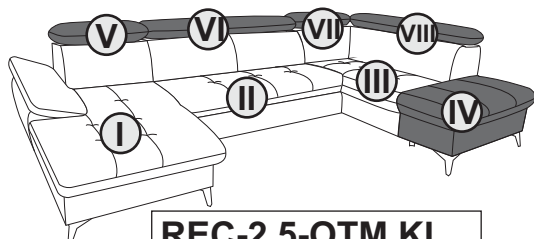

REC-2.5-OTM KL

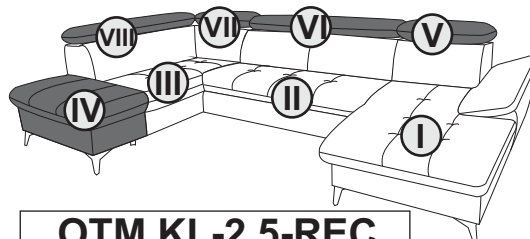


OTM KL-2.5-REC


2/4

A SKILL H120 x7	C CILINDRIC H125 x4	D CILINDRIC H115 x2	H x1	I 6MM x1	B x21	E M8X60 x3	F x3	
hardware bag/sachet materiel/zubehorbeutel/sachetti materiale/bolsa de materiales/worek materialowy	pre-assembled/ pre assemble/vormontiert/premontato/wstępnie/zamontowane							


4

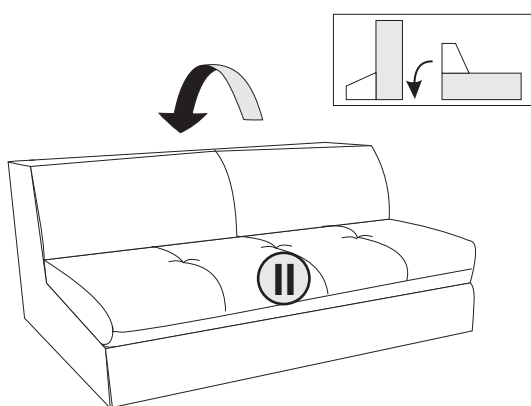


5

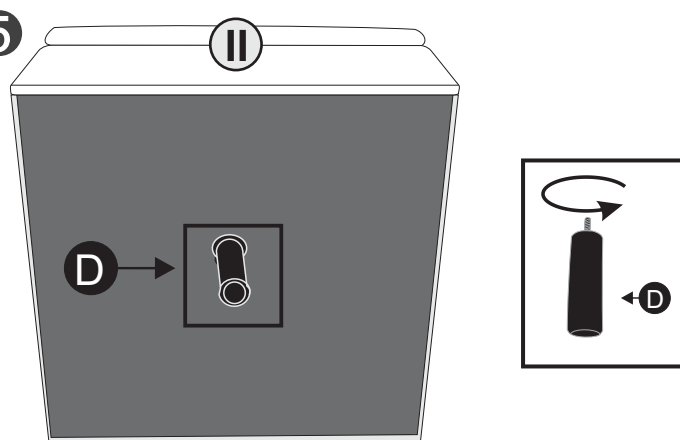


6

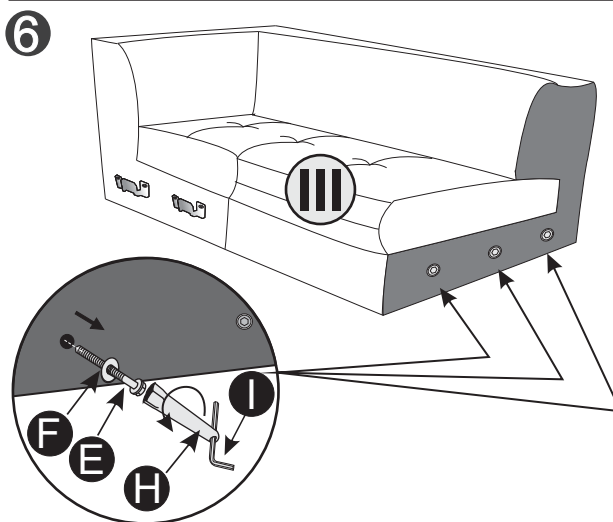


7

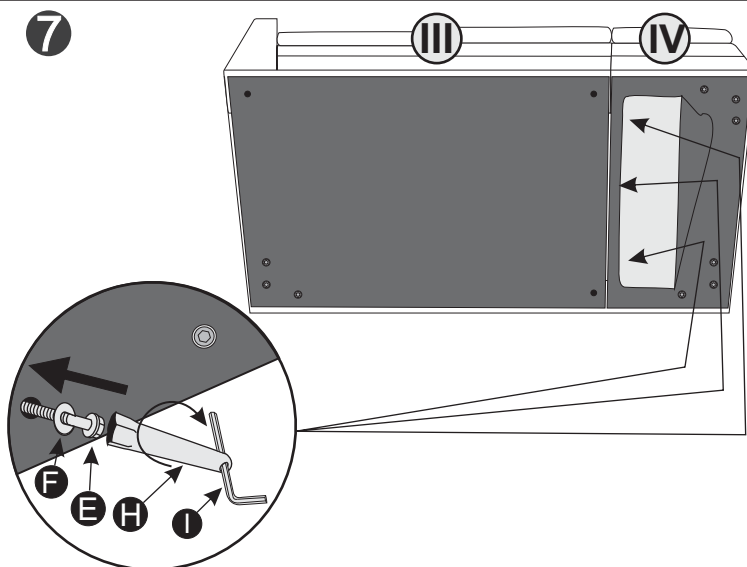

8

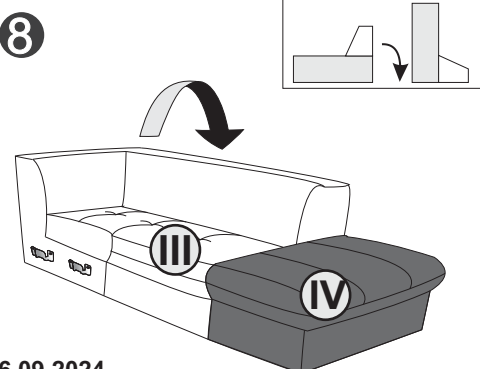

9

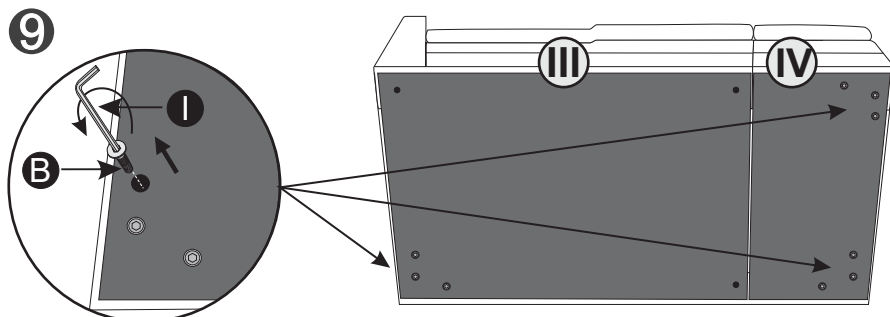

101-06.09.2024

20 MIN

2 X

D

AUFBAUANLEITUNG

NL

HANDLEIDING VOOR DE MONTAGE

TR

MONTAJ TALIMATI

RO

INSTRUCTIUNI DE ASAMBLARE

F

INSTRUCTION D'ASSEMBLAGE

CZ

POKYNY K MONTÁŽI

BG

ИНСТРУКЦИИ ЗА МОНТАЖ

HR

UPUTSTVA ZA MONTAŽU

GB

ASSEMBLY INSTRUCTIONS

PL

INSTRUKCJA MONTAŻU

RU

Инструкция по монтажу

I

PROCEDURA DI ASSEMBLAGGIO

SK

POKYNY K MONTÁŽI

HU

ÖSSZESZERELÉSI ÚTMUTATÓ

SLO

NAVODILA ZA MONTAŽO

S

MONTERINGSANVISNING


LT

DIEGIMO INSTRUKCIJOS

E

INSTRUCCIONES DE MONTAJE

MODEL "HUDSON"

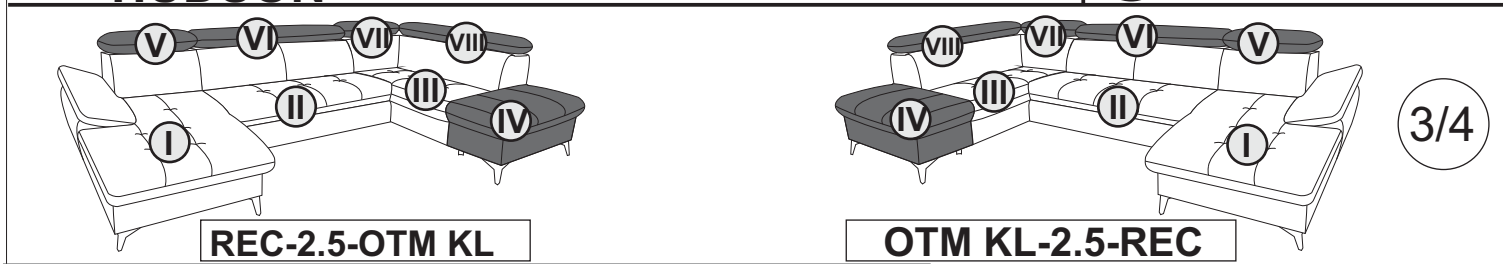

A SKILL H120 x7	C CILINDRIC H125 x4	D CILINDRIC H115 x2	H x1	I 6MM x1	B x21	E M8X60 x3	F x3
--	--	--	----------------------------	---	-----------------------------	---	----------------------------

hardware bag/sachet materiel/zubehorbeutel/sachetti materiale/bolsa de materiales/worek materialowy

pre-assembled/ pre assemble/vormontiert/premontato/wstępnie/zamontowane

