



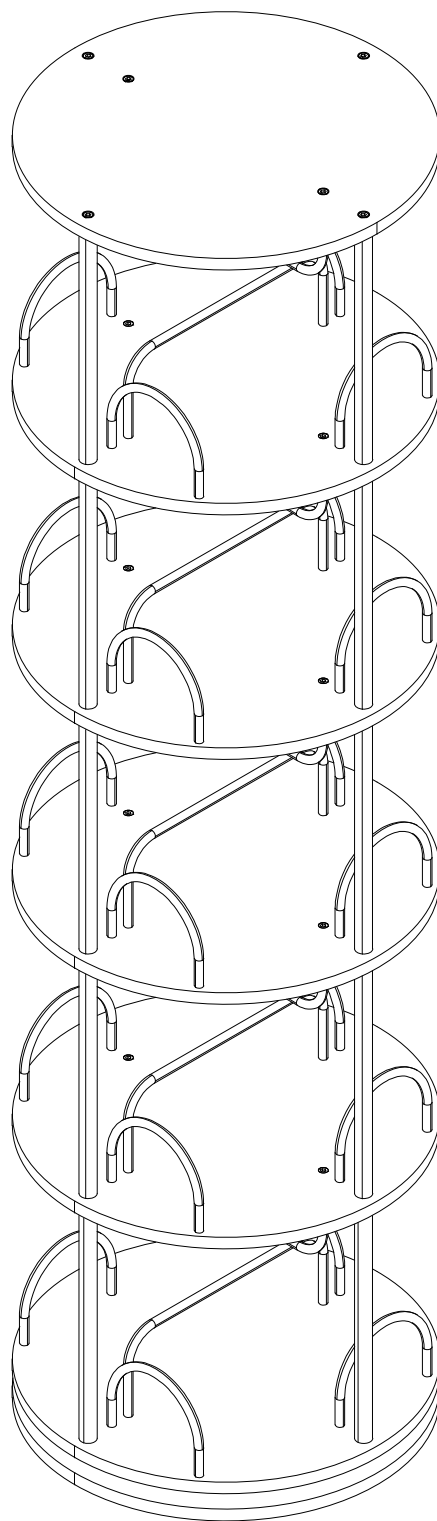
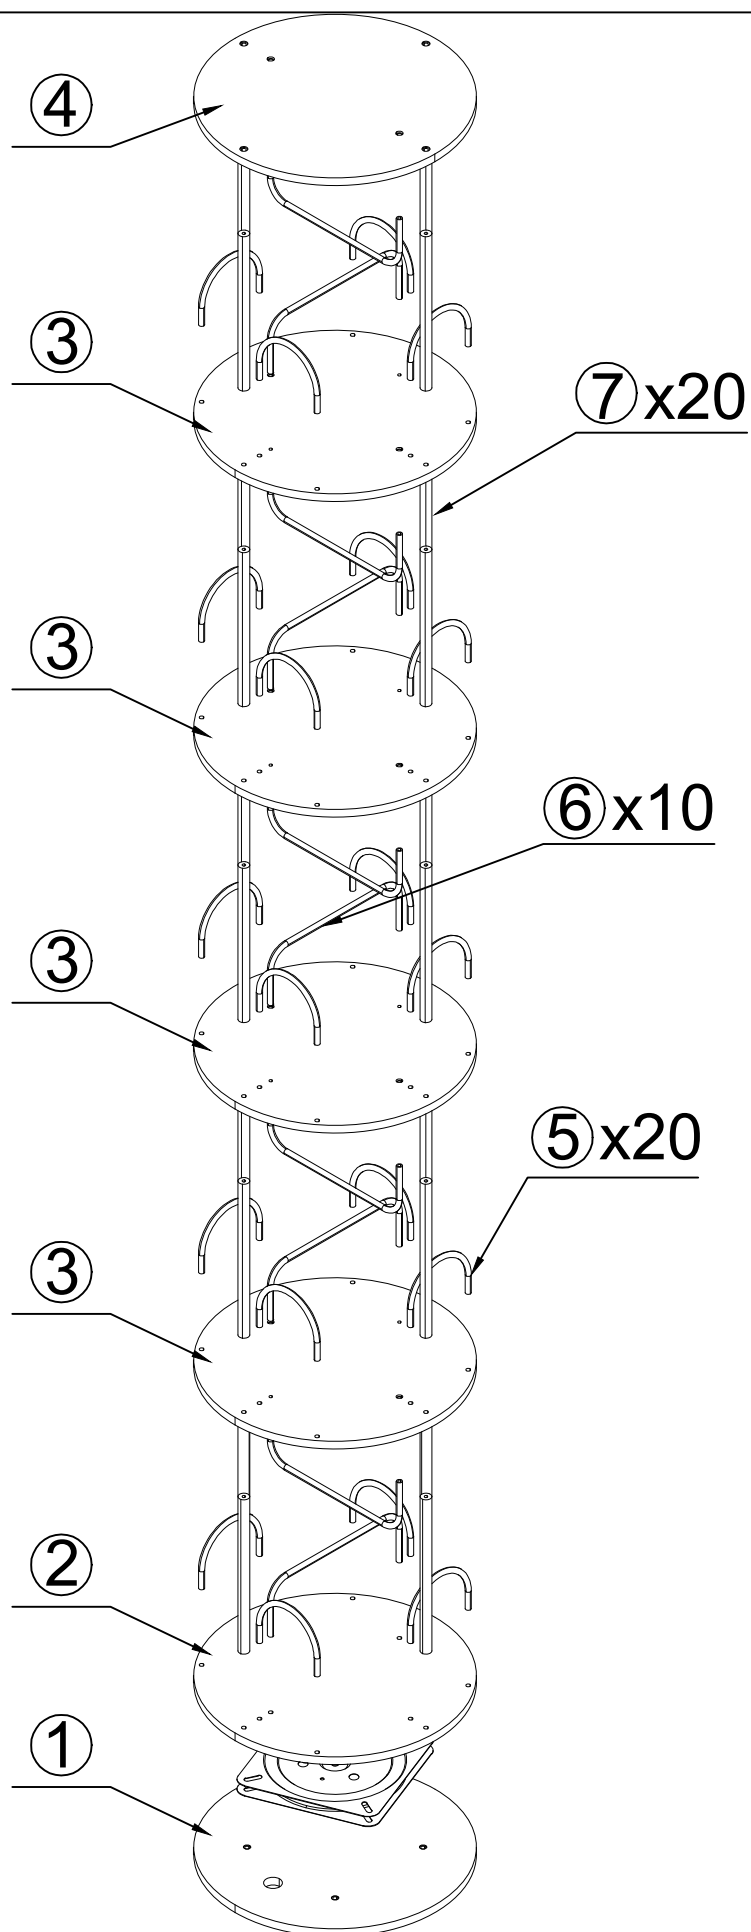
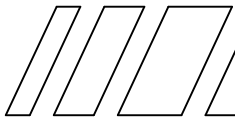
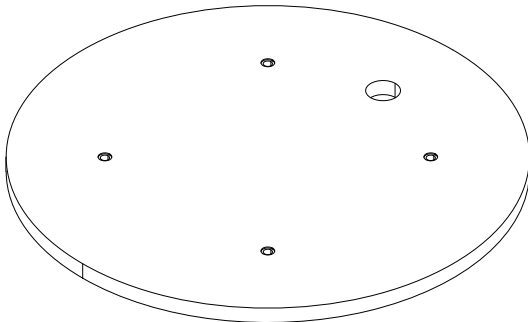
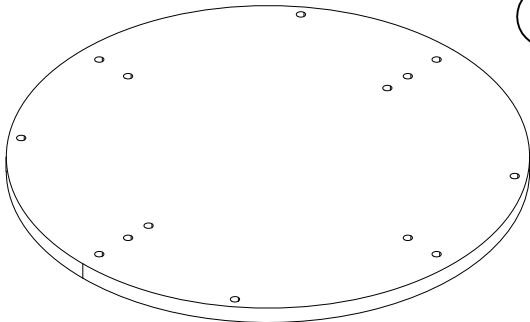
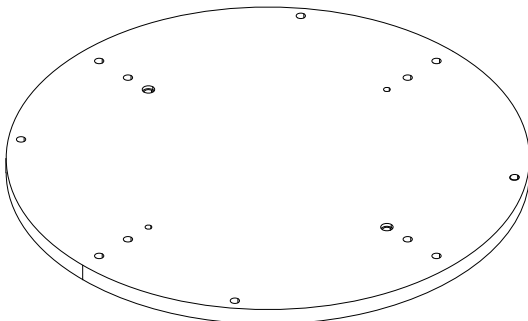
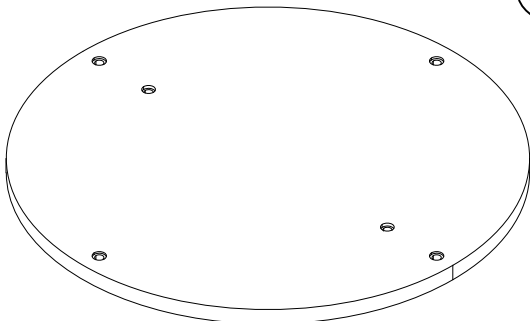
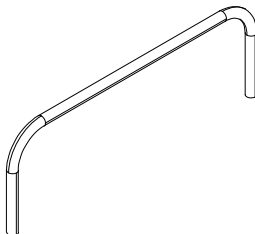



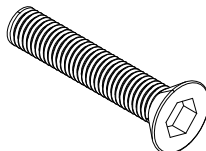

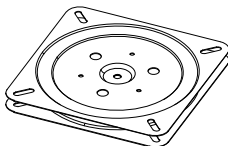




 ①		 ②							
 ③ x4		 ④							
 ⑤ x20		 ⑥ x10		 ⑦ x20					
Ⓐ M6x12		Ⓑ M6x30		Ⓒ M6(10+60)		Ⓓ 10寸		Ⓔ ϕ 30*3	
 8 PCS		 68 PCS		 16 PCS		 1 PCS		 4 PCS	
								4#	
									

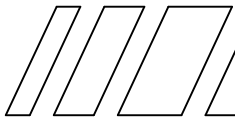

Ⓔ ϕ 30*3 Ⓓ 10寸 Ⓐ M6x12



4 PCS




1 PCS



4 PCS


Ⓔ x4

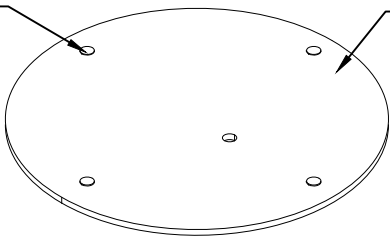


①

Ⓐ x4

Ⓓ

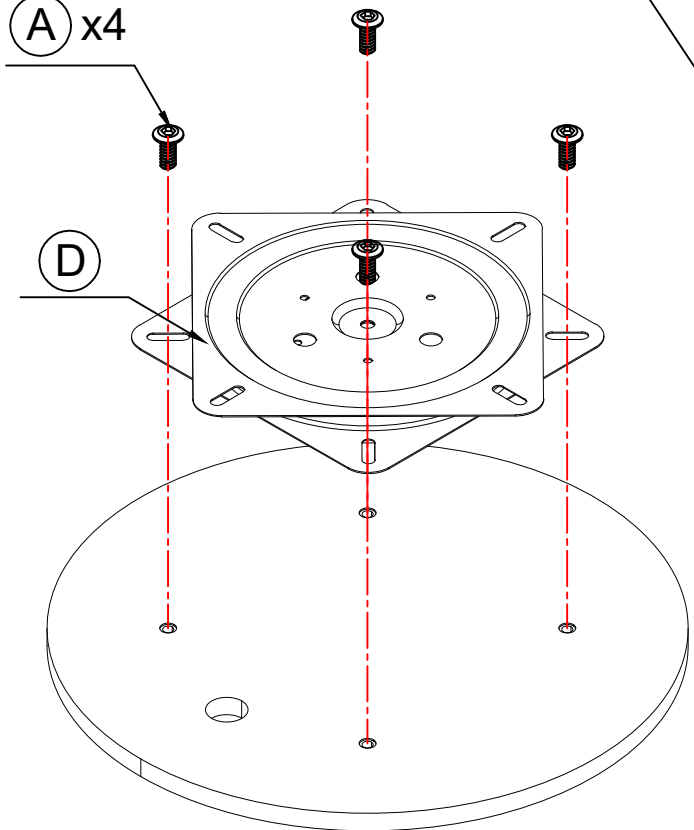

Ⓑ M6x30




14 PCS

⑦ x4

②

⑥

⑤ x4

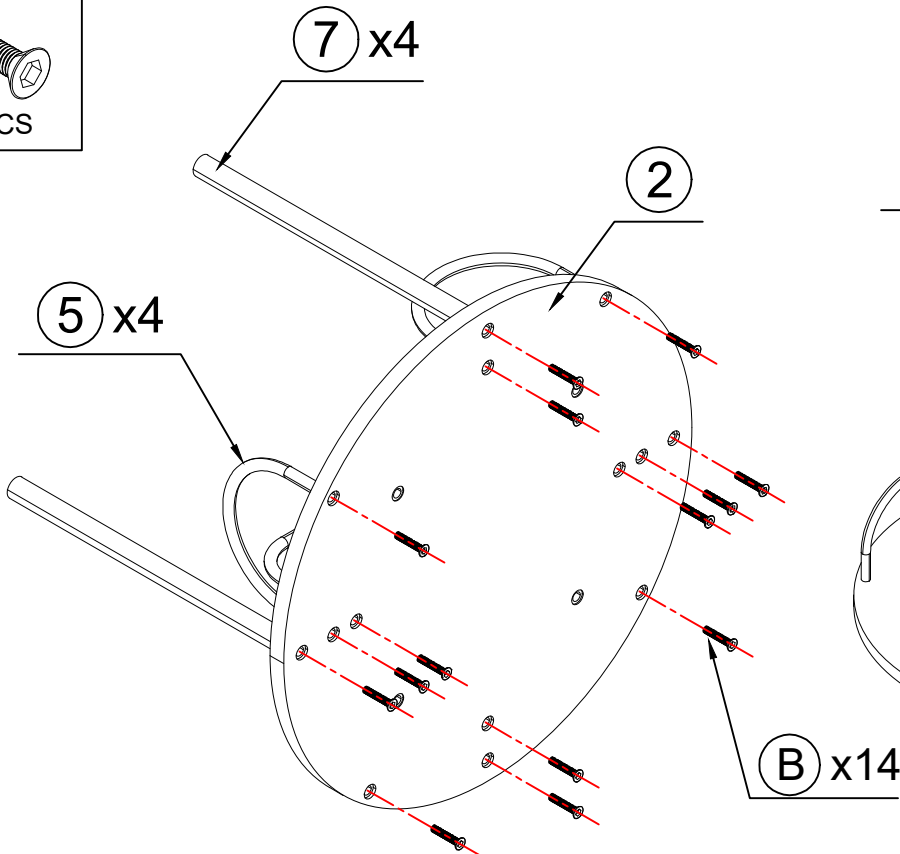


Ⓑ x14

(A) M6x12




4 PCS

3

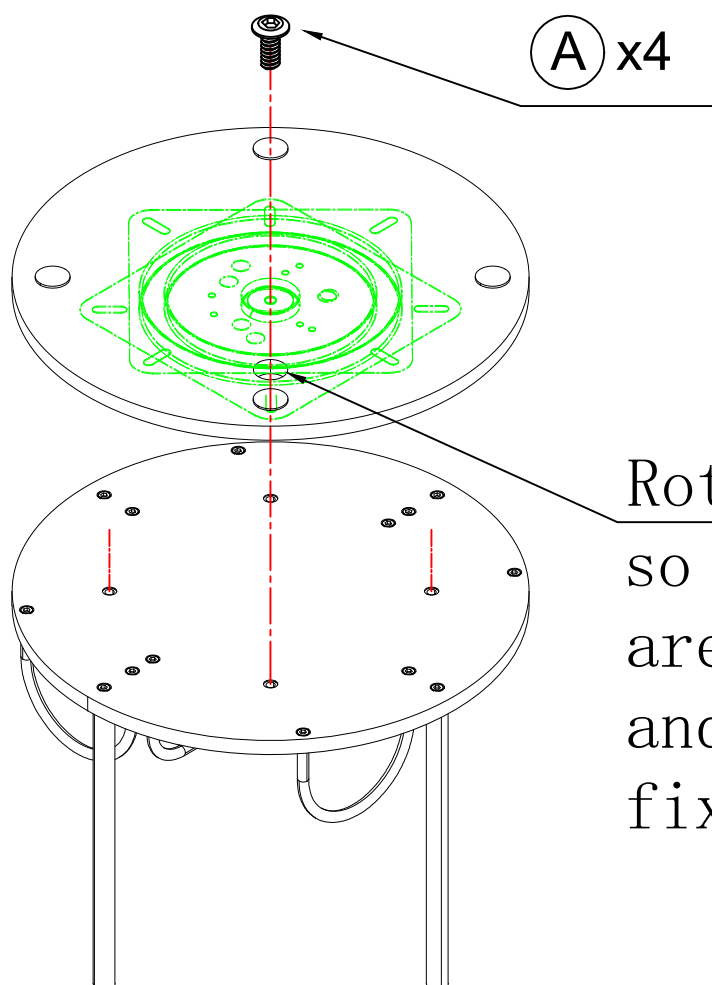

Rotate the chassis,
so that the holes
are aligned in turn,
and the screws are
fixed.

(B) M6x30




32 PCS


(B) x8

4

x4

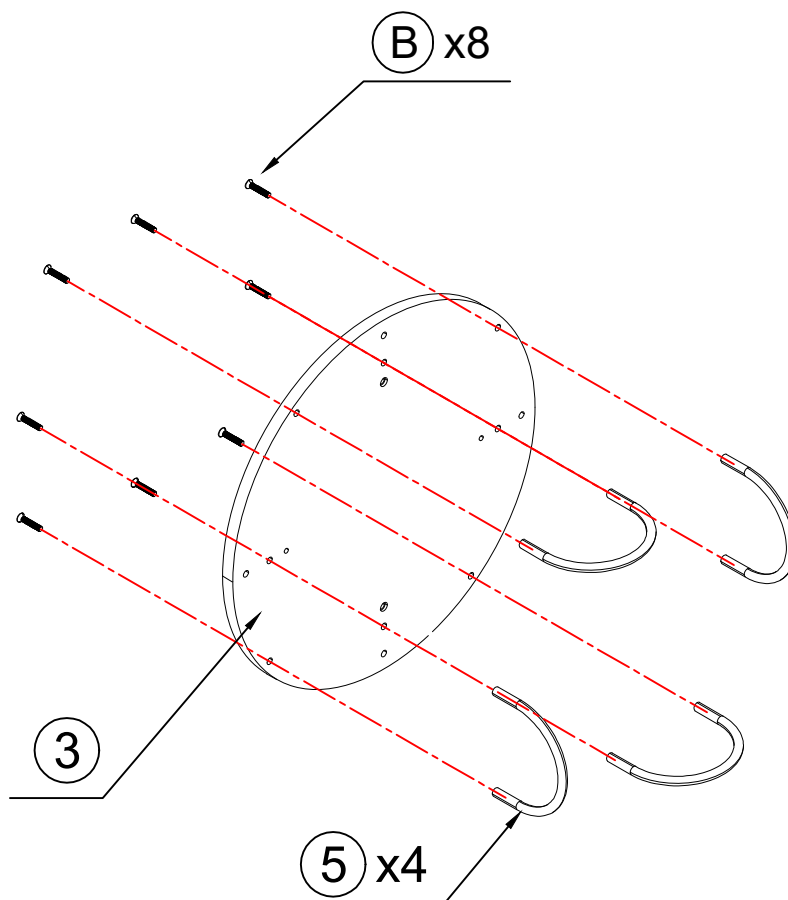


(B) M6x30




16 PCS

5

x4

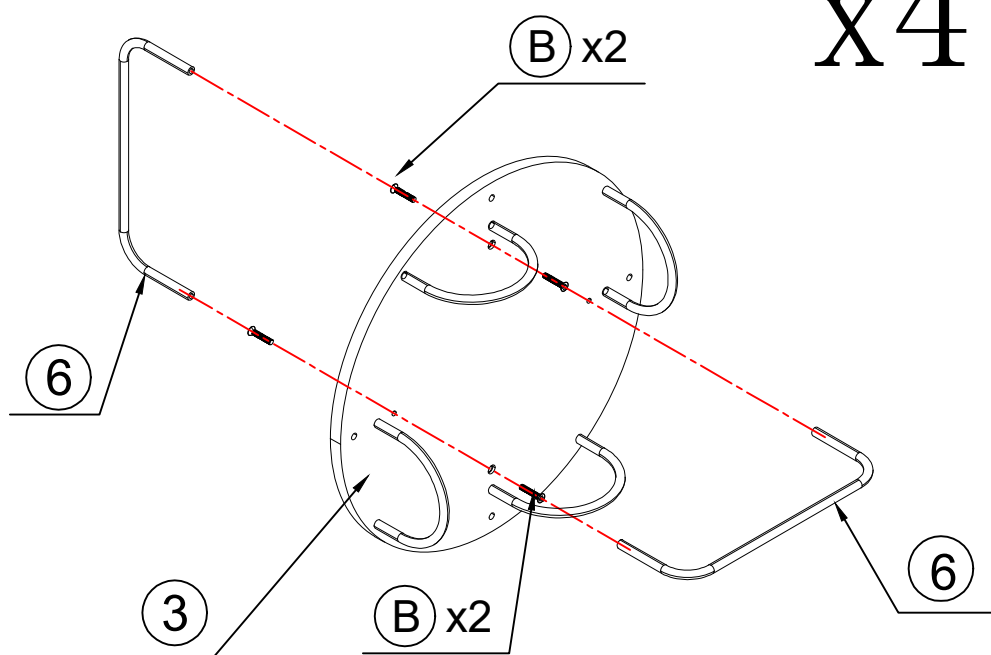

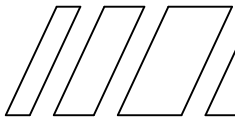




Ⓒ M6(10+60)



16 PCS


Repeat this step until
the right picture shows

6

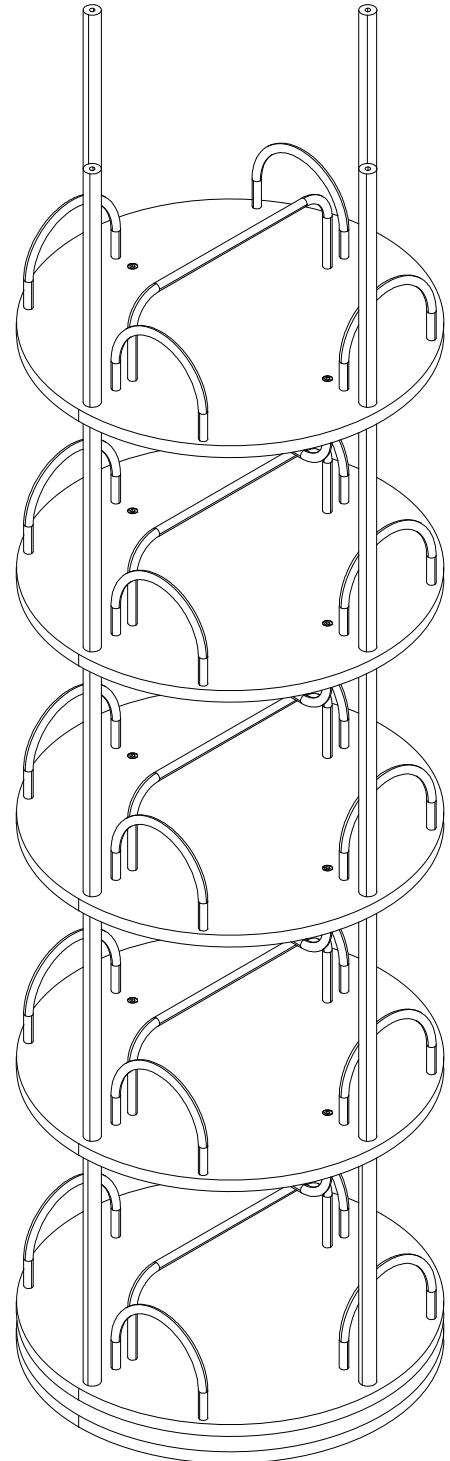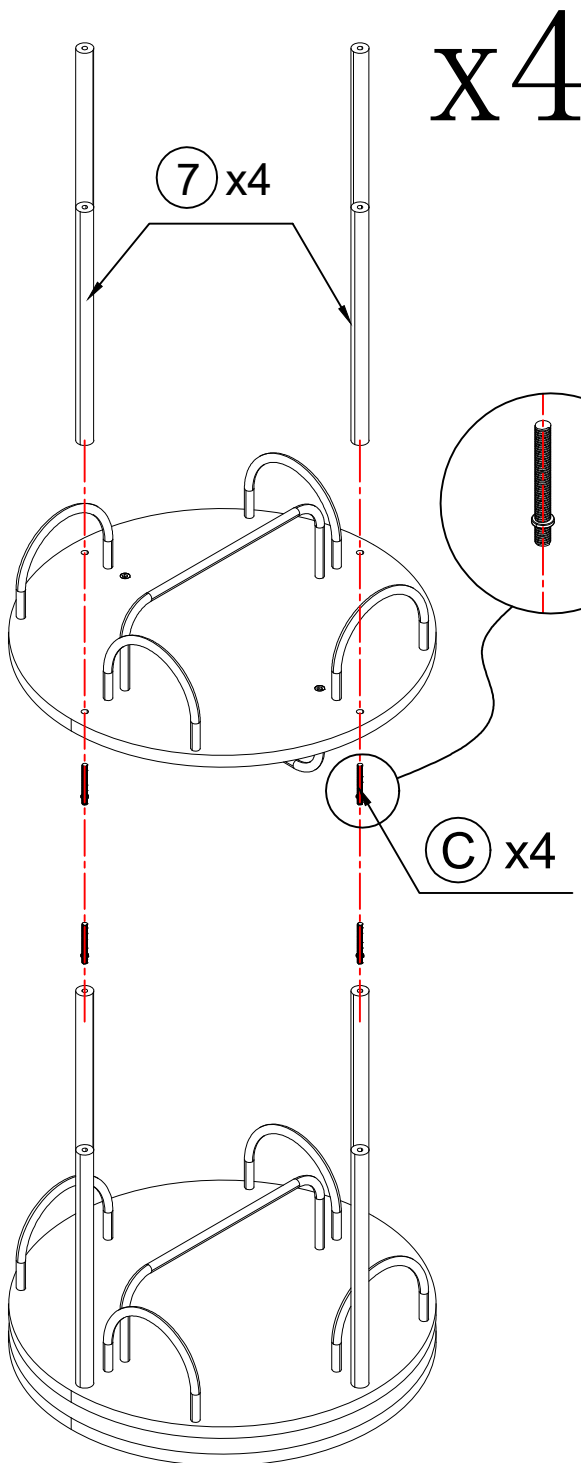



(B) M6x30



6 PCS

7

