


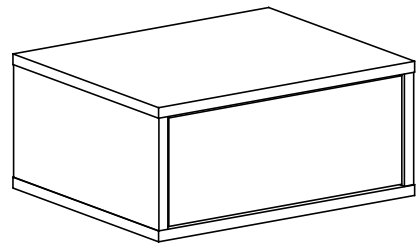
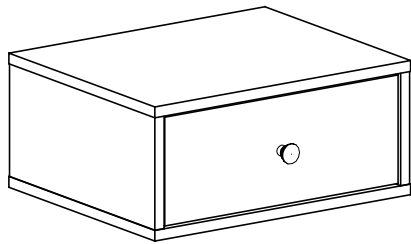
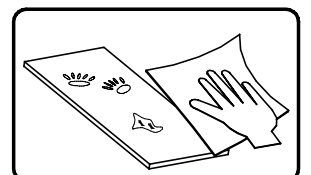
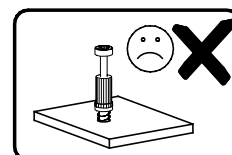
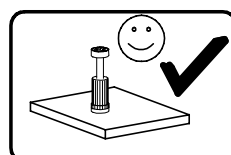
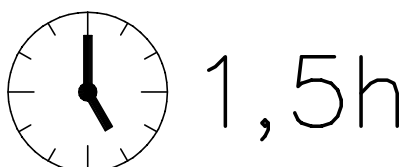
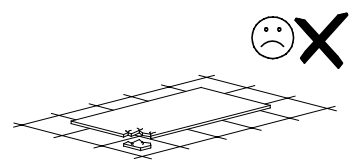
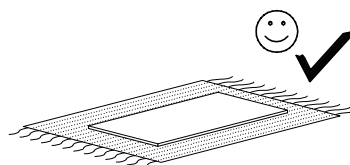
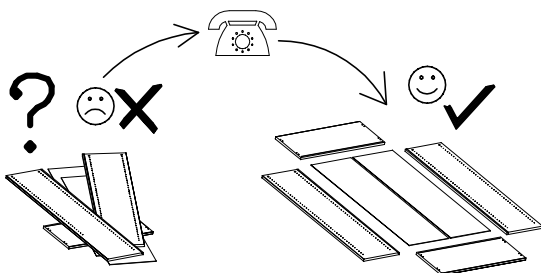
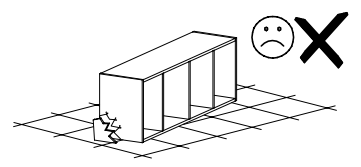
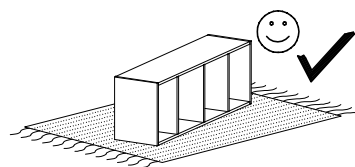
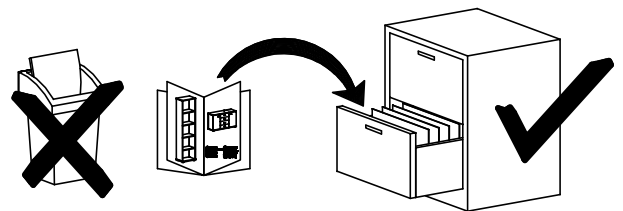
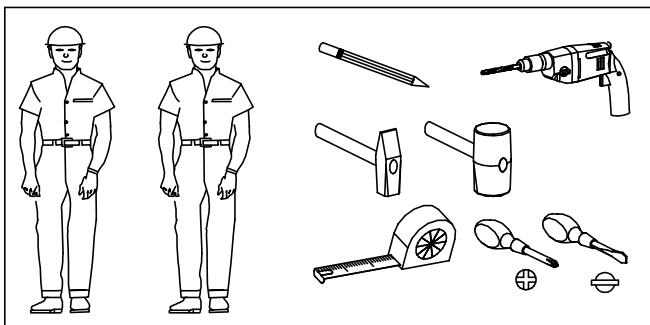


GLAMOUR


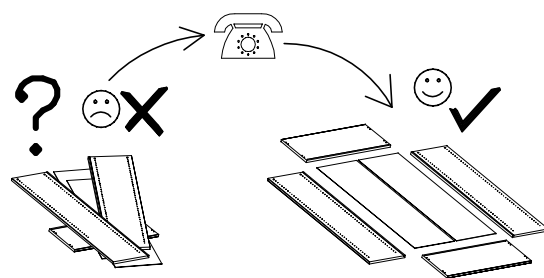


PUSH

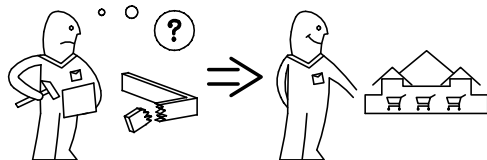


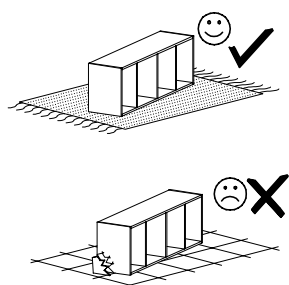





OPCJA A





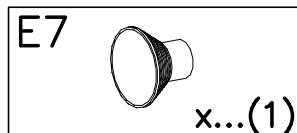



OPCJA B








PUSH

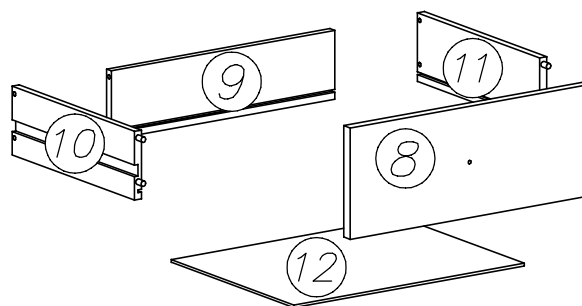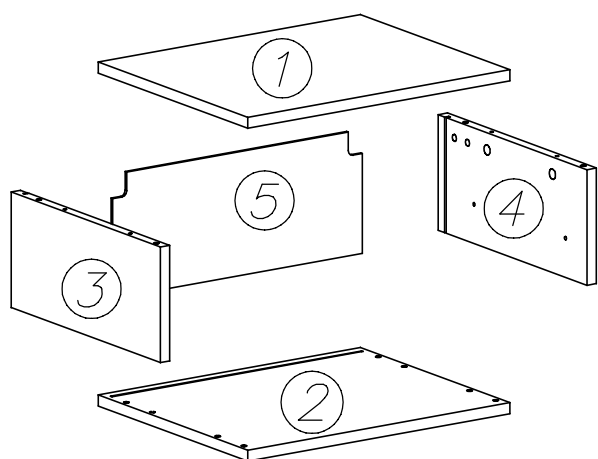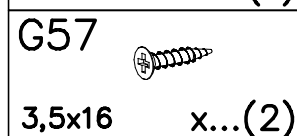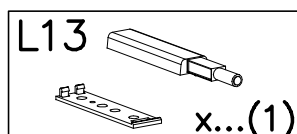


U9L  x...(1)	U9R  x...(1)	H3  280mm x...(2)		G50  6x13 x...(4)
K1  ø15x12 x...(4)	G8  4x30 x...(1)	N1  M4x9 x...(2)	I1  x...(2)	W1  GLUE, LEIM, LEPIDLO, LIM x...(1)
K10  x...(4)	B1  ø8x35 x...(8)	W2  x...(1)	A6  ø7x40 x...(4)	A1  ø7x50 x...(4)

I


OPCJA A

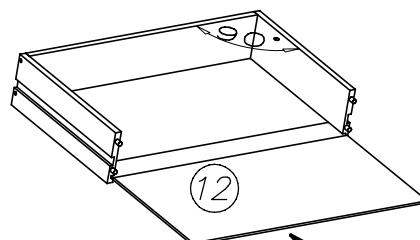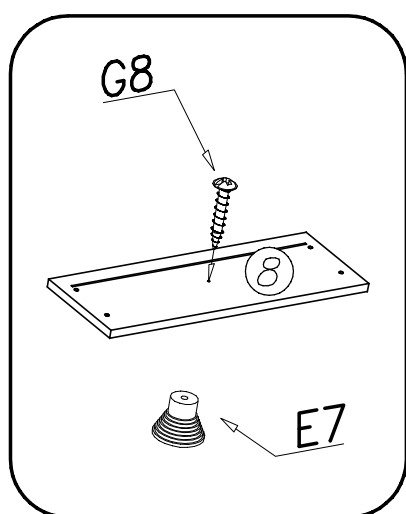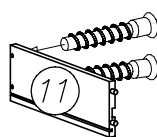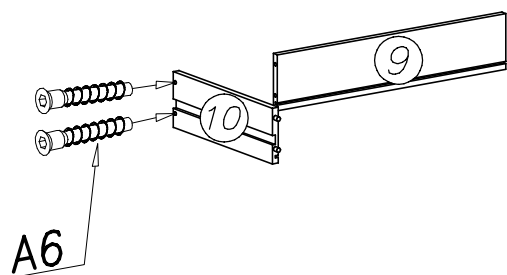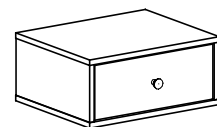

W1

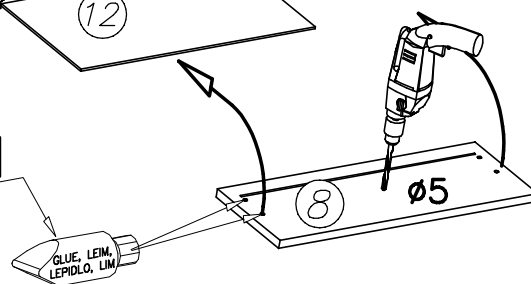


0,5h



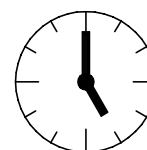


II


OPCJA B

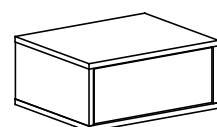








PUSH

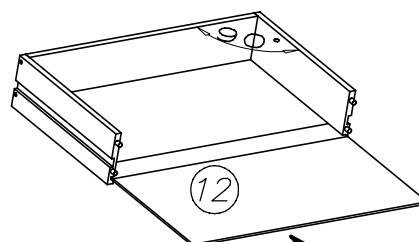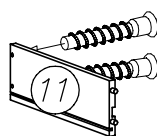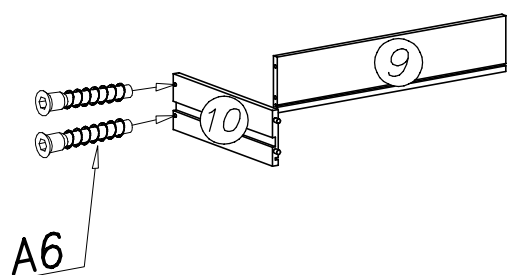



W1

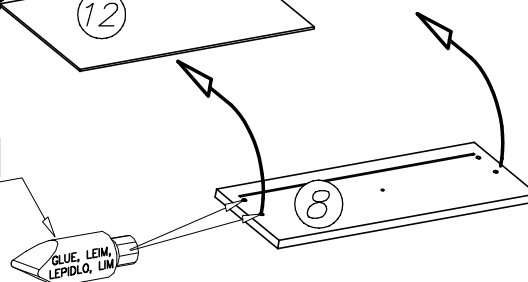



III

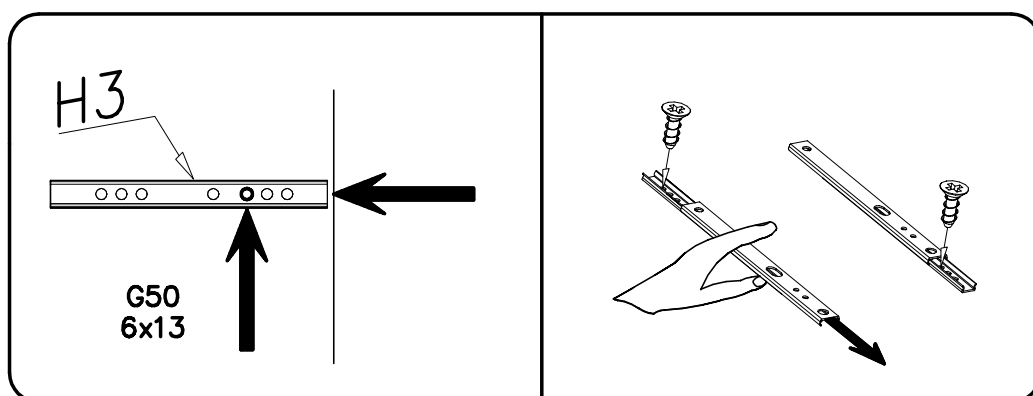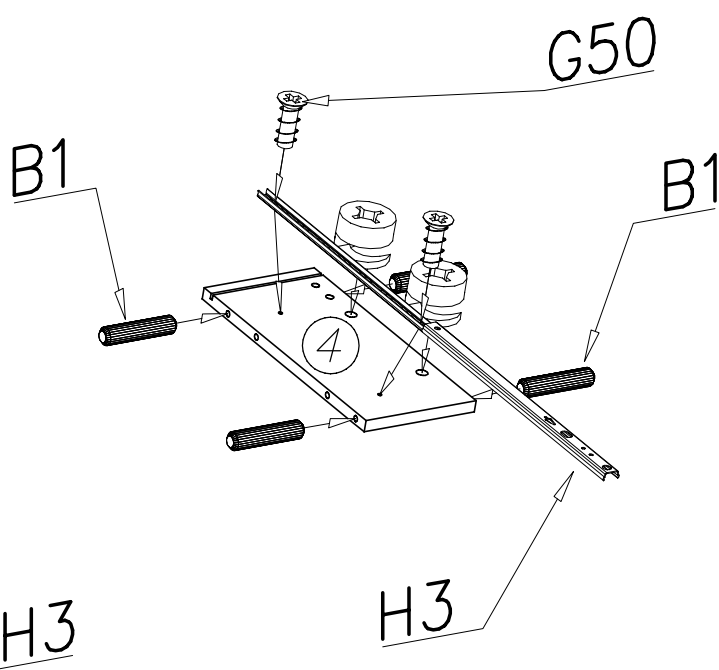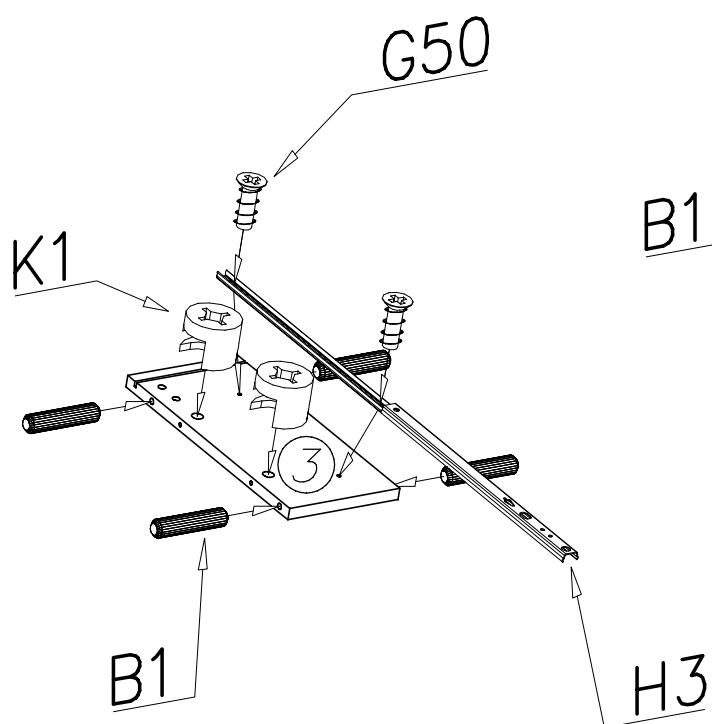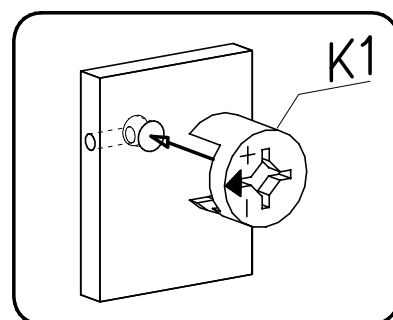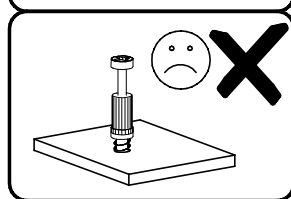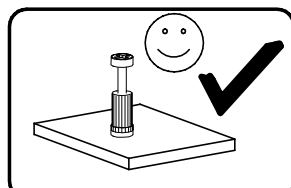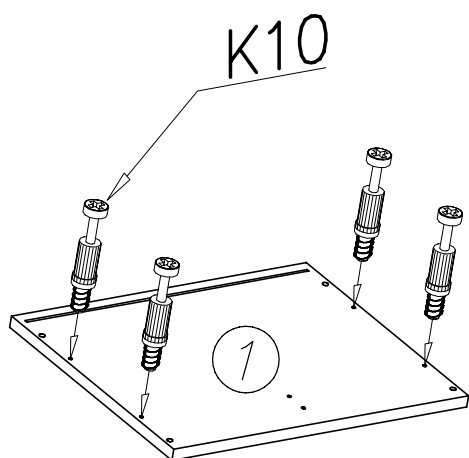


IV

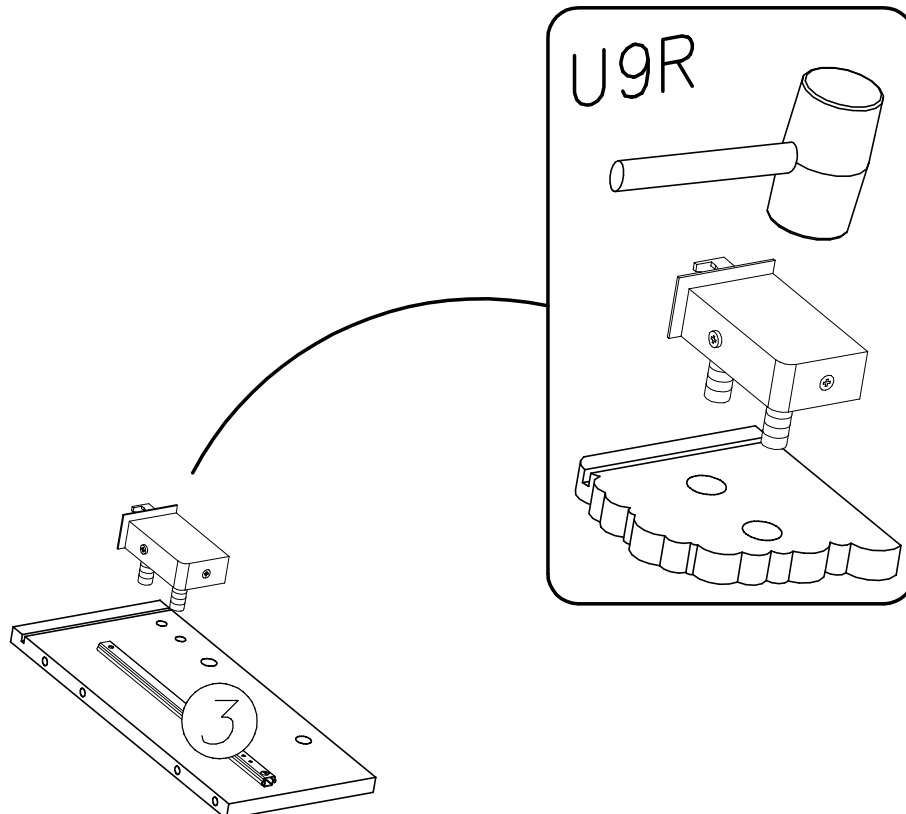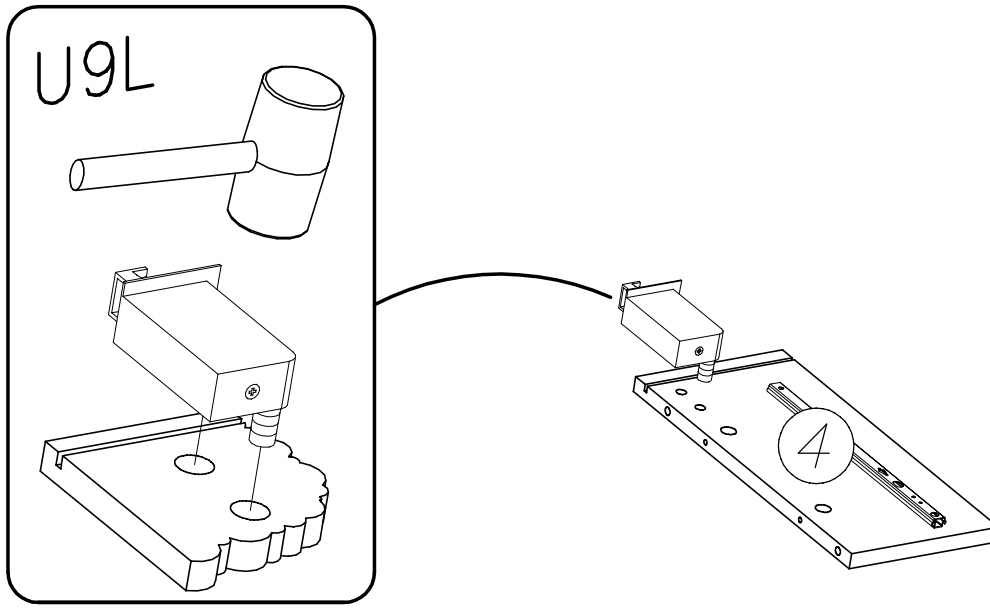


V

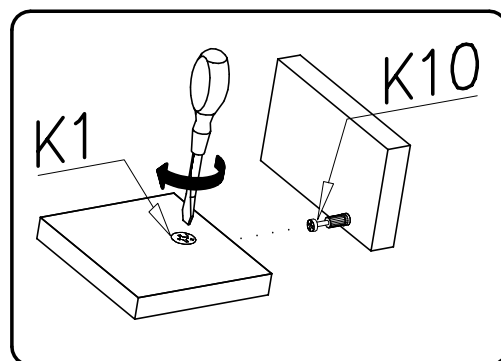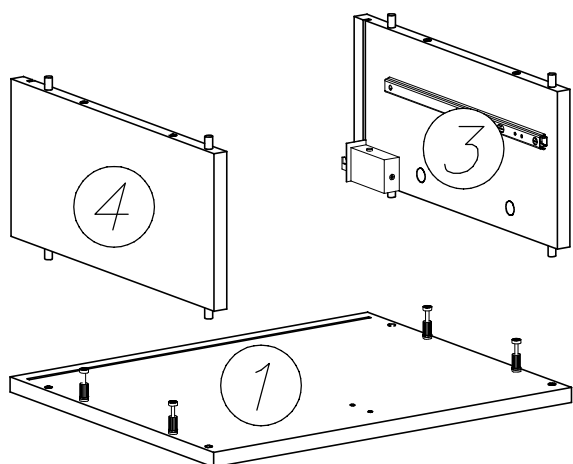


VI

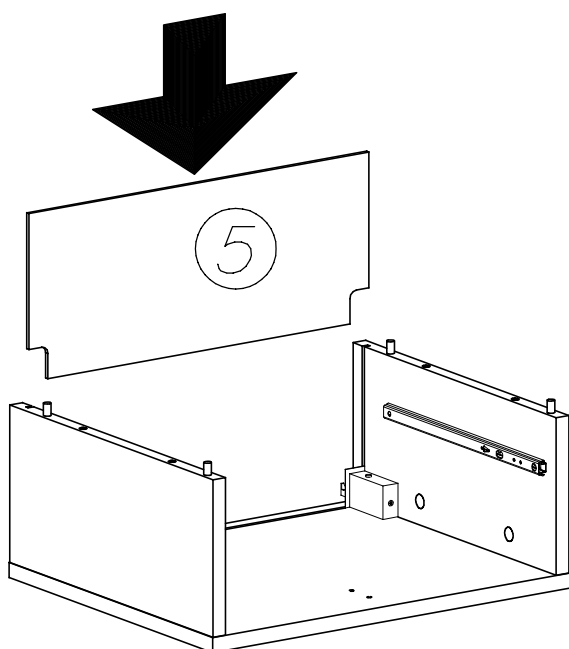


OPCJA B

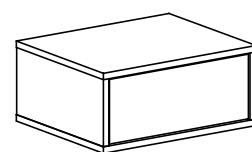

VII

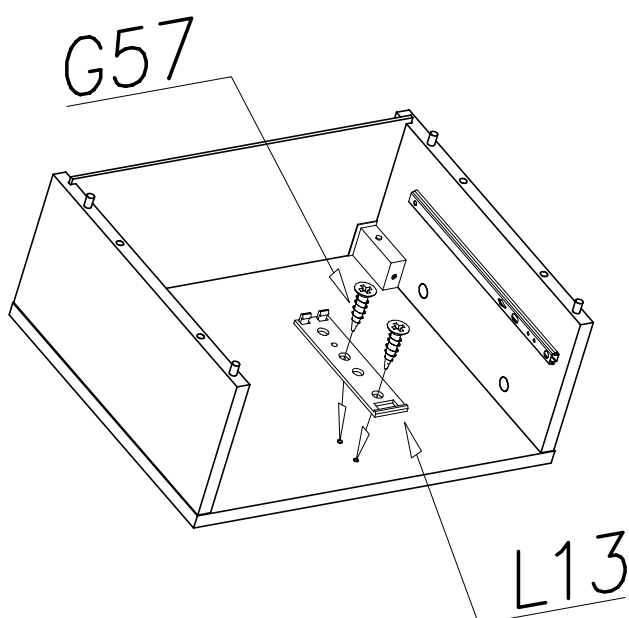


PUSH



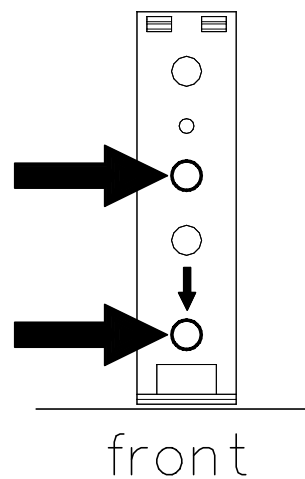


VIII



OPCJA B

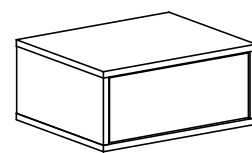


PUSH

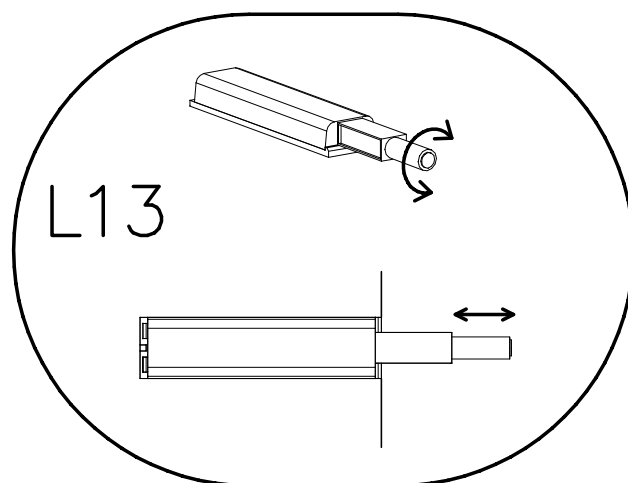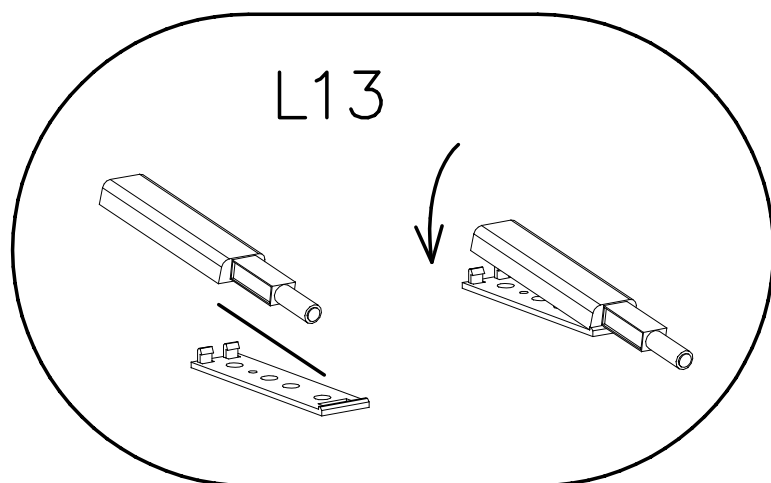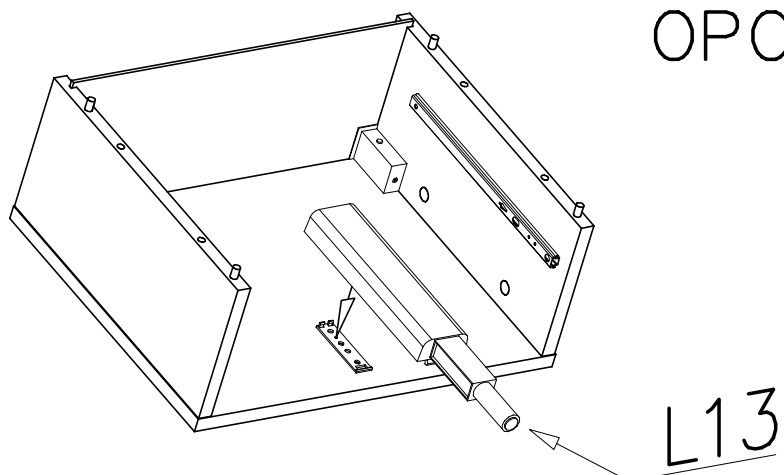



IX

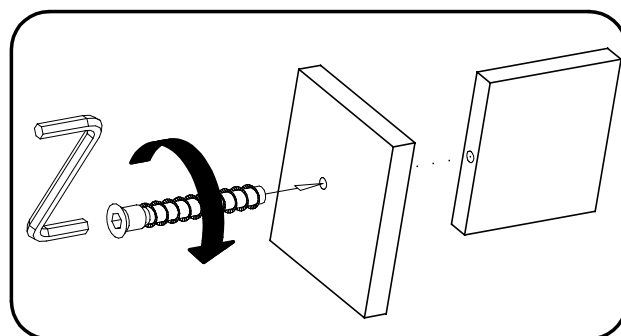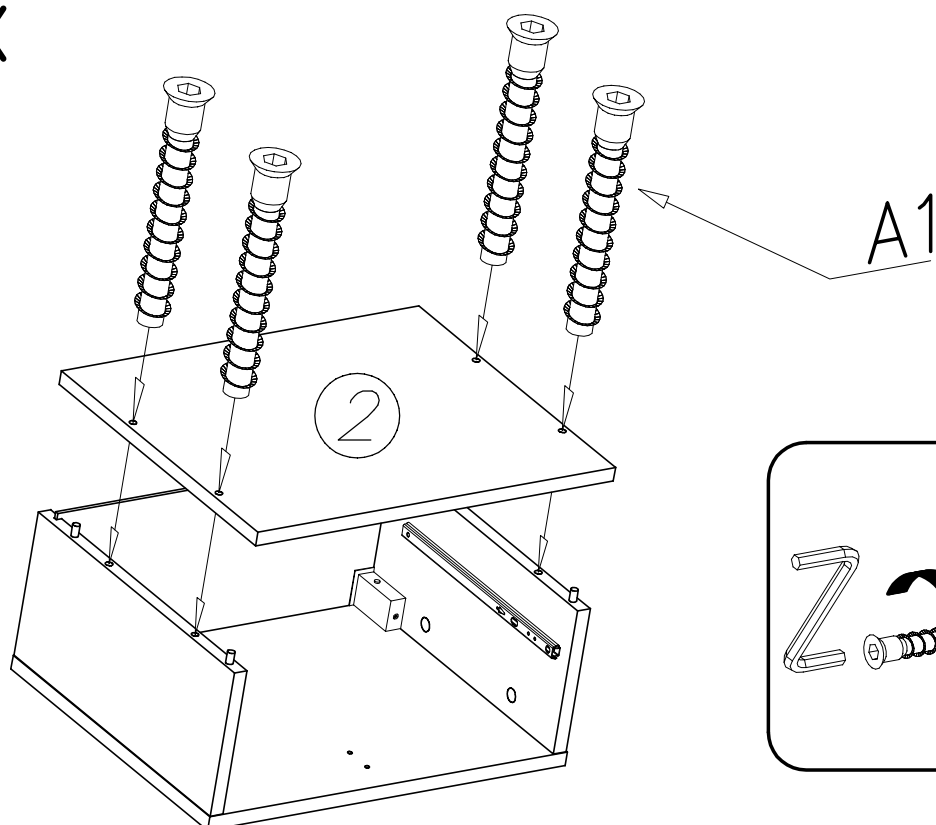



X

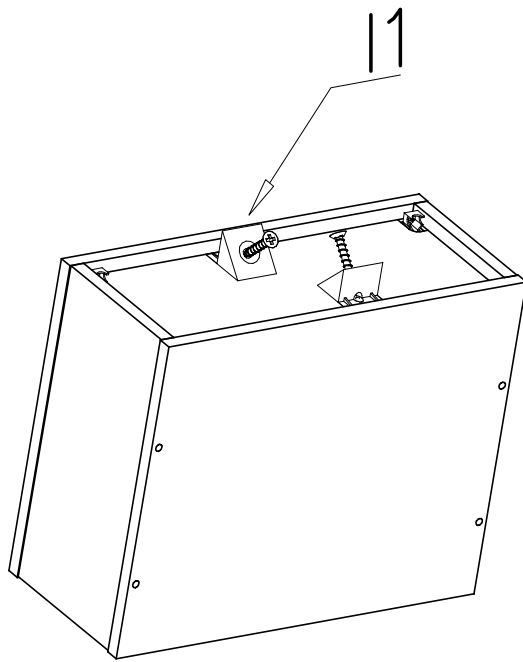




$$a=b$$

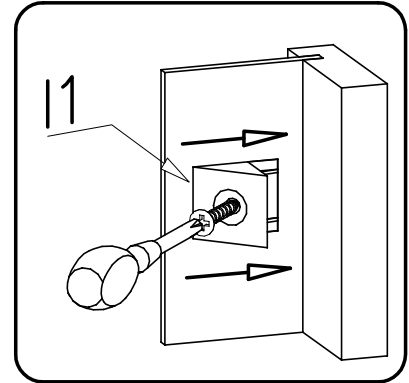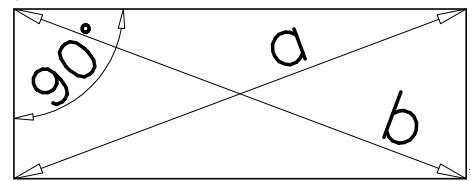





XI




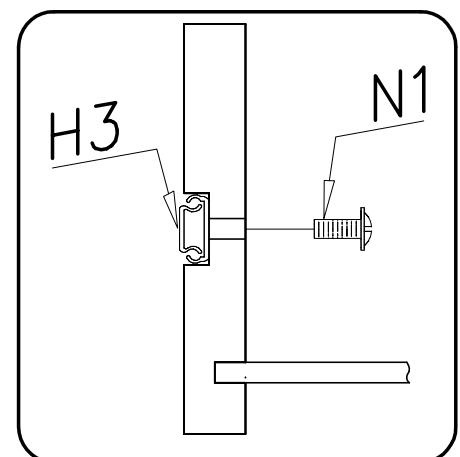
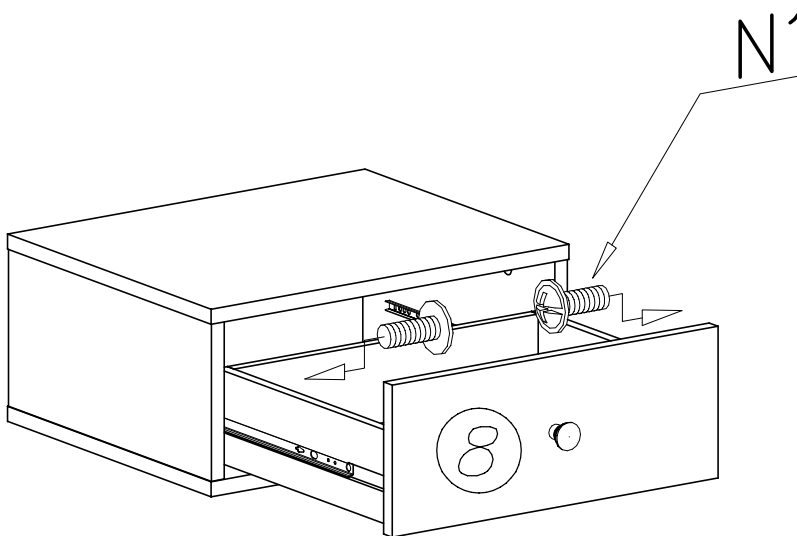


XII

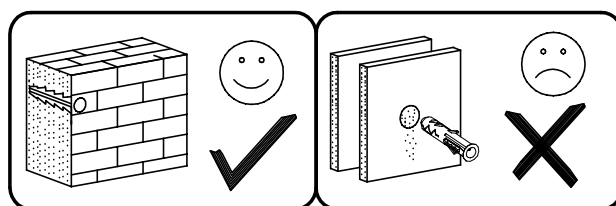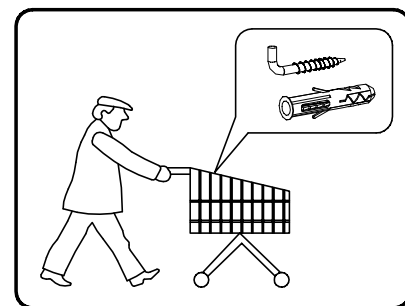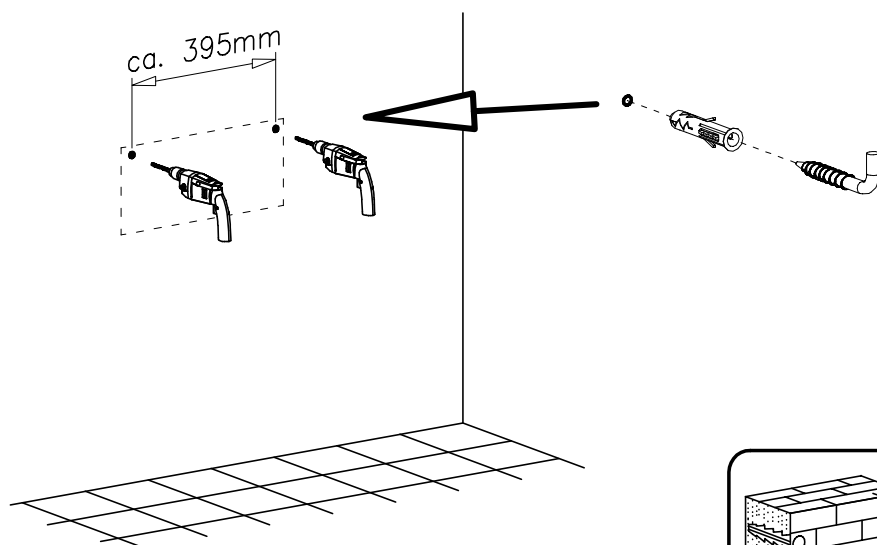



XIII

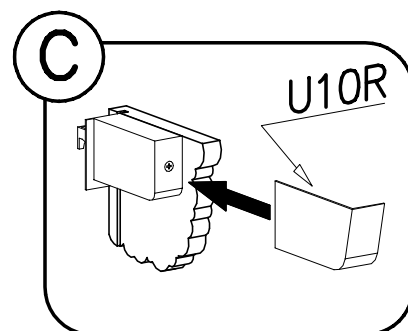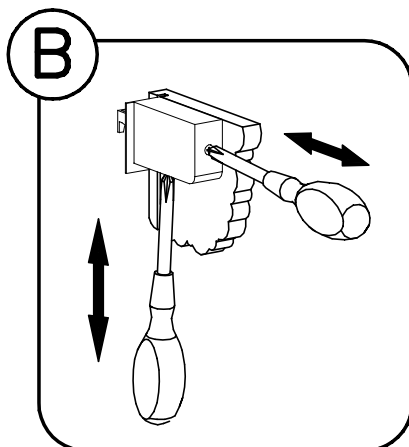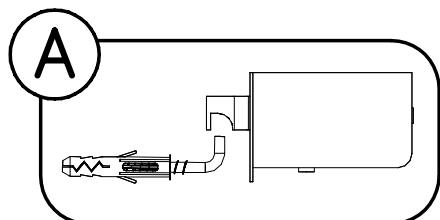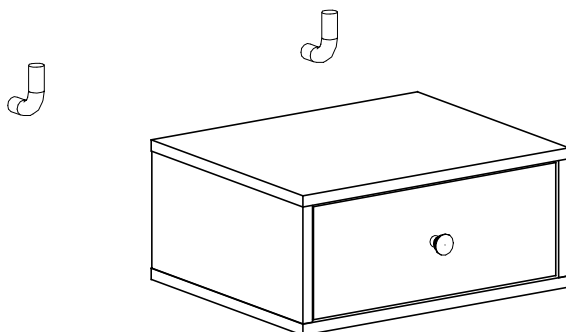

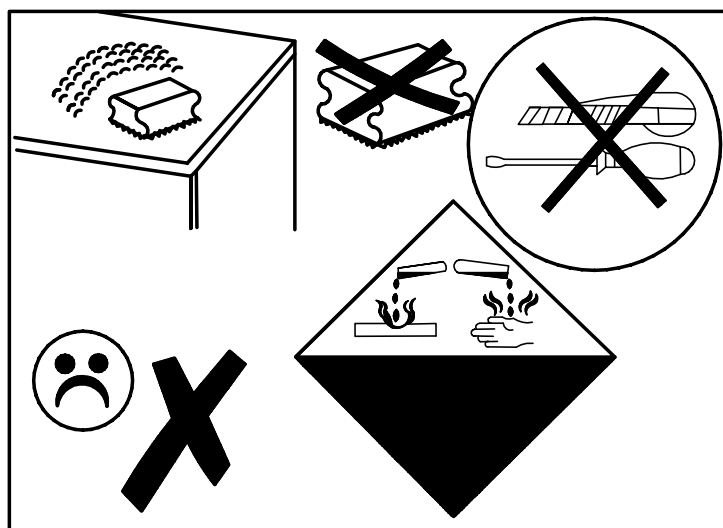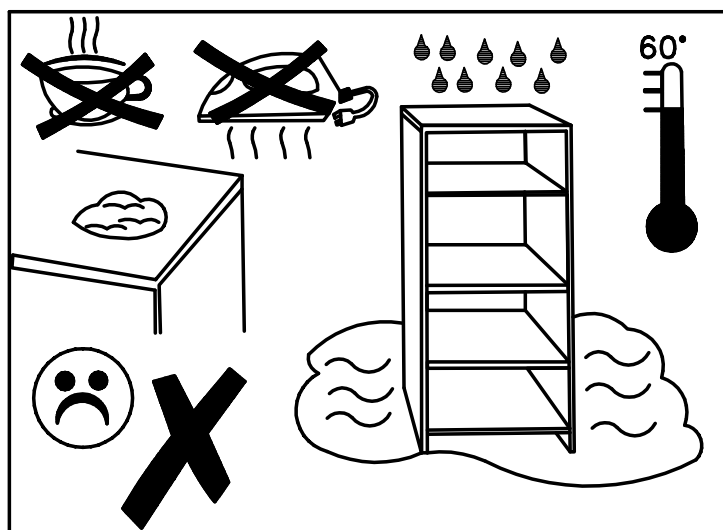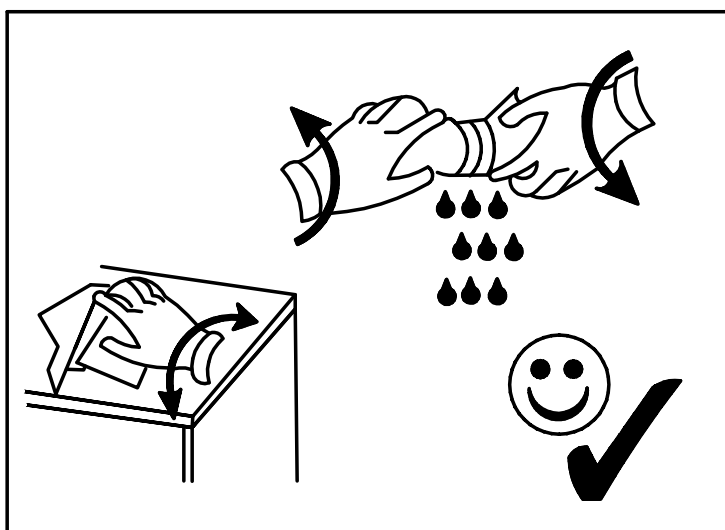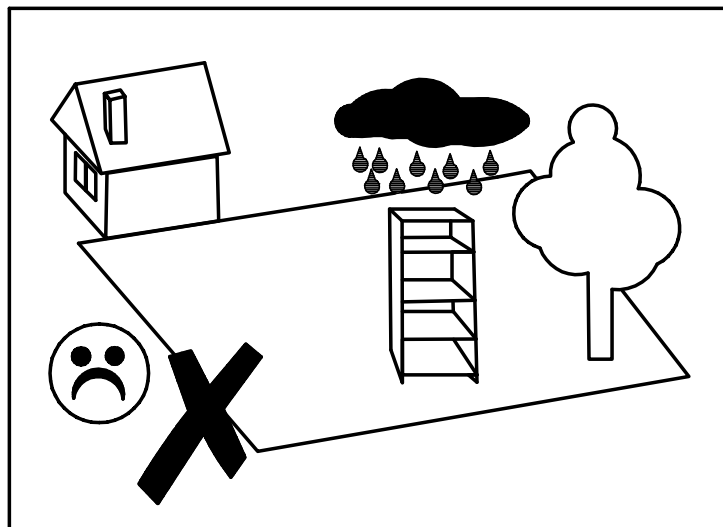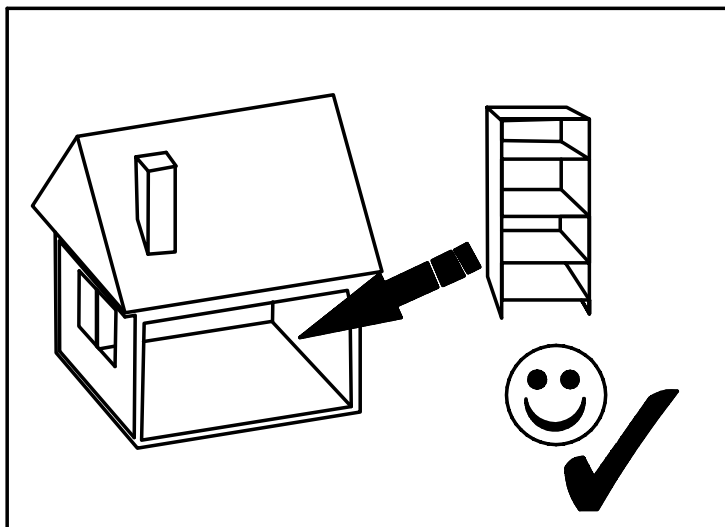


700x700x460

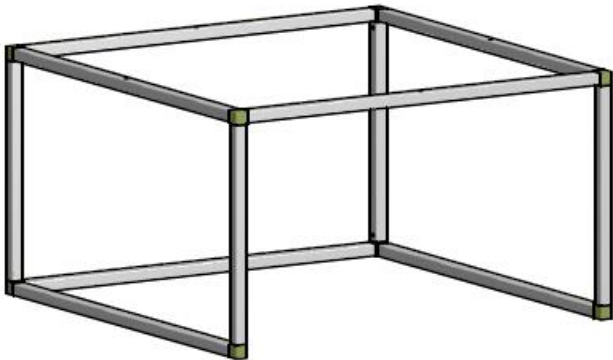				
L-416 (x4)	L-656 D (x3)	L-656 G (x4)	L (x3)	R (x3)
				
C (x2)	M6x15 (x22)	4x35 (x4)	S (x4)	Z4 (x1)
				

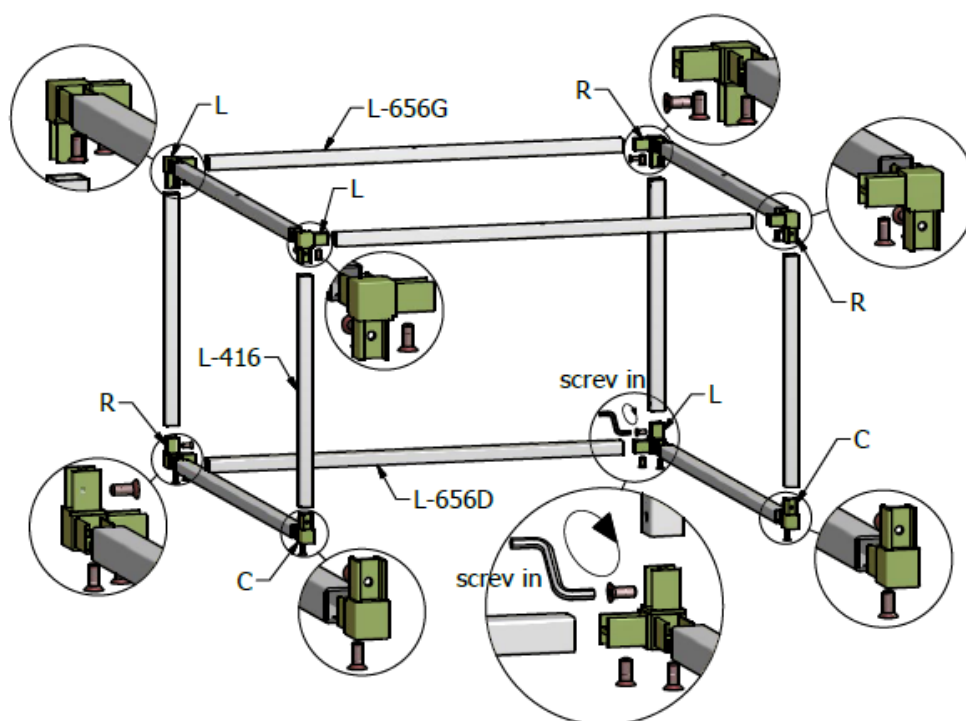

Po pierwsze wkręcać poprawnie śrubę (M6x15) w łącznik (L, R lub C)
 First, put the screw (M6x15) correctly in the connector (L, R or C)
 Setzen Sie zuerst die Schraube (M6x15) richtig in den Stecker (L, R oder C) ein.

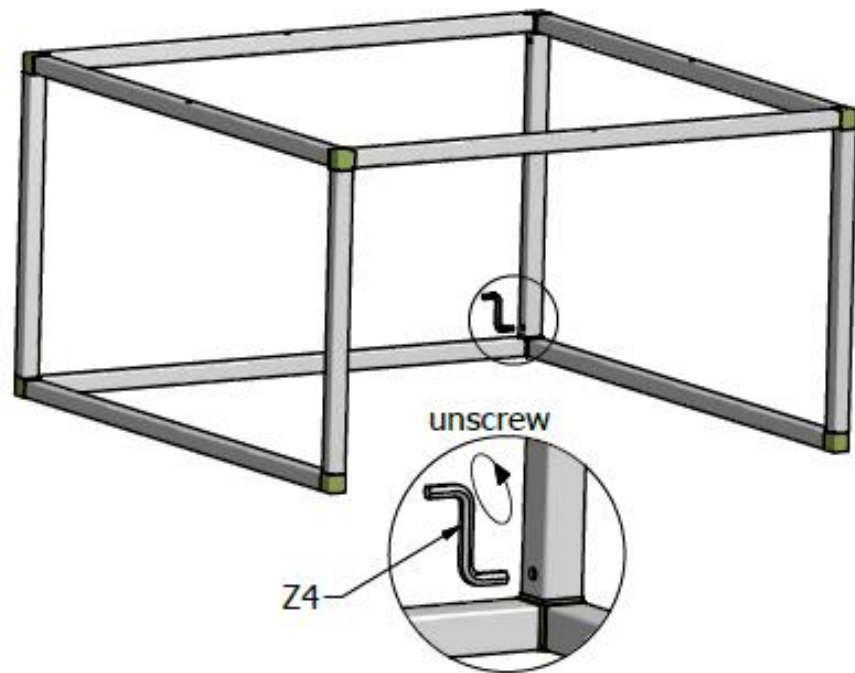

Następnie włóż poprawnie metalowy profil w łącznik i odkręć śrubę.
 Then insert the metal profile correctly into the connector and unscrew the screw.
 Setzen Sie dann das Metallprofil richtig in den Stecker ein und lösen Sie die Schraube.

