

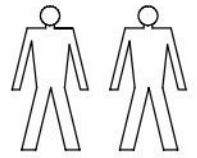
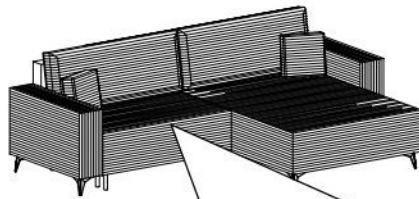


# Montageanleitung - Modell SCANDIC





Recamiere-links

Recamiere-rechts





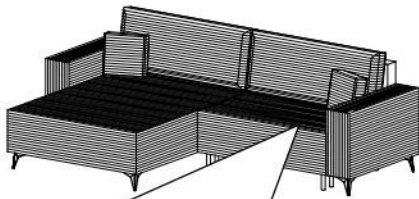


<p><b>P</b></p> <p>13cm</p> <p>6x</p>	<p><b>J</b></p> <p>ø28mm</p> <p>6x</p>	<p><b>K</b></p> <p>ø20mm</p> <p>2x</p>
---------------------------------------	--	--





<p><b>A</b></p> <p>M6x20</p> <p>16x</p>	<p><b>B</b></p> <p>4x</p>	<p><b>C</b></p> <p>4x</p>	<p><b>D</b></p> <p>6x</p>	<p><b>E</b></p> <p>12x</p>	<p><b>F</b></p> <p>12x</p>	<p><b>G</b></p> <p>2x</p>
---	---------------------------	---------------------------	---------------------------	----------------------------	----------------------------	---------------------------

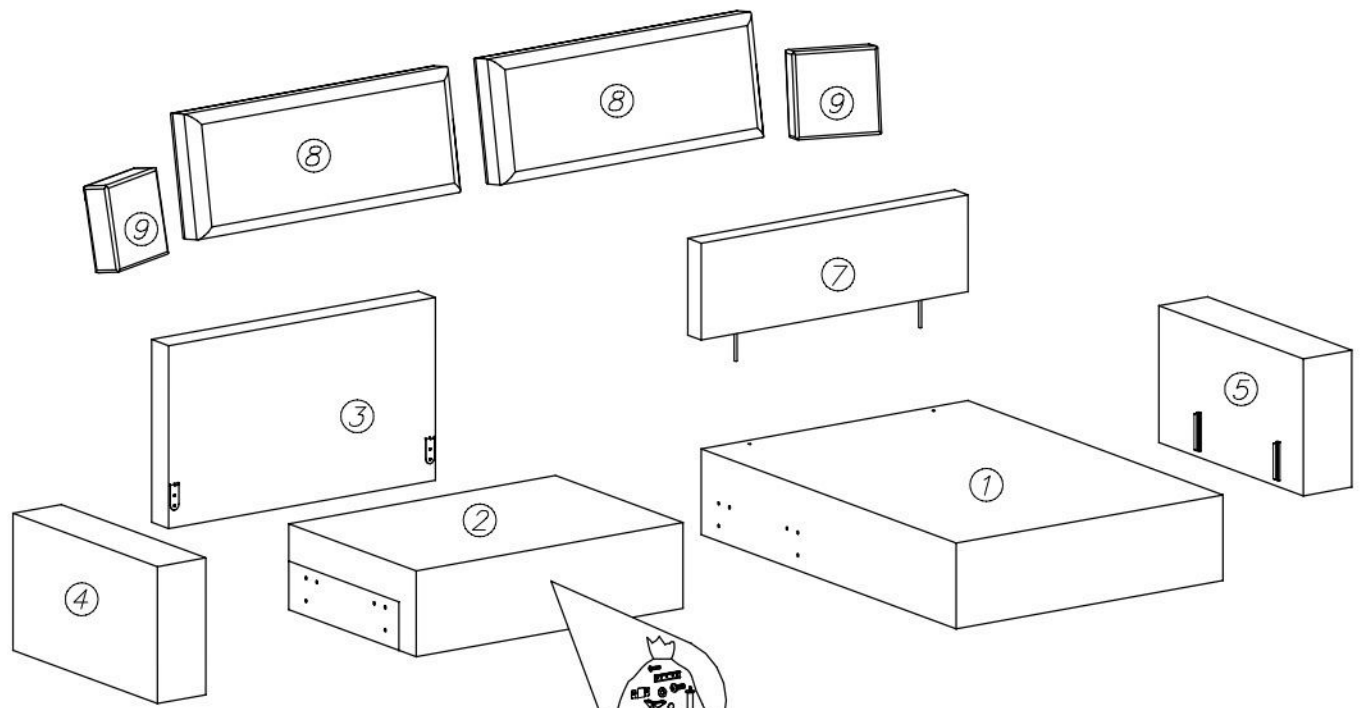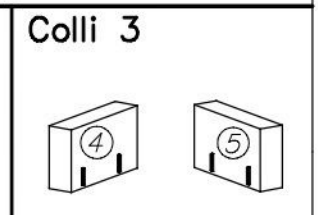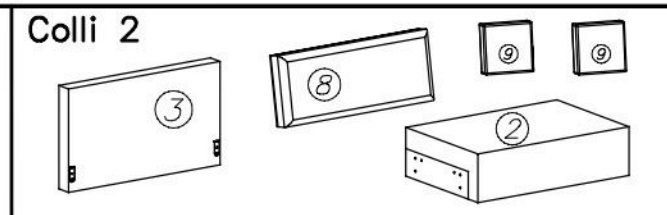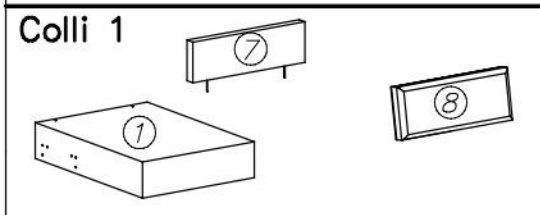



1

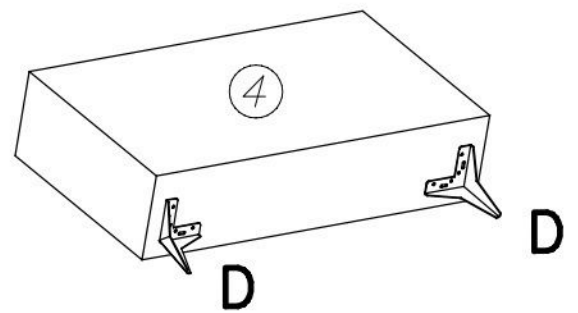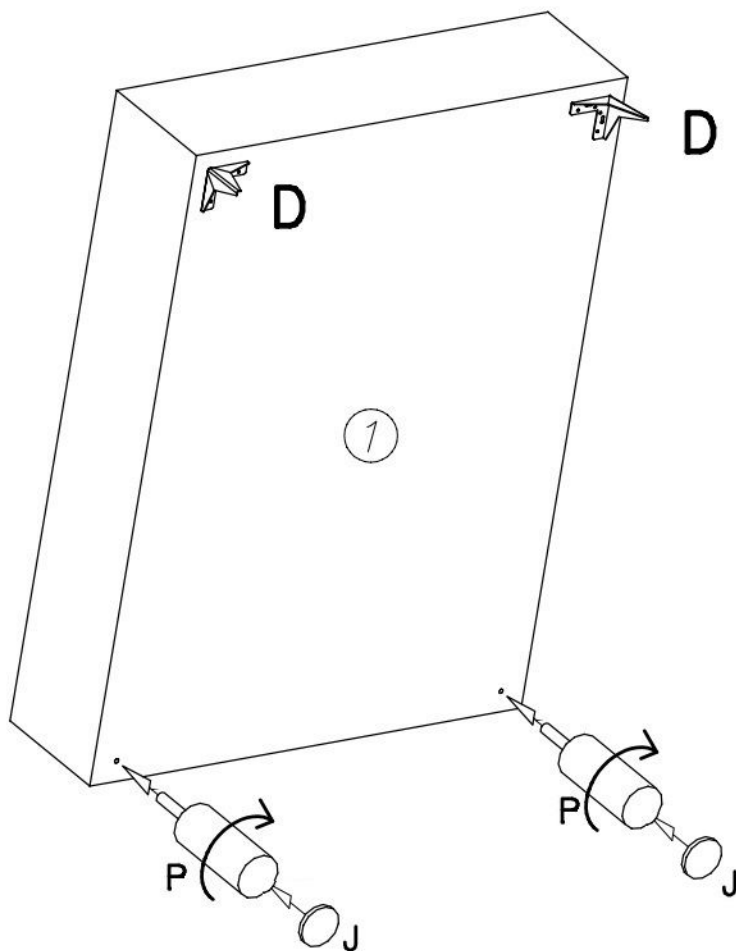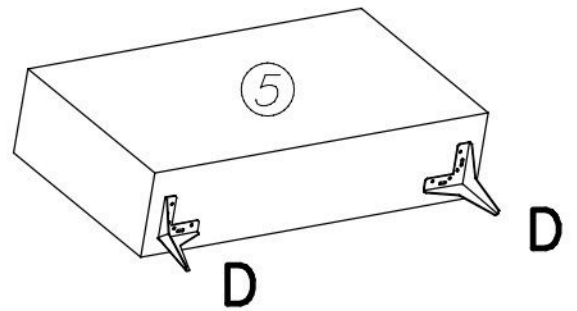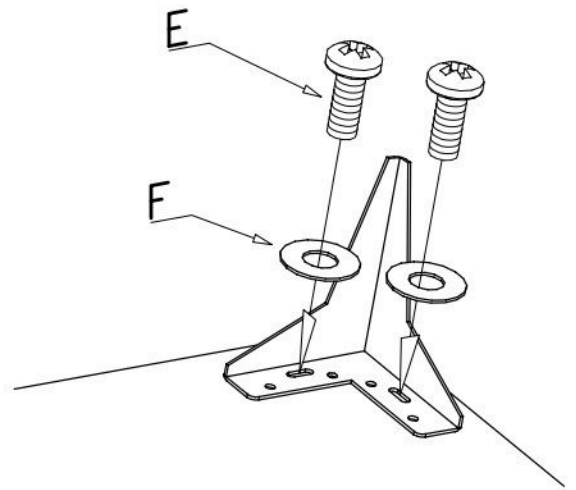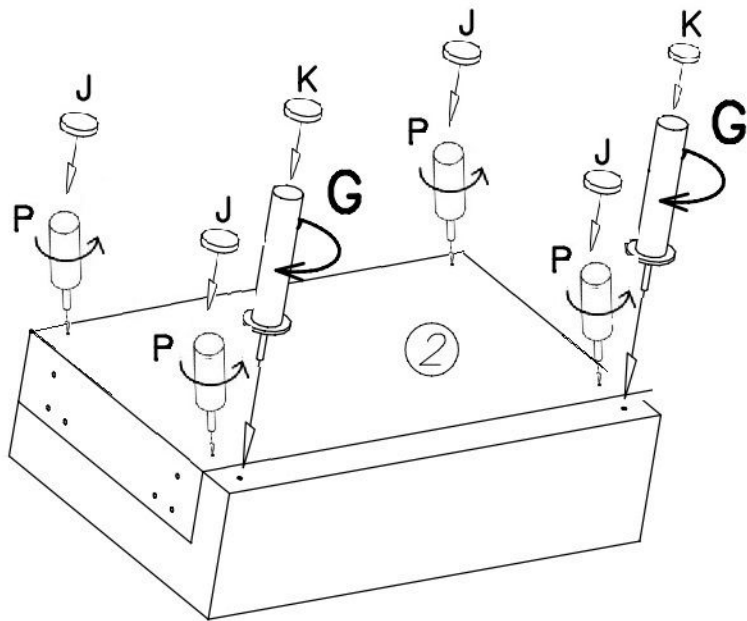



2

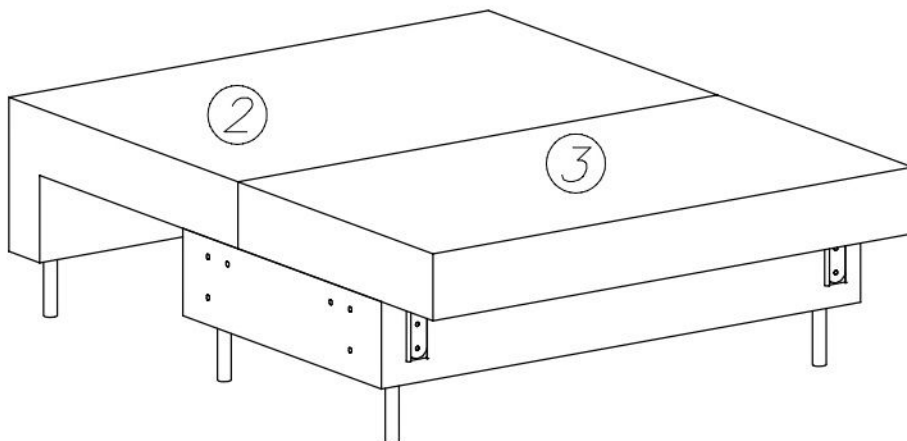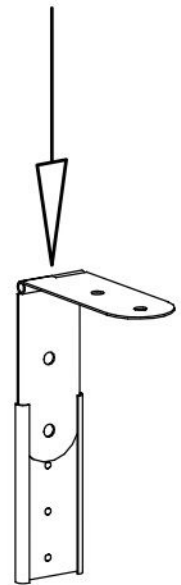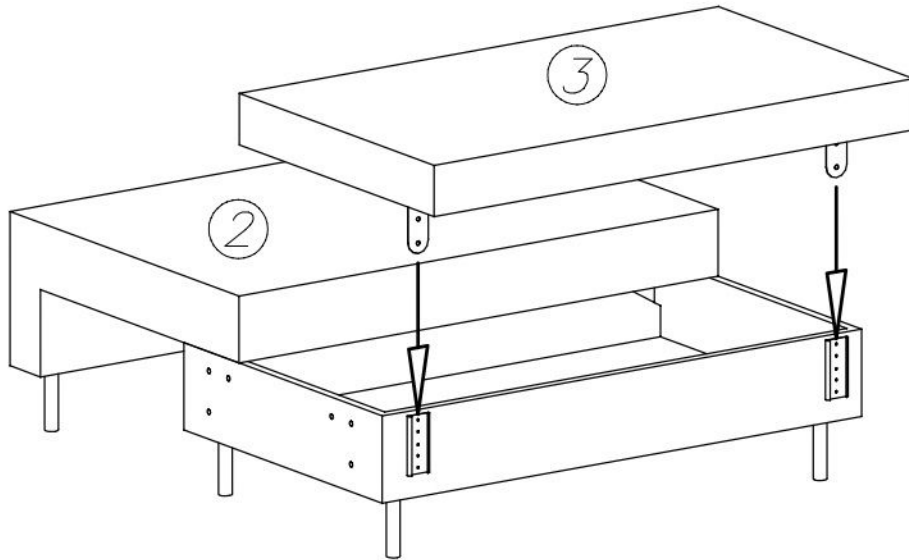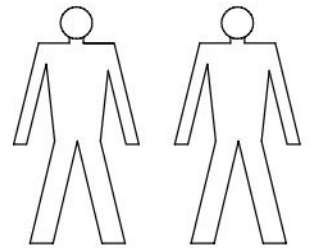



3

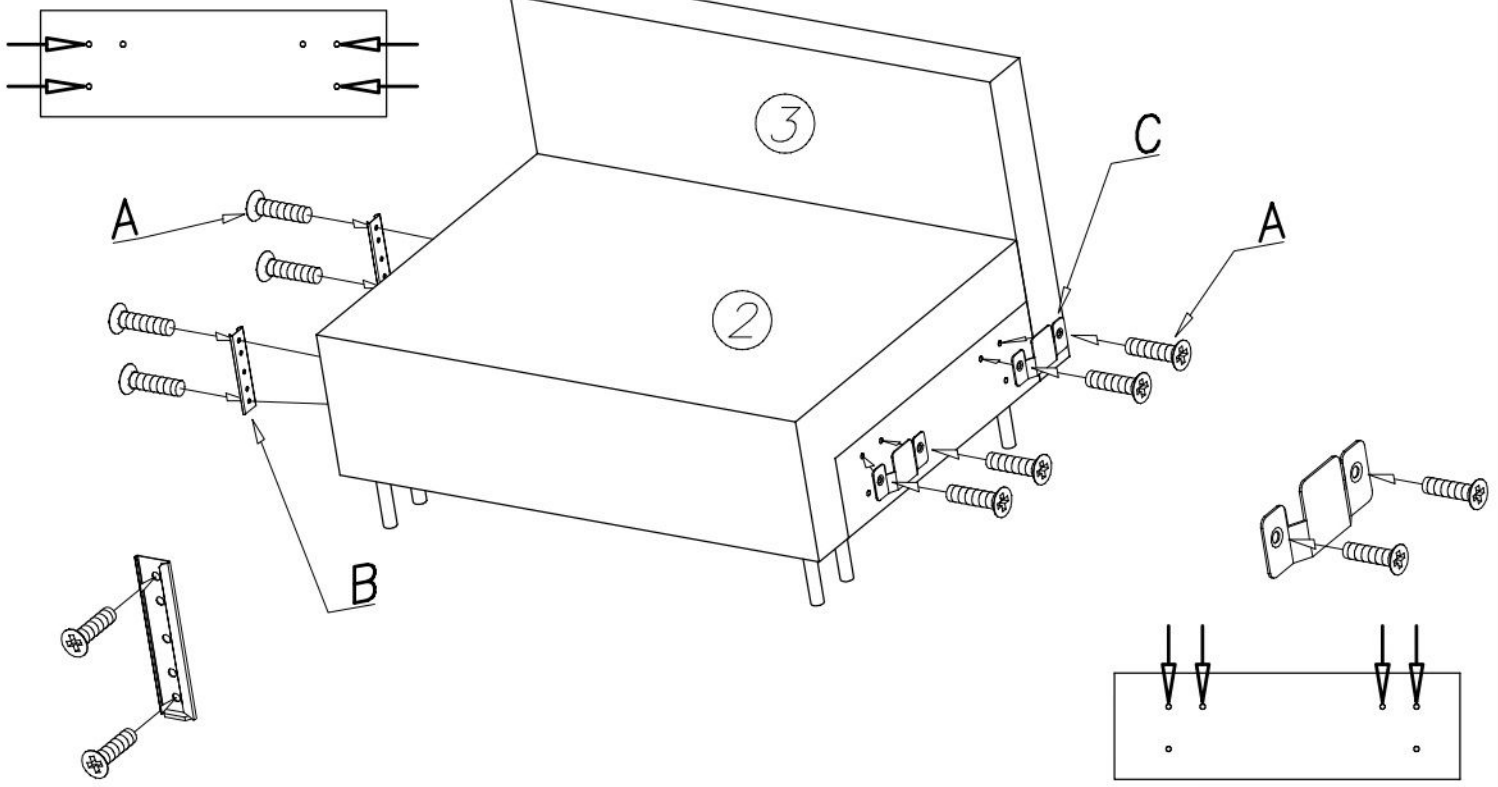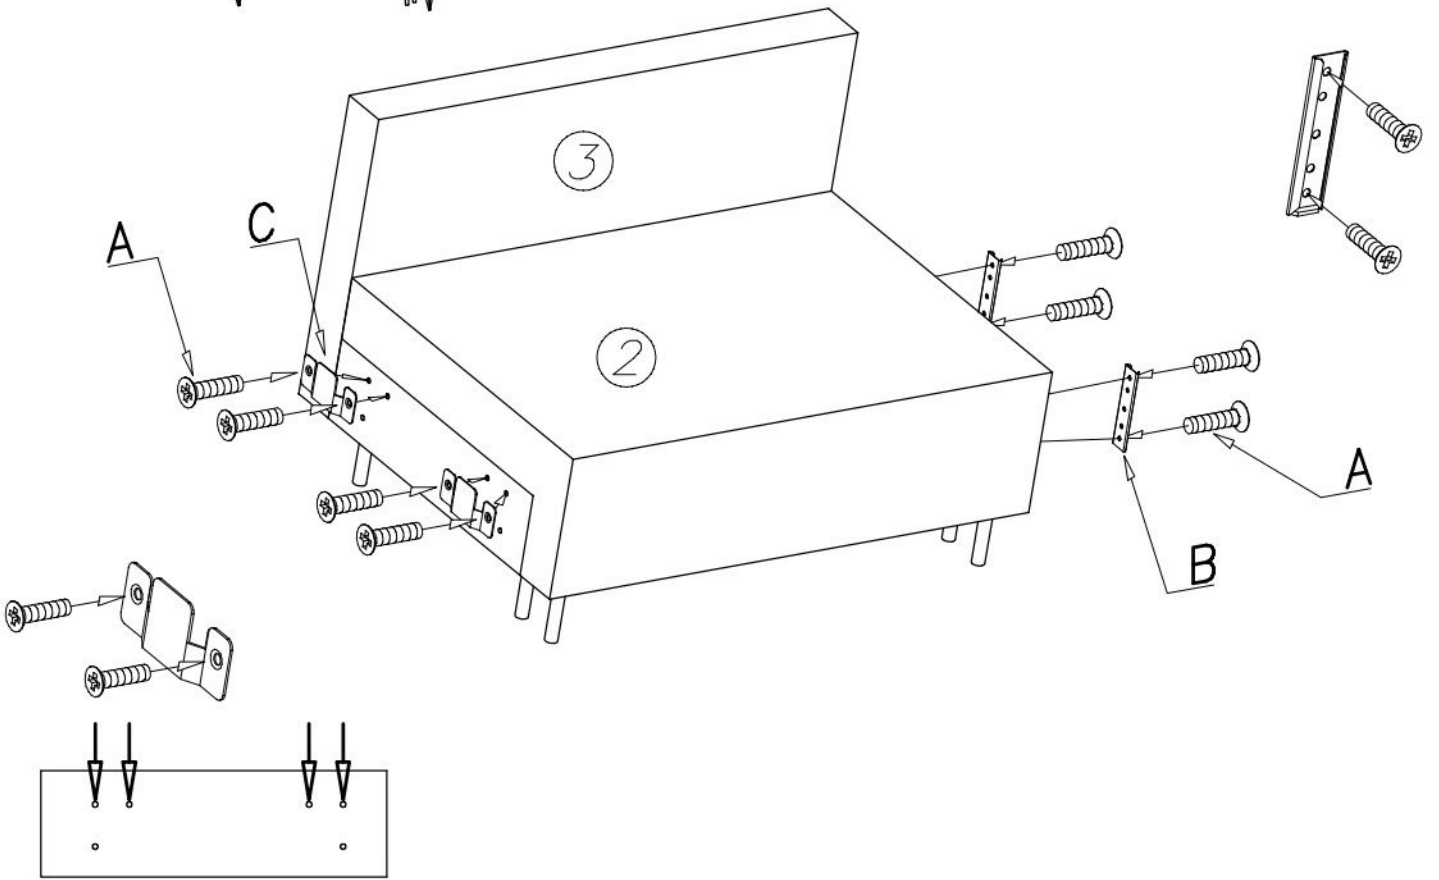

4

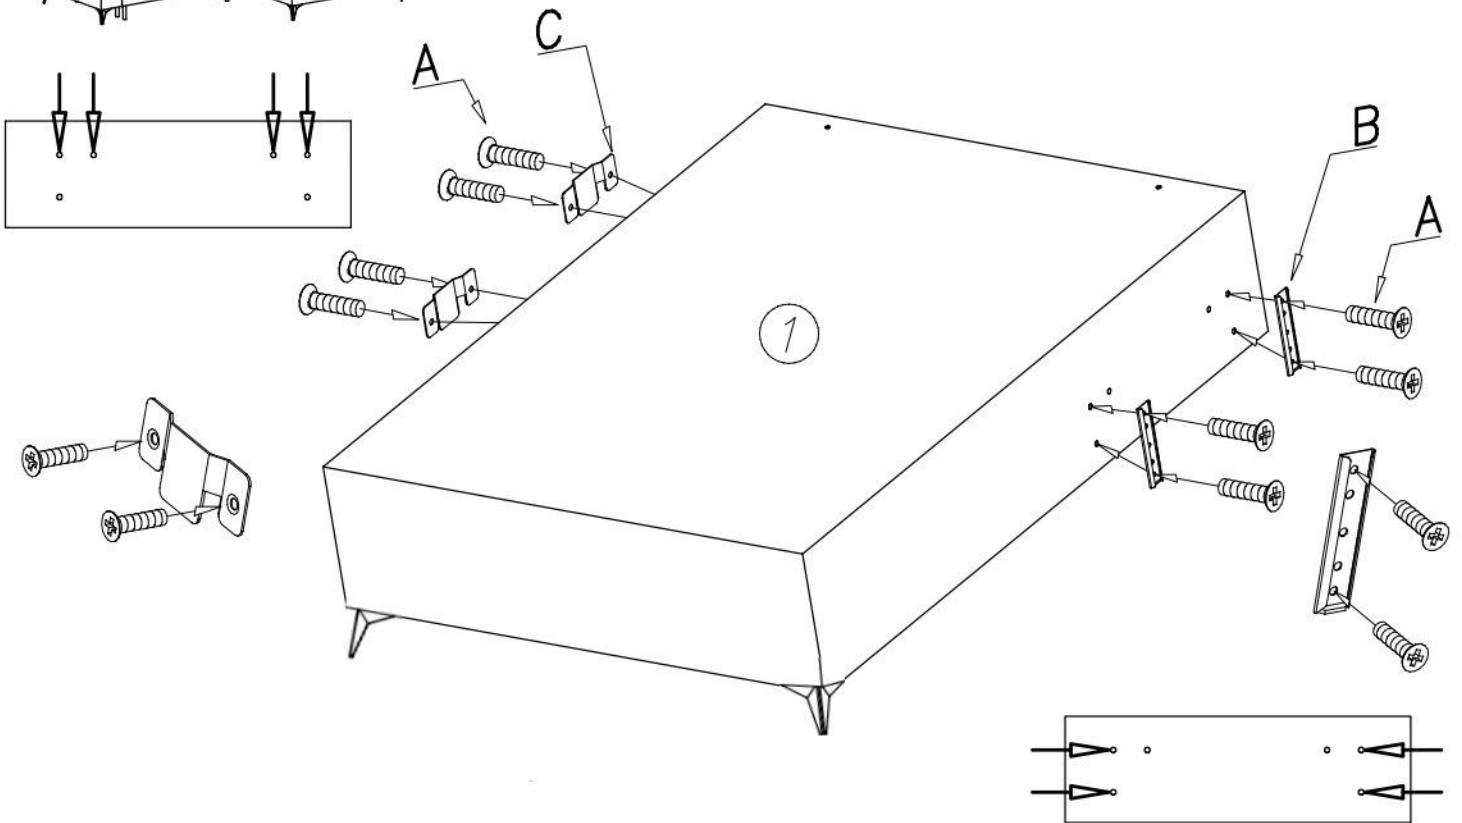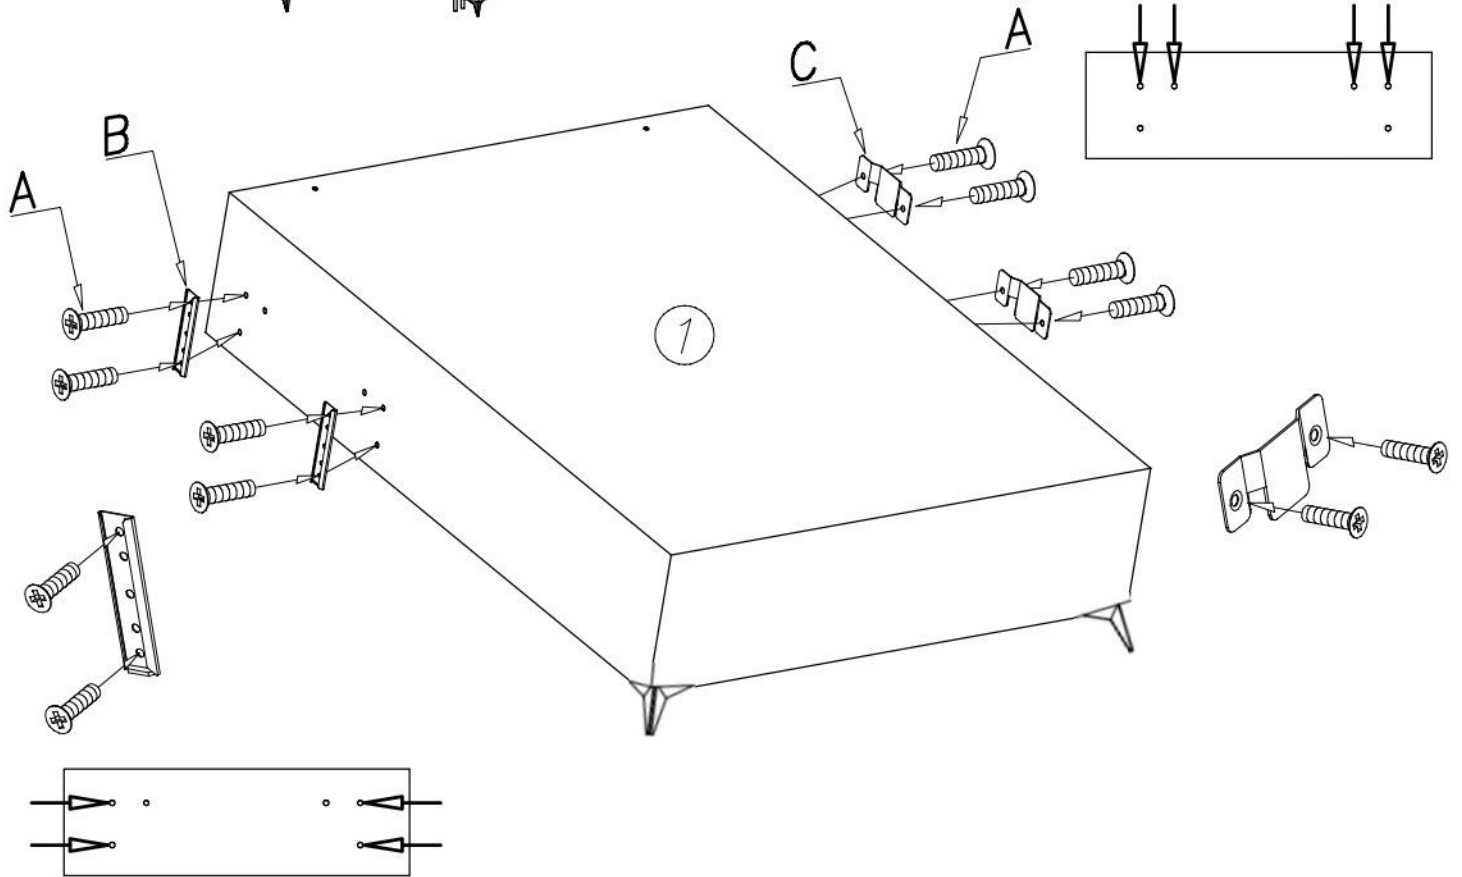

5

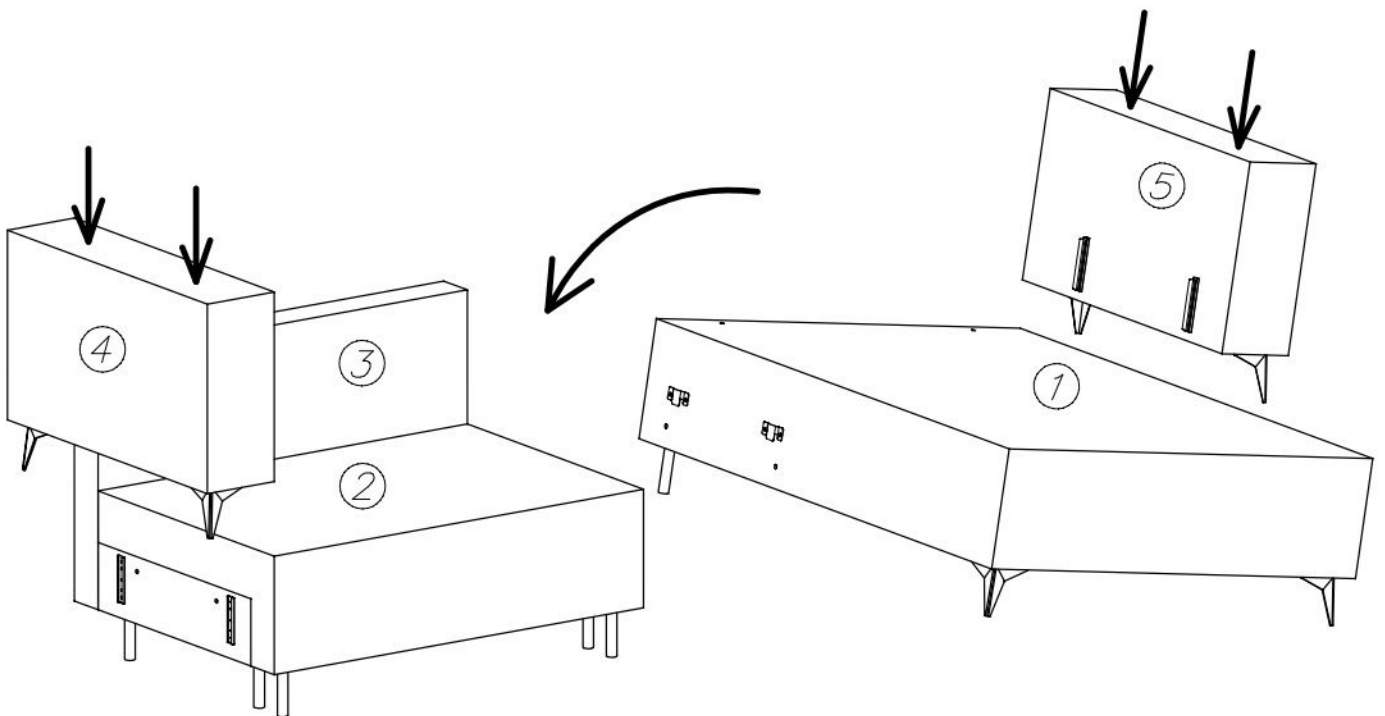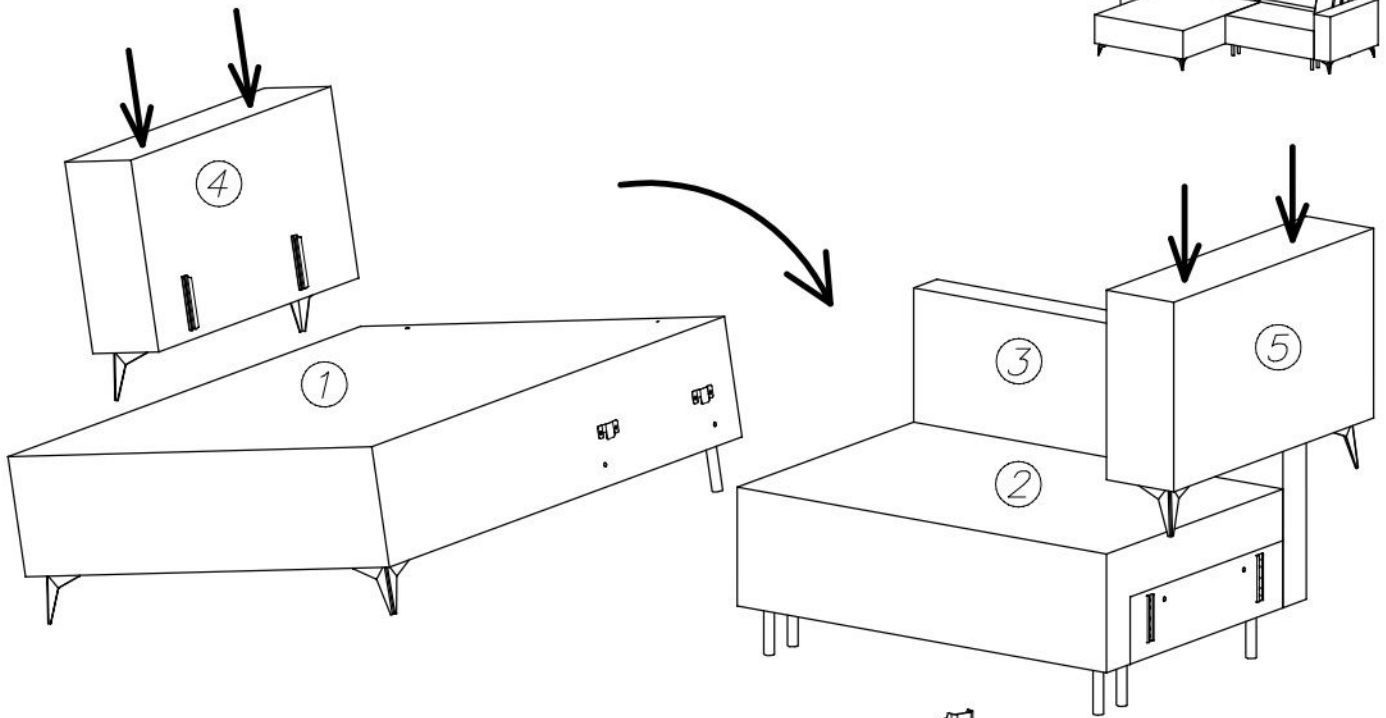

6

