

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromazďování instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу


H Gennyesevés utasítások

Boxspringbett Bali


Polsterbett-Gestoffeerde bed-Tapicerowane łóżko-Tapıtate pat-Upholstered bed-Мягкая кровать-ятак kapitone-Letto imbottito-Lit rembourré
Čakuné postele čalounené postele kápitózott ágy

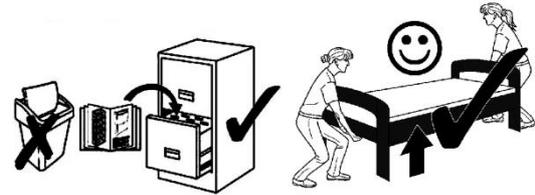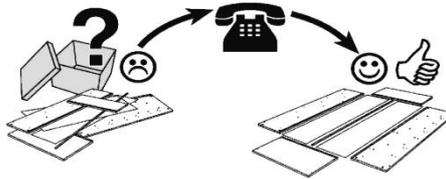

90cm, 100cm, 120cm




4 X

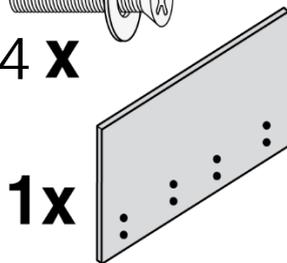

1 X

Schrauben in Kopfteilverpackung enthalten


1 X

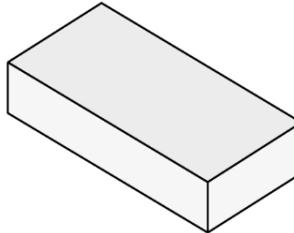


4 X




1 X

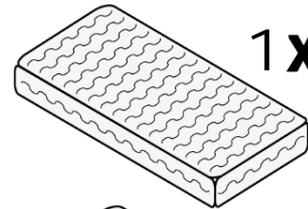


1 X

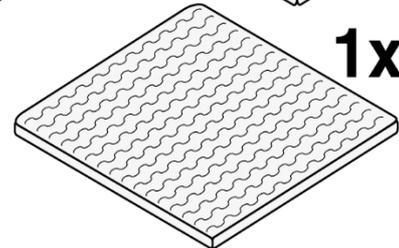

140 cm




8 X

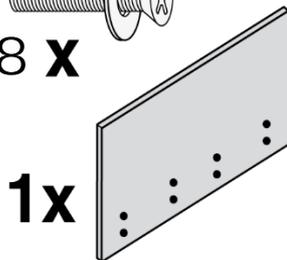

1 X

Schrauben in Kopfteilverpackung enthalten


2 X

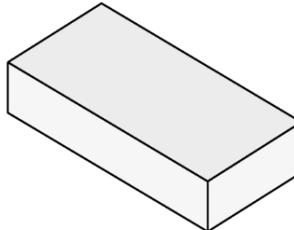


8 X




1 X

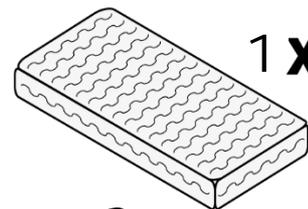


1 X

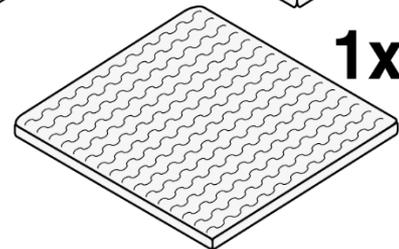

160cm, 180cm, 200cm




8 X

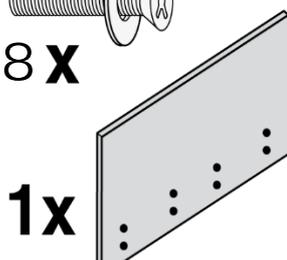

1 X

Schrauben in Kopfteilverpackung enthalten


2 X

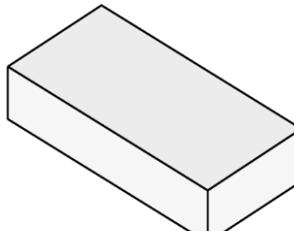


8 X







2 X

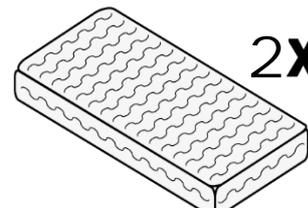

1 X

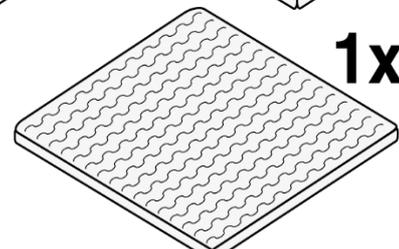

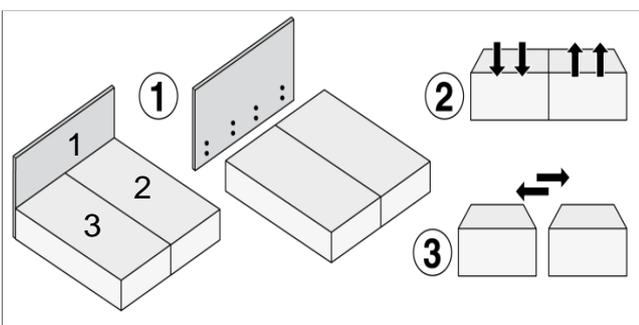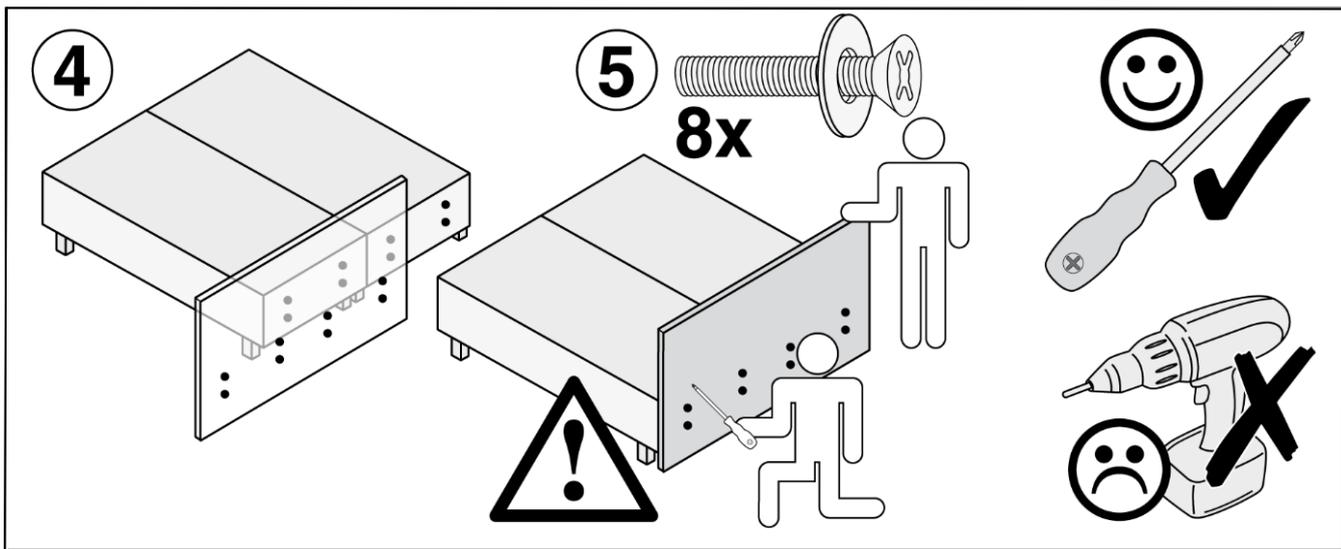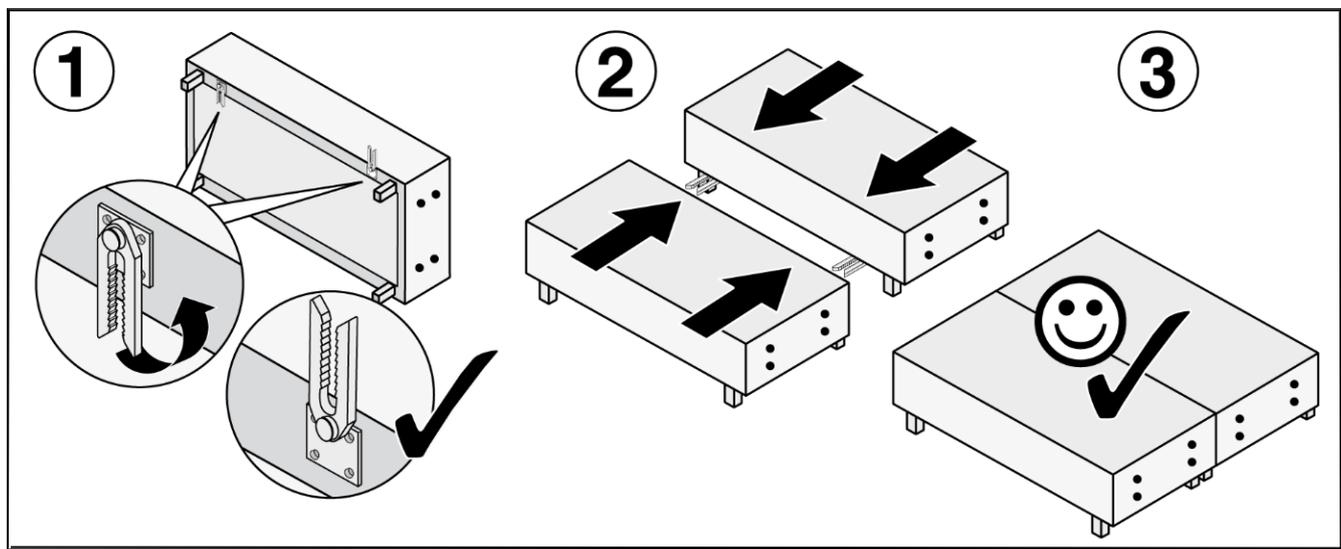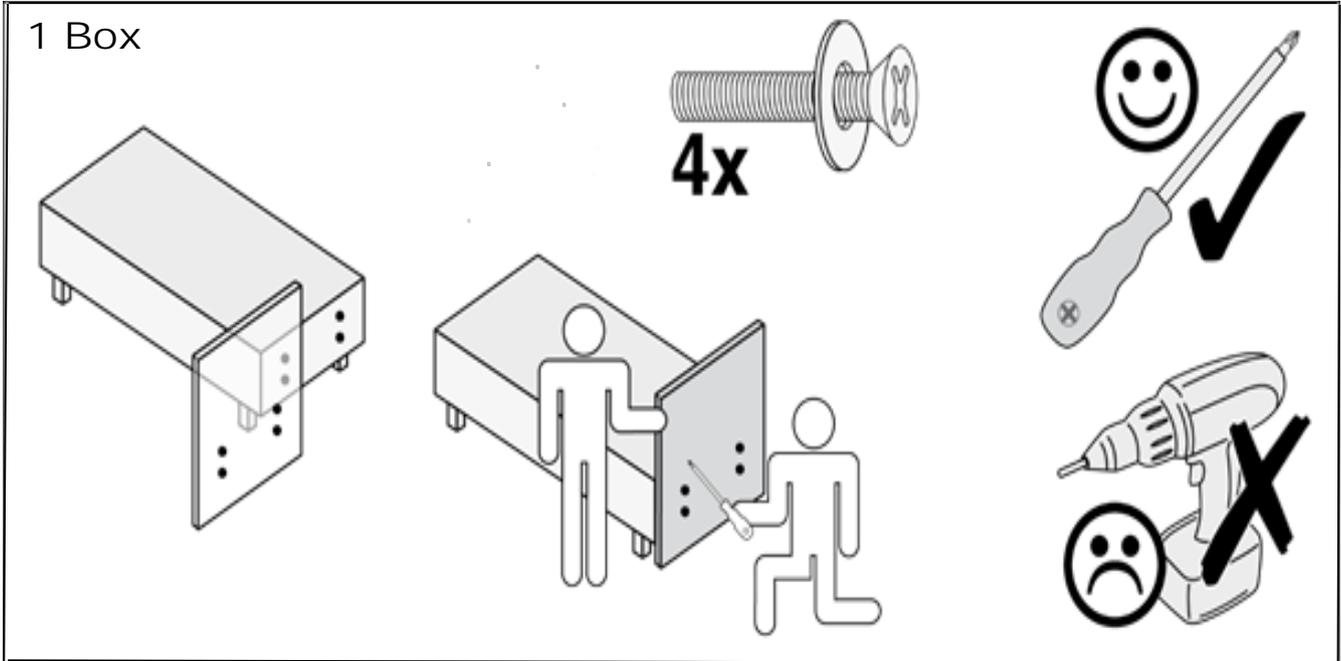

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne

info@elastoflex-betten.de