
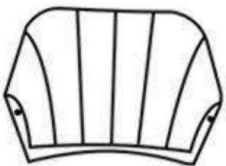
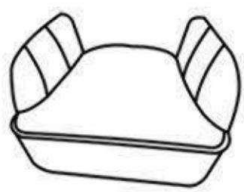

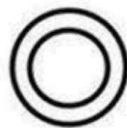
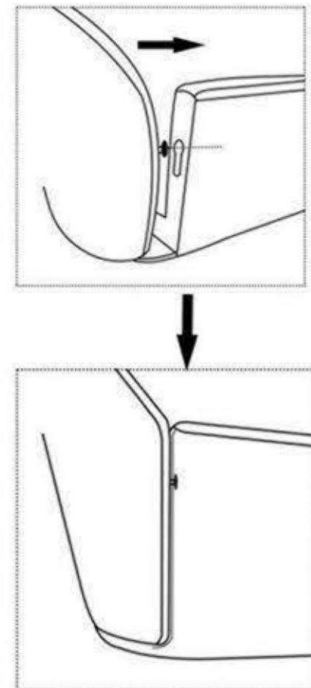



ASSEMBLY INSTRUCTION

Ax1 	Bx1 	Cx4 	Dx12  M6X18mm	Ex2  M6X50mm
Fx2 	Gx1 			


1. As shown in the figure, align the holes to install the backrest, buckle backrest on the seat base.

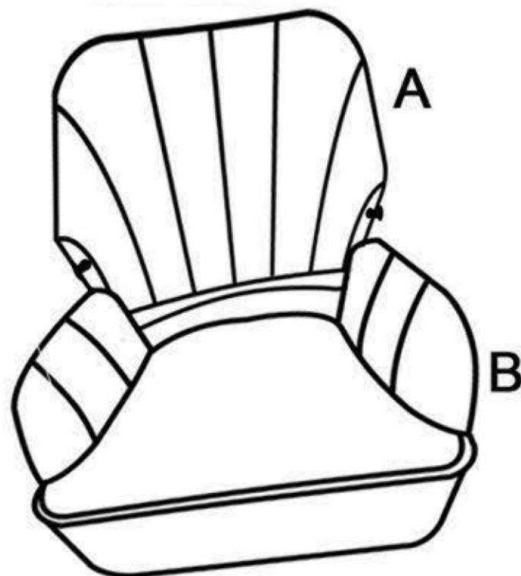

2. Flip up the bottom of product

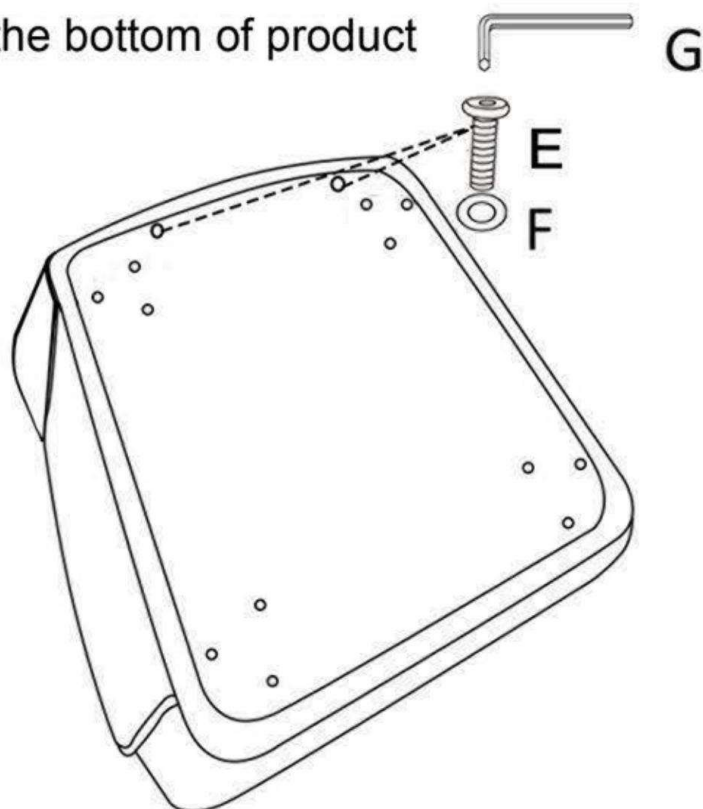

3. As shown in the figure, Please do not tighten all the screws at once until all the screws are in and then tighten them all.




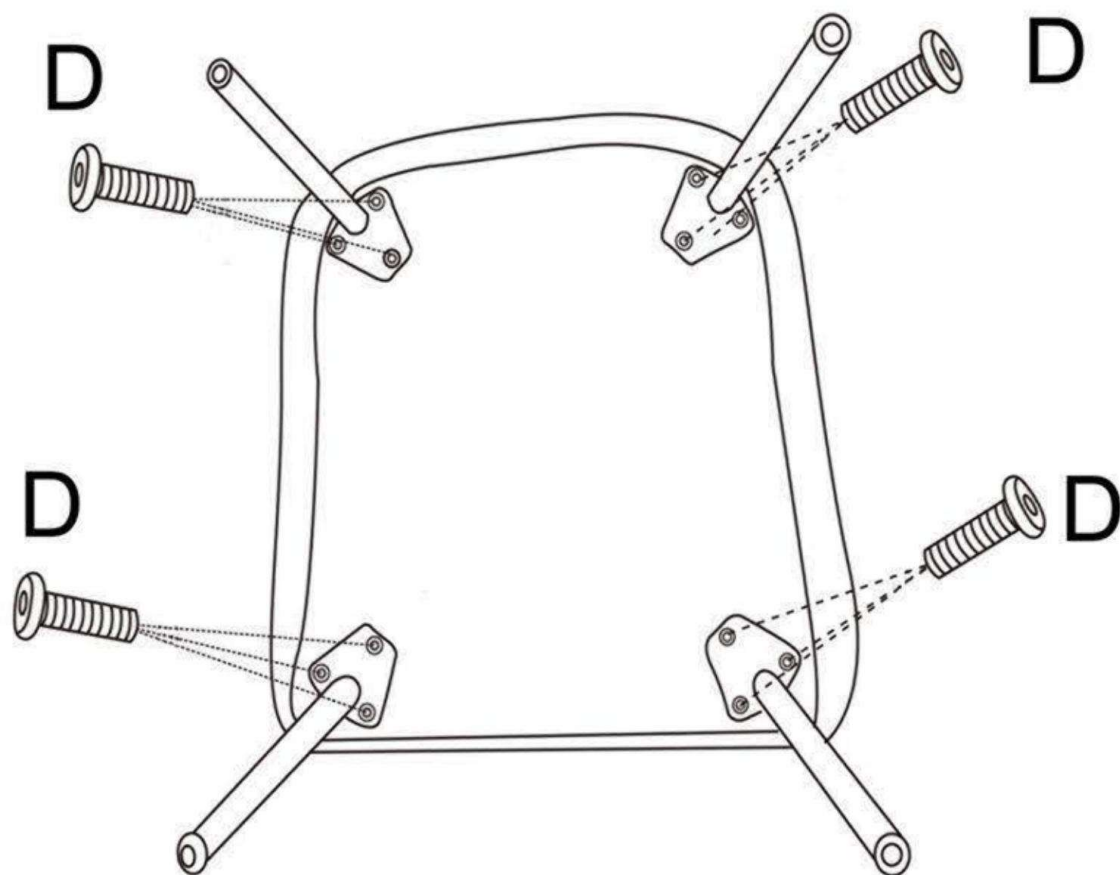


4.FINISH!





Please level me


BAUANLEITUNG

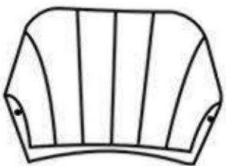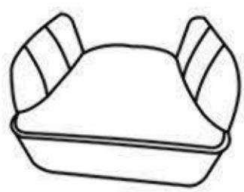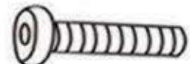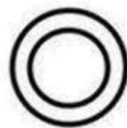Ax1 	Bx1 	Cx4 	Dx12  M6X18mm	Ex2  M6X50mm
Fx2 	Gx1 			


1. Richten Sie die Löcher zum Anbringen der Rückenlehne wie in der Abbildung gezeigt aus. Schnallen Sie die Rückenlehne an der Sitzfläche an

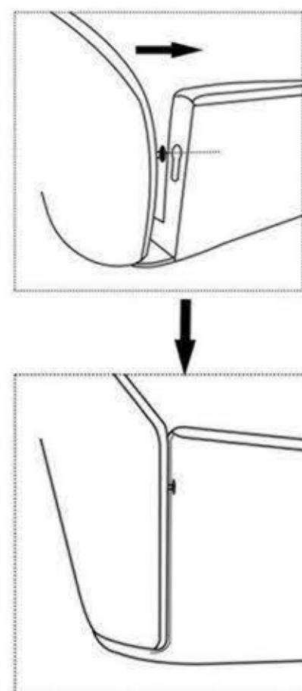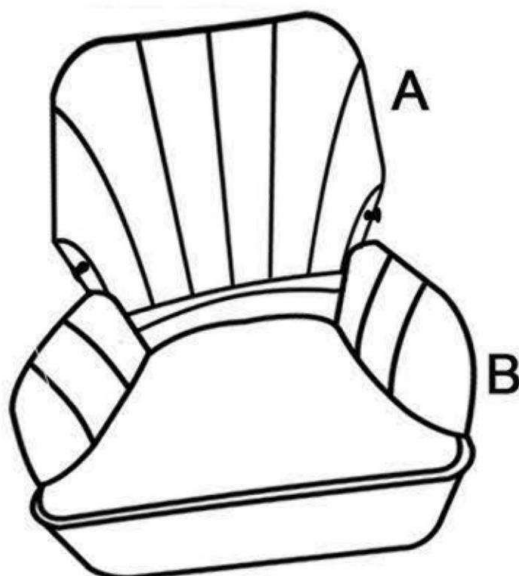

2. Klappen Sie die Unterseite des Produkts hoch

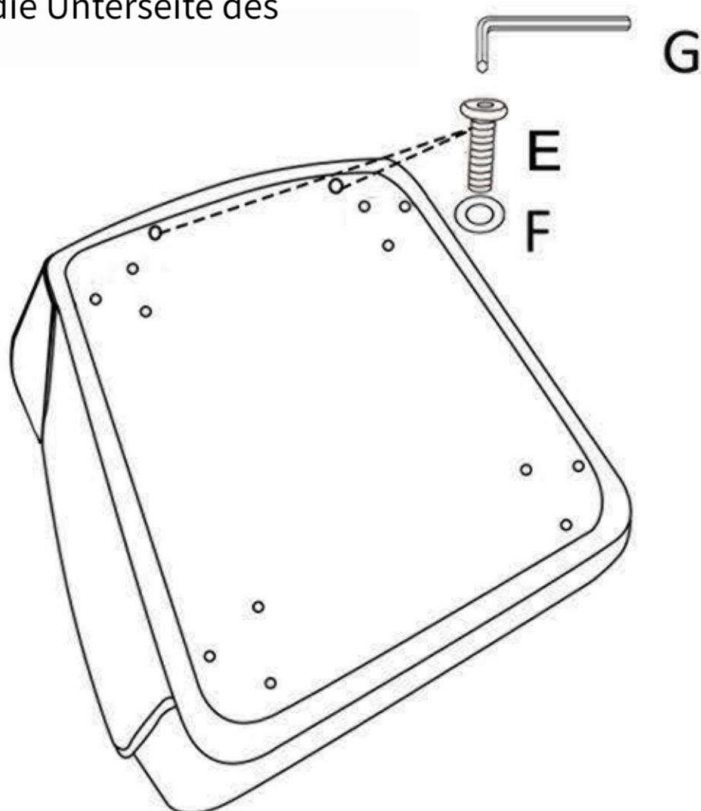

3. Wie in der Abbildung gezeigt, ziehen Sie bitte nicht alle Schrauben auf einmal fest, bis alle Schrauben drin sind und dann alle festziehen.

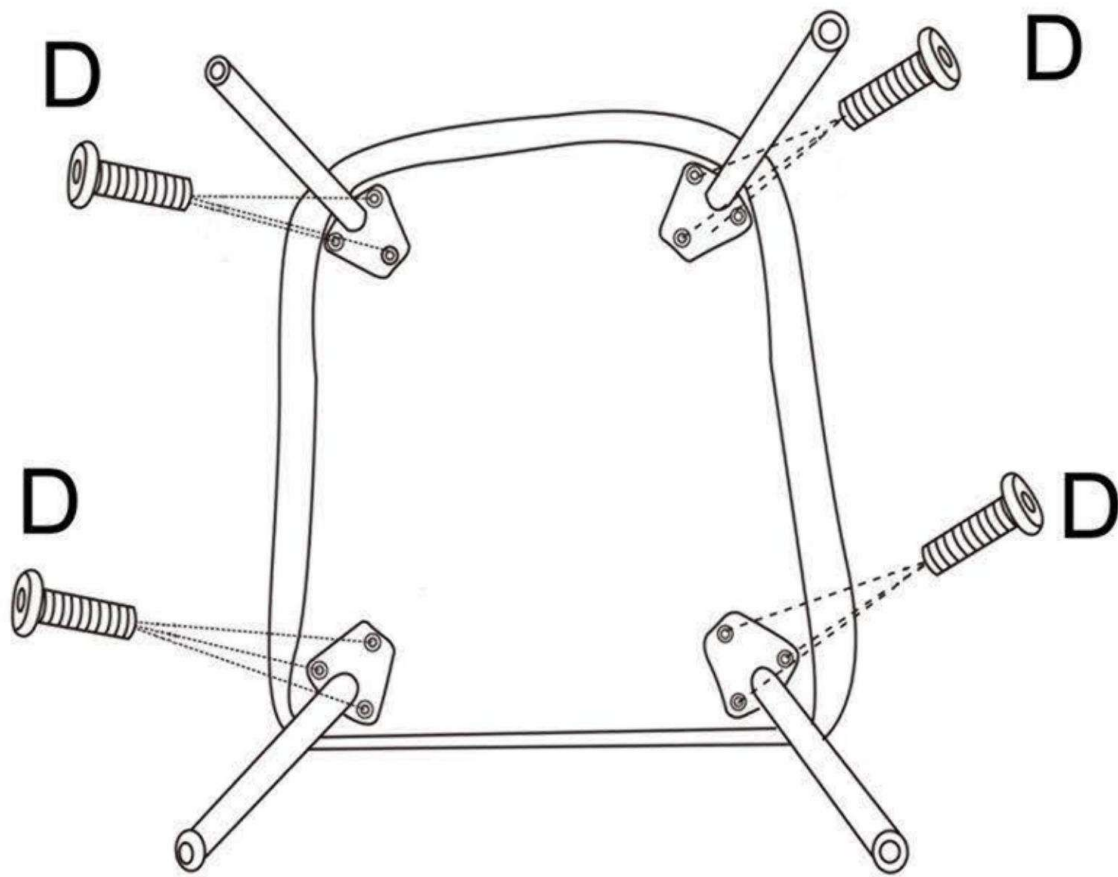

4. FERTIG!



Bitte nivelliere mich