

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromážďovací instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу


H Gennyesevés utasítások

SONORA


Polsterbett-Gestoffeerde bed-Tapicerowane łóżko-Tapítate pat-Upholstered bed-Мягкая кровать-yatak kapitone-Letto imbottito-Lit rembourré
Čalouněná postele čalouněná postele kárpizovaná ágy

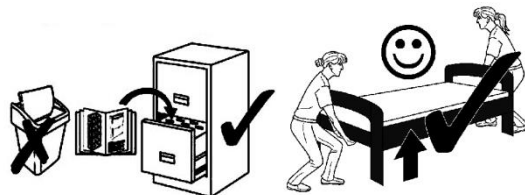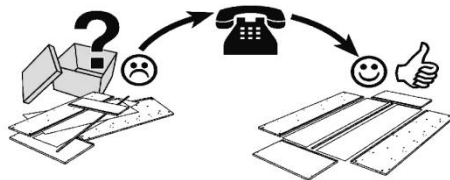

90/120 cm




4x

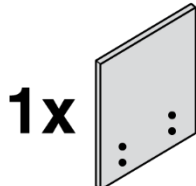


1x


1x

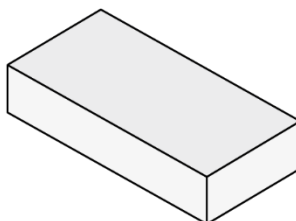


4x




1x

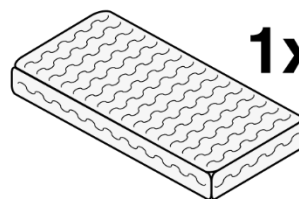


1x

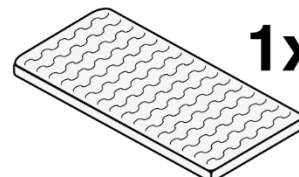

140 cm




8x

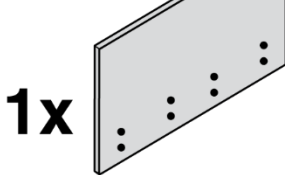


1x


2x

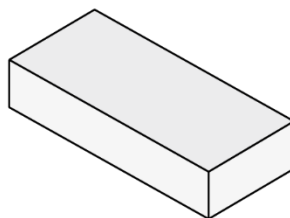


8x




1x

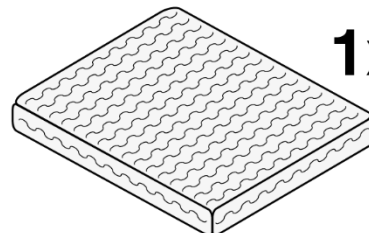


1x

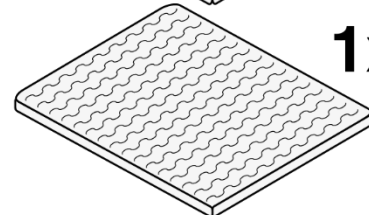

160/180/200 cm




8x

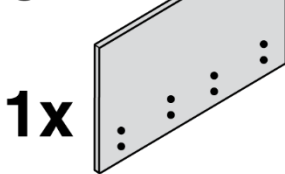

1x


2x

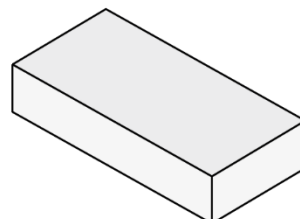


8x







2x

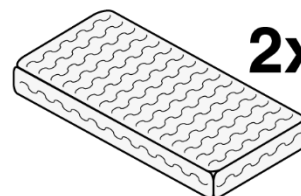

1x

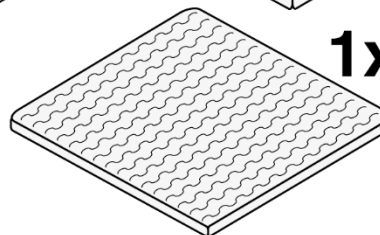

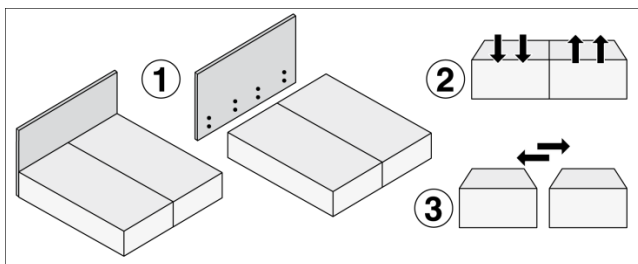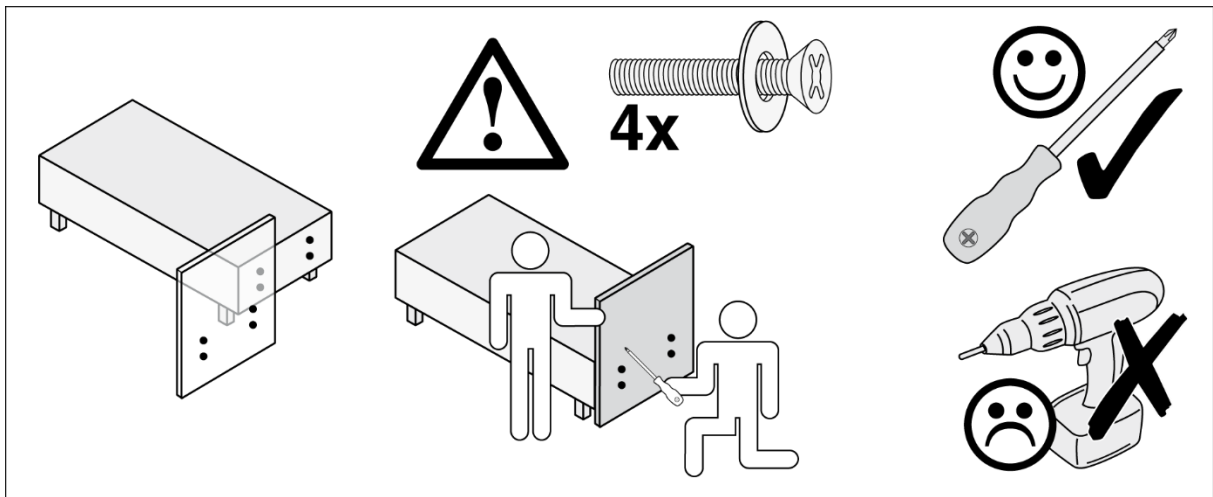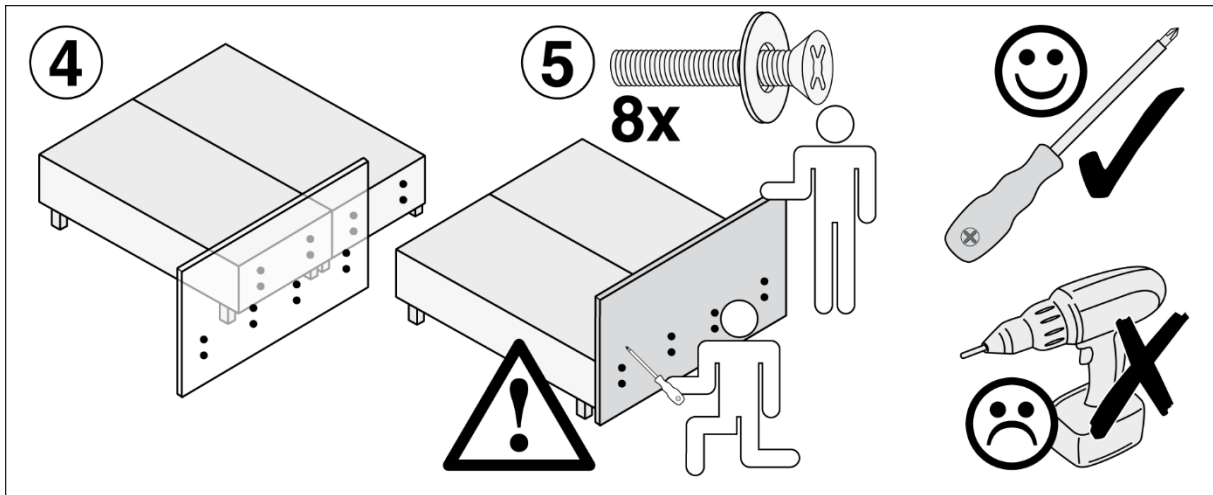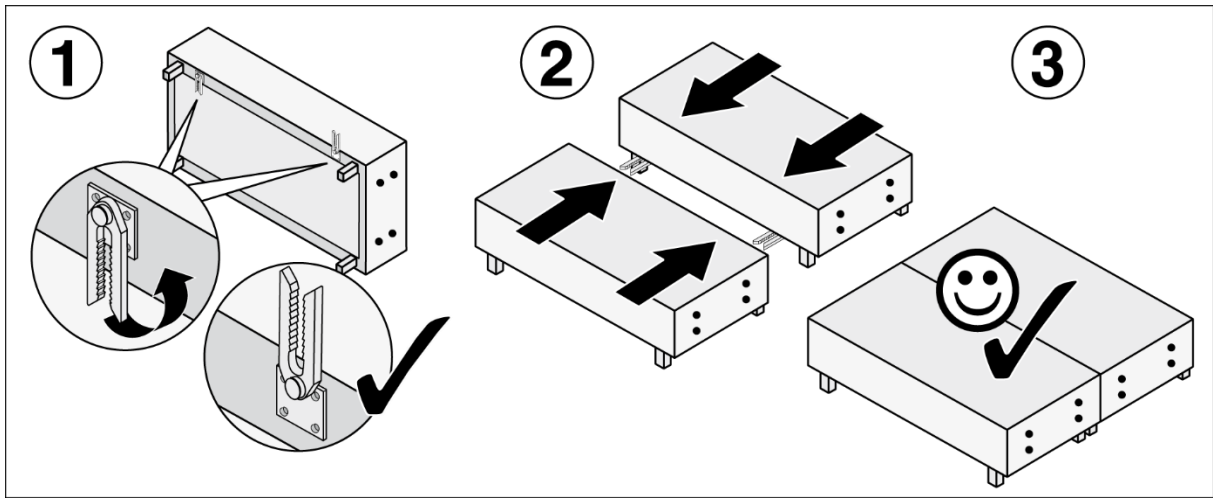

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Str. 123
32584 Löhne / Germany