



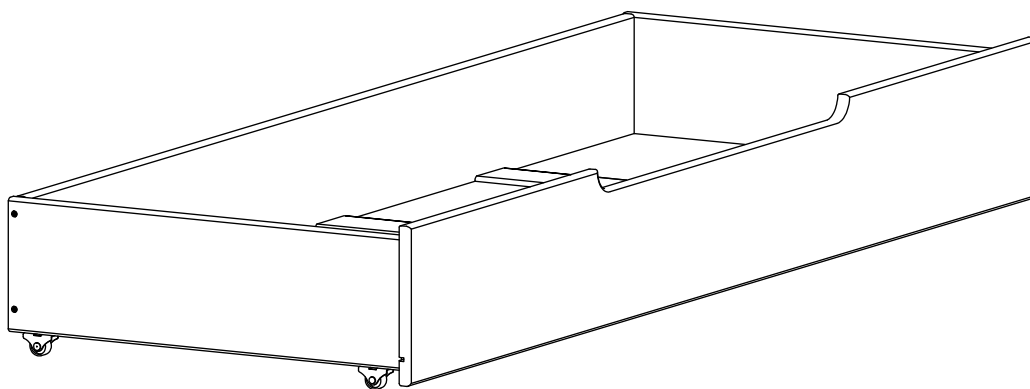










Progress / Zenna / NXT Drawer for Single Bed

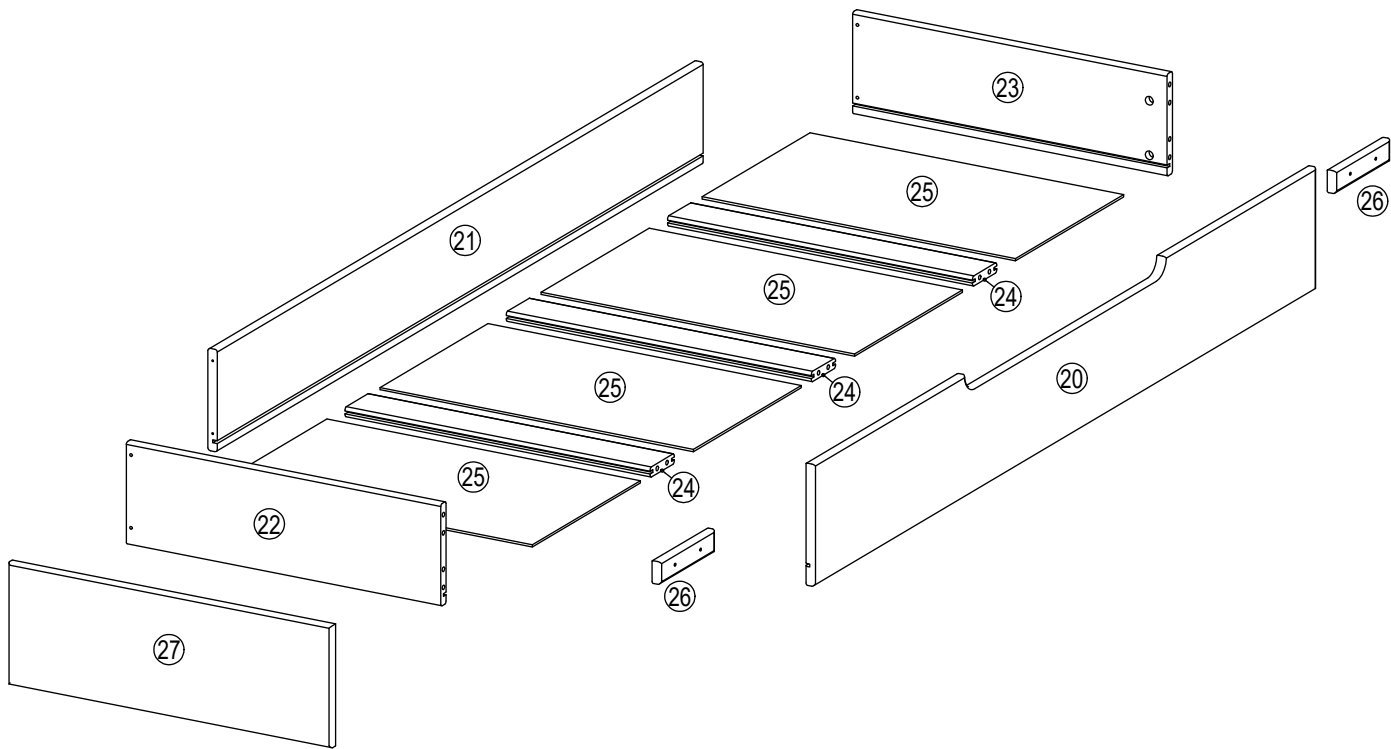






A26  10 x ø8 x 40mm	B01  4 x ø15 x 12,5mm	B10  4 x cc34, ø5 x 11mm	D11  38 x ø3,5 x 15mm	D35  14 x ø4 x 35mm
T90  4 x ø28 x 29mm	V02  3 x 20 x 20 x 16 x 2mm	V50  6 x 75 x 20 x 2mm		

1



A26  10 x ø8 x 40mm	D11  8 x ø3,5 x 15mm	T90  4 x ø28 x 29mm
--	---	---

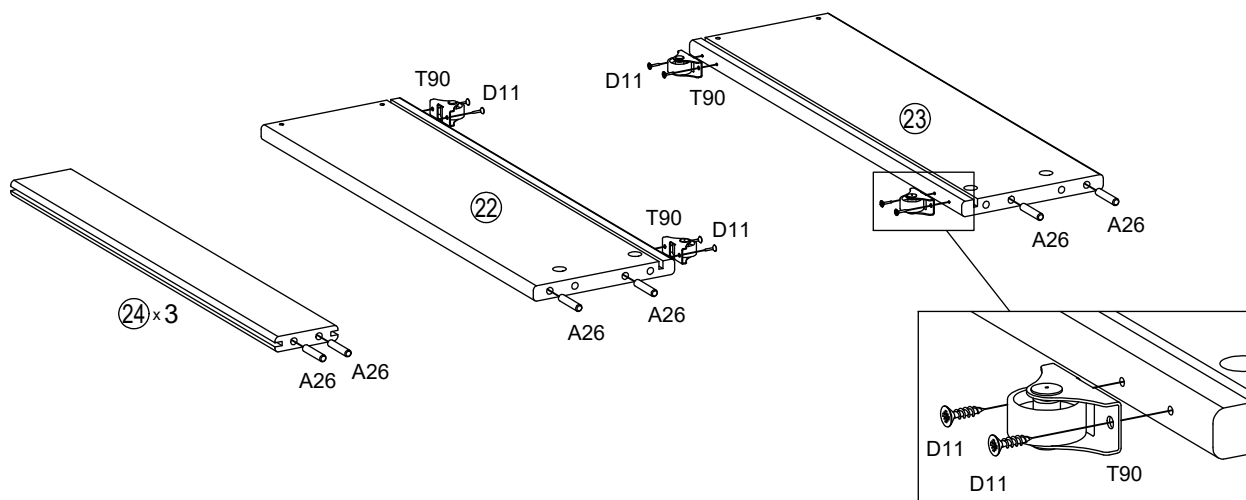




2

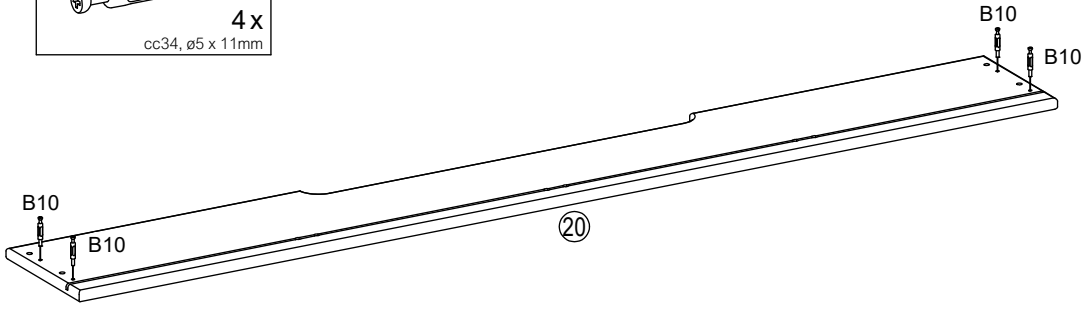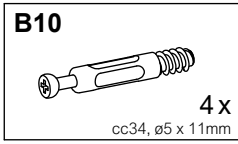





3

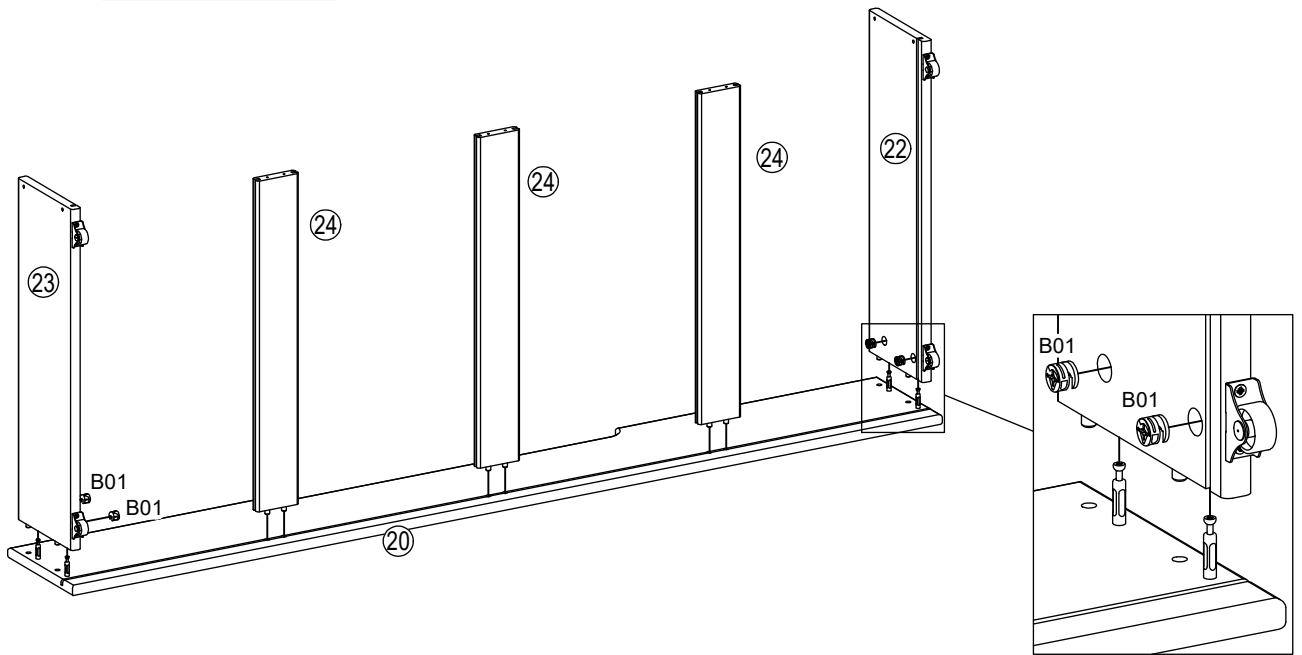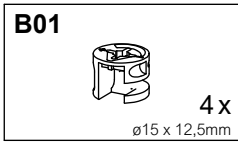





4

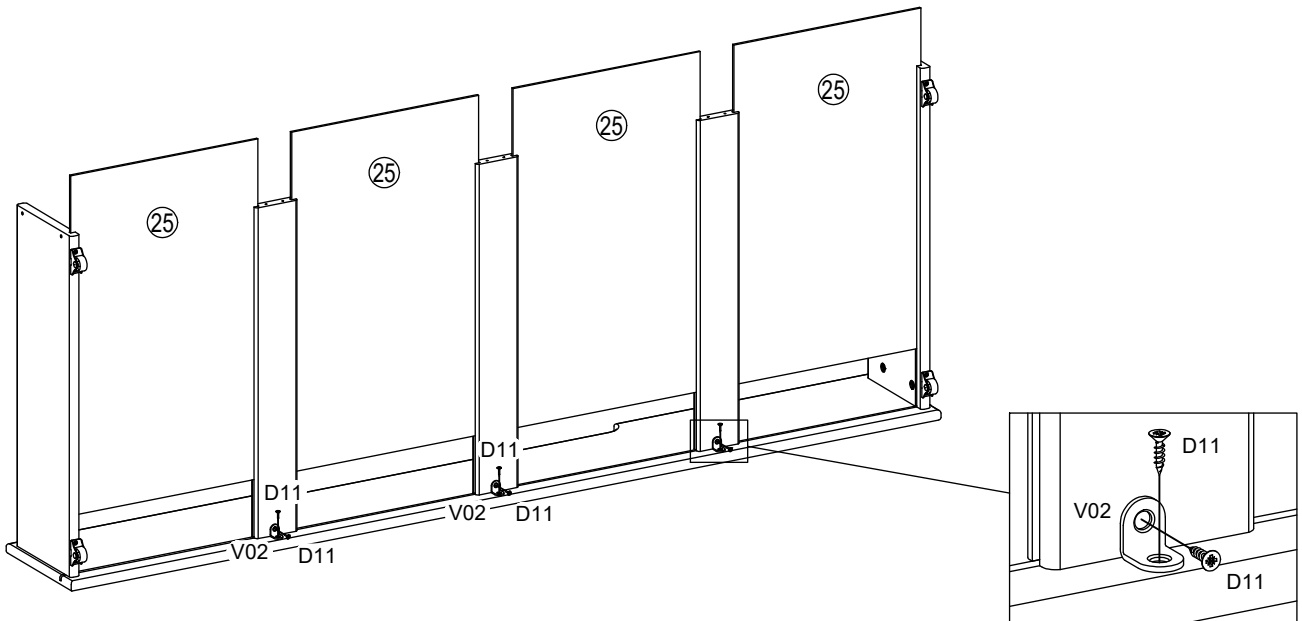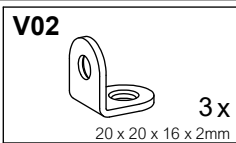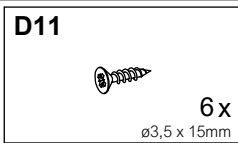



5

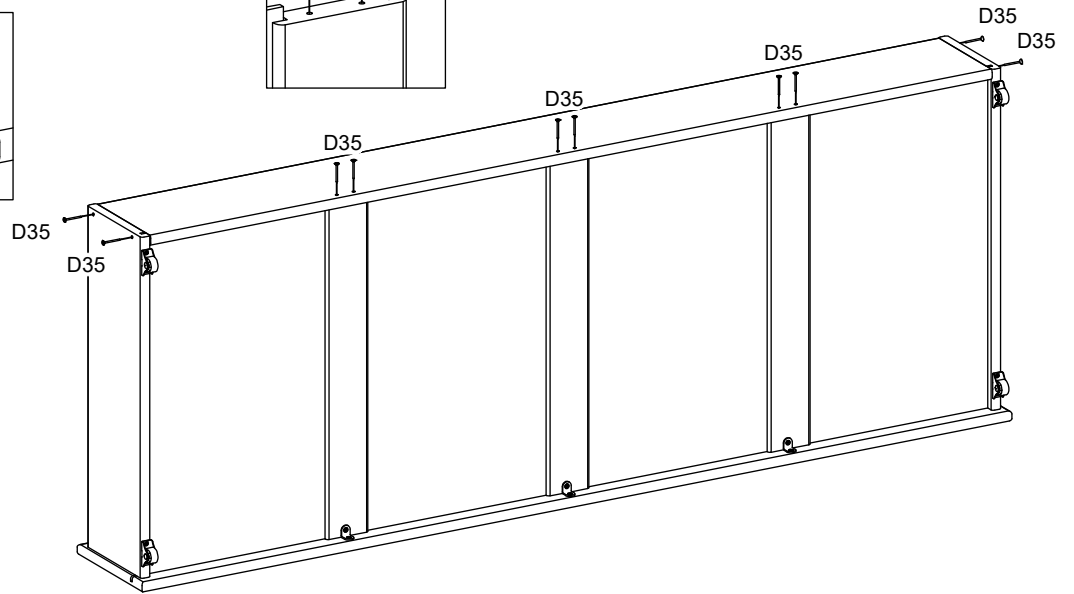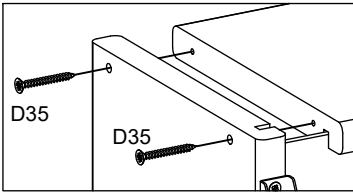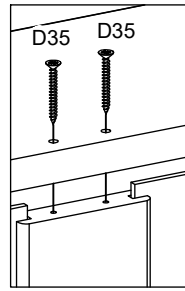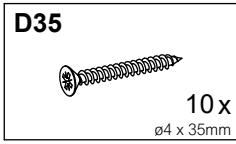


6

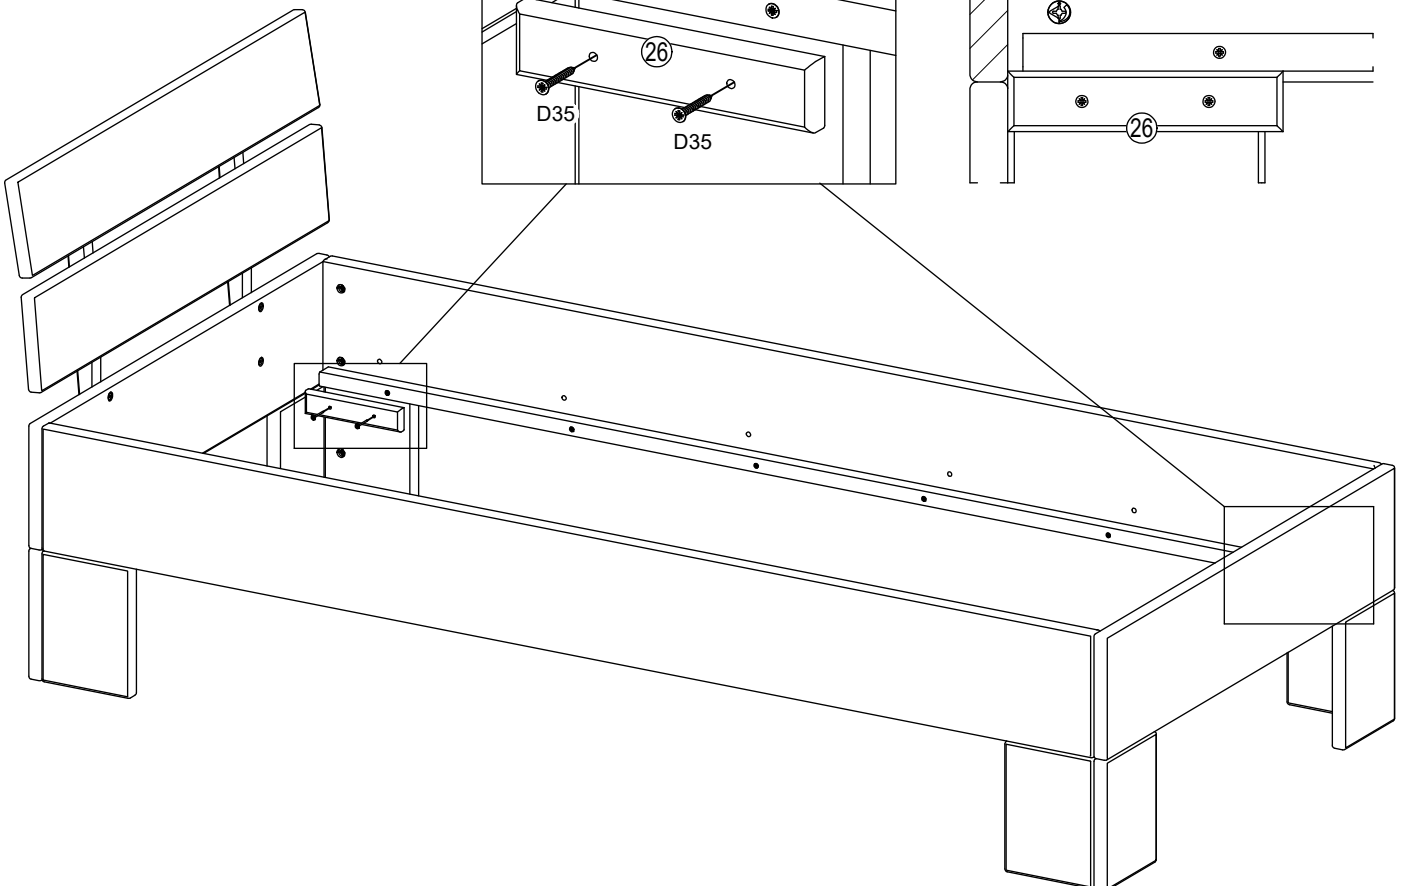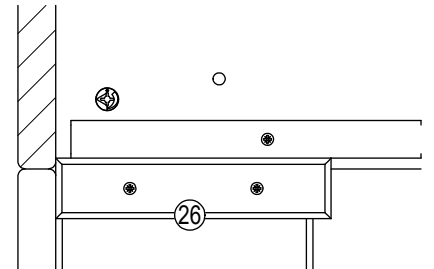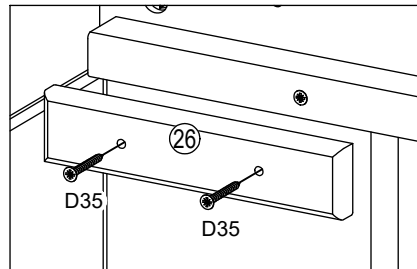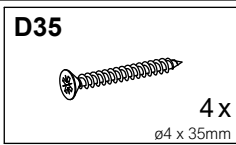


7

D11  12 x ø3,5 x 15mm	V50  6 x 75 x 20 x 2mm
--	---

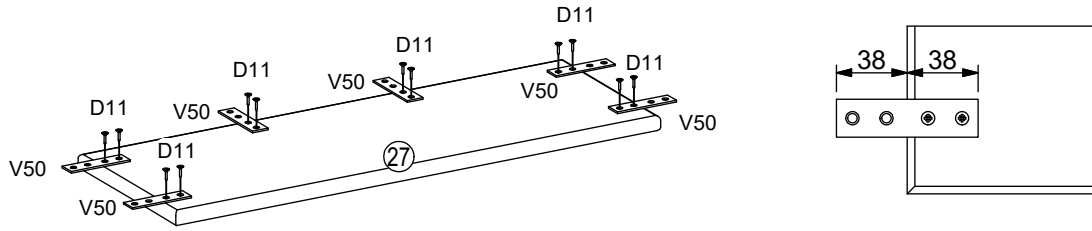

8

D11  12 x ø3,5 x 15mm
--

