

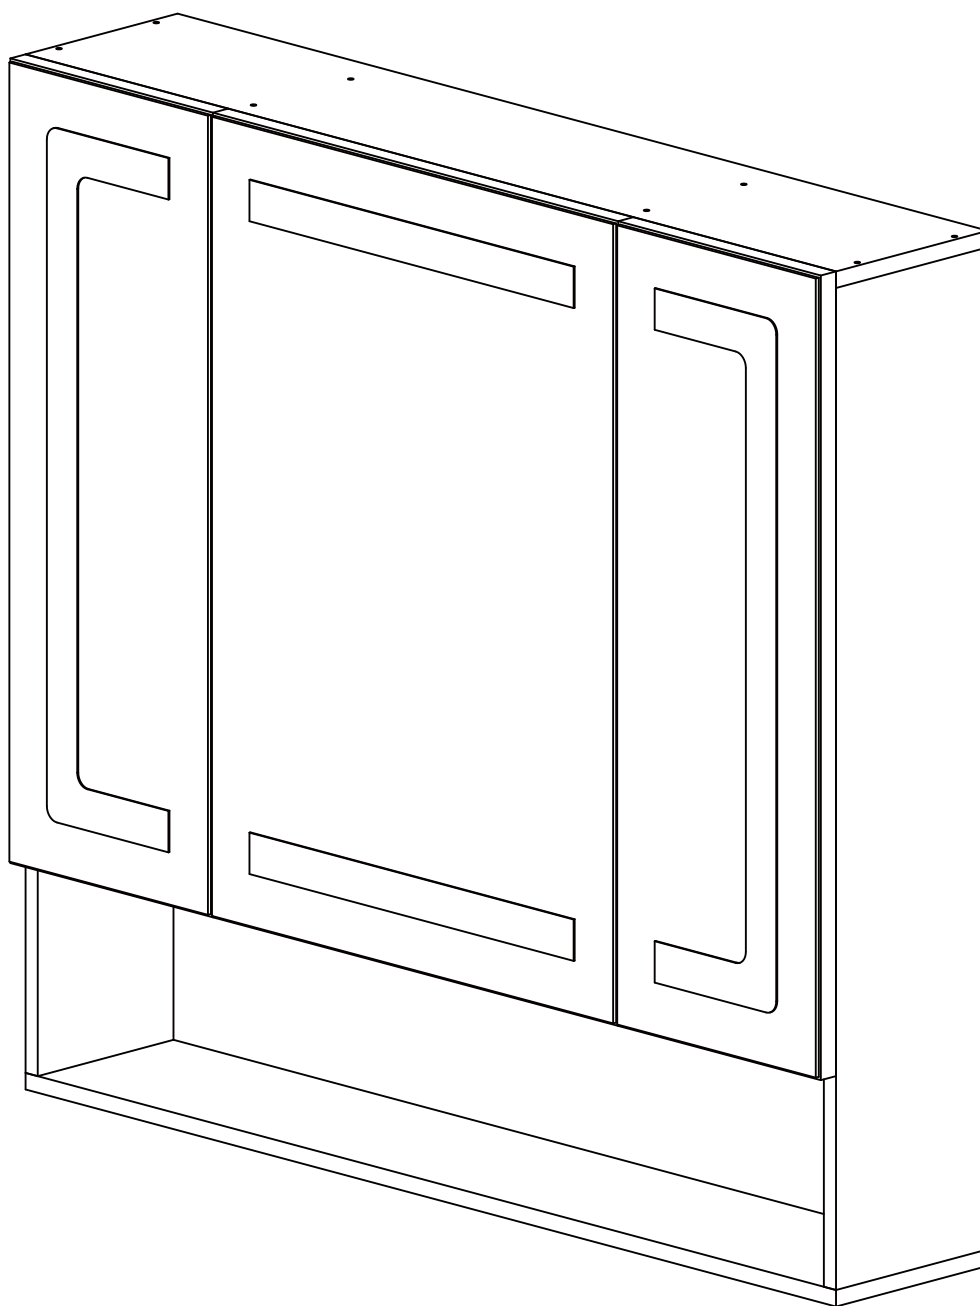


DJ503681

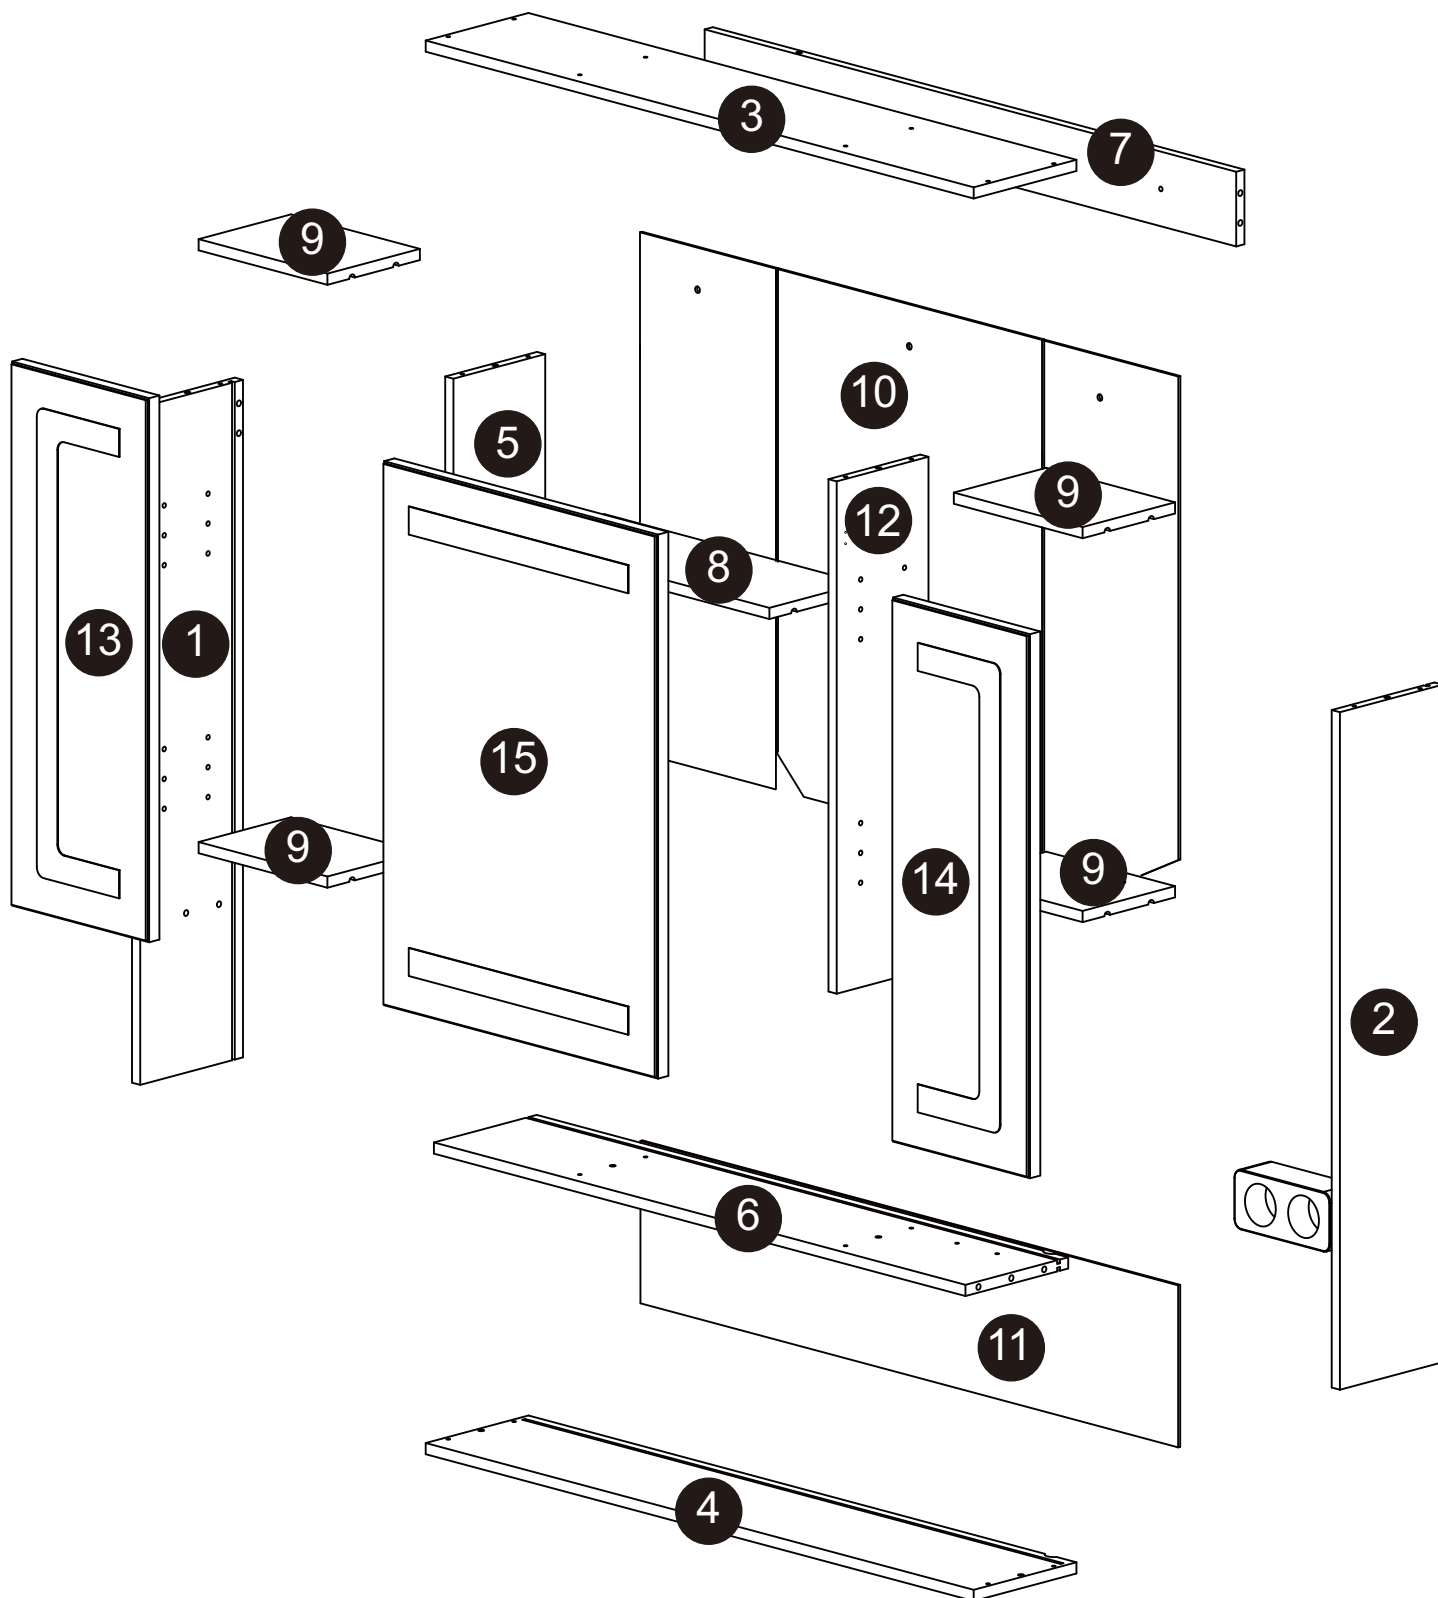


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

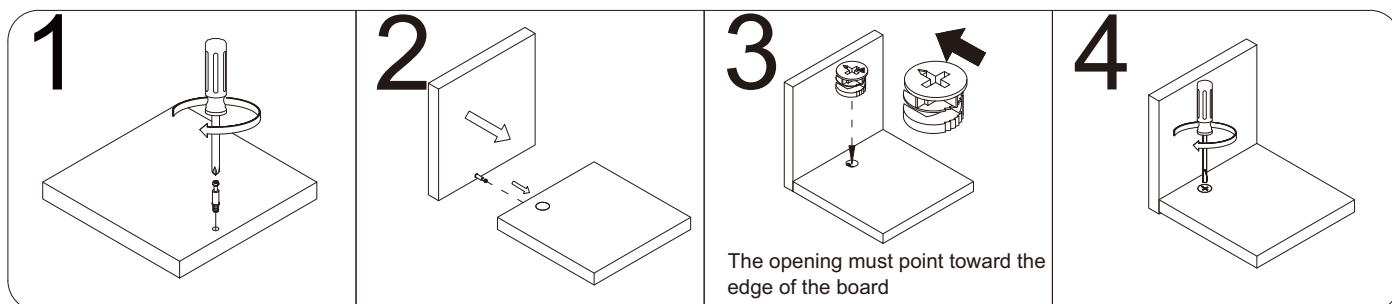


Mounting frame

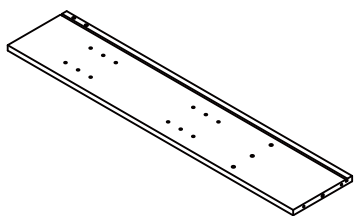


①

x1

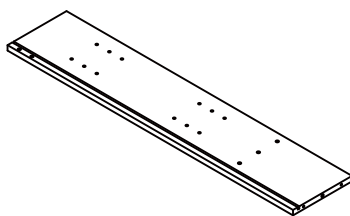


②

x1

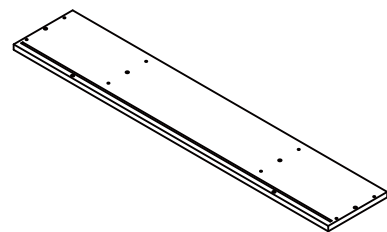


③

x1

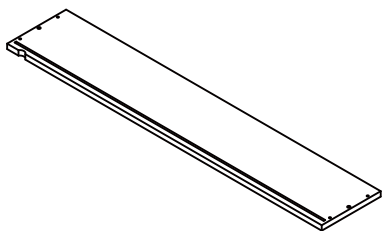


④

x1

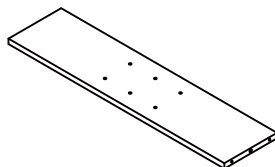


⑤

x1

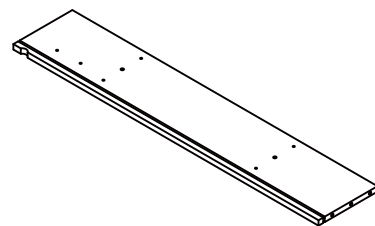


⑥

x1

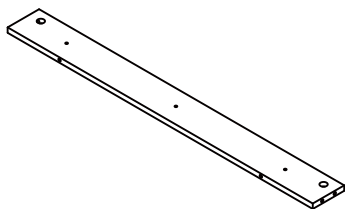


⑦

x1

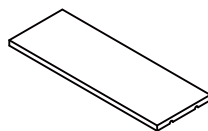


⑧

x1




⑨

x4

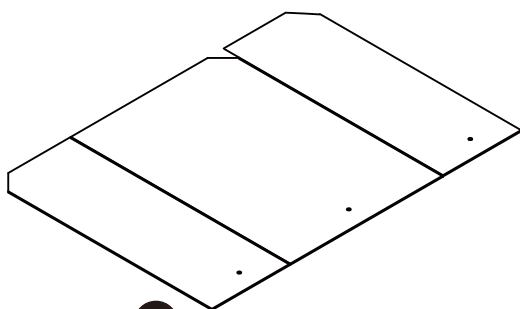


⑩

x1

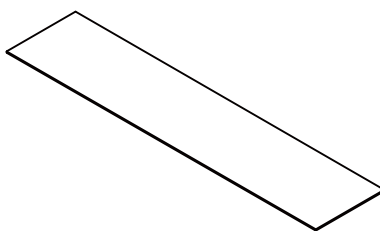


⑪

x1

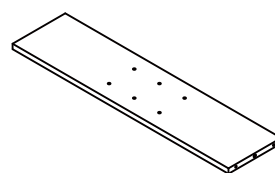


⑫

x1

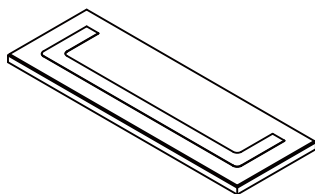


⑬

x1

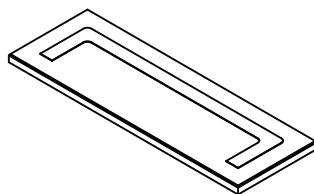


⑭

x1

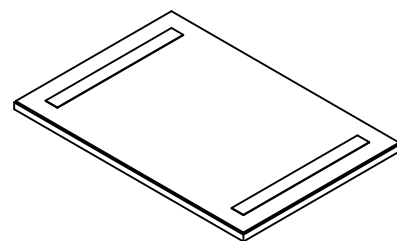


⑮


x1

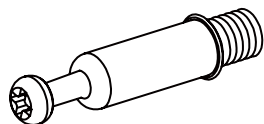


A
x6

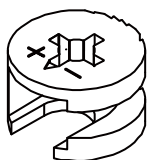


B
x6

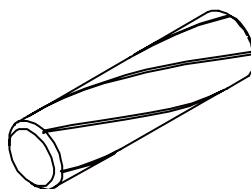


C
x15

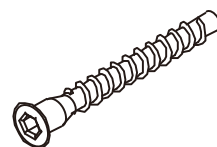

D
x16

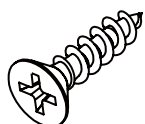


E
x36

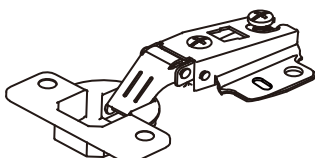


F
x6




H
x20

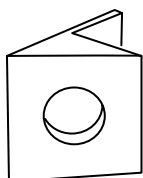


I
x8




J
x12

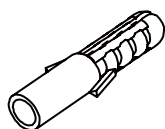

K
x3

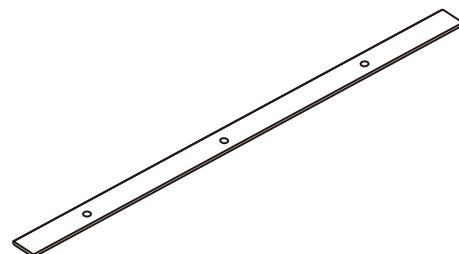

L
x1

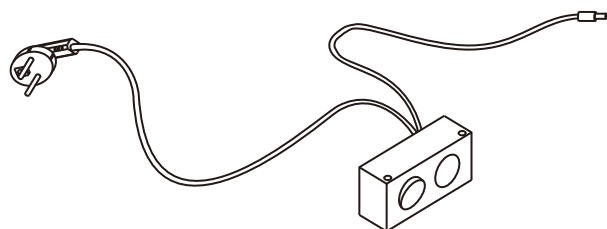

M
x1



N
x2




O
x1

1

A



x6

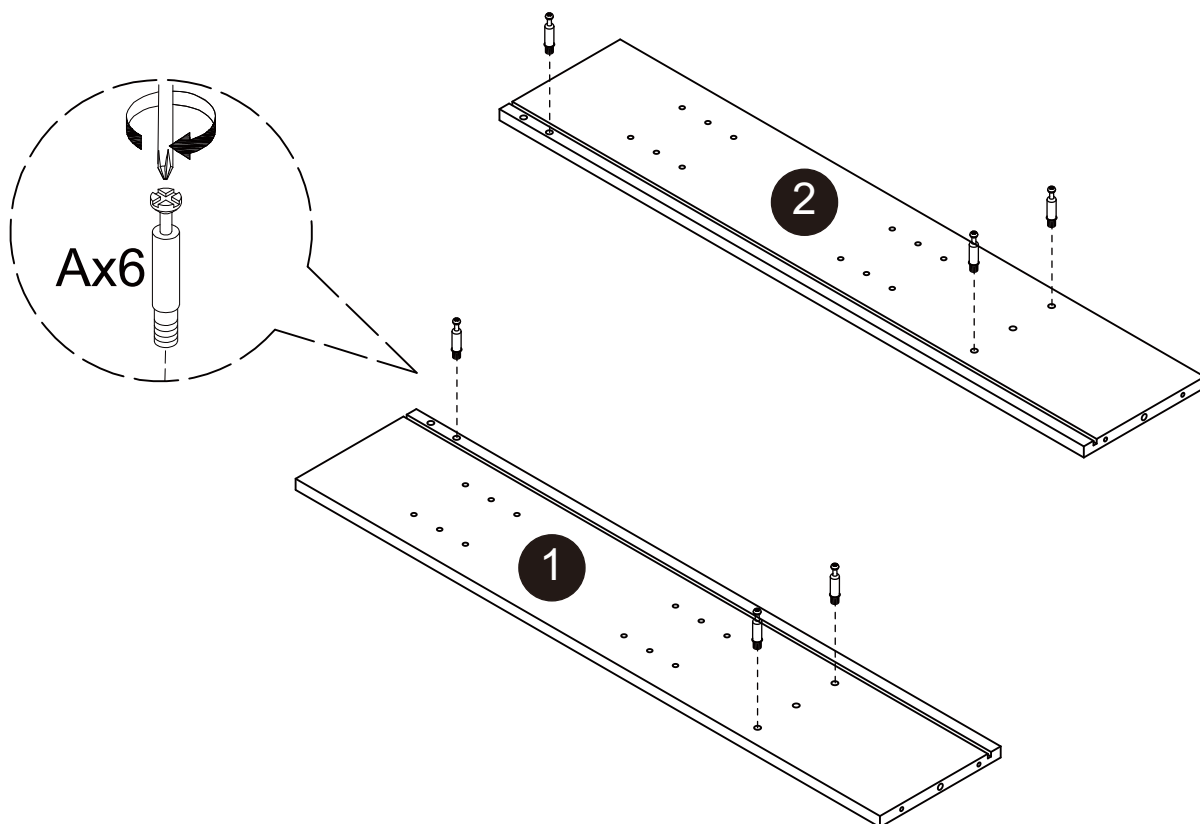

2

M




x1


N




x2

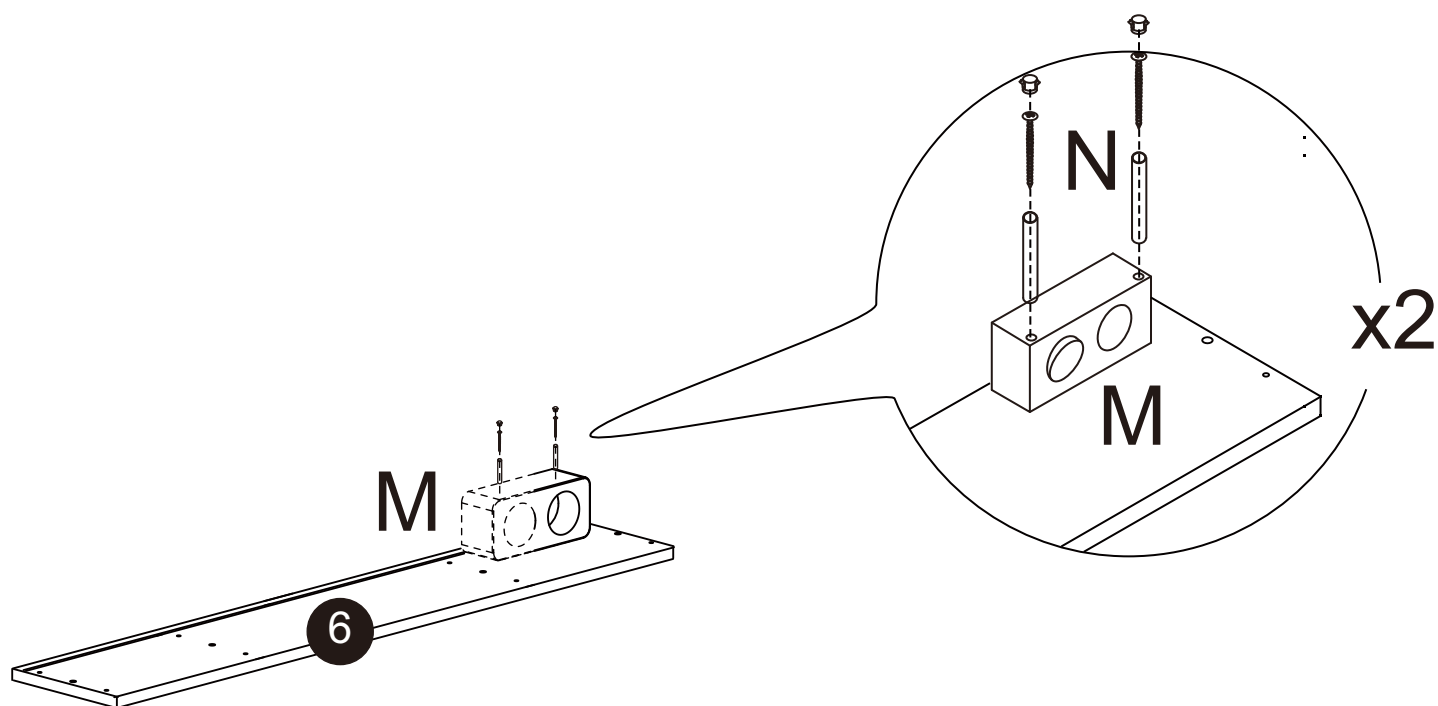

3

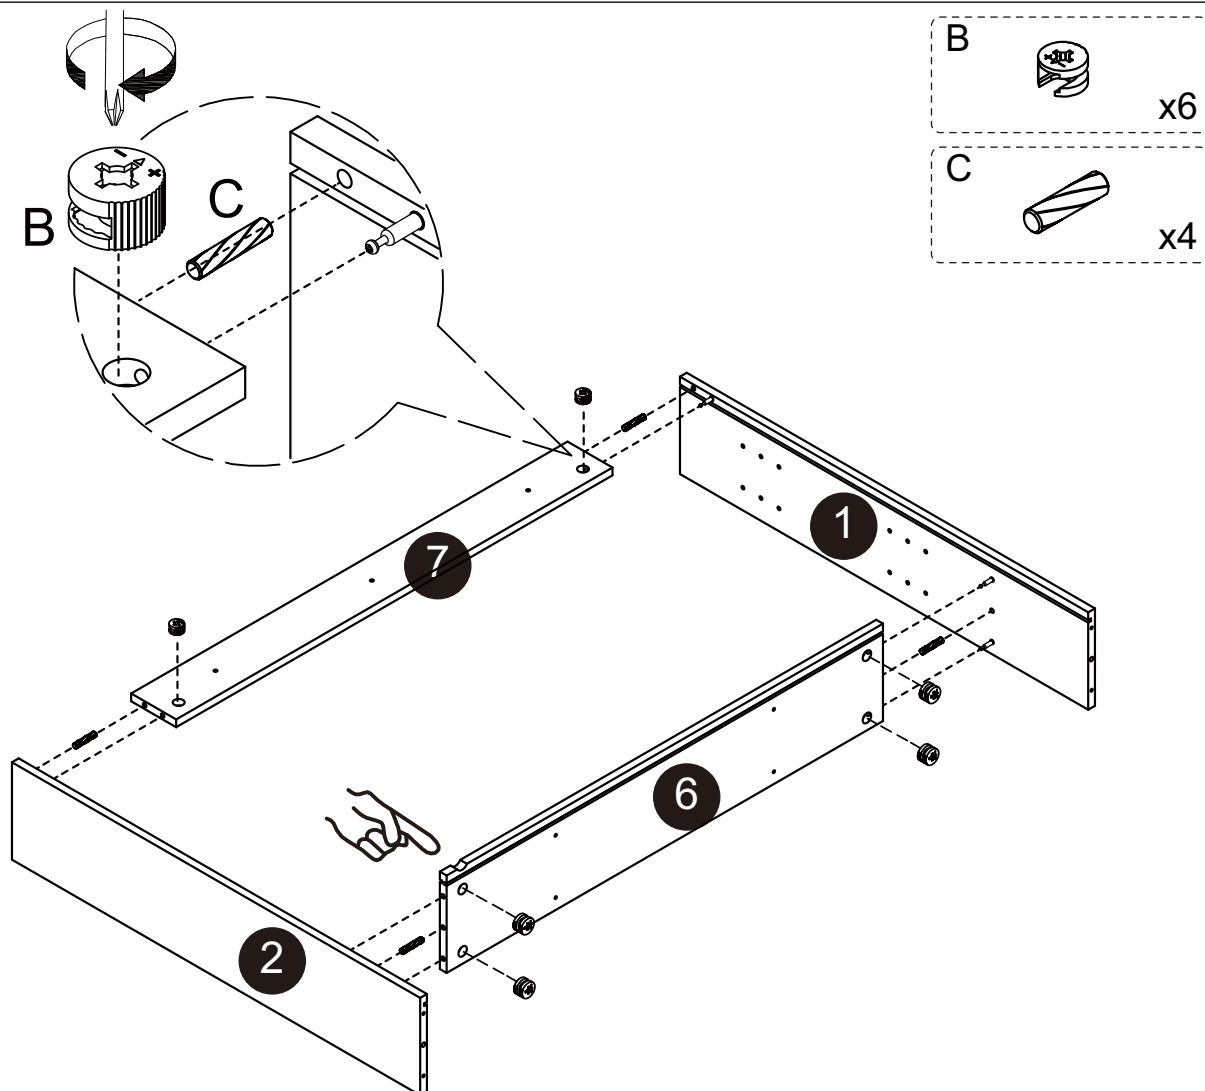


4

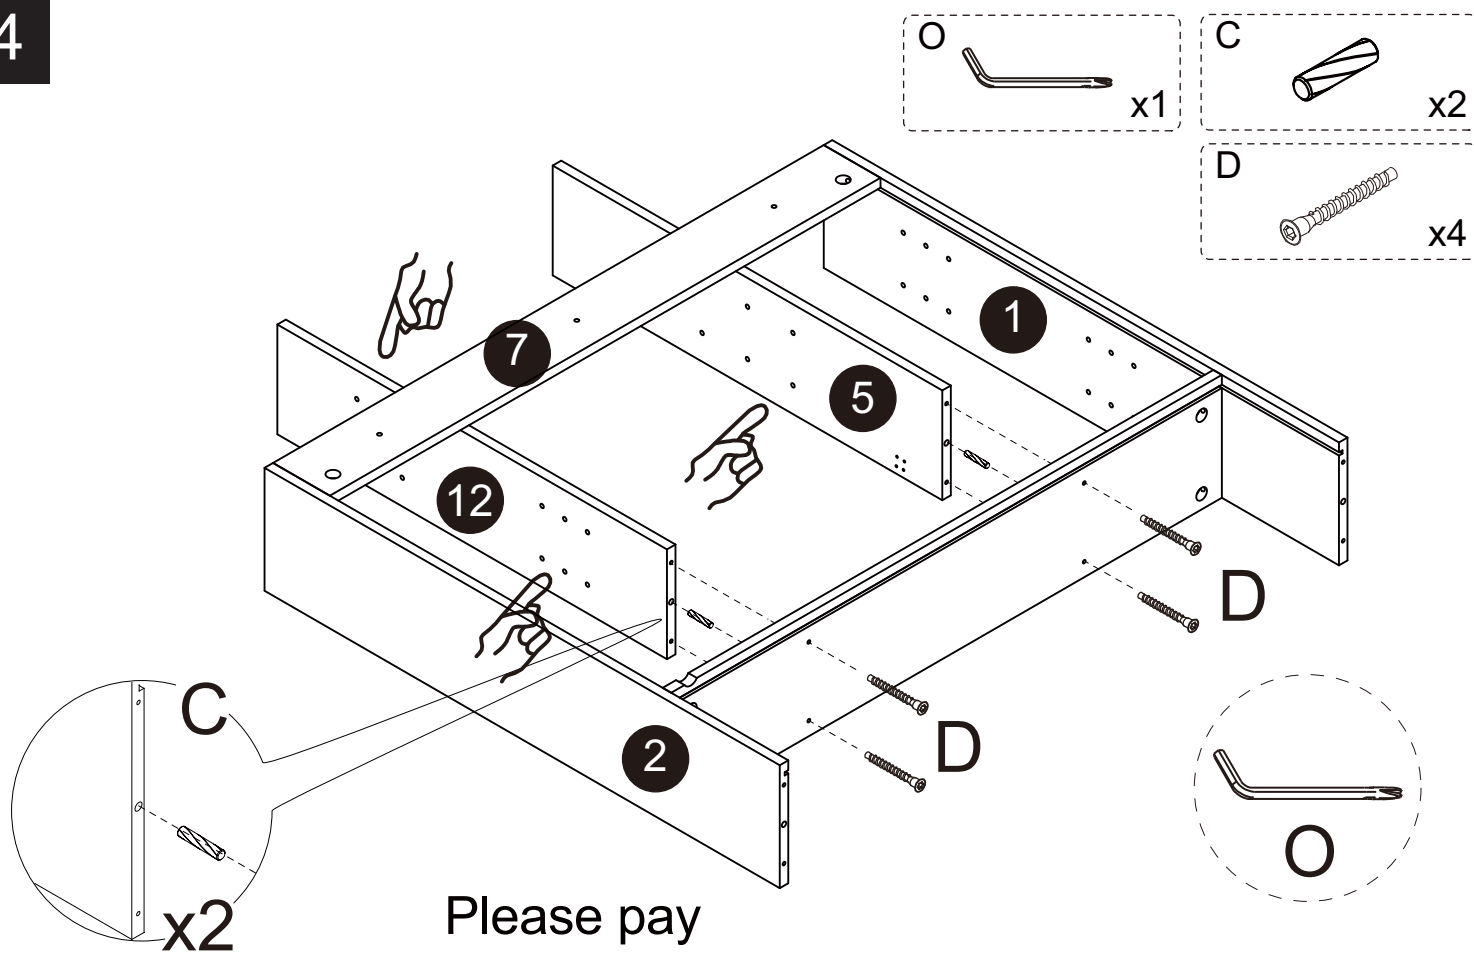


Please pay attention to the installation direction


5

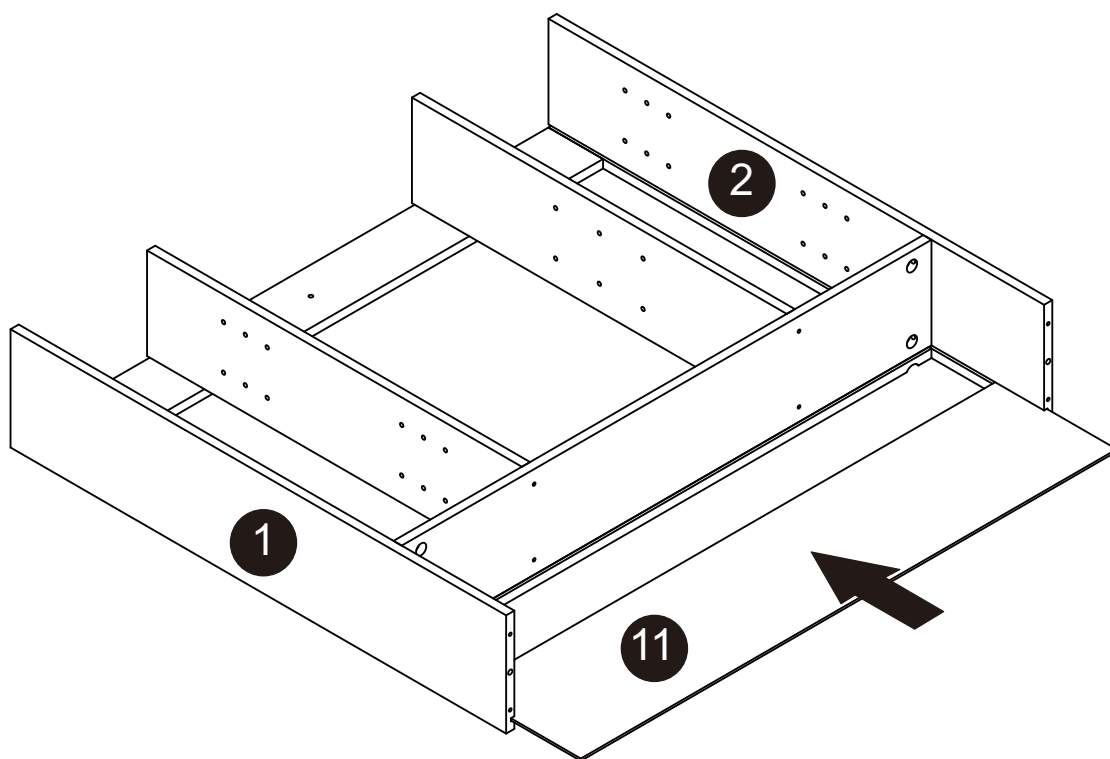


6

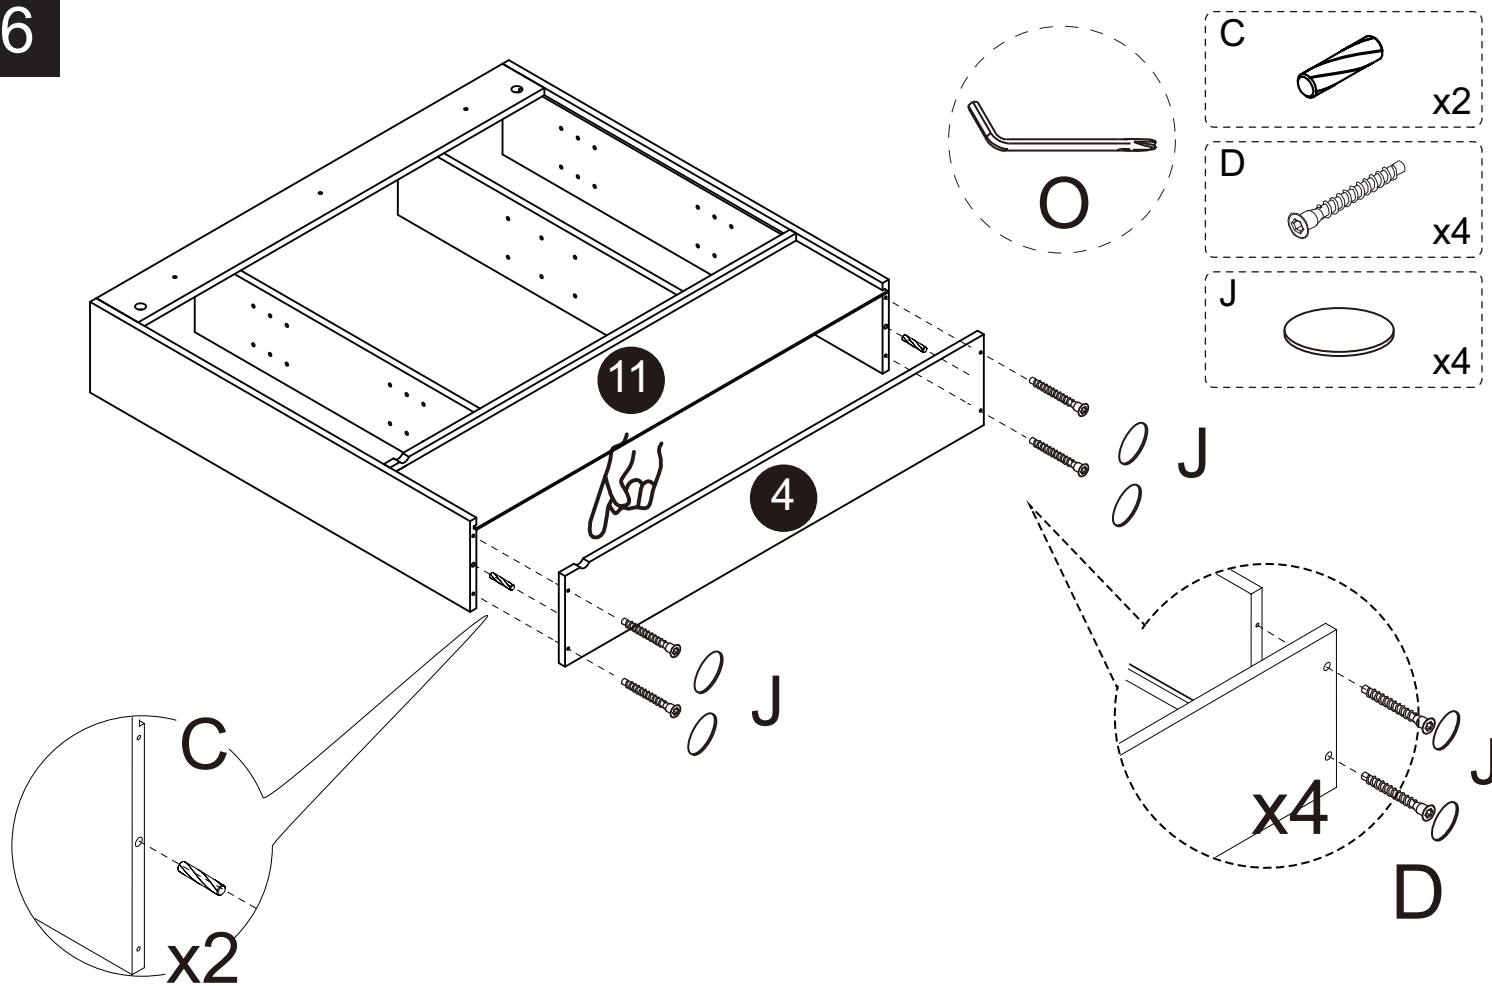

7

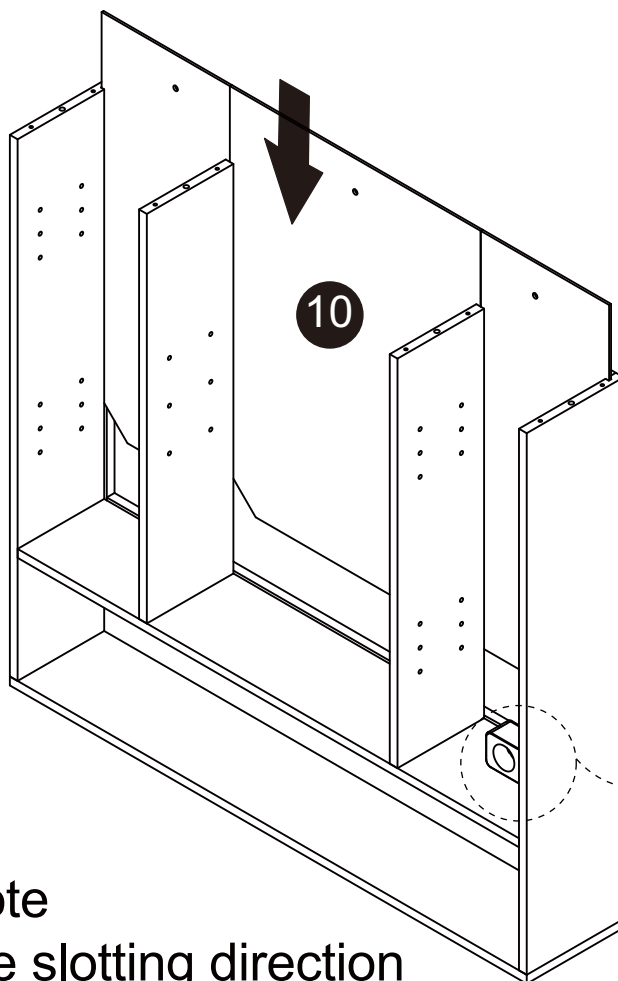


Note that the wires of Part #M pass through the triangular notch in the backplate


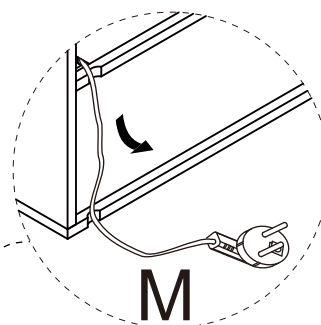


Please note
Back plate slotting direction



8

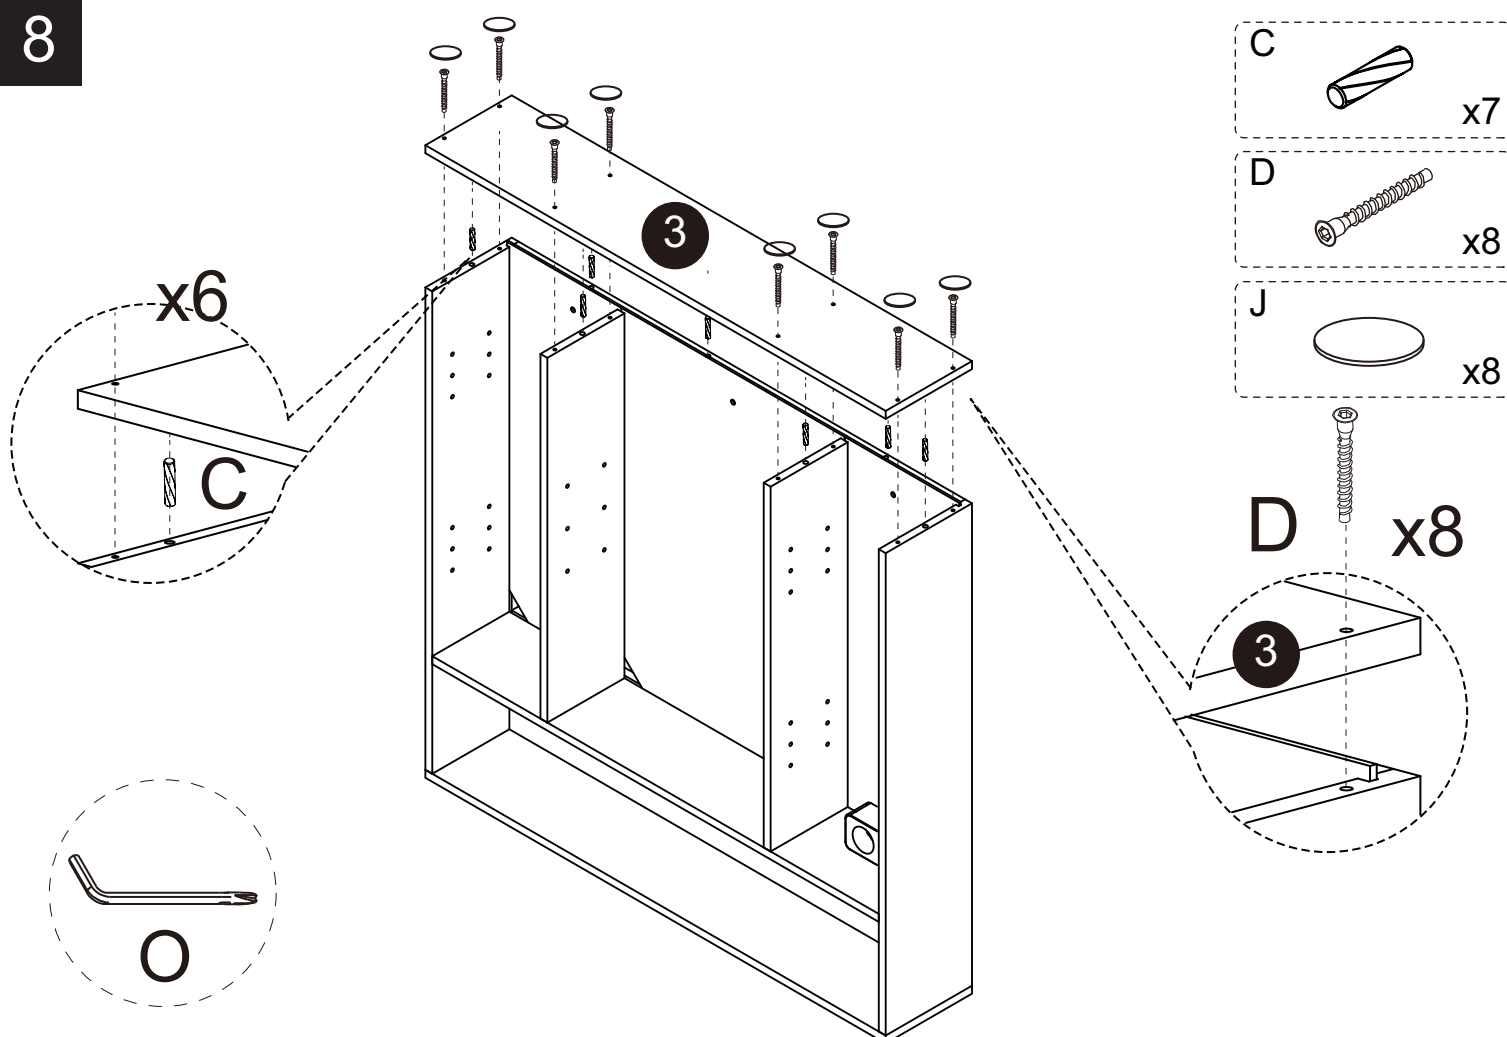

9

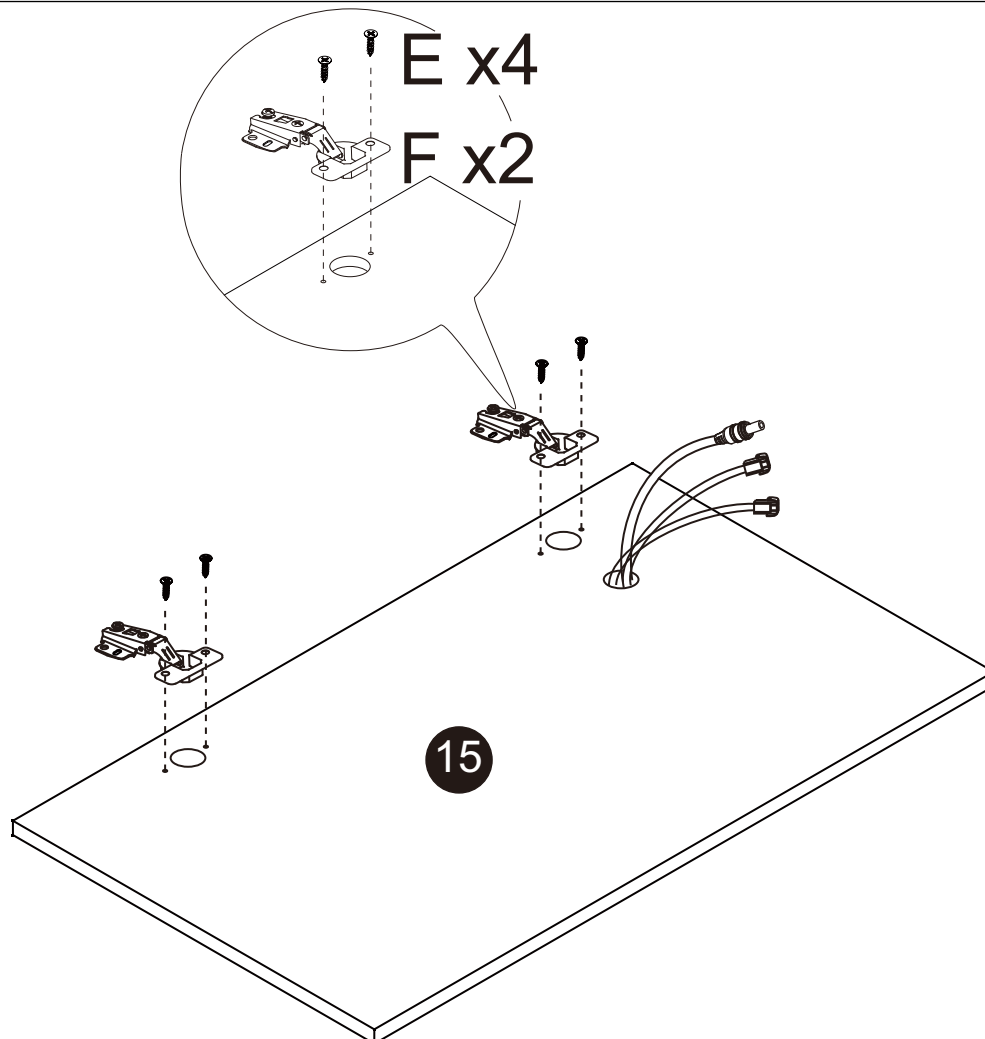

10

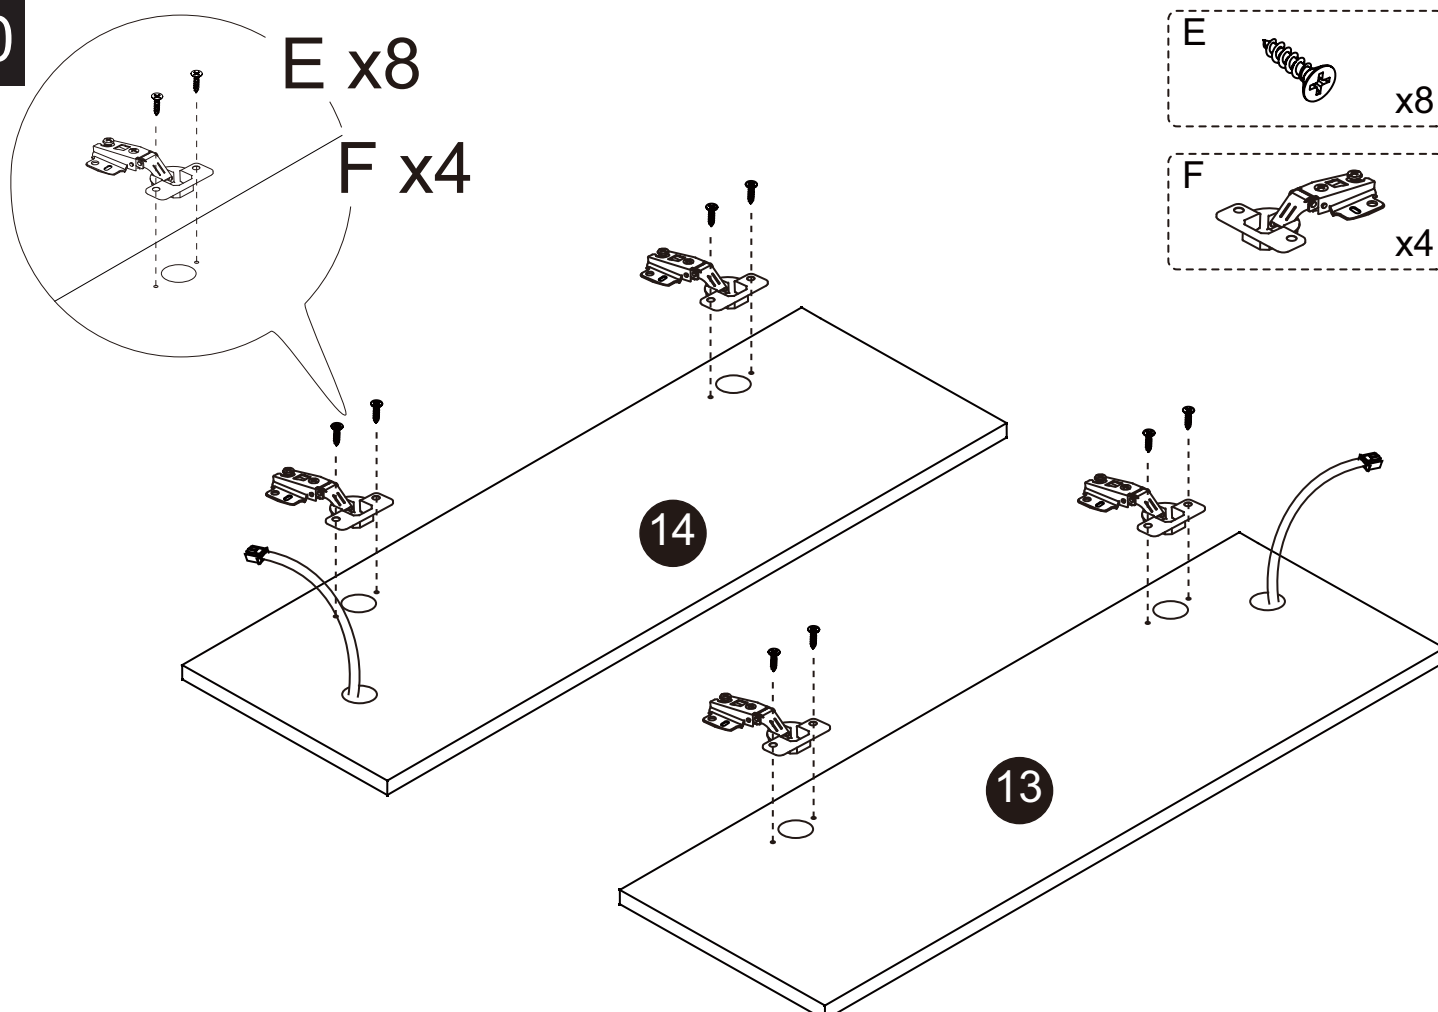

11


E




x16

Example



1

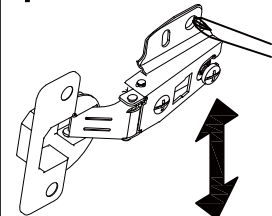

2

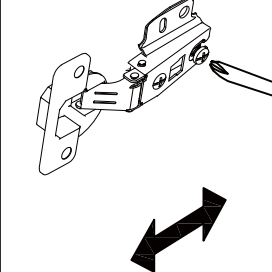

3

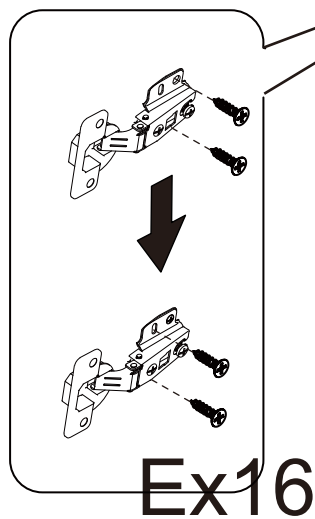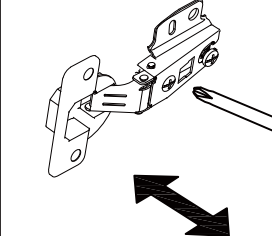

13

14

12

H




x16




x16

H


13

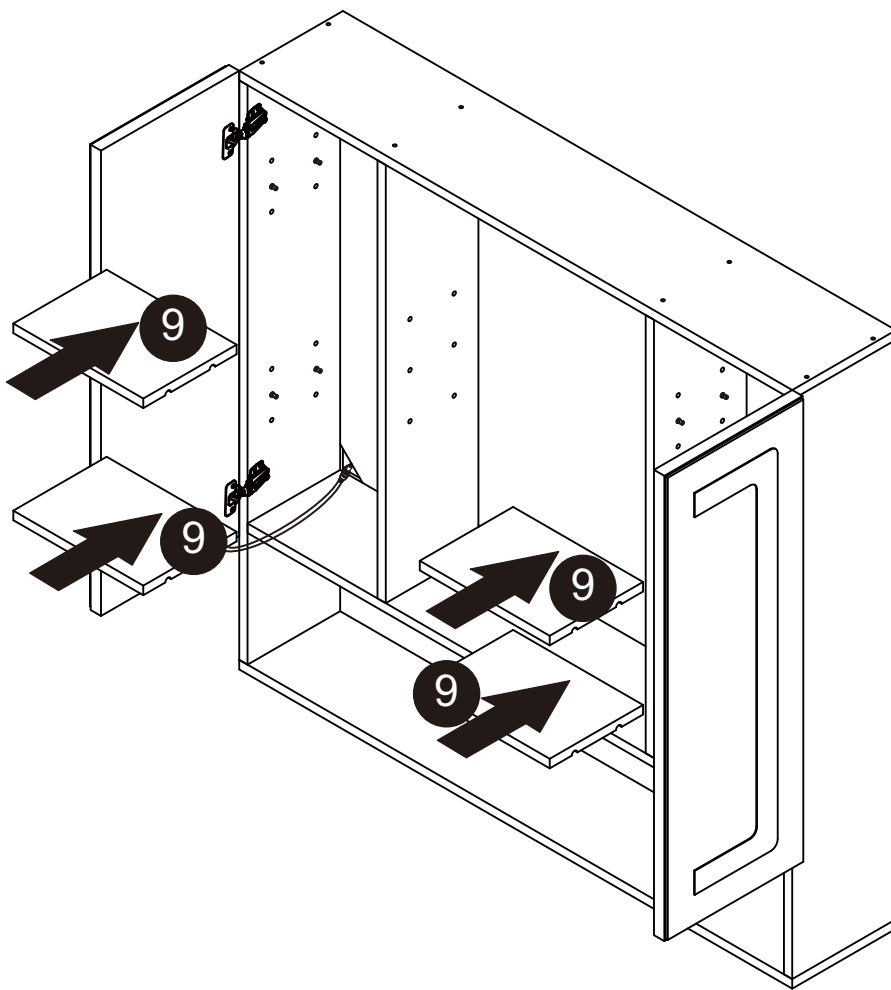


14

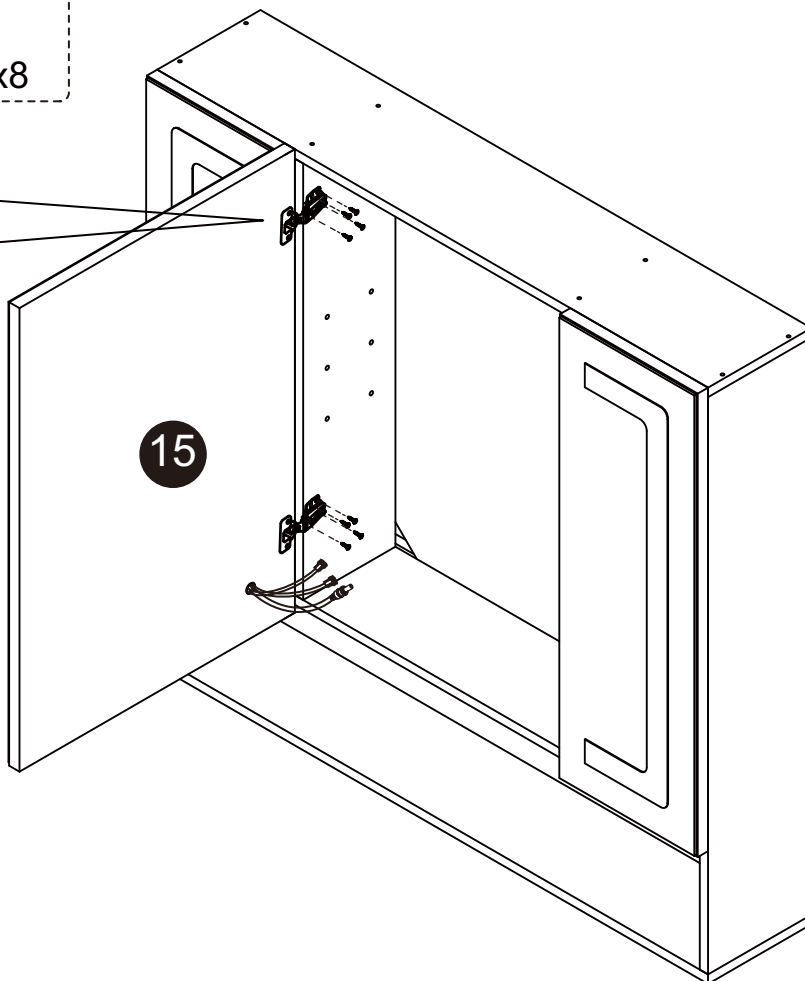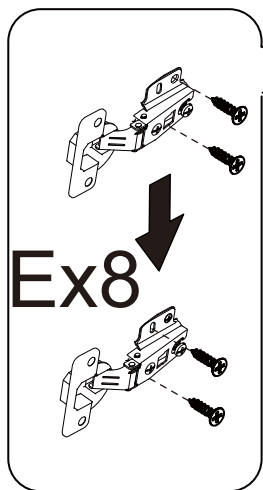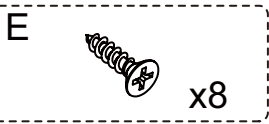


Example

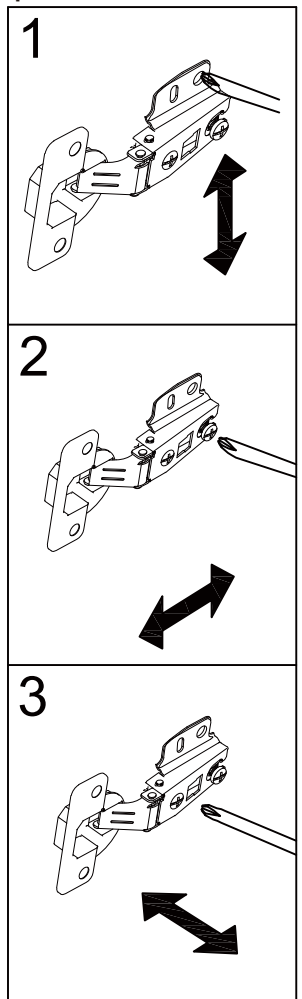


15

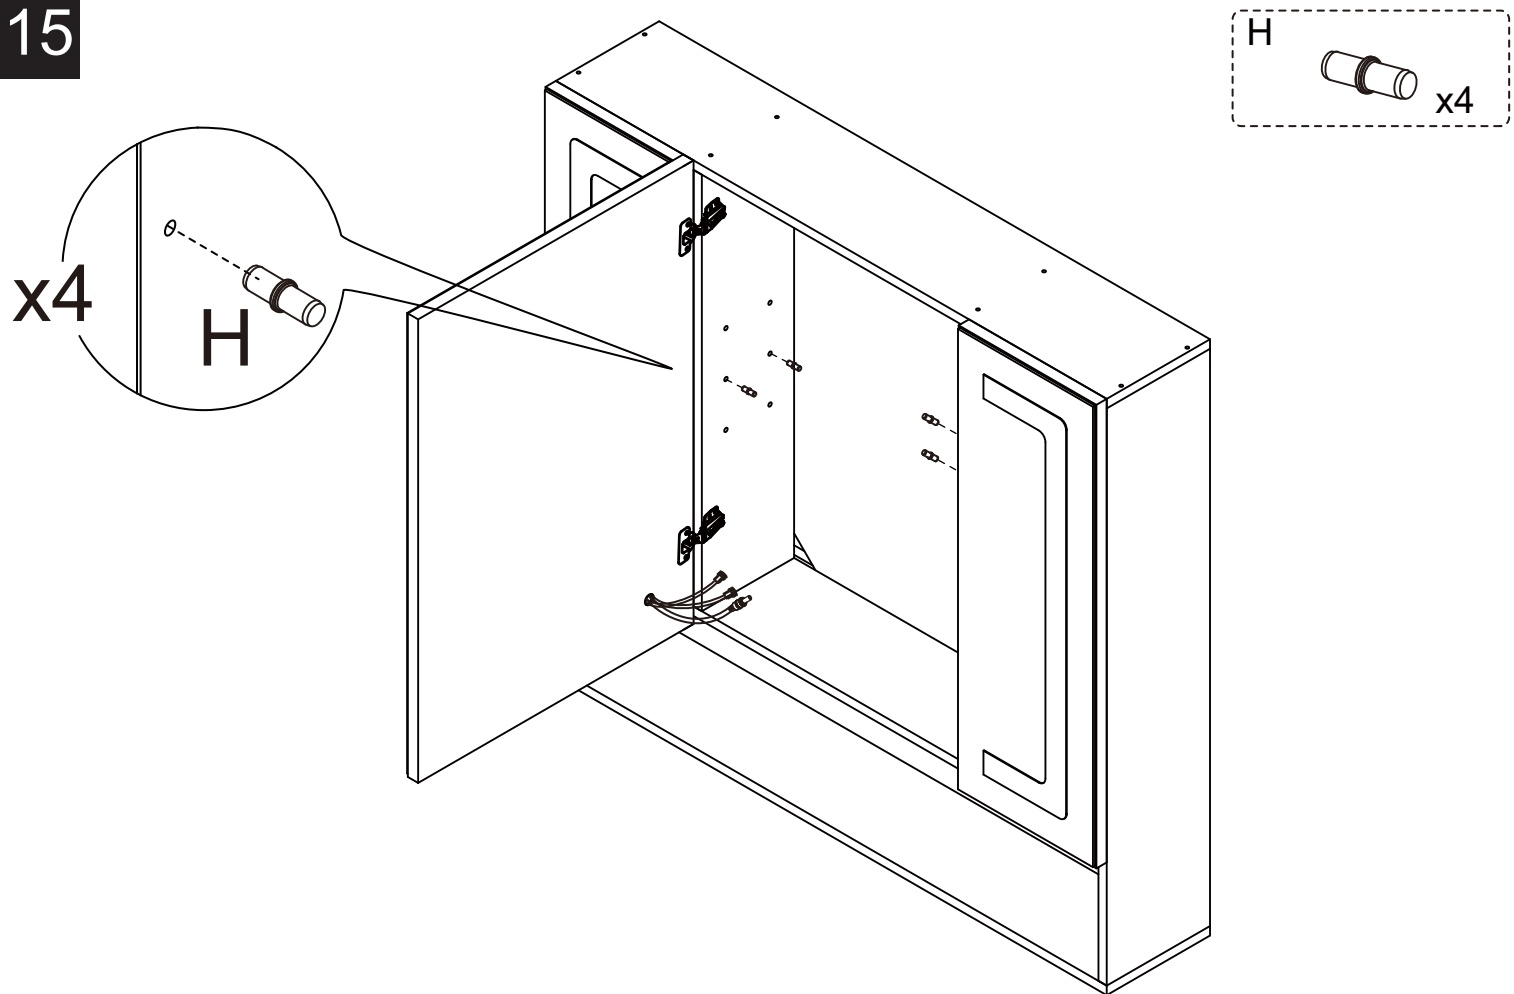

16

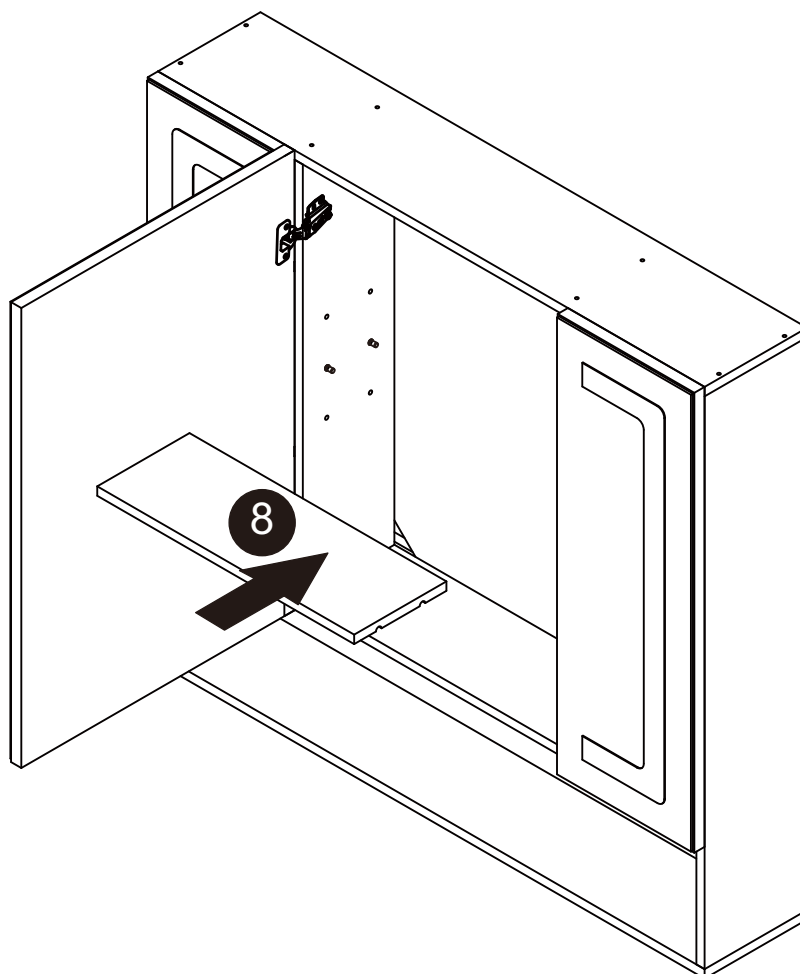

17

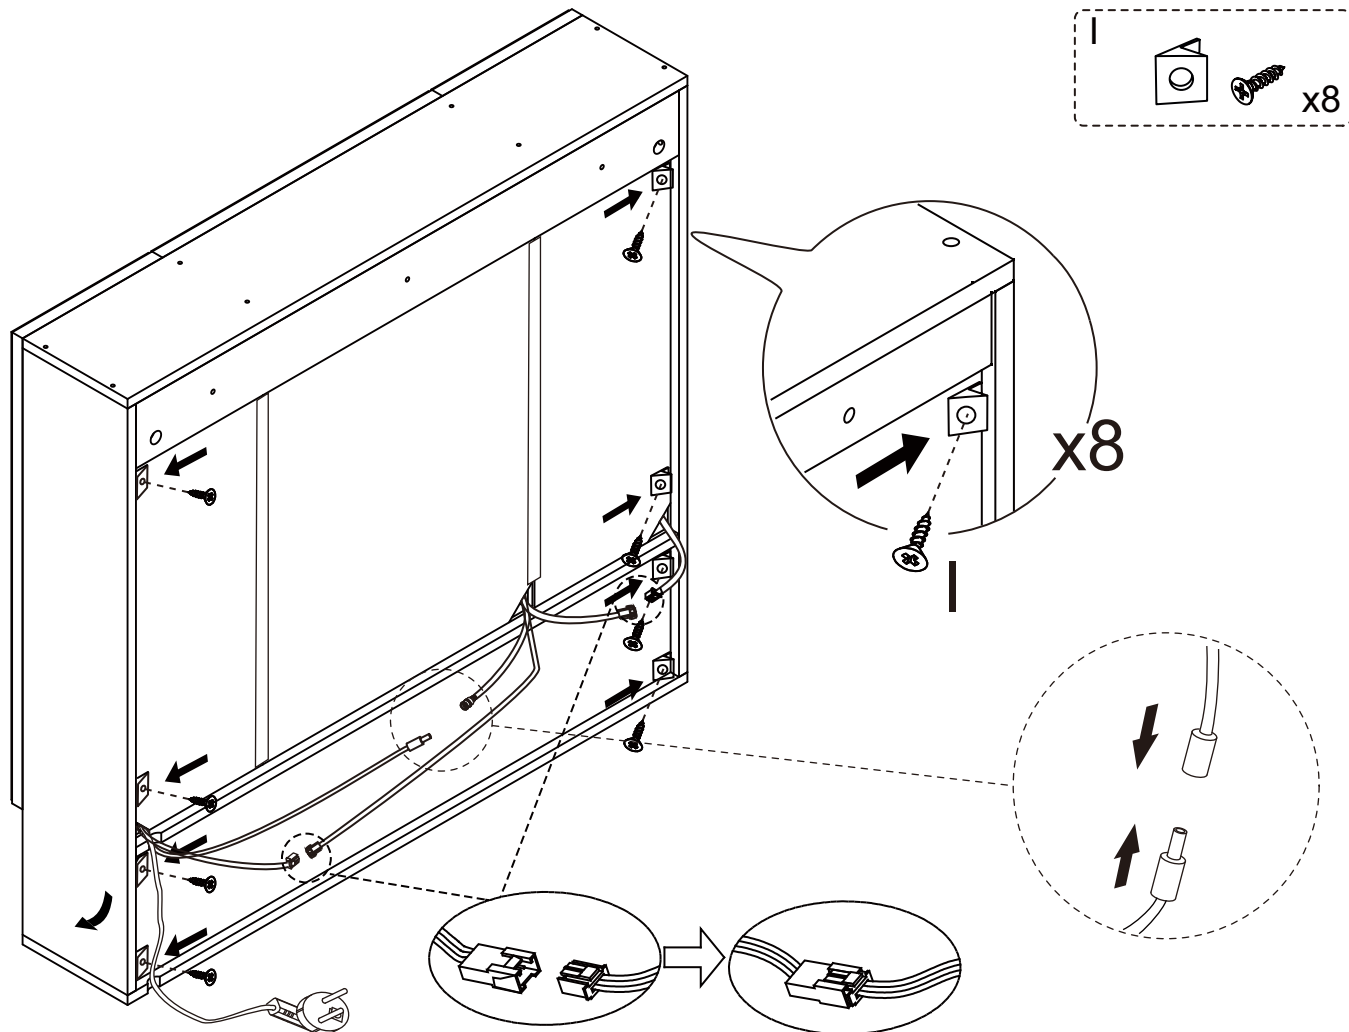




18

DE:

1. die Positionen der Löcher mithilfe des Brettes (L) festzulegen
 2. die Löcher an der Wand zu markieren
- Hinweis: Das Brett (L) muss nicht aufgebaut werden

FR:

1. Positionnez les 3 trous à l'aide de "L"
 2. Marquez l'emplacement des 3 trous sur le mur à l'aide du crayon
- Remarque : "L" ne nécessite aucun assemblage

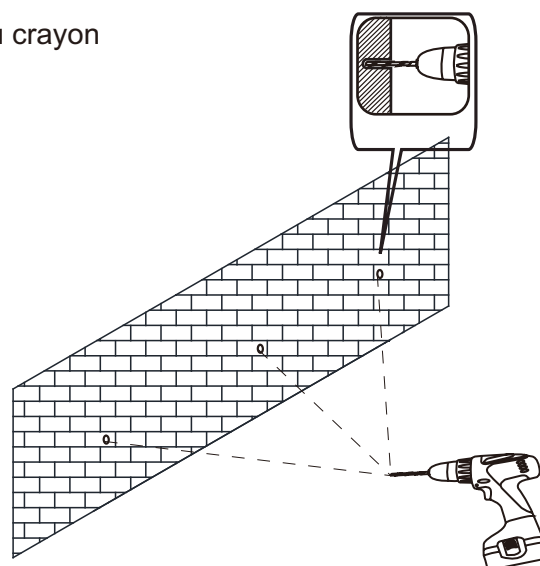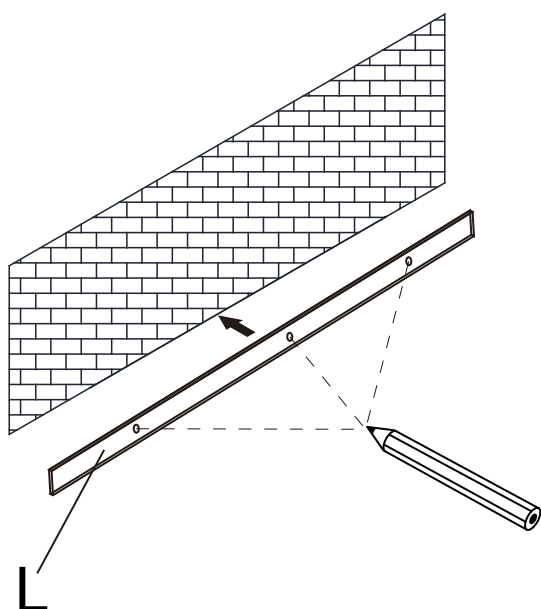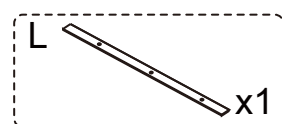


IT:

1. Determinare la posizione dei fori utilizzando la (L)
 2. Segnare i fori sulla parete
- Nota: il pannello (L) non deve essere montato.

ES:

1. Determine la posición de los orificios con ayuda de la (L)
 2. Marque los orificios en la pared
- Nota: (L) no tiene que estar montado

19

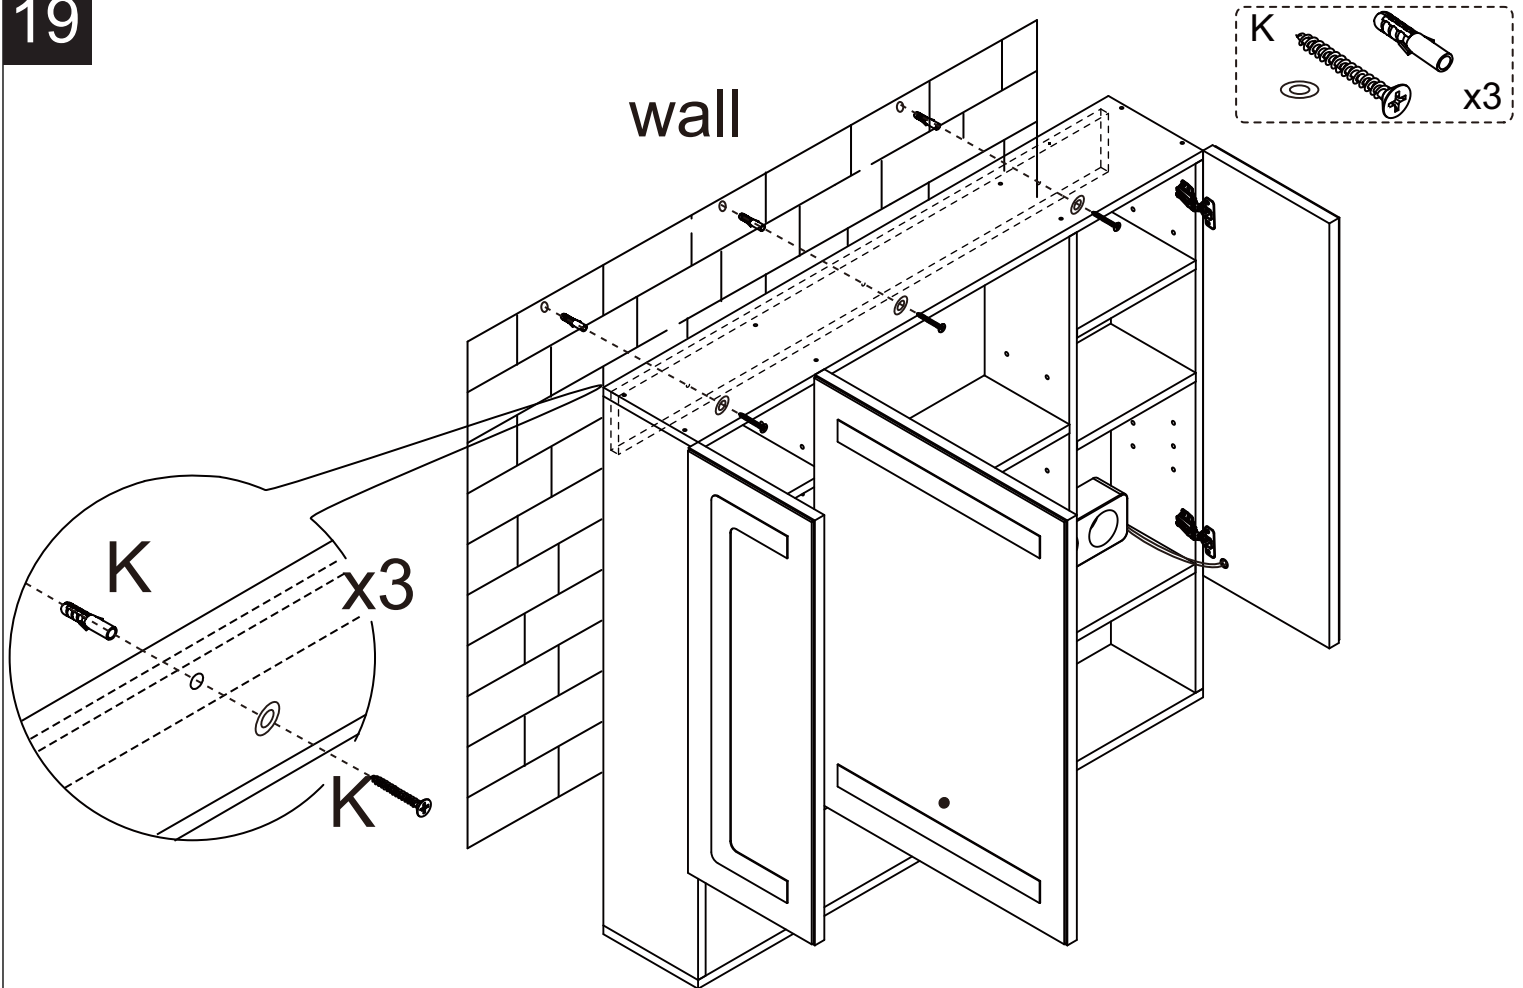

20

