

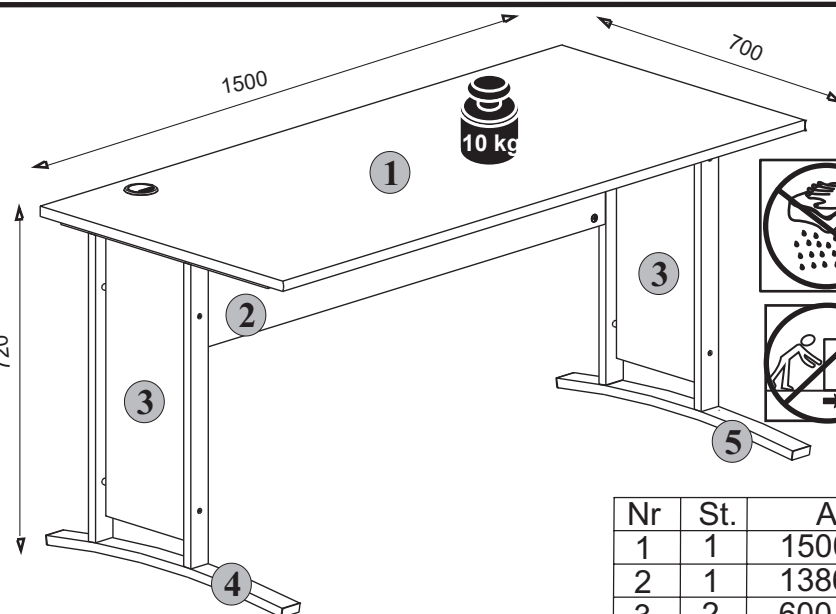
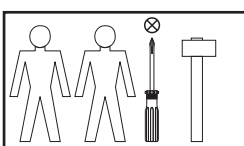
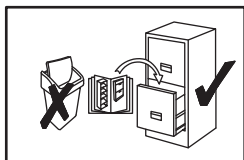
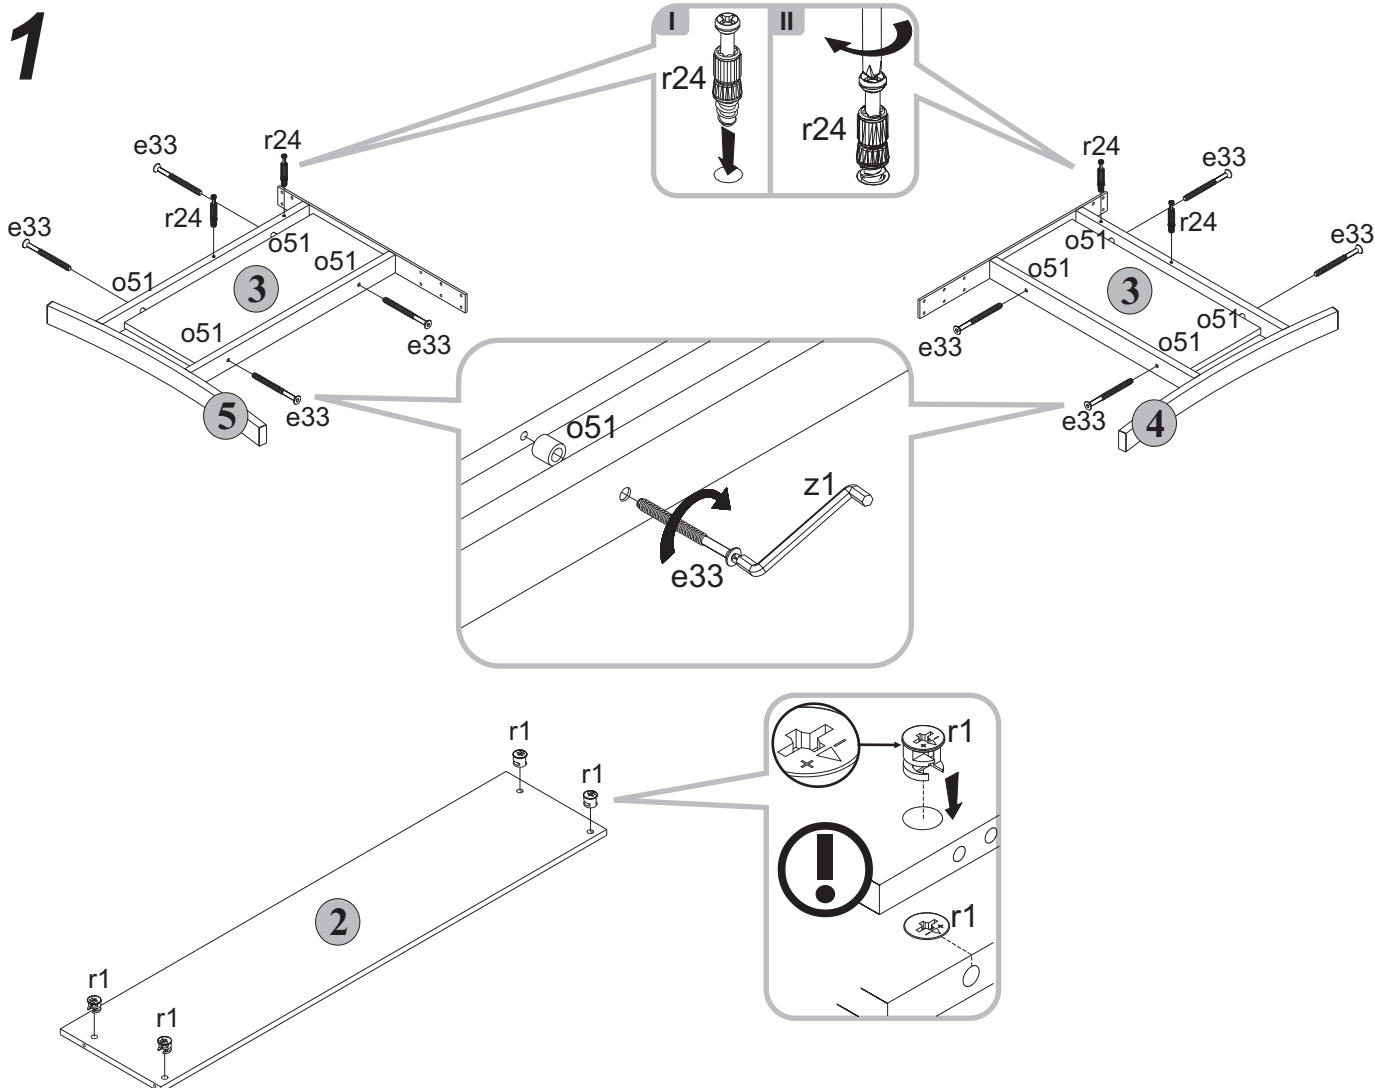









Nr	St.	Ausmaß	Colli
1	1	1500 x 700 x 22	1/2
2	1	1386 x 320 x 16	1/2
3	2	600 x 228 x 16	1/2
4	1	635 x 700 x 60	2/2
5	1	635 x 700 x 60	2/2




2



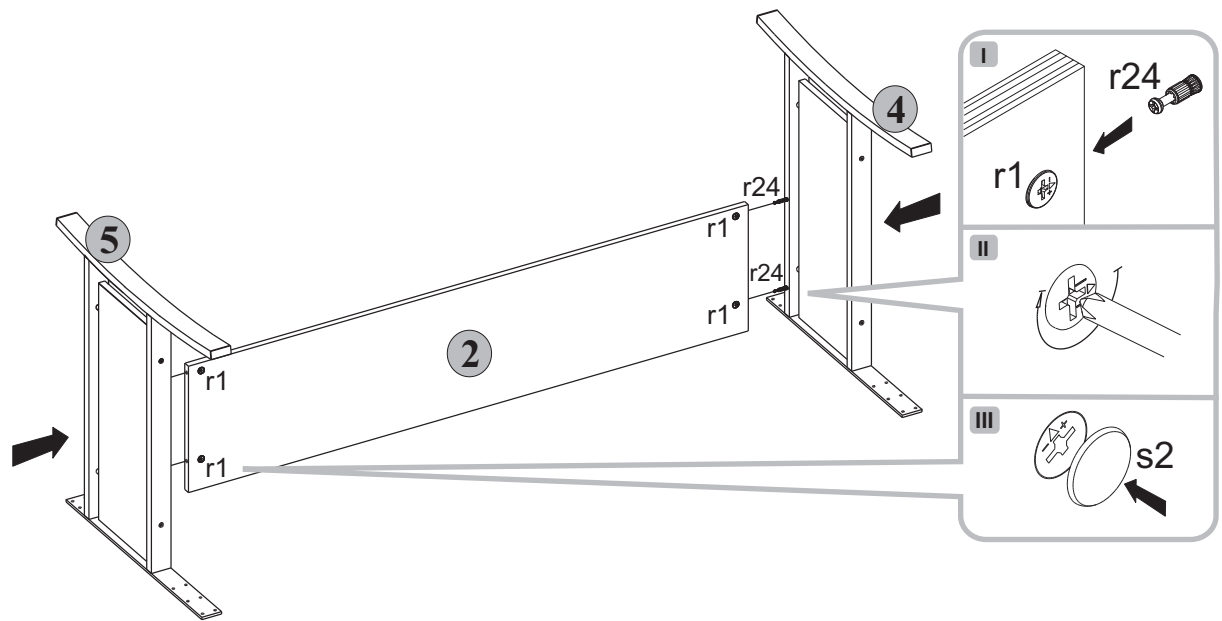


3





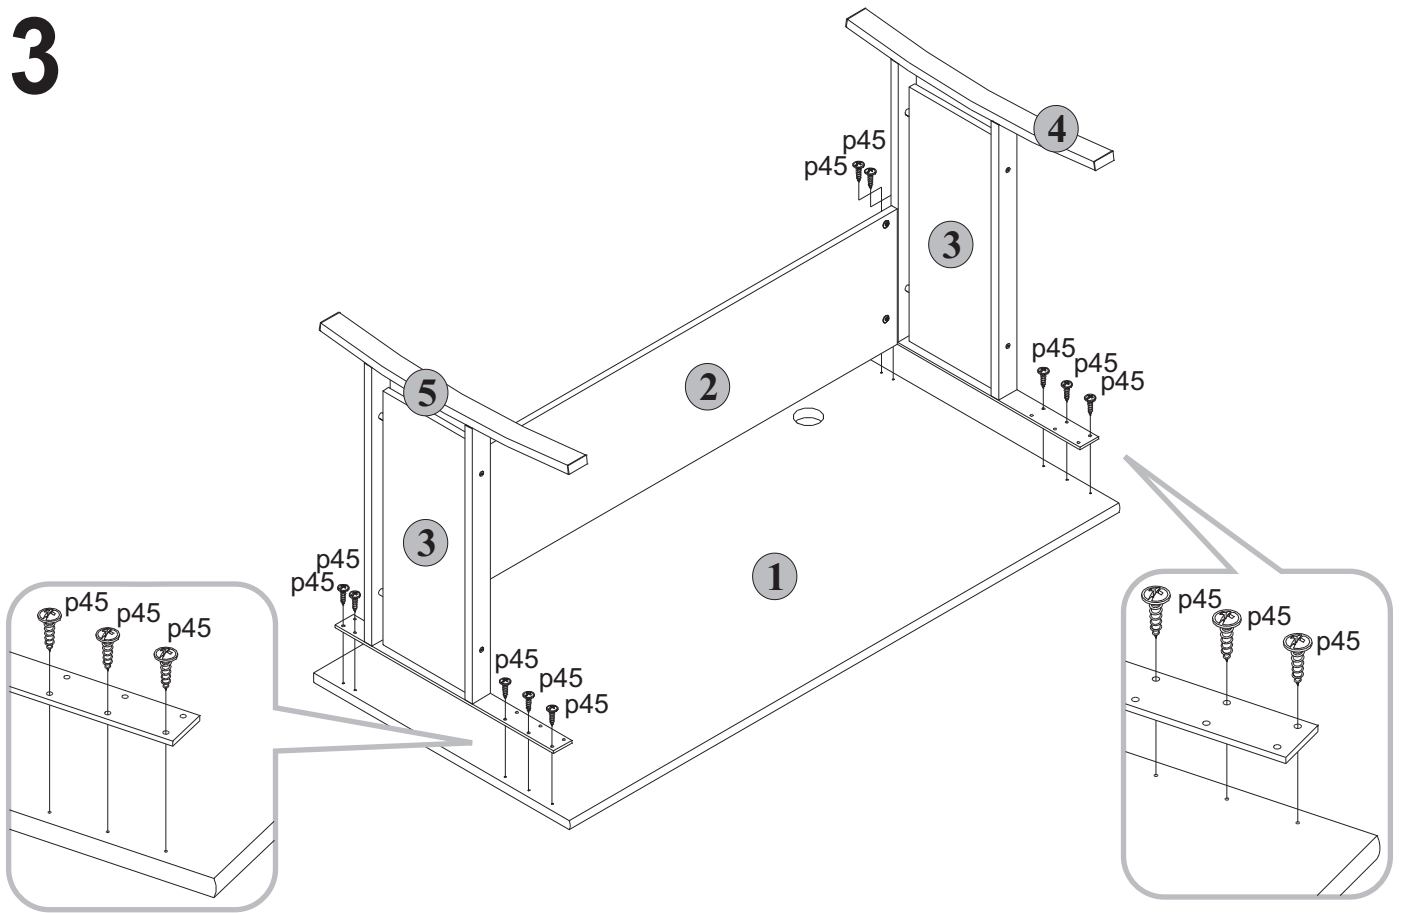


4

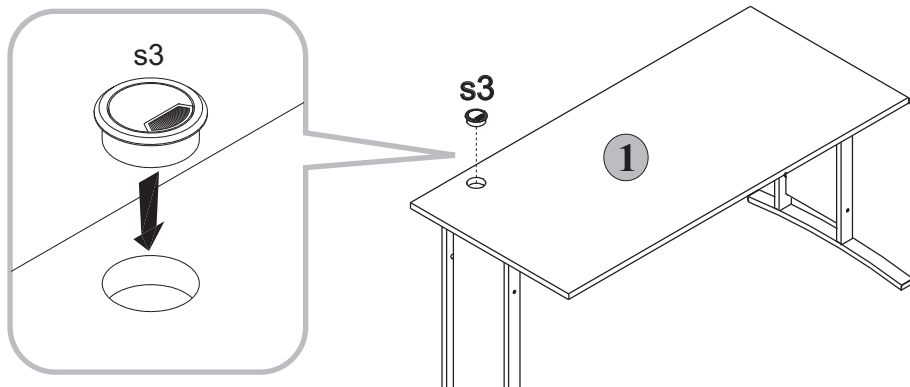

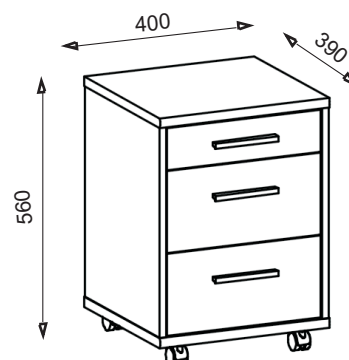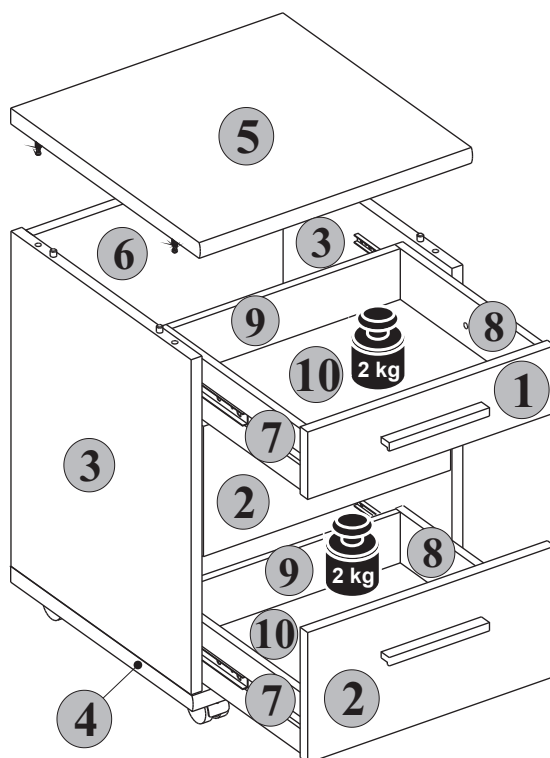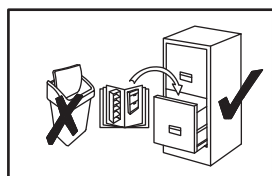


Nr	St.	Ausmaß	Colli
1	1	364 x 92 x 16	1/1
2	2	364 x 182 x 16	1/1
3	2	468 x 380 x 16	1/1
4	1	402 x 385 x 22	1/1
5	1	402 x 385 x 22	1/1
6	1	468 x 369 x 16	1/1
7	3	305 x 480 x 12	1/1
8	3	305 x 80 x 12	1/1
9	1	338 x 80 x 12	1/1
10	1	348 x 304 x 3	1/1

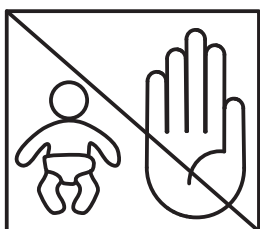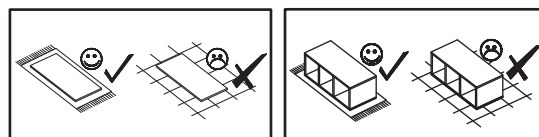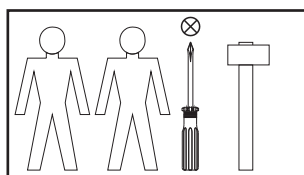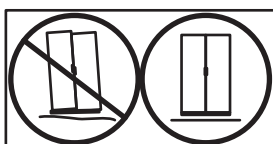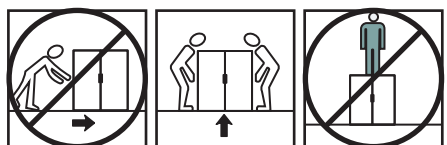


3x c328	12x 5,8x9 e3	12x φ8x30 mm f1	12x φ6,5x40 mm f25
4x φ40 k30 ¹	8x φ15x12mm #16 r1	12x φ12x10,5mm #12 r15	20x r42
4x k30 ²	6x φ4x30 mm p9	6x M4x9 mm j2	6x 246 mm w1


1

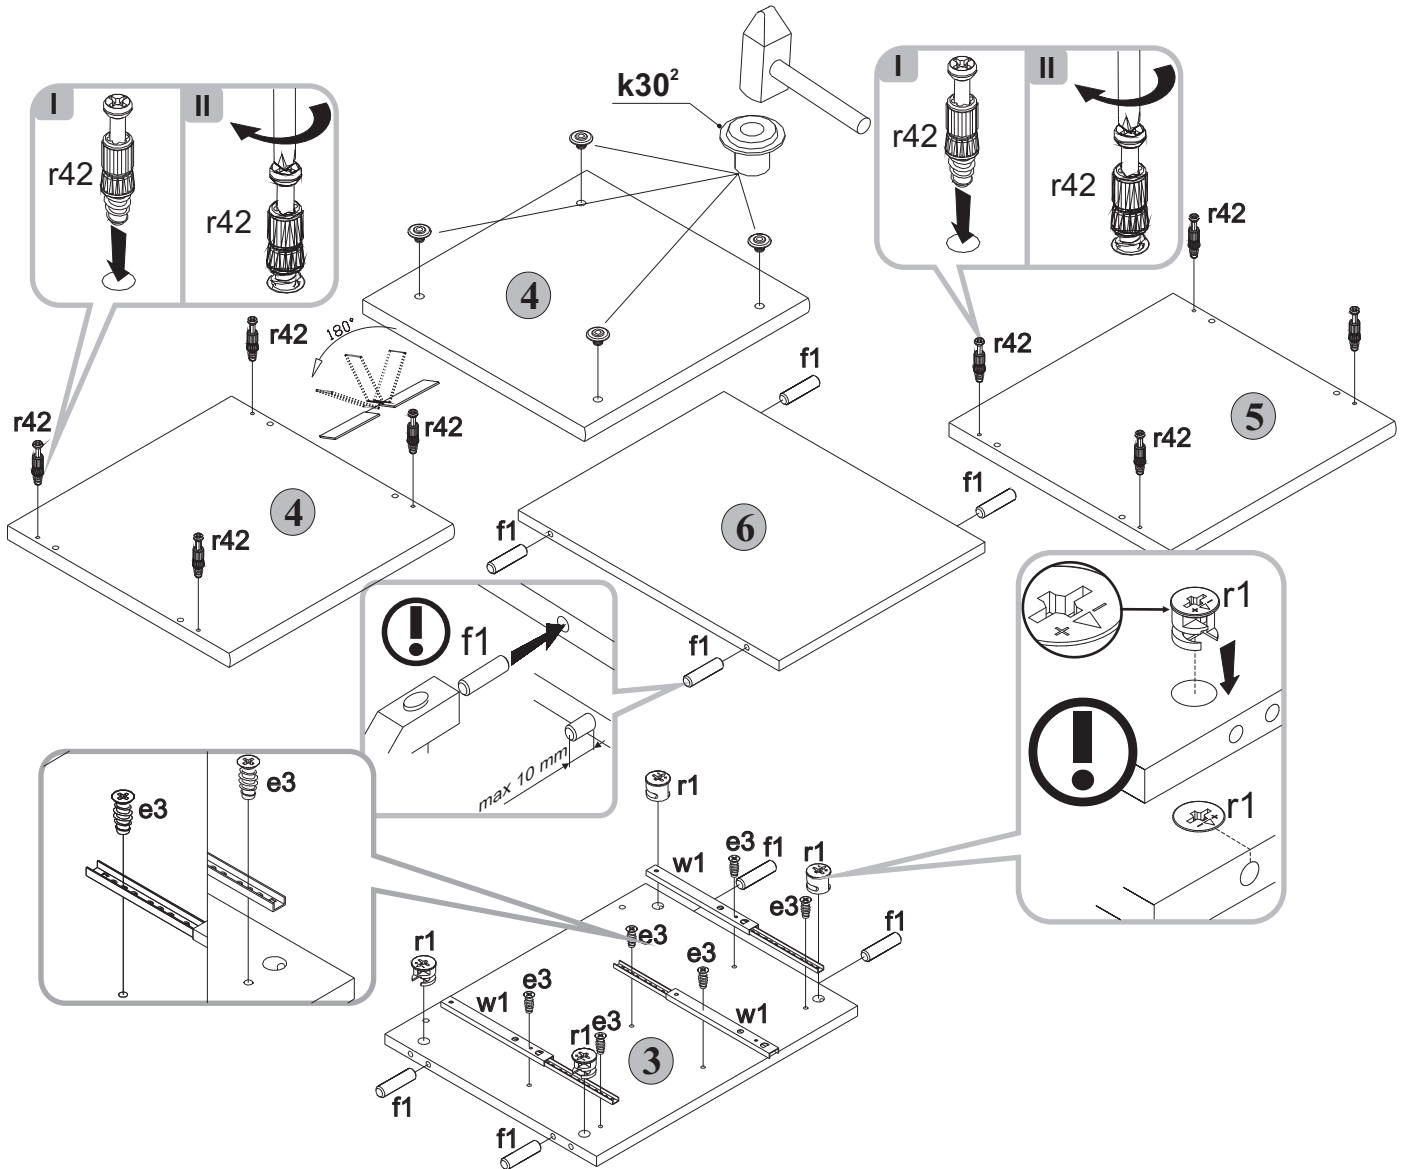

2

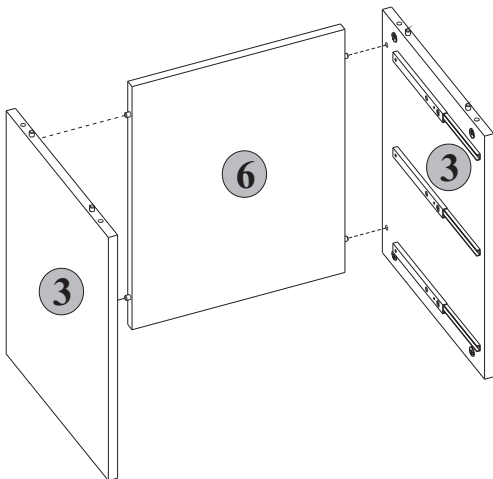

3

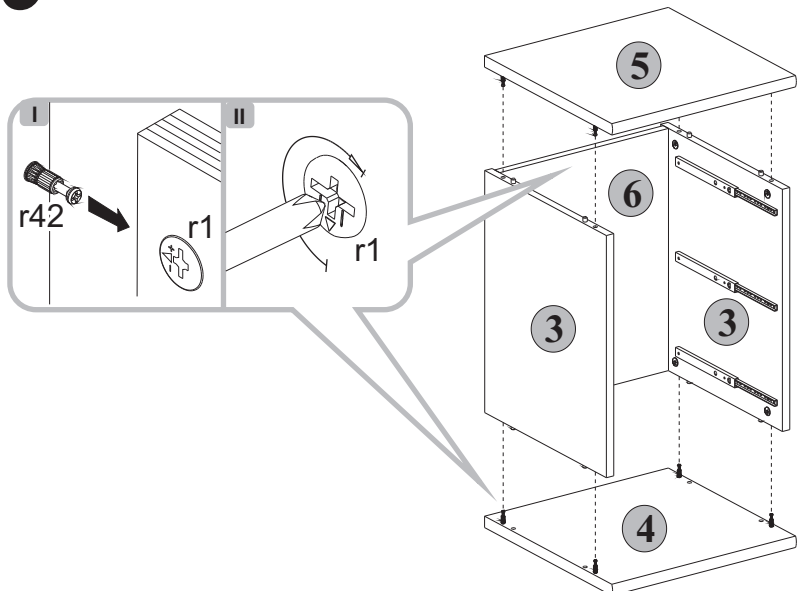

5

Diagram illustrating the assembly of a furniture unit, specifically the installation of side panels (7) and end panels (8) onto a base (1) and a back panel (2).

Key components and steps shown:

- Side Panels (7):** Attached to the base (1) using screws (f25) and cam bolts (r15).
- End Panels (8):** Attached to the side panels (7) using screws (f25) and cam bolts (r15).
- Base (1):** The main support structure, secured with screws (r42).
- Back Panel (2):** Attached to the side panels (7) using screws (r42).
- Warning:** A warning icon indicates that the width (A) must equal the depth (B) of the unit.
- Assembly Details:** Close-up views show the insertion of screws (f25, r15, r42) and the use of a cam bolt (c328) to secure the panels.

6

