


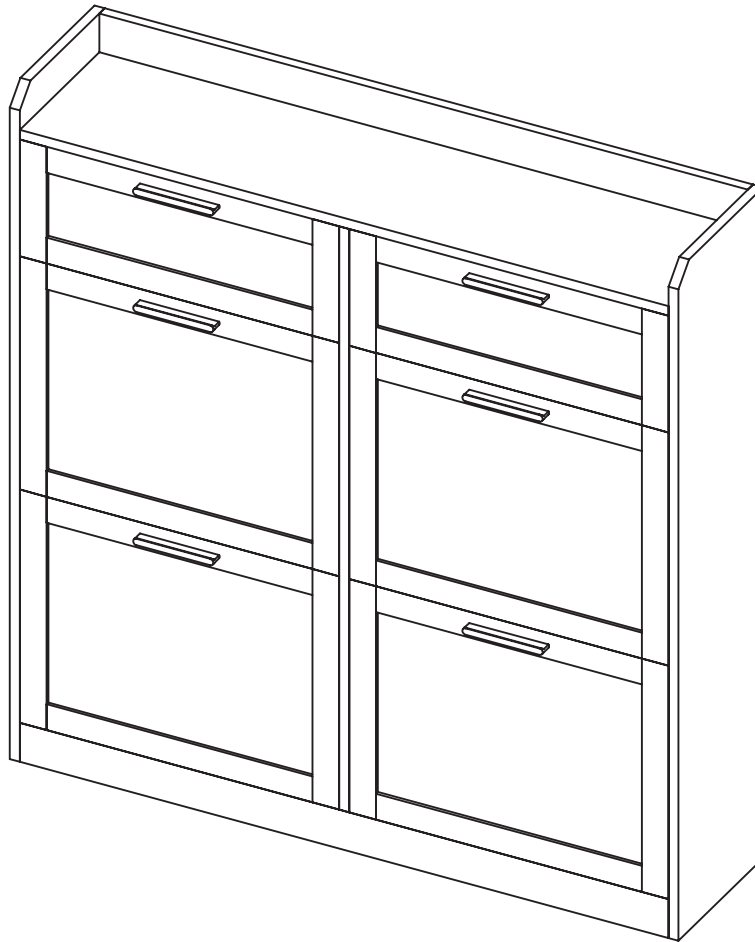


Shoe Cabinet

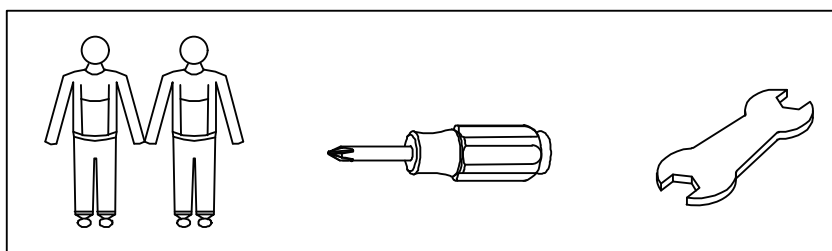


Note: During the installation process, pay attention to the installation direction and hole position of the board and accessories, and check repeatedly after each step of installation to avoid installation errors.

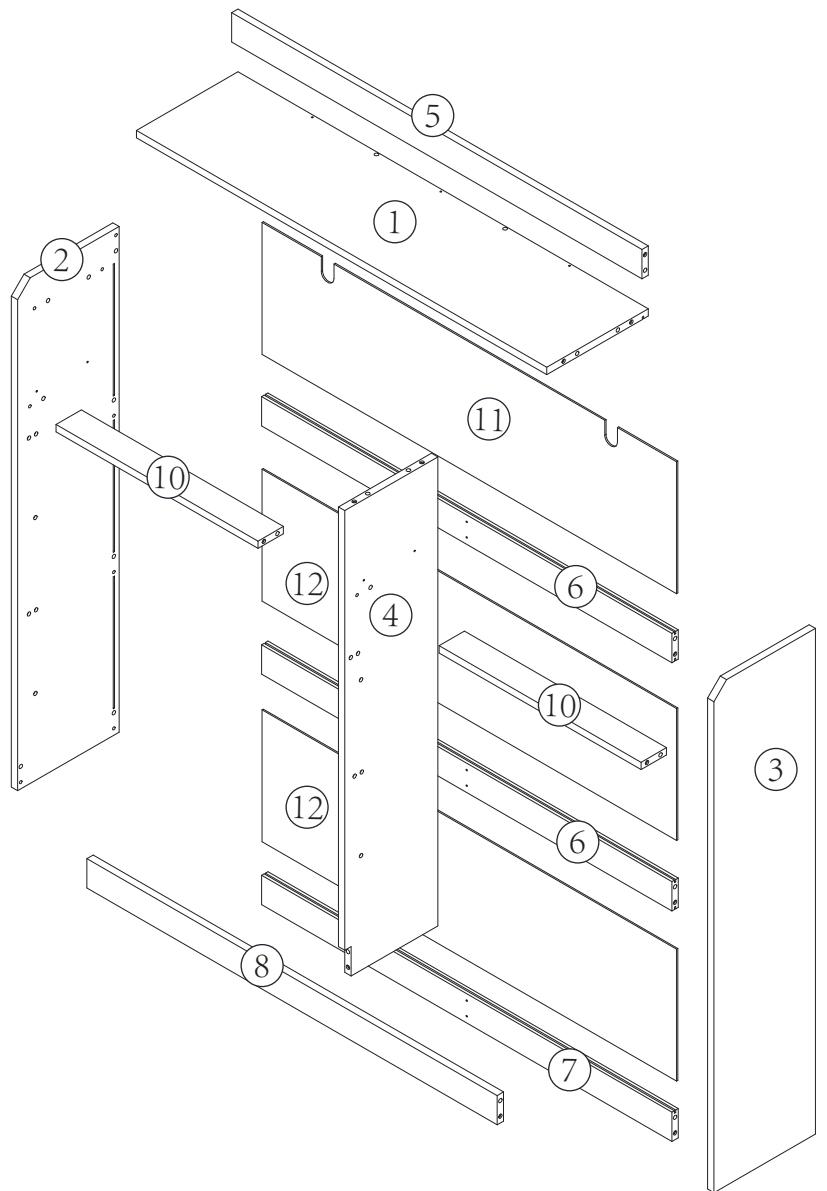

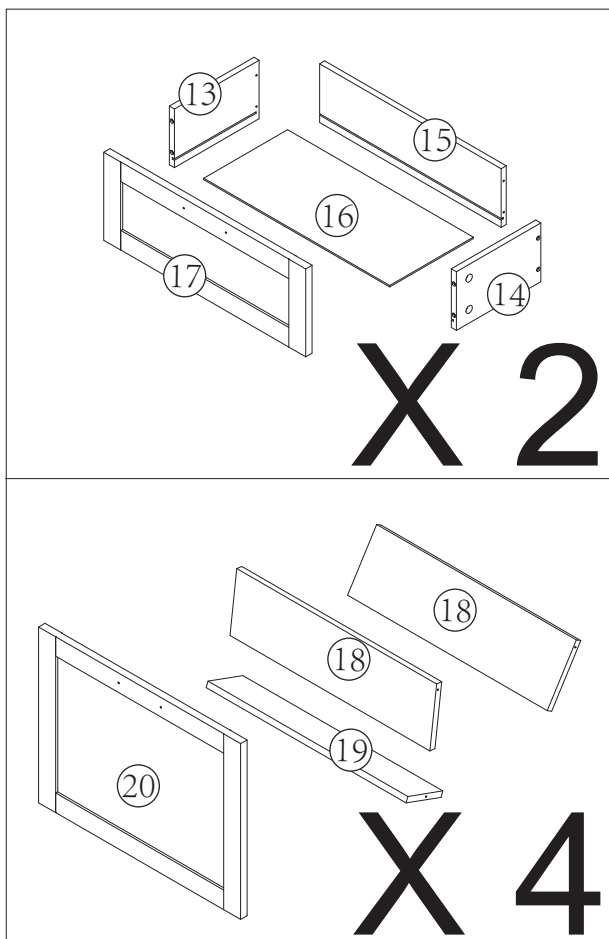

Cam Lock Fastening System

















Insert the cam bolt into the hole first, then insert the cam lock and lock it.

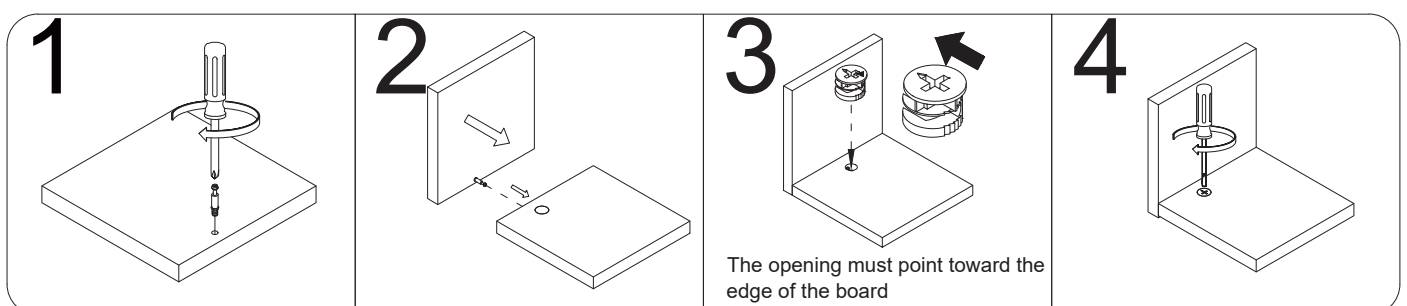

Components - Fittings


Please check you have all the panels listed below

Note: The quantitie below are the correctet amount to complete the assembly. In some cases more fittings may be supplied than are required.


A		33 pcs +3 pcs	B		33 pcs +3 pcs
C		17 pcs +1 pc	D		17 pcs +1 pc
F		60 pcs +5 pcs	G		6 sets
H		12 sets	I		8 pcs
J		8 pcs	K		4 pcs
L		4 pcs	M		8 pcs
N		2 sets	O		1 pc
P		4 pcs			
CL		2 pcs	DL		2 pcs
CR		2 pcs	DR		2 pcs

PRODUCT ASSEMBLY Installation

Step 1

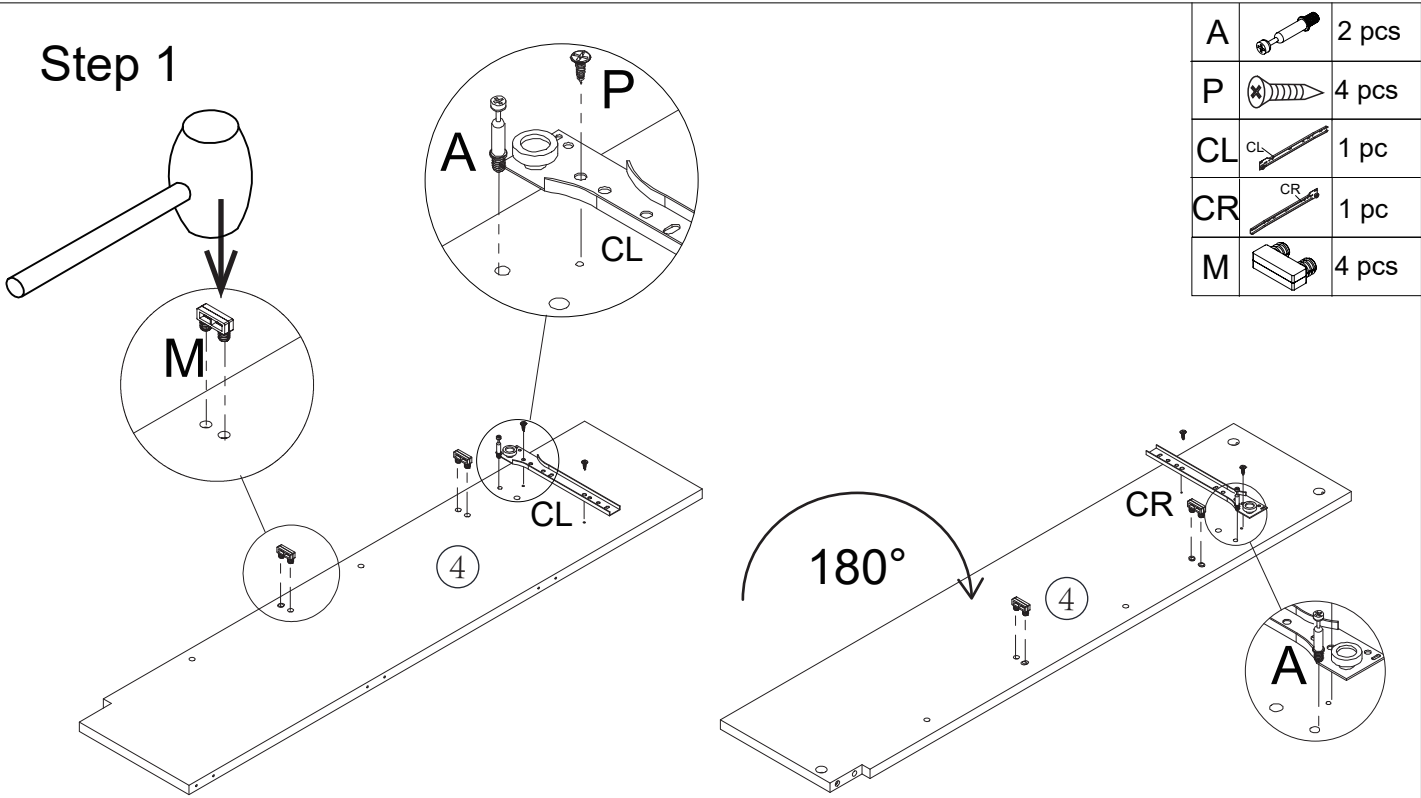


Step 2

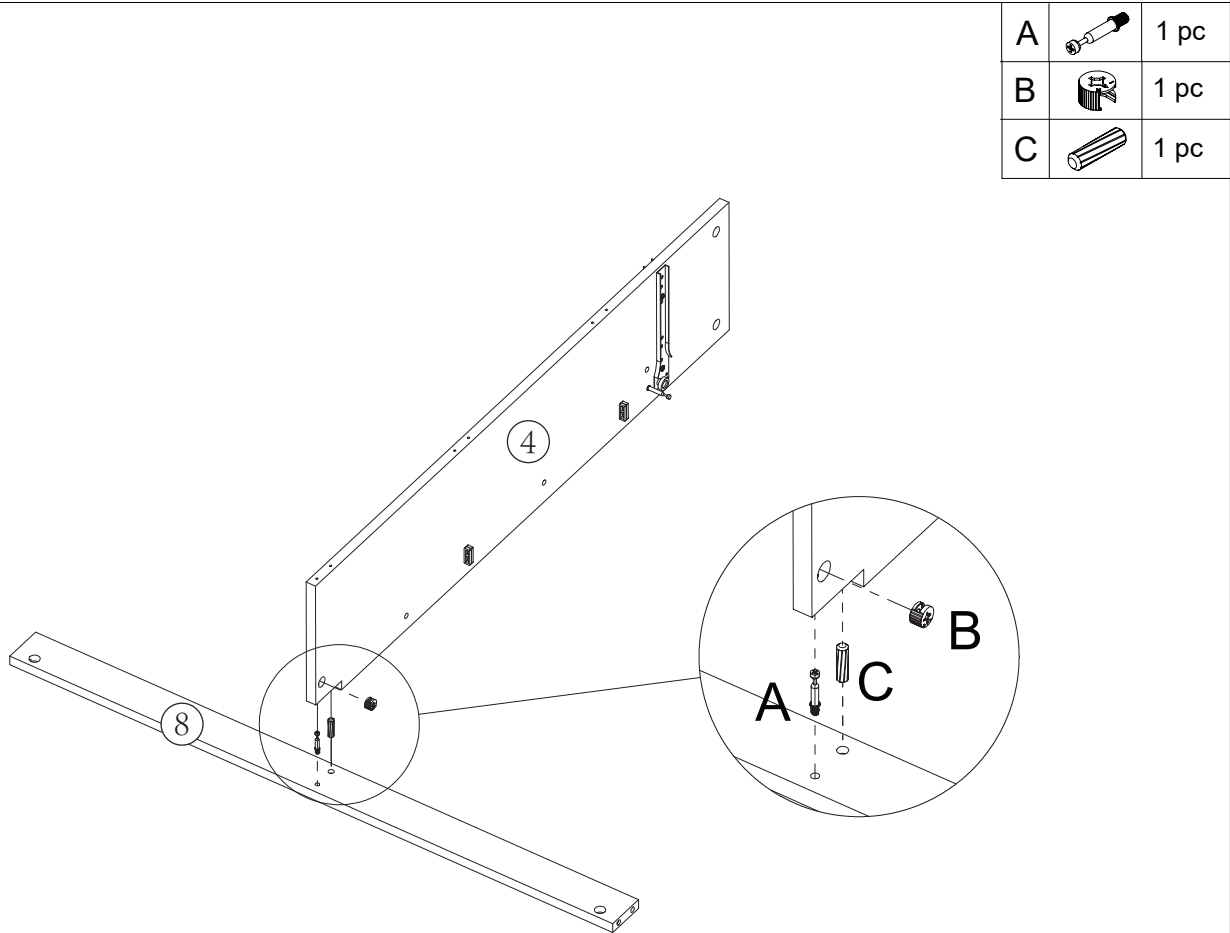


Step 3

B		1 pc
O		1 pc

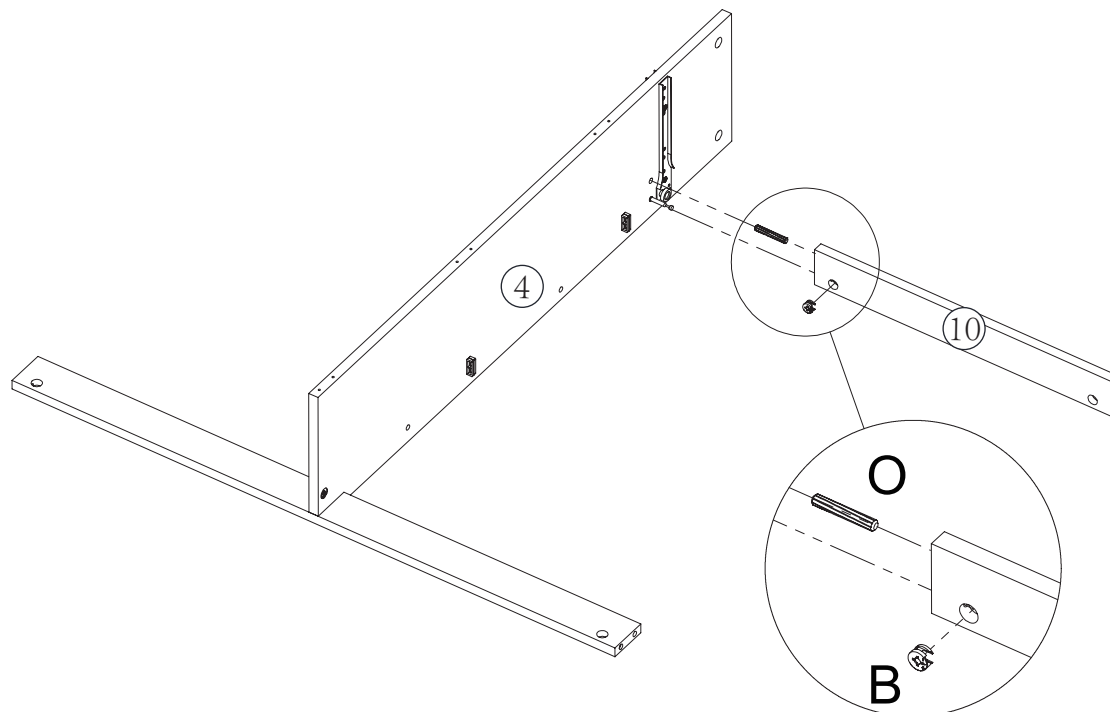

Step 4


A		2 pcs
C		2 pcs
D		3 pcs

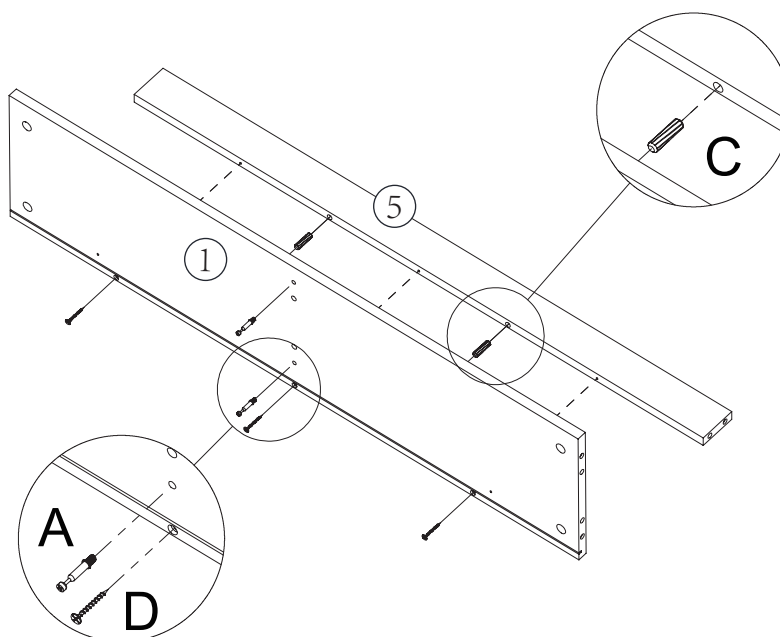

PRODUCT ASSEMBLY Installation


Step 5

B		2 pcs
C		2 pcs

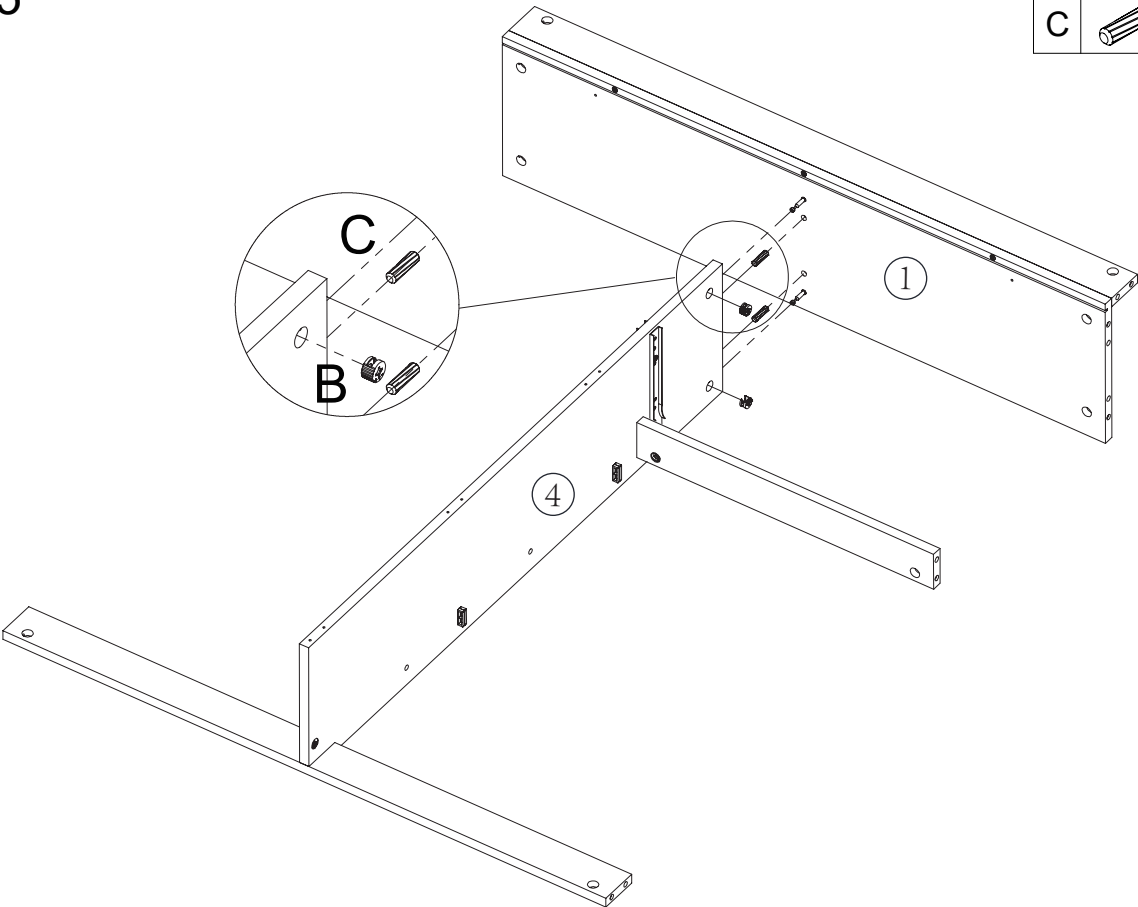


Step 6

D		6 pcs
---	---	-------

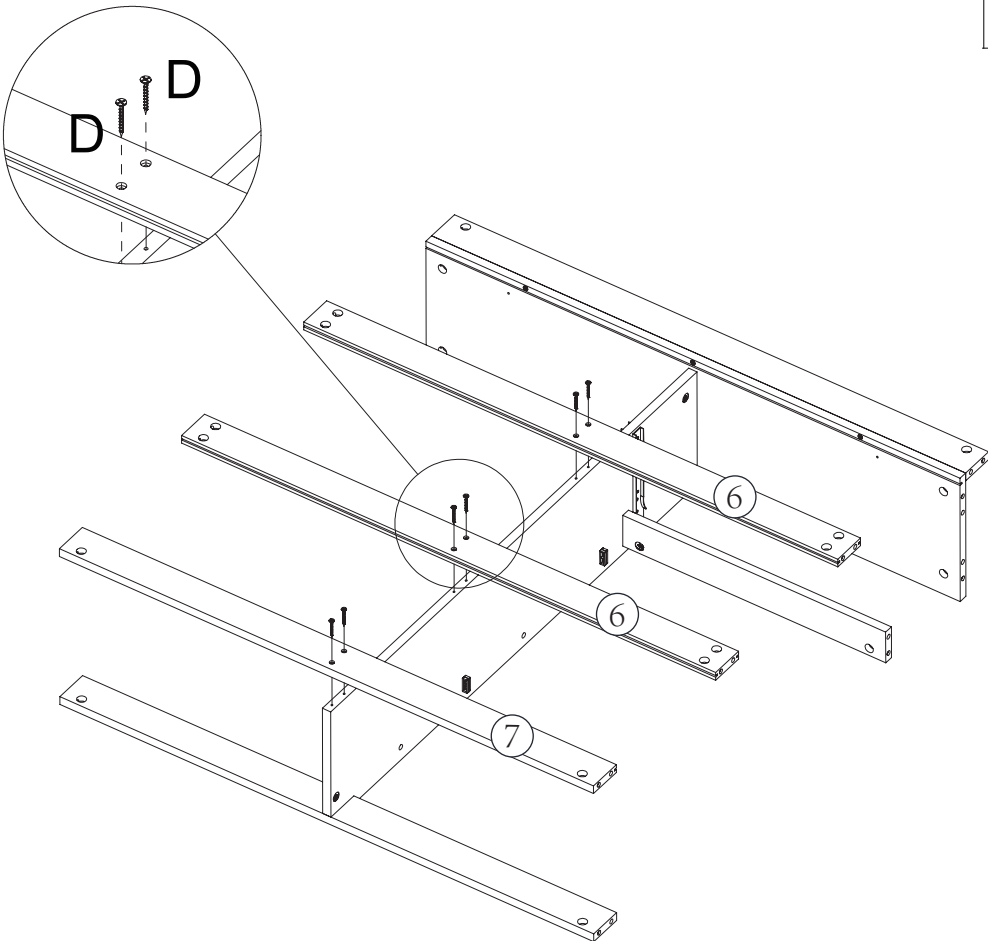


PRODUCT ASSEMBLY Installation

Step 7

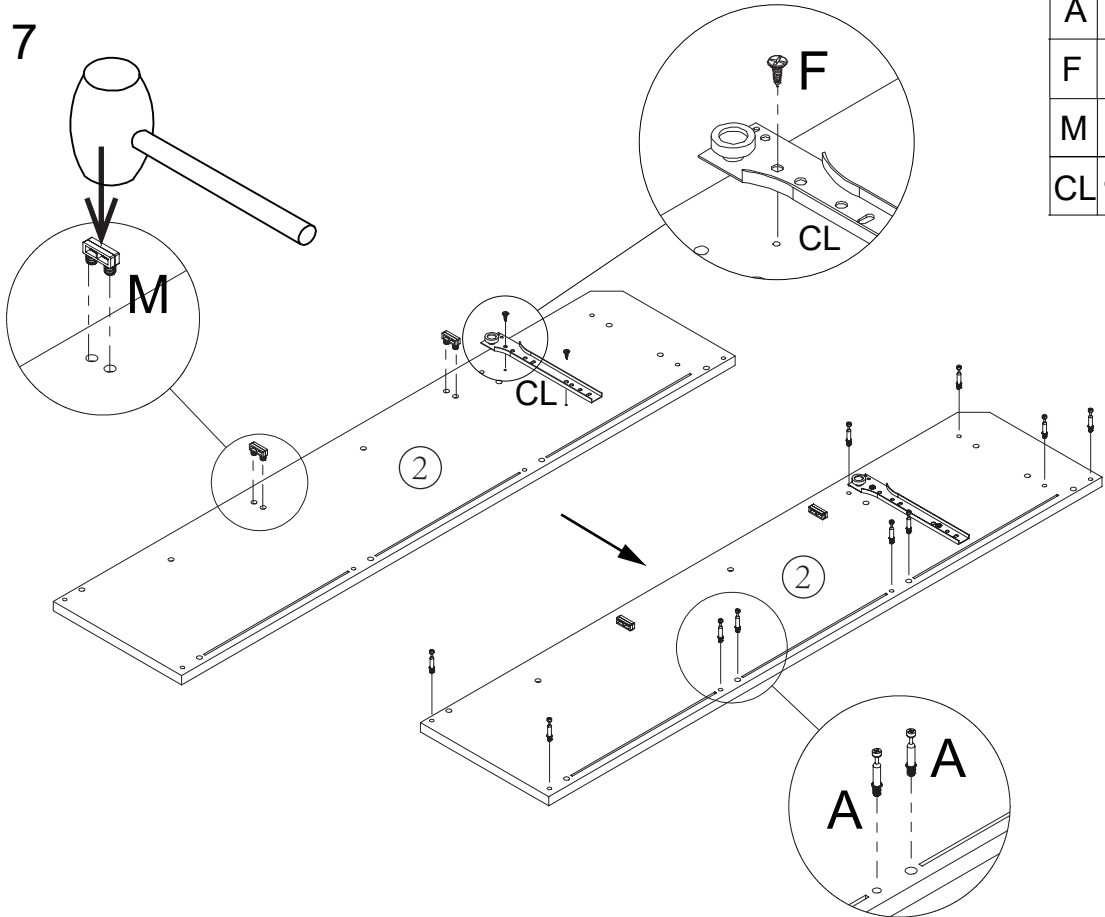

A		10 pcs
F		2 pcs
M		2 pcs
CL		1 pc


Step 8

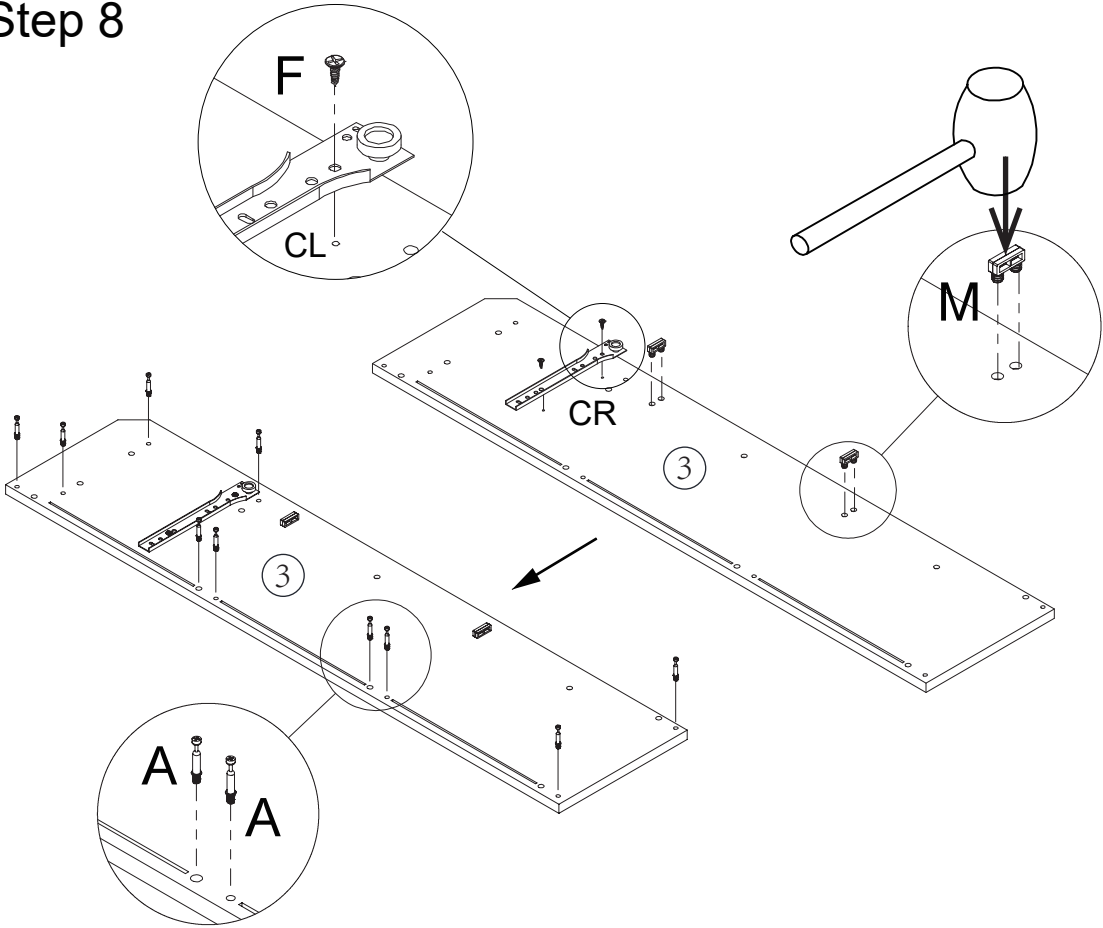


A		10 pcs
F		2 pcs
M		2 pcs
CR		1 pc

Step 9

B		10 pcs
C		6 pcs

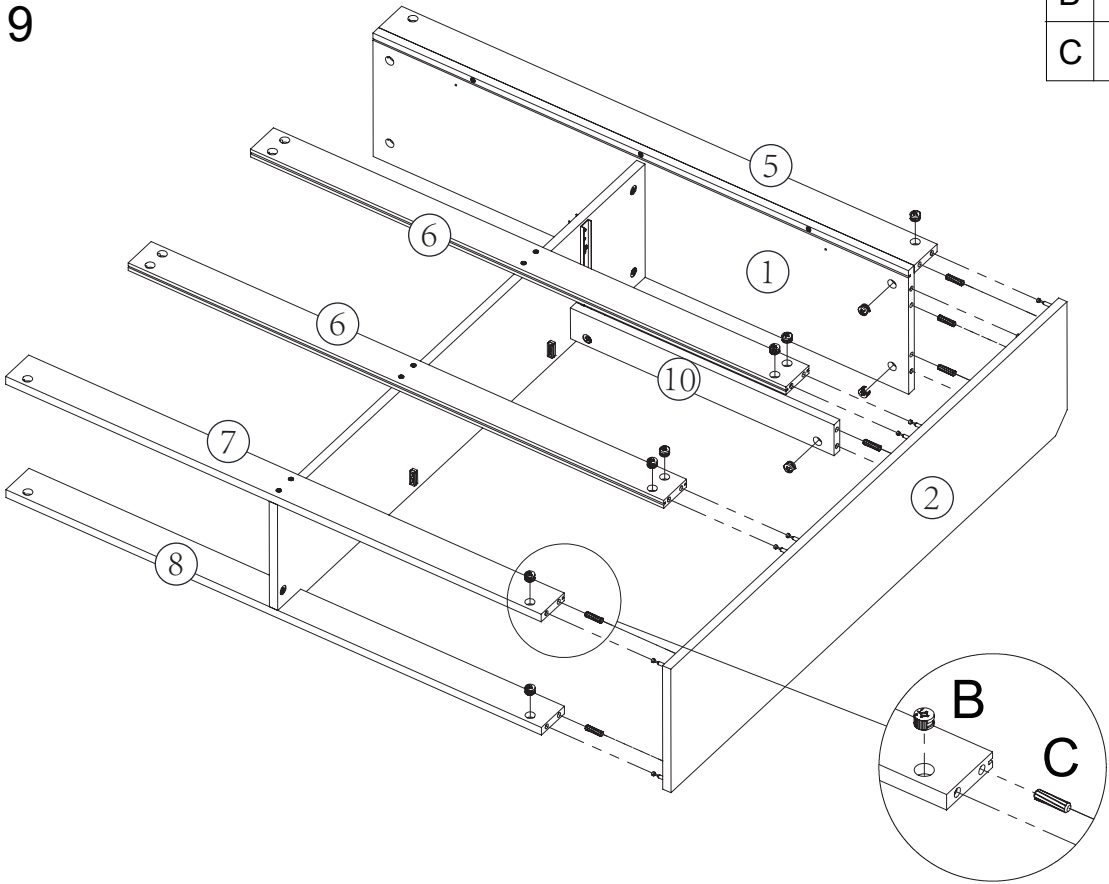


Step 10

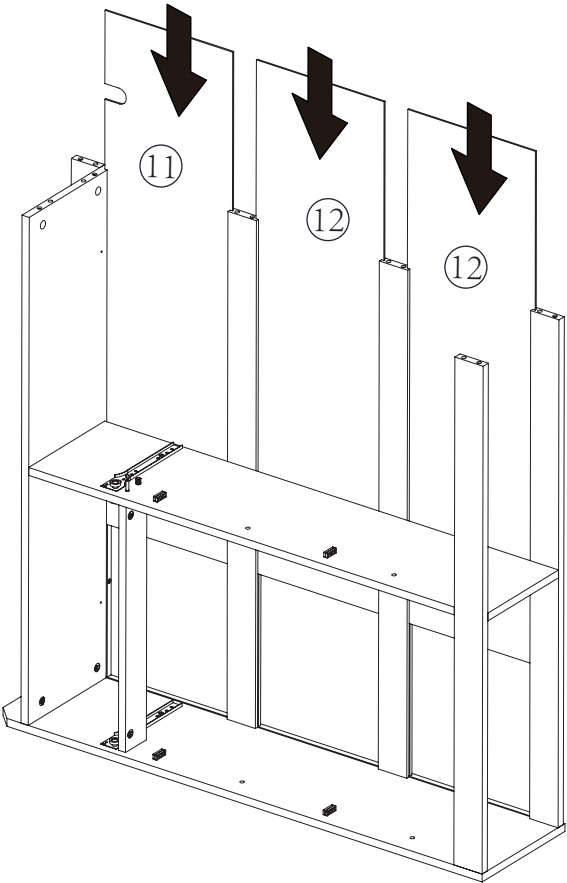


N		2 sets
---	---	--------

Step 11

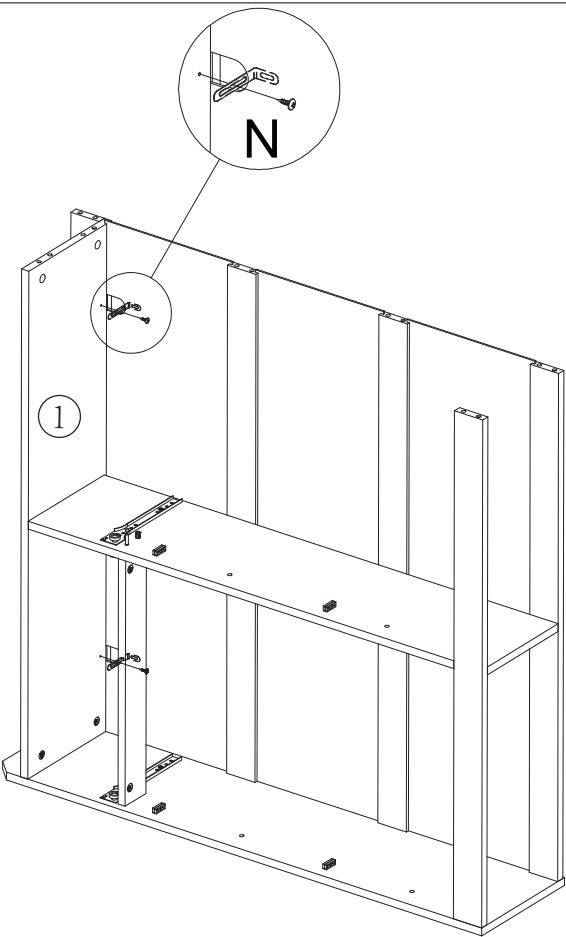


B		1 pc
---	---	------

Step 12

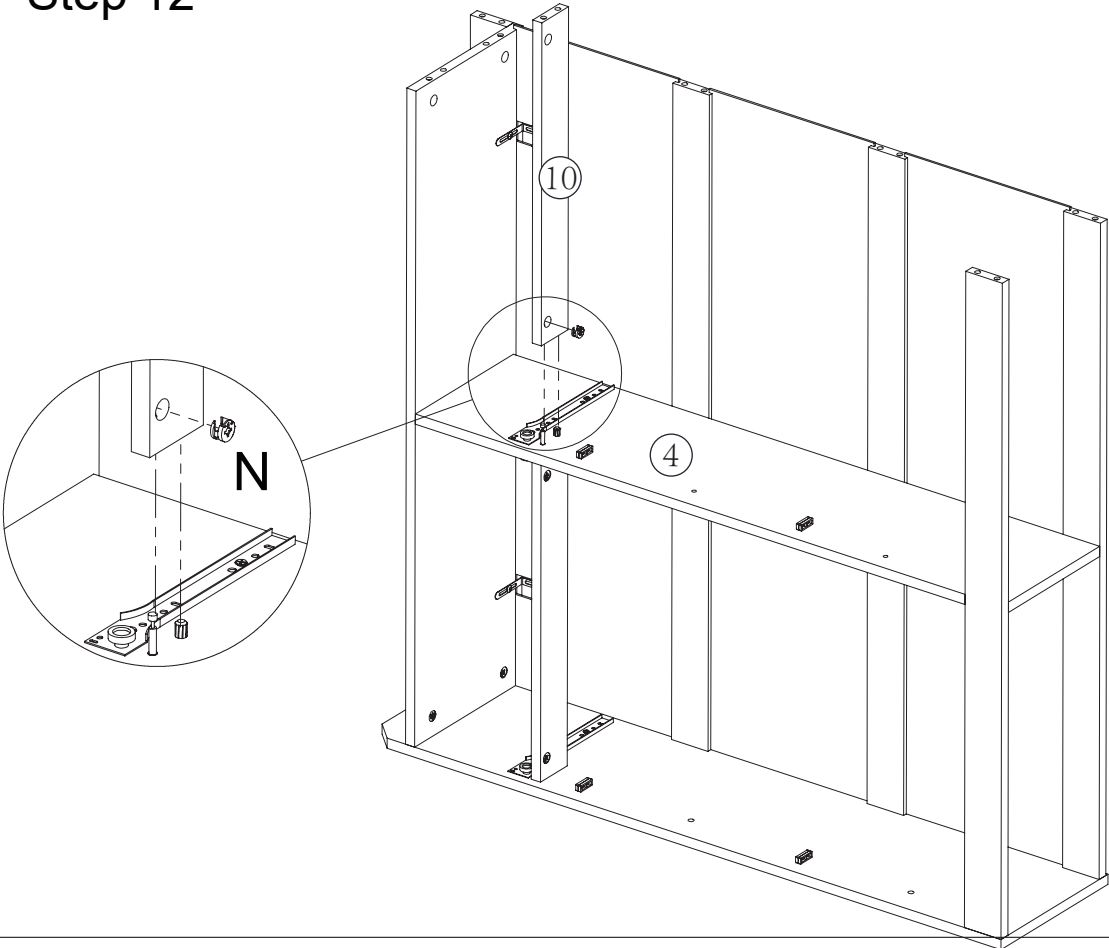



Step 13

B		10 pcs
C		6 pcs

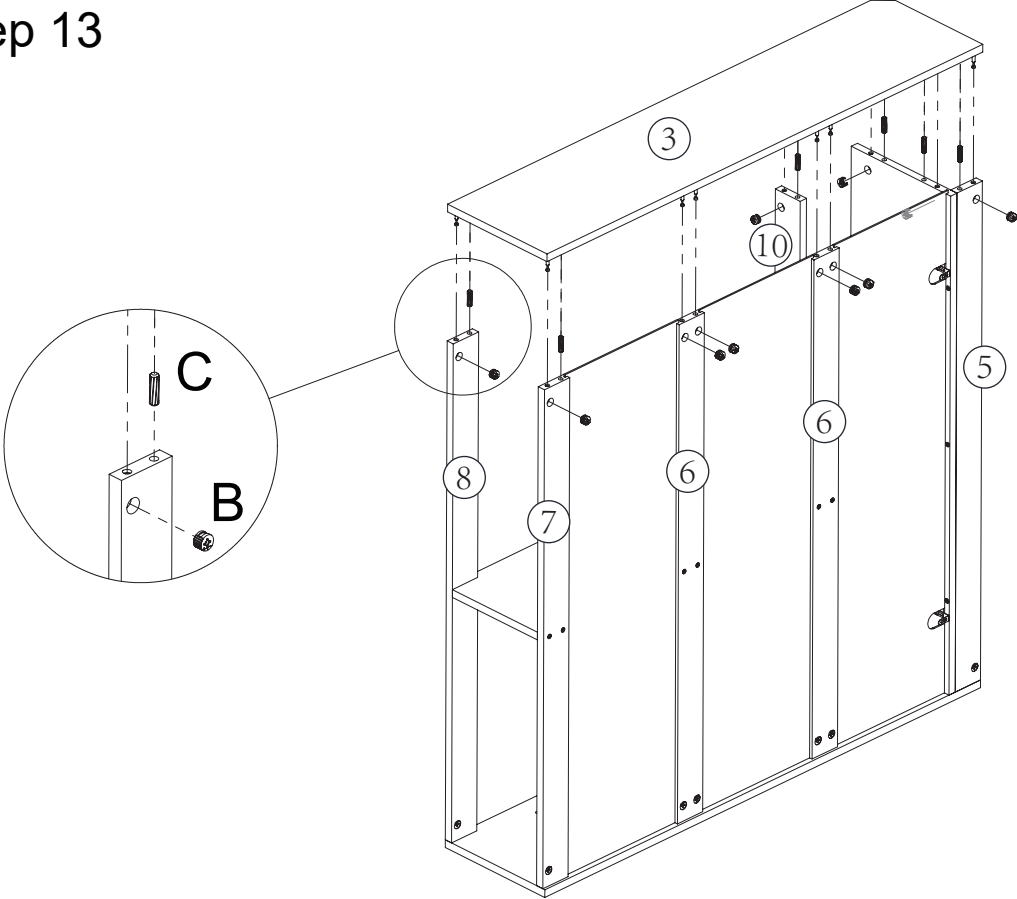

Step 14


H		12 sets
---	---	---------

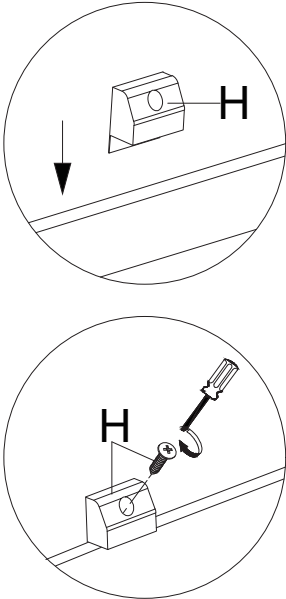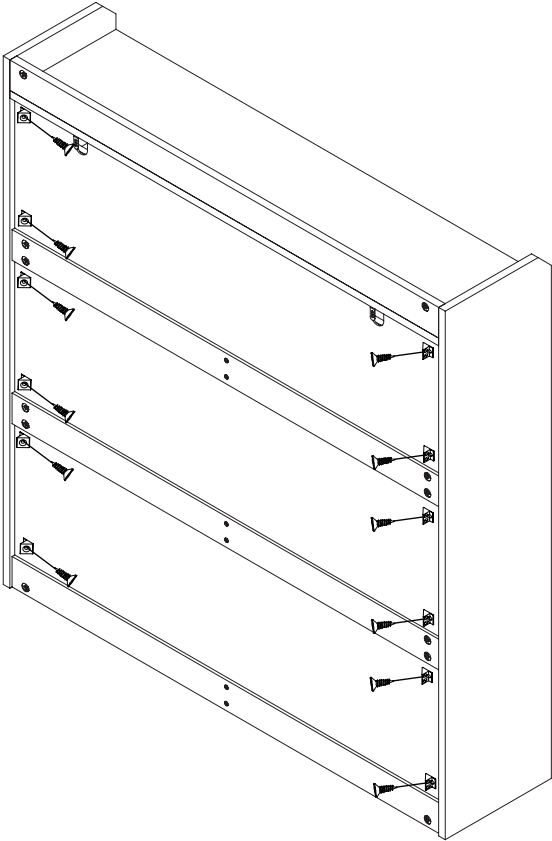

Step 15

**WARNING!**


IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH THE
WALL ATTACHMENT DEVICE PROVIDED

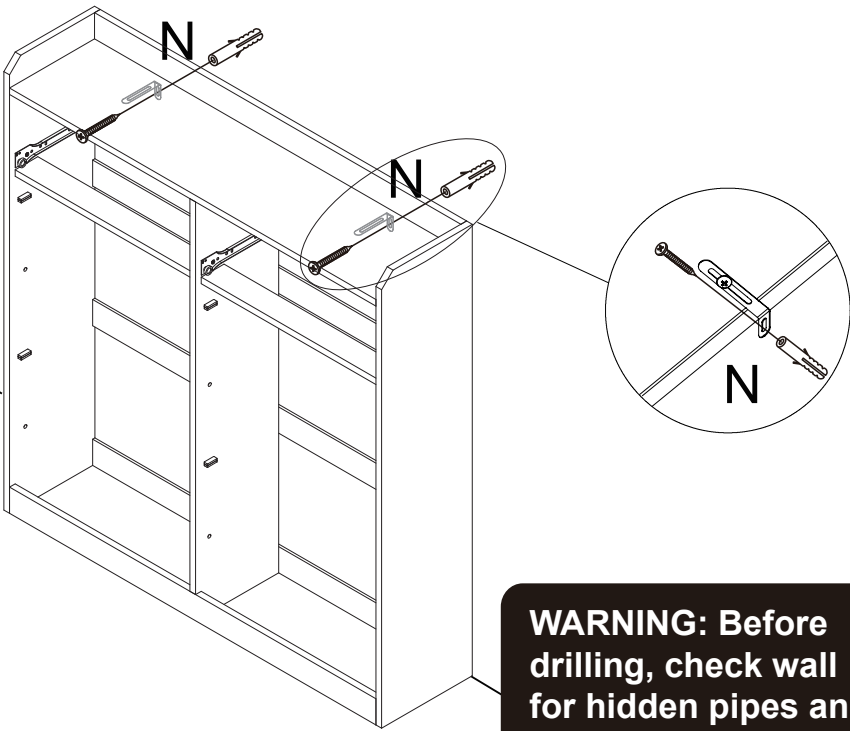

WARNING: Before
drilling, check wall
for hidden pipes and
cables


Step 16

F		24 pcs
G		4 sets
K		4 pcs
L		4 pcs

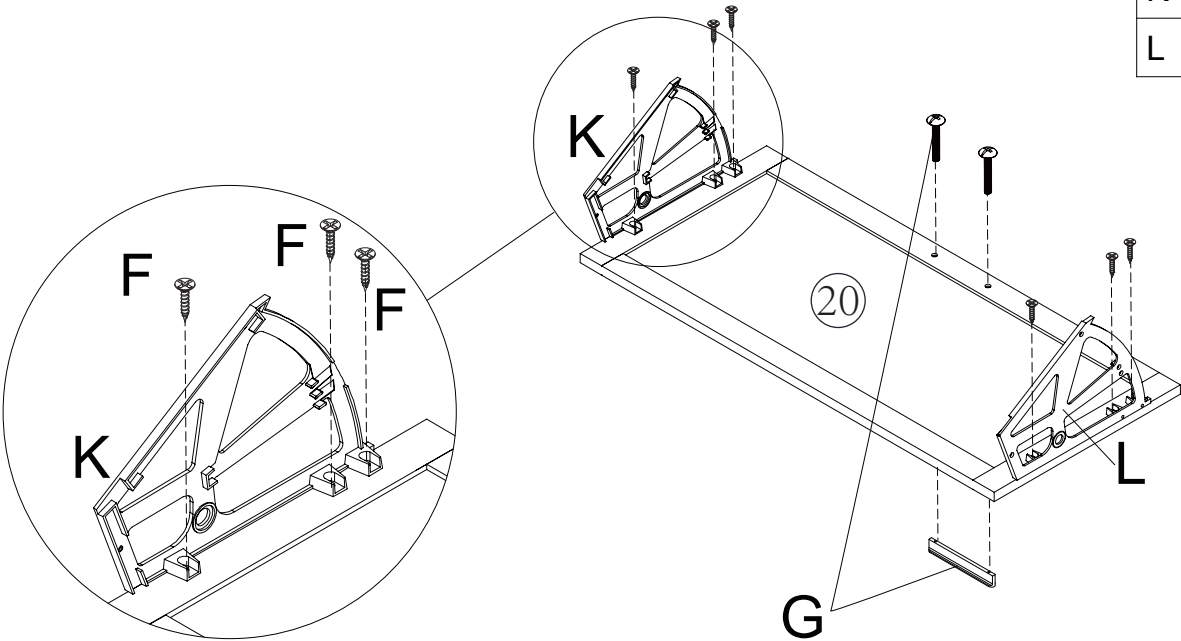


X 4

Step 17

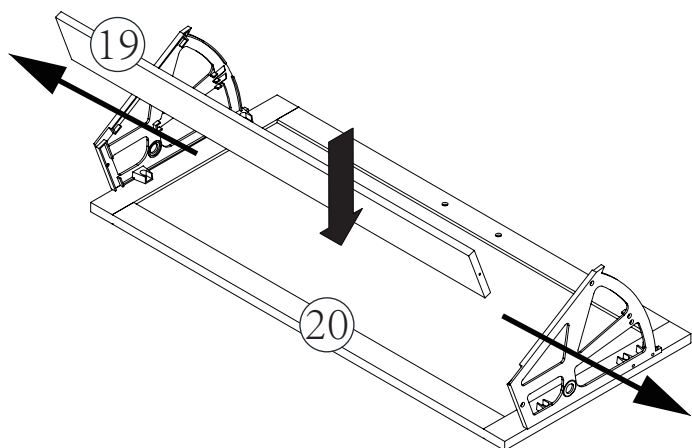

X 4


Step 18

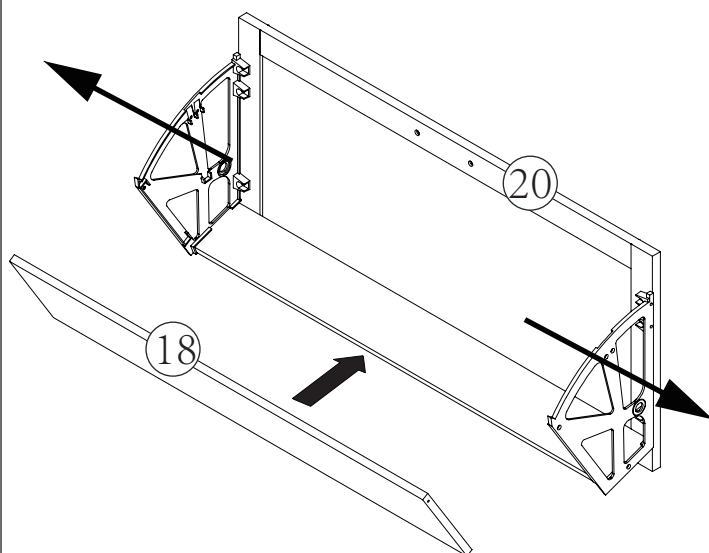

X 4

Step 19


F  16 pcs

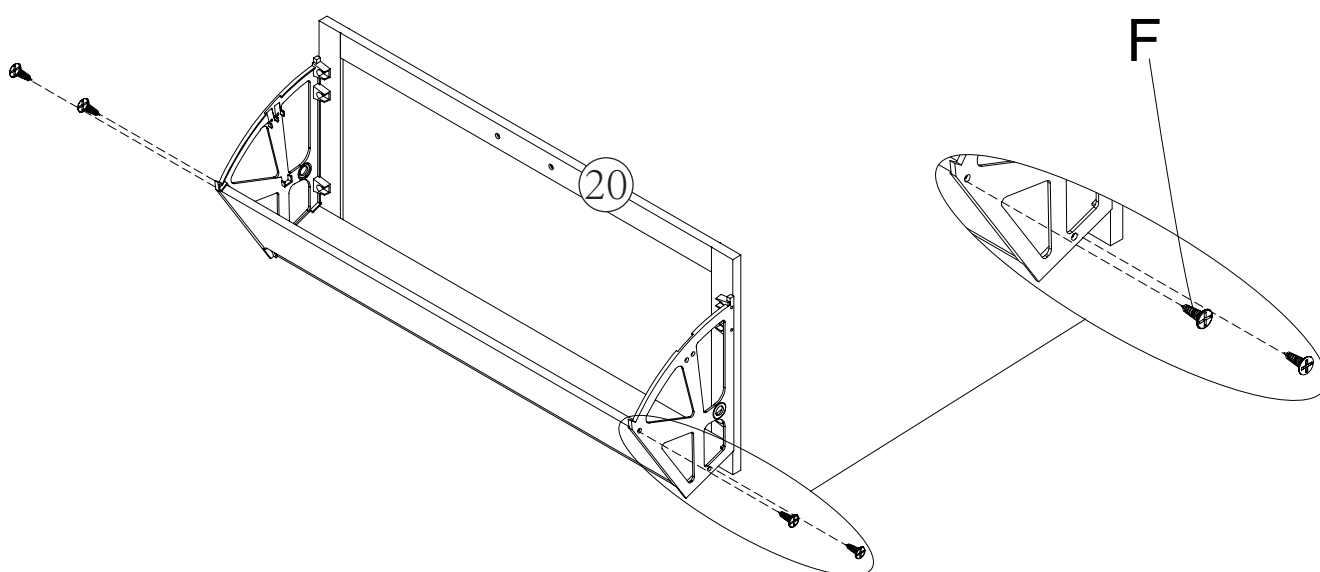

X 4

Step 20


I		8 PCS
J		8 PCS

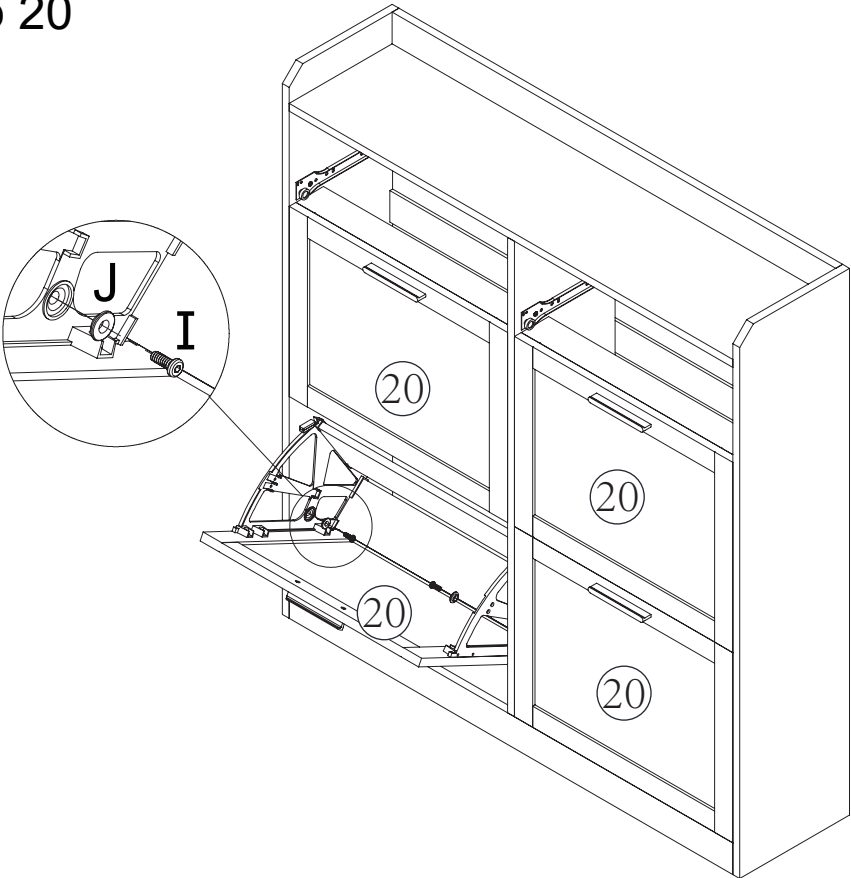

X 4

Step 21


F		8 pcs
---	---	-------

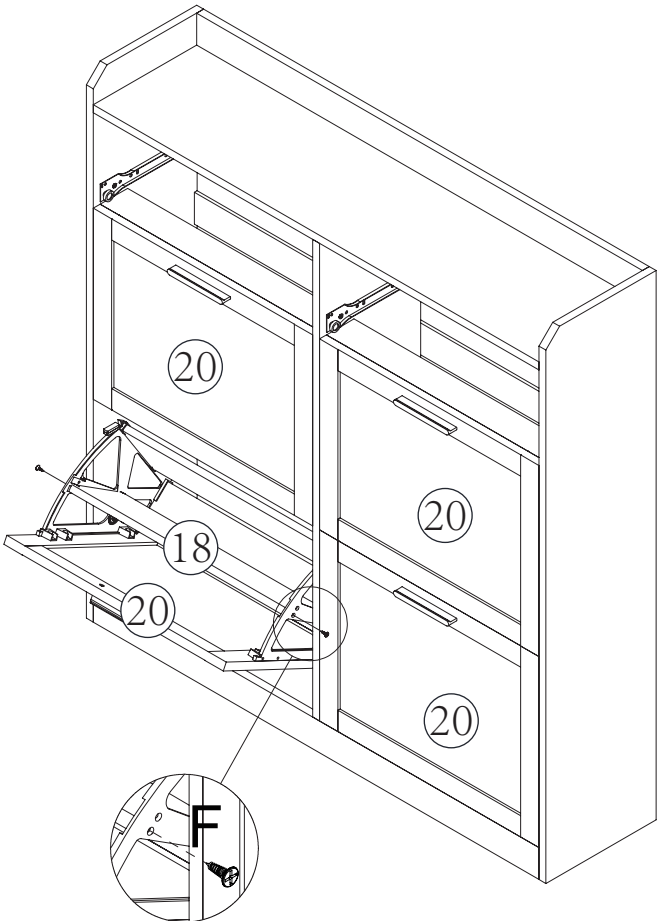

X 4


Step 22

D		8 pcs
---	---	-------

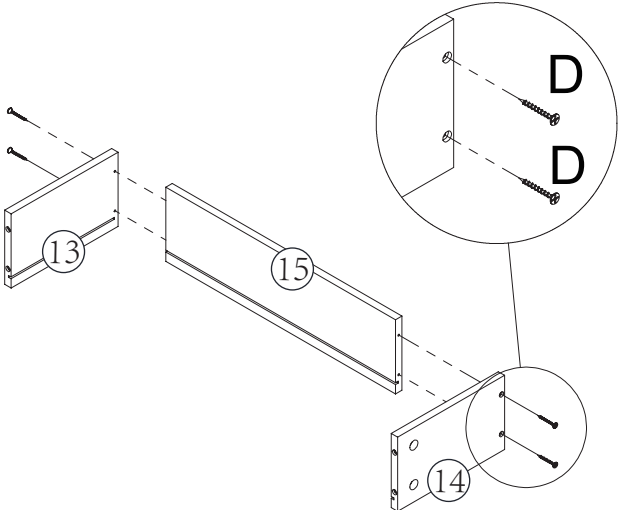

X 2


Step 23

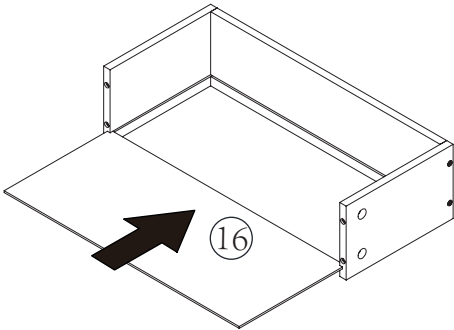

X 2


Step 24

A		8 pcs
B		8 pcs
G		2 sets

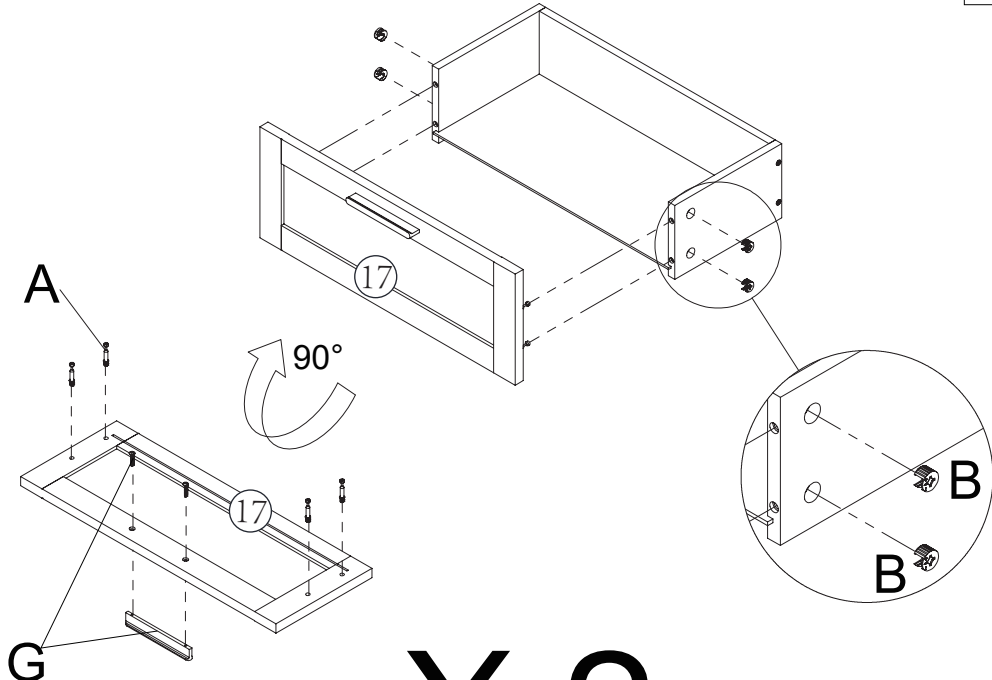


X 2

Step 25

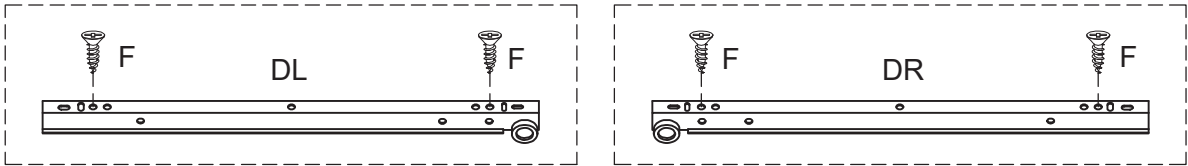

F		8 pcs
DL		2 pcs
DR		2 pcs

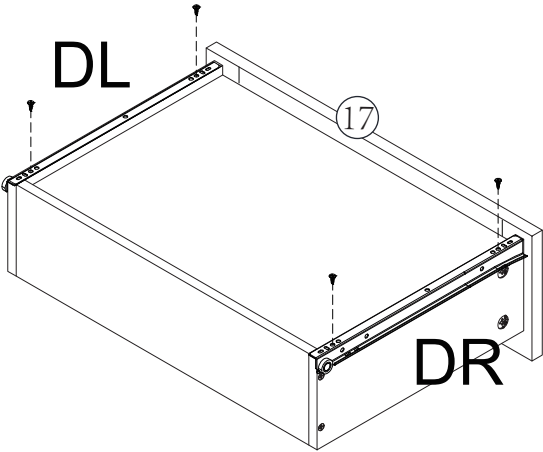

X 2

Step 26

