


Shoe Cabinet

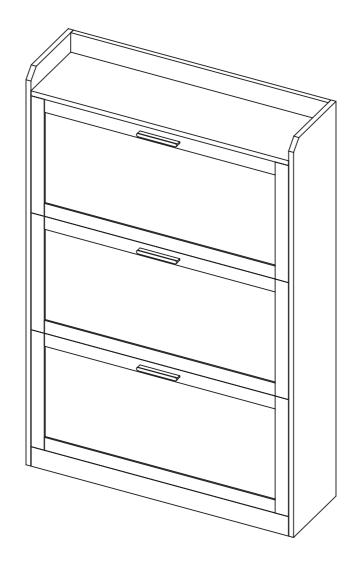

Note: During the installation process, pay attention to the installation direction and hole position of the board and accessories, and check repeatedly after each step of installation to avoid installation errors.

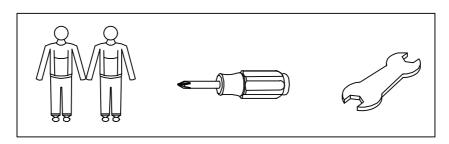


DJ503967 Version : 1.0

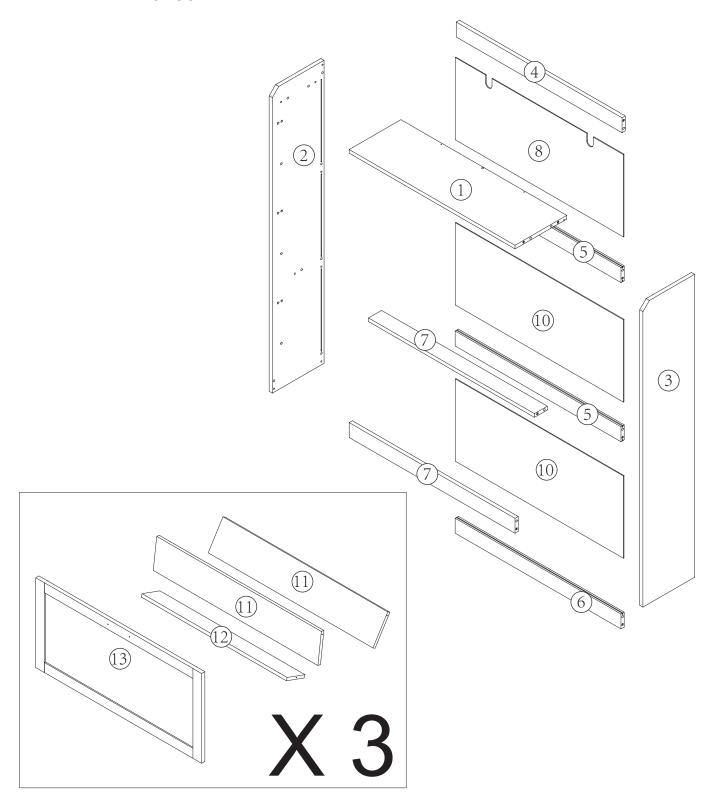

Cam Lock FasteningSystem

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

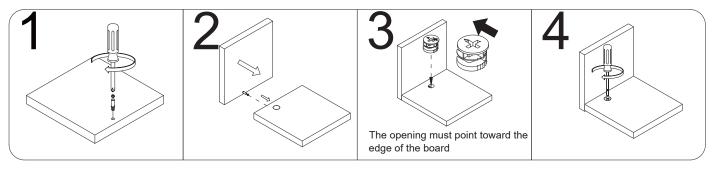



Components - Fittings

Please check you have all the panels listed below

Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

		1	1		
Α		16 pcs +1 pc	В		16 pcs +1 pc
С		17 pcs +1 pc	D	Delegation	2 pcs
F		36 pcs +2 pc	G		3 sets
Н		12 sets	I		6 pcs
J		6 pcs	K		3 pcs
L		3 pcs	M		6 pcs
N		2 sets			
	1	I.	I	<u> </u>	

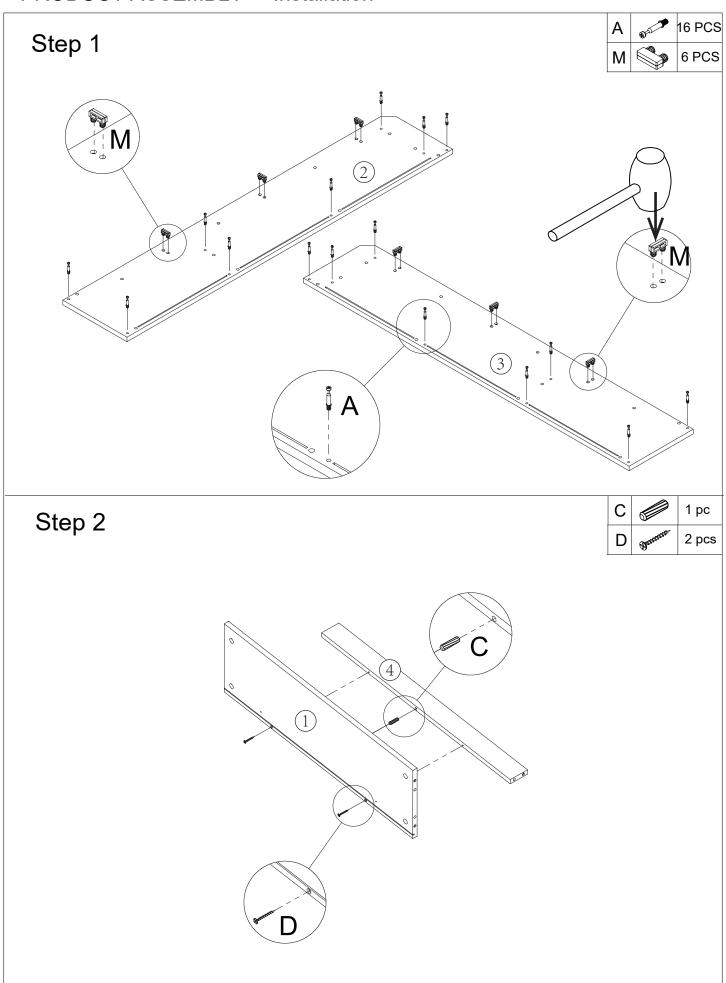

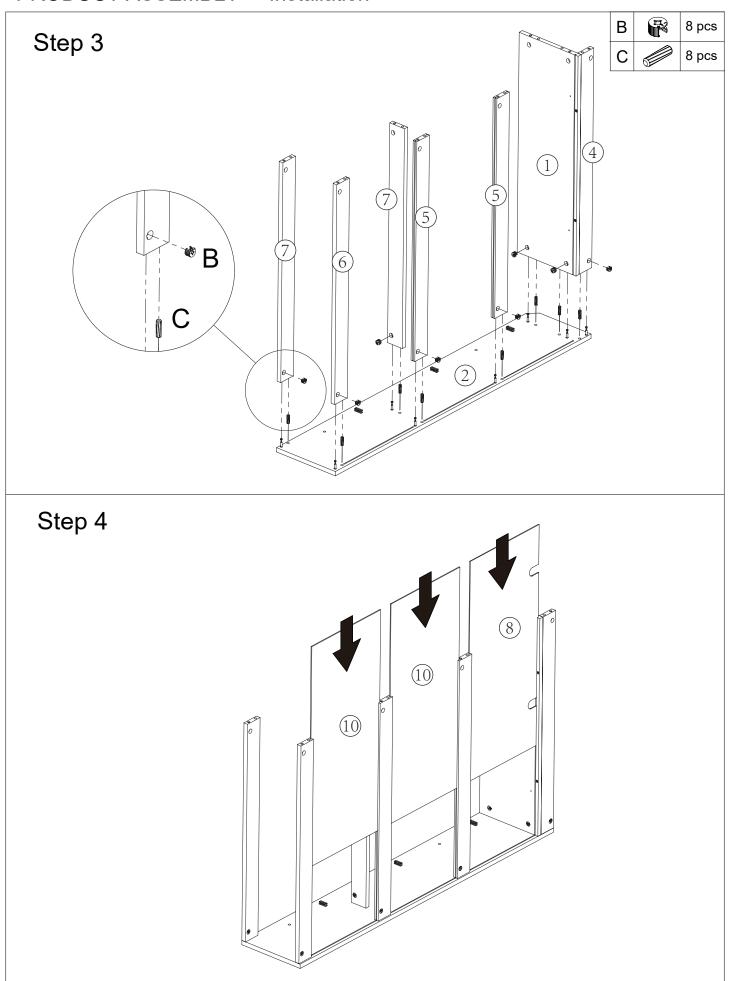

PRODUCT ASSEMBLY Installation N 2 sets Step 5 1 8 pcs Step 6 8 pcs 3 В

