



## How To Use


The product is subject to the actual product. Images are for reference only.

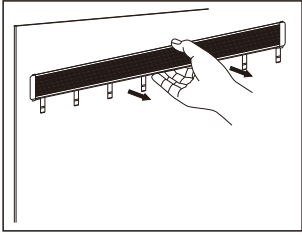


1 Pull out the front panel.

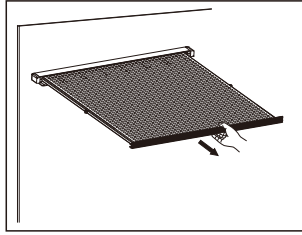

2 Expand the drying net.

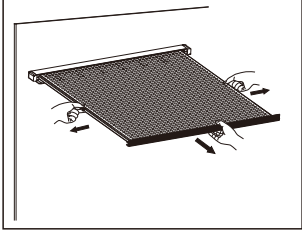

3 Straighten and secure the support rods on both sides.

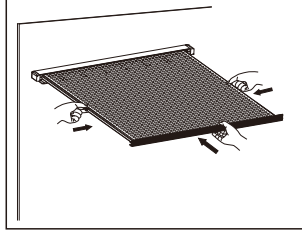

4 When retracting the drying net, please watch your hands to prevent them from getting caught.



**Please be careful clamp your hands when using this product!!!**


**WARNING**

## Installation Instruction


**A** Self-Tapping Screw  
2 PCS




**B** Expansion Screw  
2 PCS

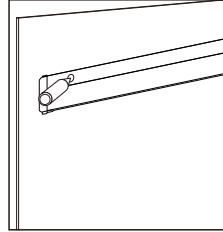


1 There are 2 holes on the back of the product for installing screws. Open the product, place it against the wall horizontally, and mark the drilling holes on the wall through these holes on the product back.

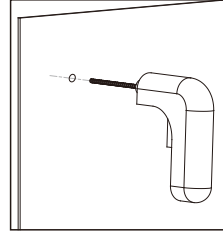


2 Drill a hole at the marked position with a 1/5" drill bit.

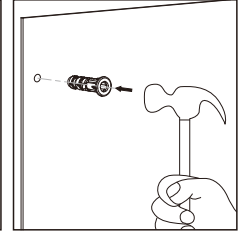


3 Insert the expansion screw into the hole.

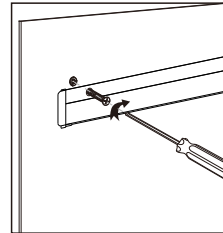

4 Align the hole on the back of product with the position of the expansion screw, and screw the self-tapping screw into the expansion screw until it is tight.

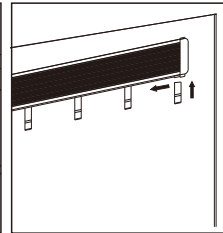


5 Insert the hook into the slot on the bottom.

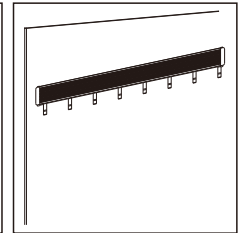


6 Installation completed.

## Wie Benutzt Man


Das Produkt entspricht dem tatsächlichen Produkt. Bilder dienen nur zur Referenz.

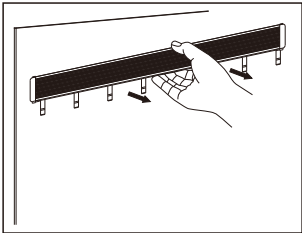


1 Ziehen Sie die Frontblende heraus.

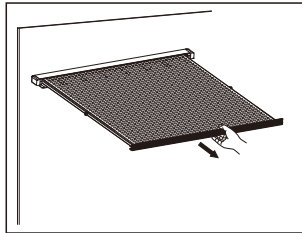

2 Erweitern Sie das Trocknungsnetz.

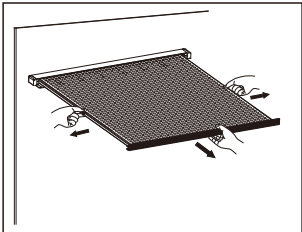

3 Richten Sie die Stützstangen auf beiden Seiten aus und befestigen Sie sie.

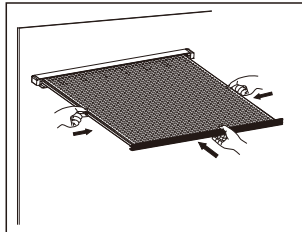

4 Beim Zurückziehen des Trockennetzes achten Sie bitte auf Ihre Hände, um ein Einklemmen zu vermeiden.



**Bitte passen Sie auf, sich nicht die Hände einzuklemmen, wenn Sie dieses Produkt verwenden!!!**


**WARNUNG**

## Installationsanweisungen


**A** Selbstschneidende Schraube  
2 PCS




**B** Dübel-Schraube  
2 PCS

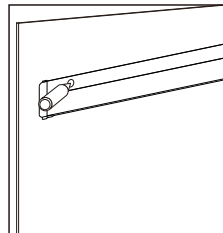


1 An der Rückseite des Produkts befinden sich 2 Löcher für die Befestigung von Schrauben. Öffnen Sie das Produkt, platzieren Sie es horizontal an der Wand und markieren Sie die Bohrlöcher an der Wand durch diese Löcher auf der Rückseite des Produkts.

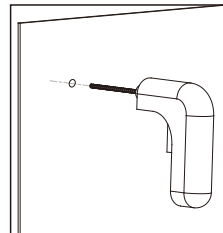


2 Bohren Sie mit einem 5mm Bohrer an der markierten Stelle ein Loch.

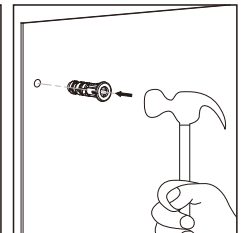


3 Klopfen Sie die Expansionschraube mit einem Hammer in das vorgebohrte Loch.

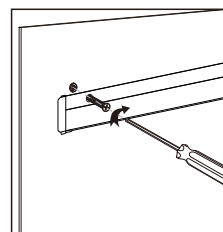

4 Richten Sie das Loch auf der Rückseite des Produkts mit der Position der Ausdehnungsschraube aus und schrauben Sie die selbstschneidende Schraube in die Ausdehnungsschraube, bis sie fest sitzt.

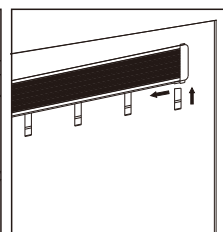

5 Stecken Sie den Kleiderhaken in den Schlitz am Boden ein.

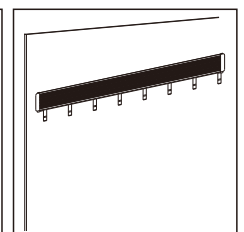

6 Installation abgeschlossen.