
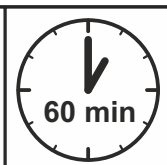
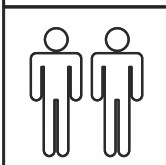
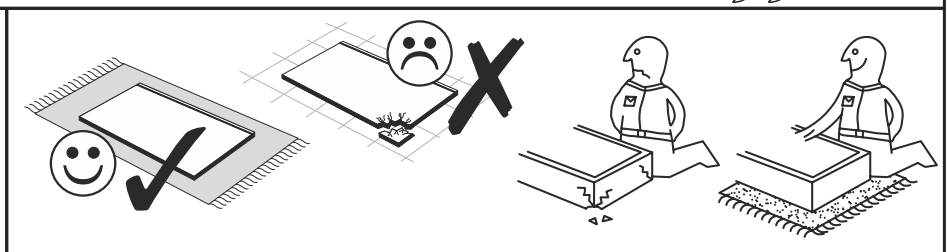
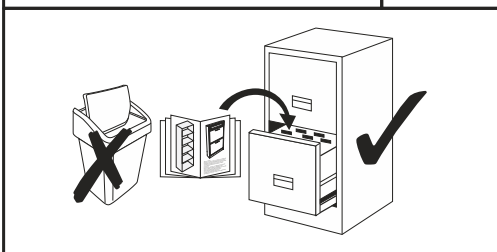


Art.Nr. : **0772-LB_011**
Lowboard

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

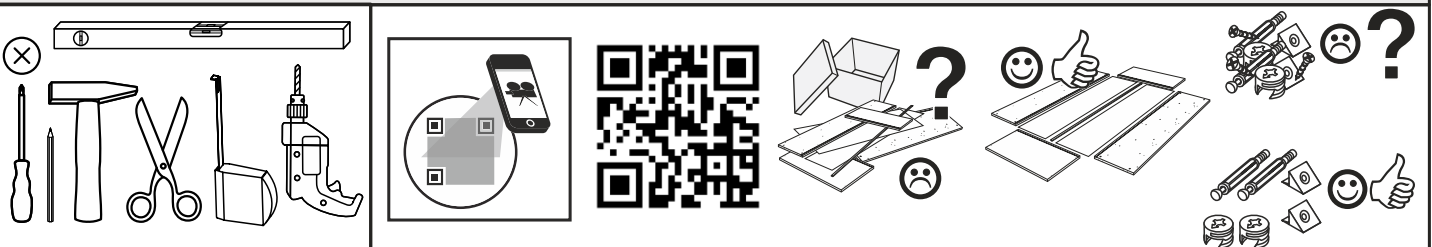

Colli 1/3 : 9 10 11 12 13 14 15 16 17 18 19 20

Colli 2/3 : 1 2 3 4 5 6 7 8 Beutel 1/5, 2/5, 3/5, 4/5, 5/5

Colli 3/3 : 20

CHICAGO

Beutel 1/5

1-30 35x 3x16		1-80 8x 3,5x13		1-70 2x 3x30		1-90 4x 3,5x20		1-122 2x 4x13		1-190 6x M4x20	
1-200 10x 6,3x13		1-349 6x M4		2-08 4x h=10mm		2-10 16x h=12mm		2-20 20x			

Beutel 2/5

1-123 8x 4x15		2-173 4x		3-07 1x		3-11 3x		3-42 3x		8er
---------------------	--	-------------	--	------------	--	------------	--	------------	--	-----



Beutel 3/5

Beutel 4/5

2-103 12x 8x30		5-130 2x		5-185 4x		5-260 1x		set one by Musterring
5-265 1x	set one by Musterring Pflegeanweisung	5-280 1x		6-425 2x				

Beutel 5/5


1-36 4x		4x40
------------	--	------

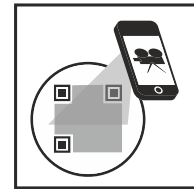


Colli 1/3




1123 x 358




1111 x 146




1163 x 316



350 x 160




350 x 160




14 1x




16 1x



15 1x

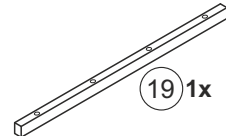

1100 x 25




1163 x 316




18 1x

Colli 2/3

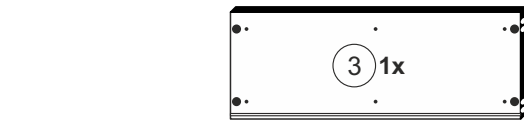


1151 x 424

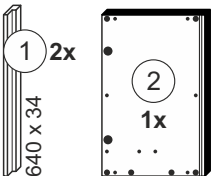


1 2x

640 x 34




640 x 409




1151 x 407




1151 x 409



640 x 409




1163 x 309













1163 x 320





Colli 3/3

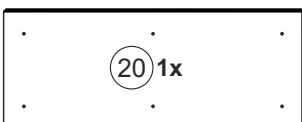



1185 x 445

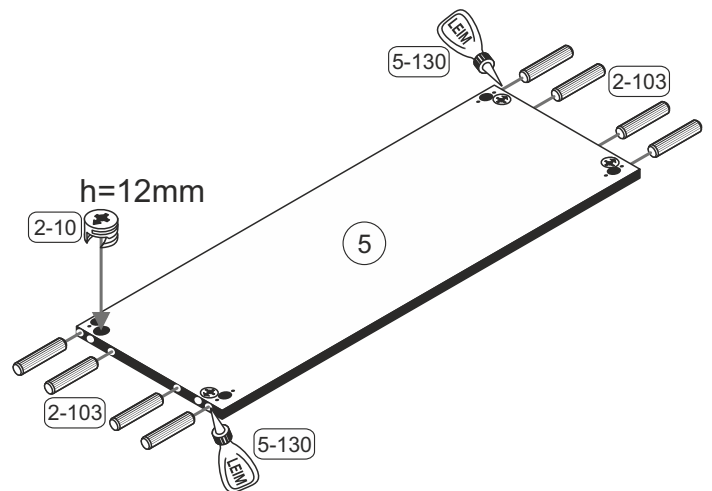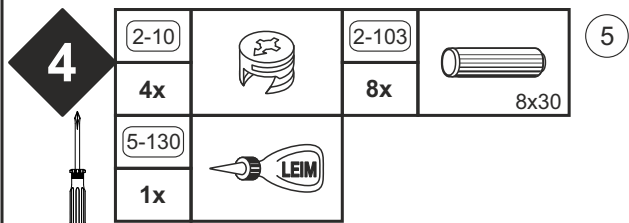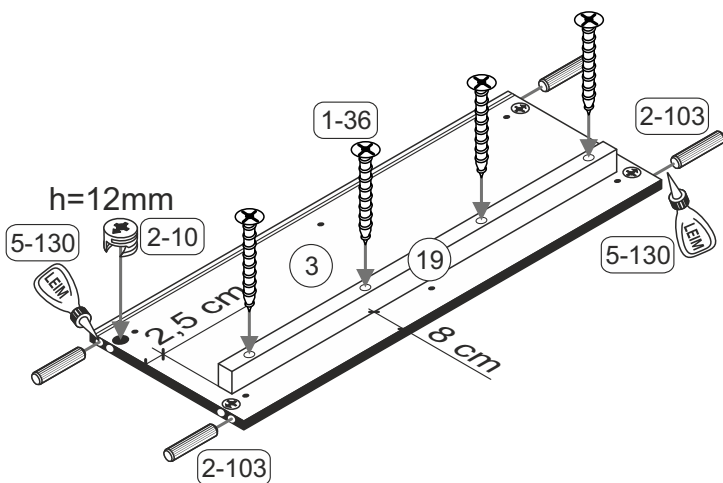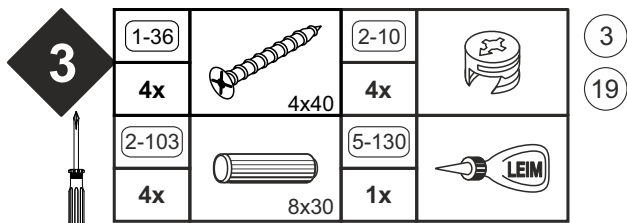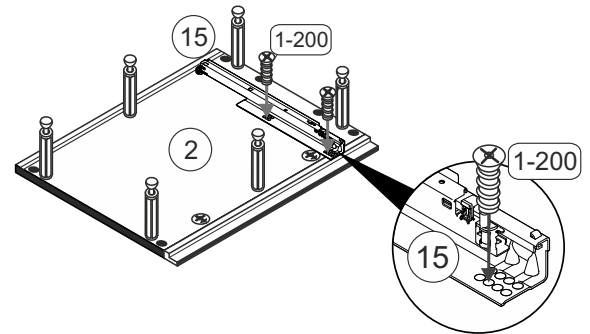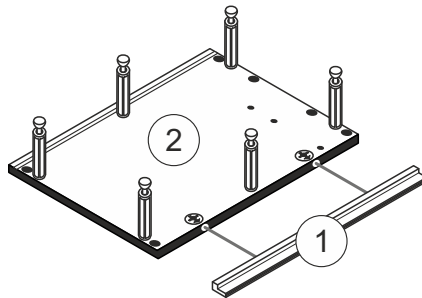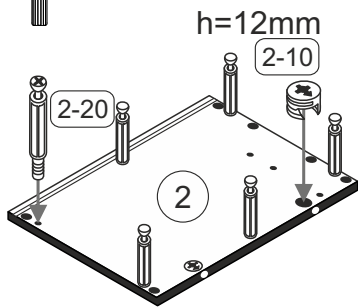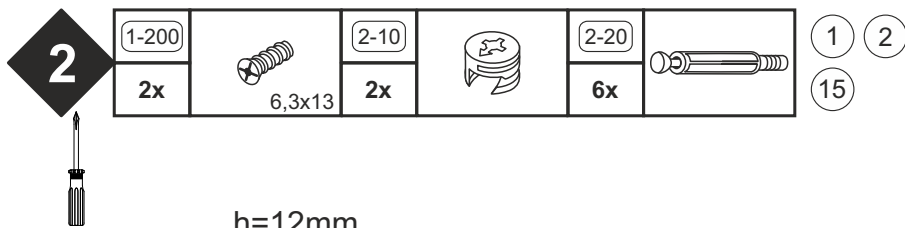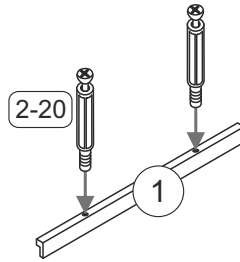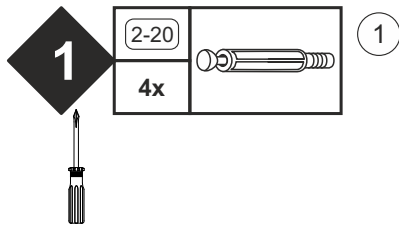

CHICAGO

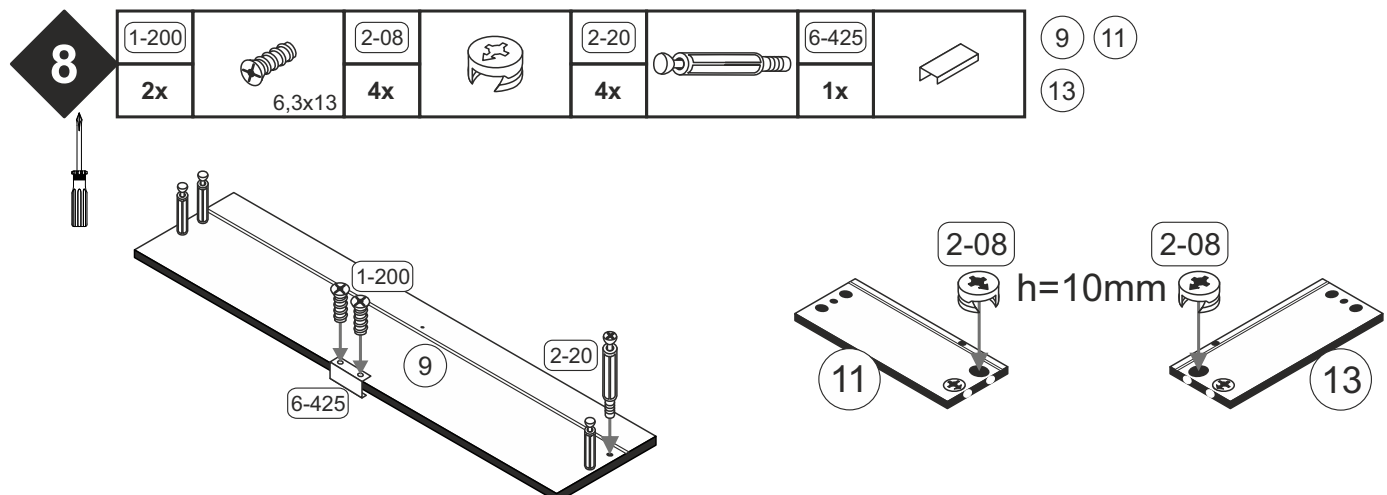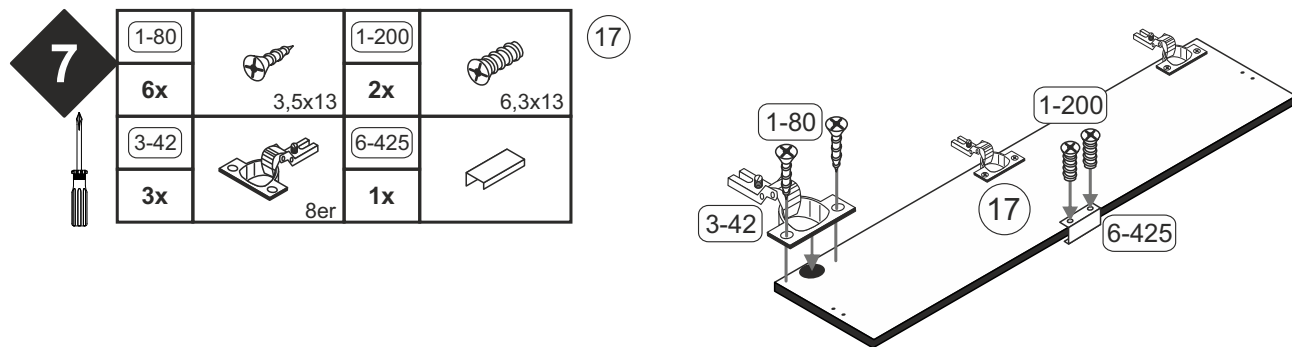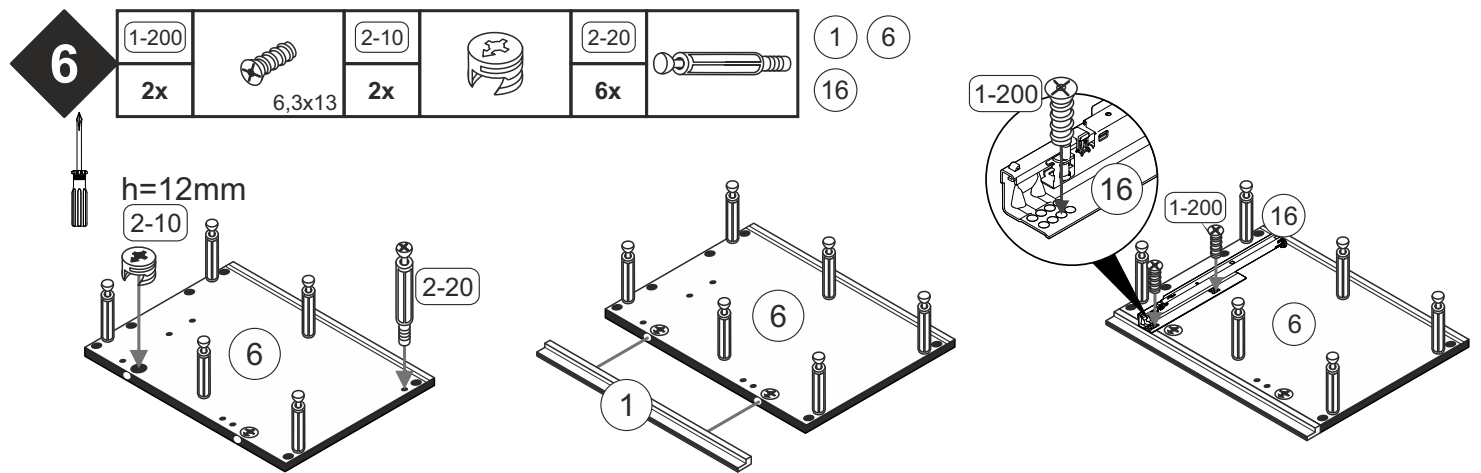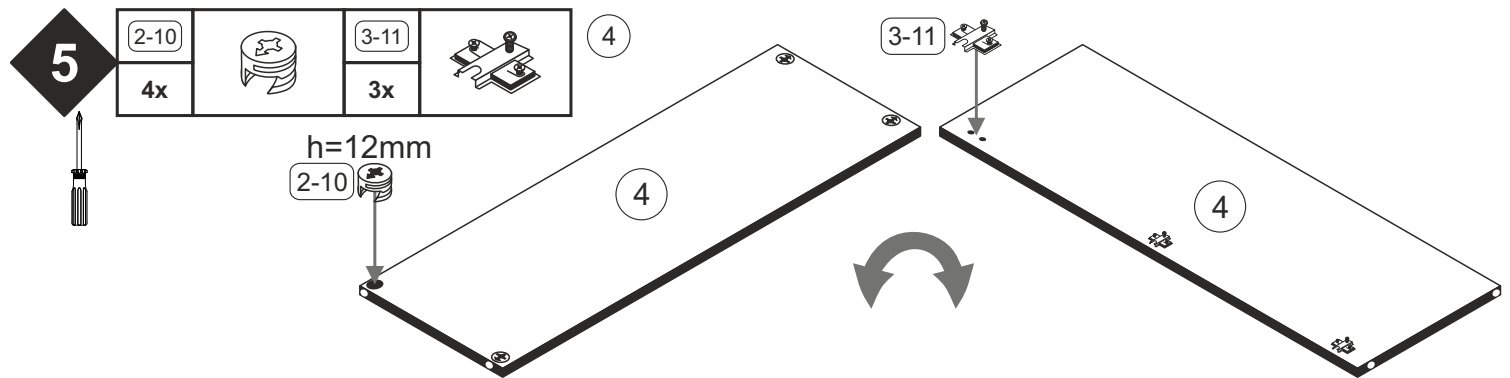


CHICAGO


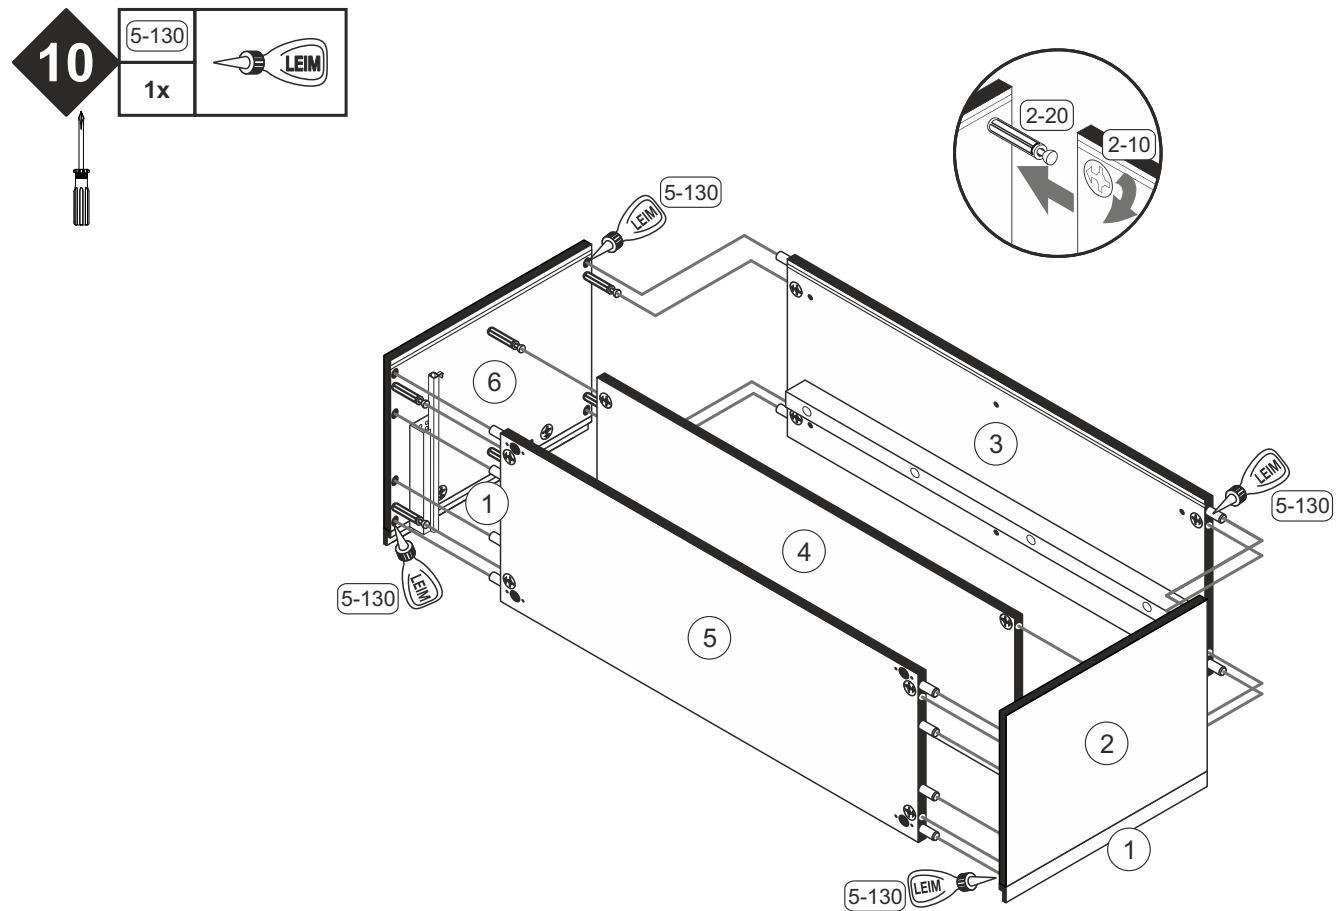
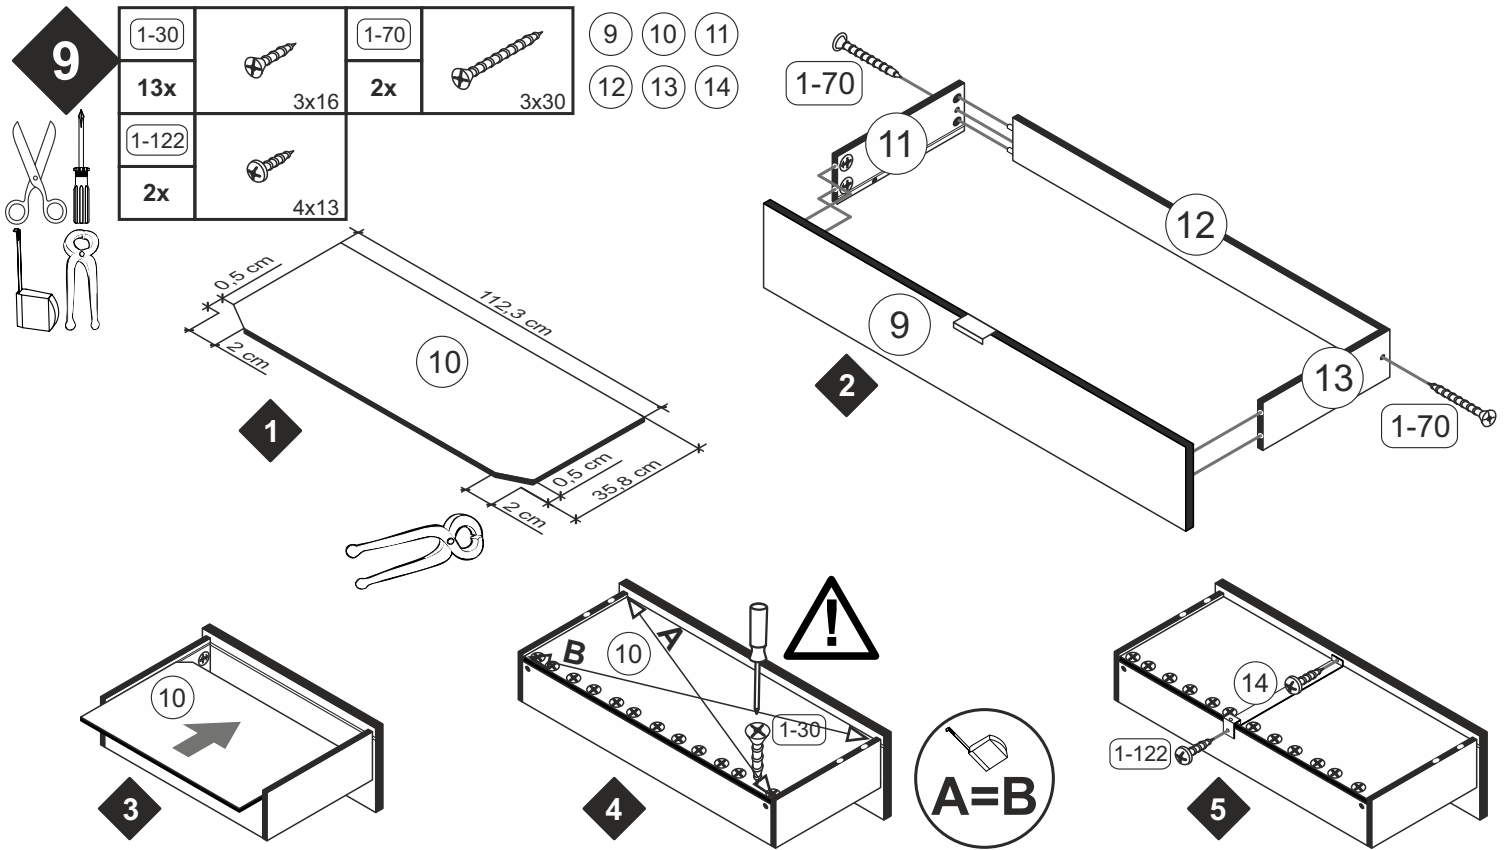


CHICAGO

11 	1-30		22x	3x16	1-90		4x	3,5x20
	1-123		8x	4x15				
	5-185		4x					
	2-173		4x					

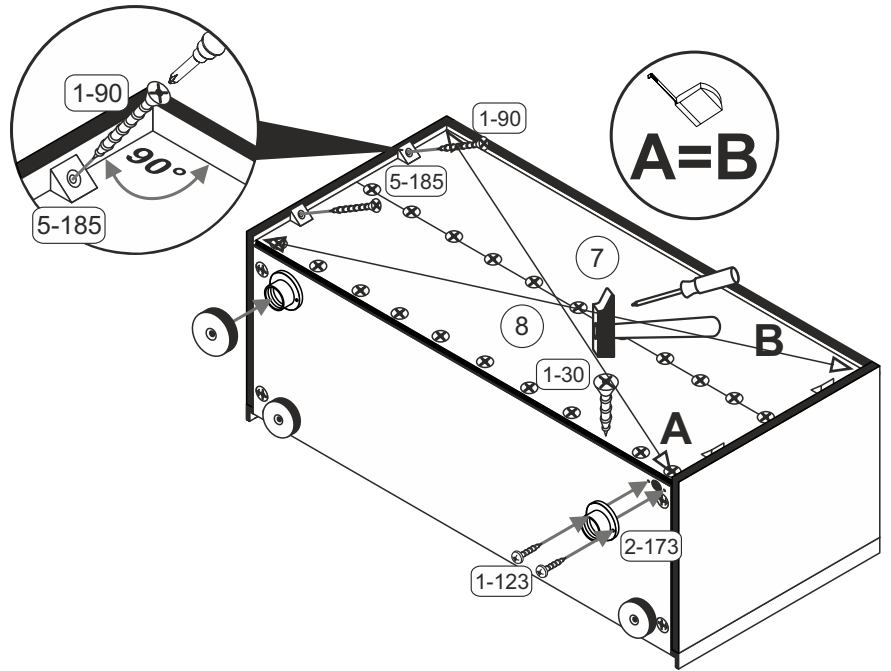


12 	5-280		1x

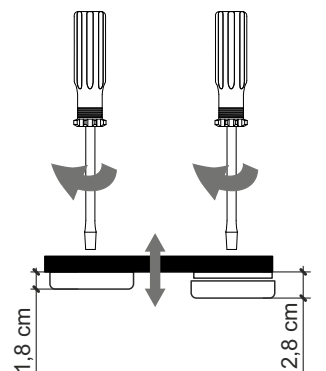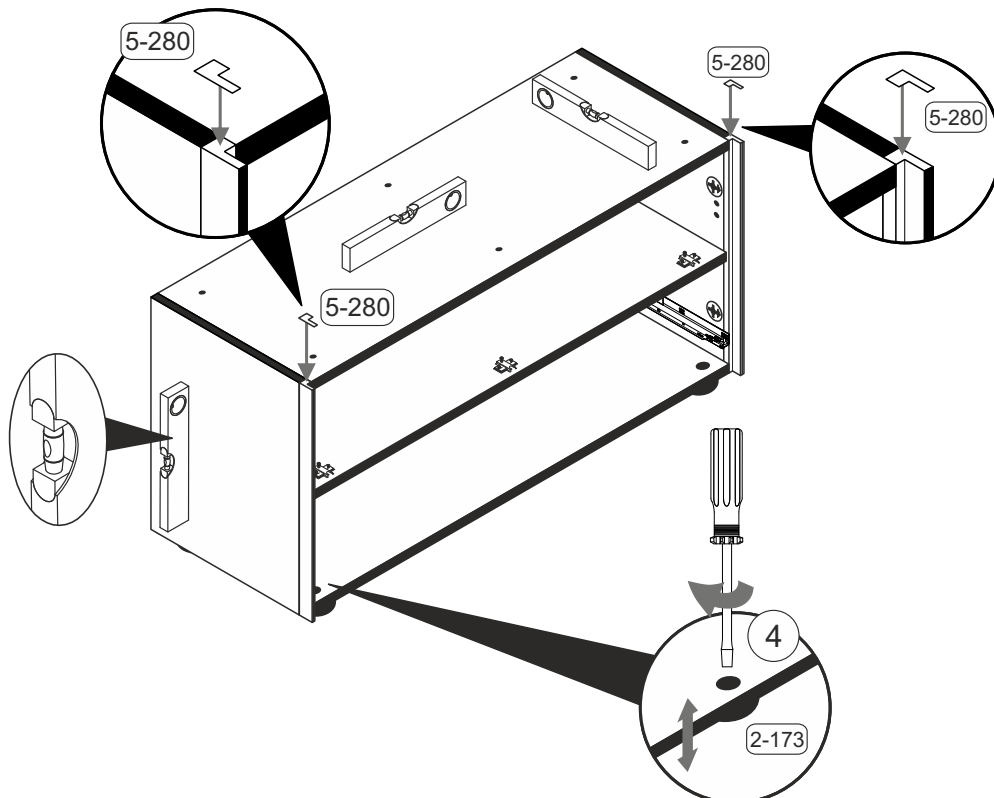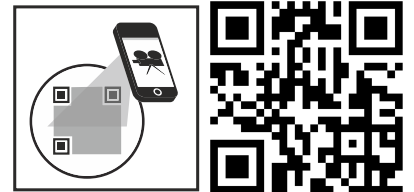


Höhenverstellung der Möbelfüße

13



Einbau des Schubkastens

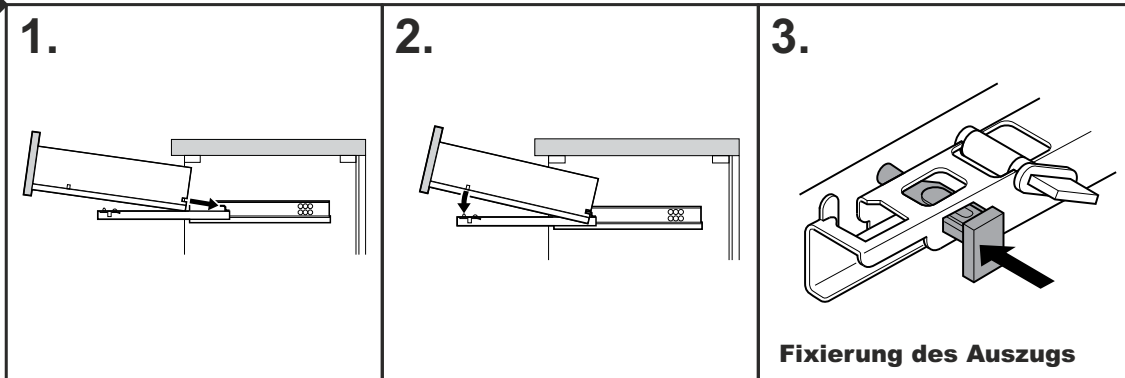

Ausbau des Schubkastens

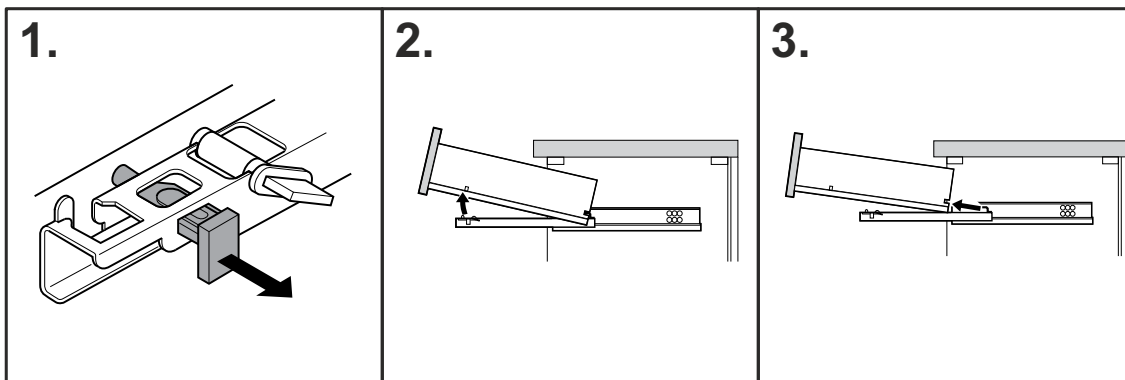


Höhenverstellung des Schubkastens




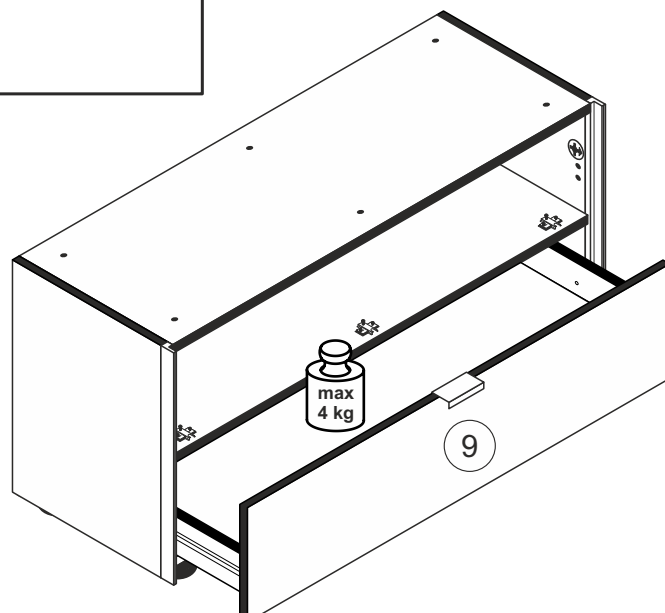
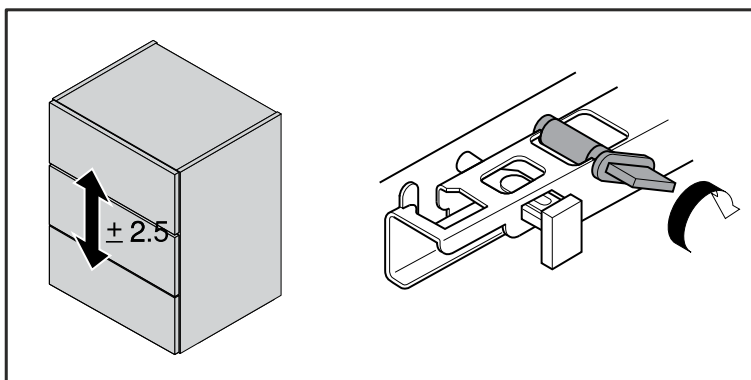


CHICAGO


Montage der Holzoberplatte

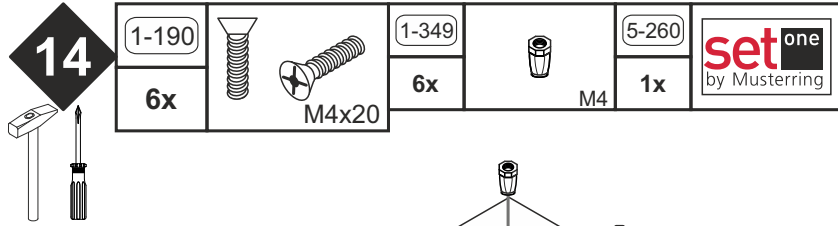


Die Schrauben M4x20 (1-190) müssen mit der Hand eingedreht werden.

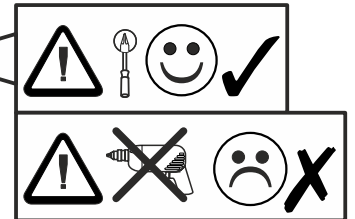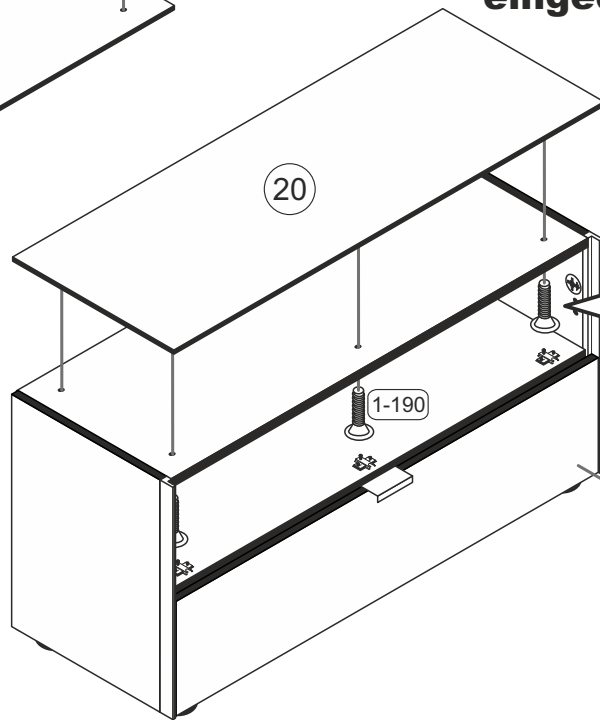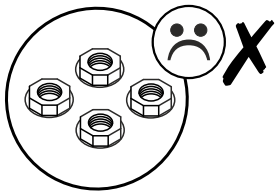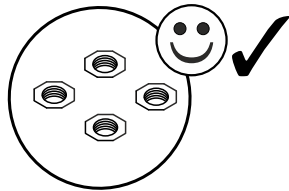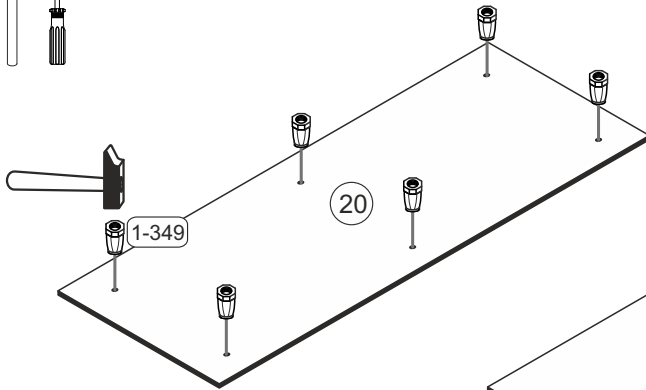





Montage der Glasoberplatte

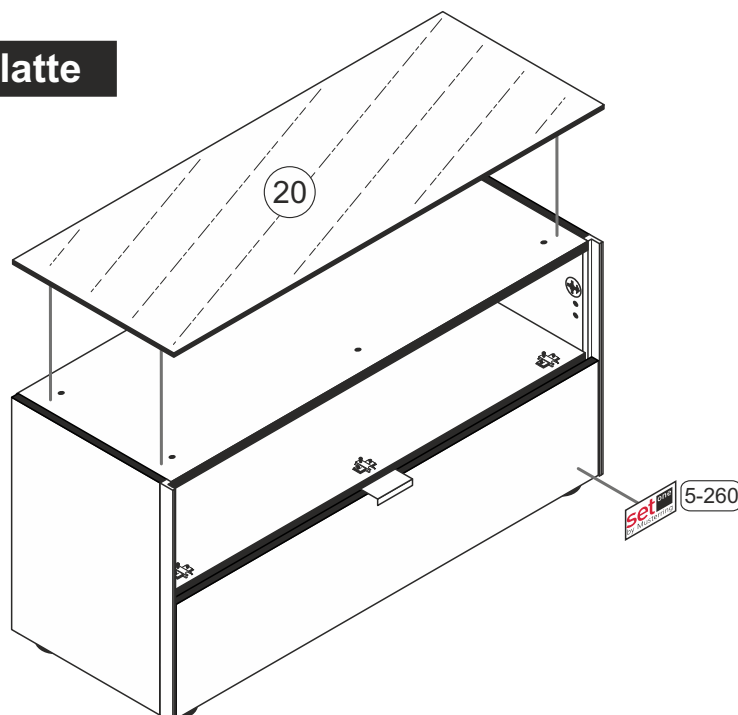


15	1-80		1-200	
	2x	3,5x13	2x	6,3x13
	3-07			
	1x			

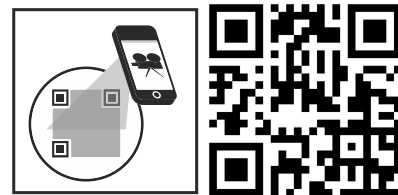

Stütze unten ¹⁸ überdrehen

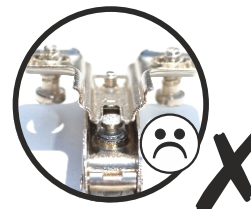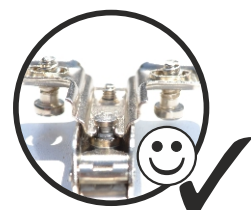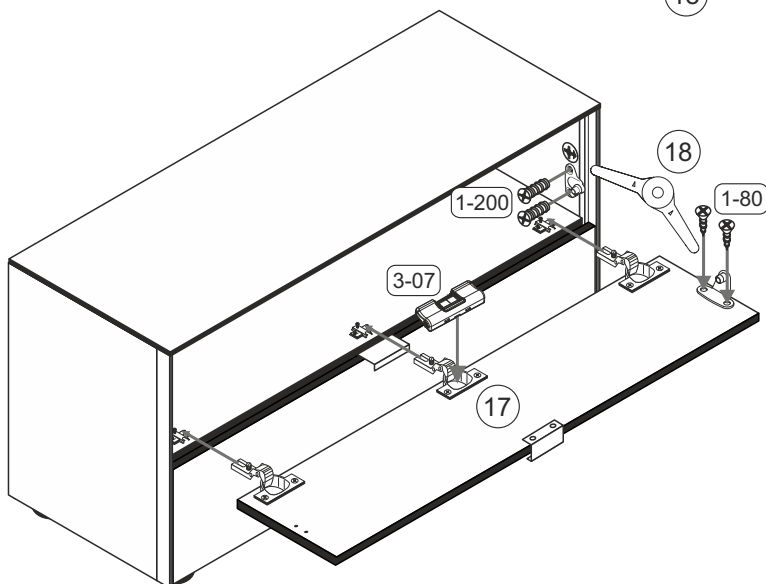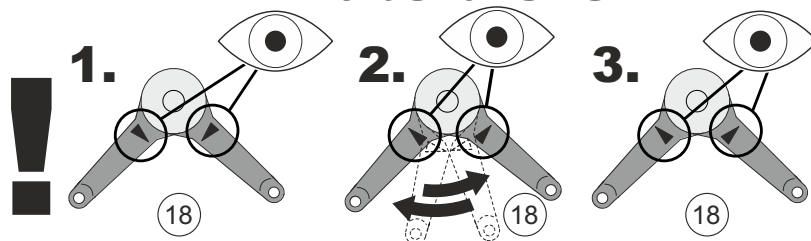

Montage der Türdämpfung

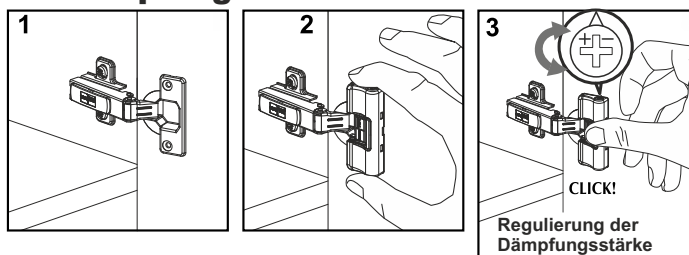

- Türen einstellen (Scharniere justieren)
- Adjusting the doors (adjusting the hinges)
- Régler les portes (ajuster les charnières)
- Sistemare le porte (regolare le cerniere)
- Deuren instellen (scharnieren afstellen)
- Nastawić drzwi (wyregulować zawiasy)
- Vyrovnejte dvířka (seřid'te závěsy)
- Nastavenie dverí (nastavenie závesov)
- Állítsa be az ajtókat (állítsa be a zsanérokot)
- Reglare usi (ajustare balamale)
- Kapıların ayarlanması (mentşelerin seviye ayarı)
- Регулировка дверей (регулировка шарнира)

